

# SERVICE MANUAL

## Level 1&2

# NOKIA

# 2700

## CLASSIC

### RM-561



### Transceiver characteristics

**Sales Name:** 2700c-2 (global)  
2700c (China mainland)

**Band:**  
RM-561: GSM 850/900/1800/1900

**Display:**  
2" (240x320 pixels) QVGA up to 16M colours

**Camera:**  
2 megapixel camera

**Operating System:**  
Series 40 5<sup>th</sup> Edition, Feature Pack 1

- Connections:**
- Bluetooth 2.0
  - 3.5 mm AV connector
  - 2.0 mm charger connector
  - Micro USB
  - USB 2.0 (high speed)
  - MicroSD card (hot swap)

| Battery Performance: BL-5C (1020 mAh) Global |                 |                                 |                |
|----------------------------------------------|-----------------|---------------------------------|----------------|
| Ectel Standby                                | Ectel Talk Time | Best Standby                    | Best Talk Time |
| 356 hours                                    | 4.4 hours       | Up to 17 days<br>Music 11 hours | Up to 7 hours  |

| Battery Performance: BL-5CA (700 mAh) China |                 |                                  |                 |
|---------------------------------------------|-----------------|----------------------------------|-----------------|
| Ectel Standby                               | Ectel Talk Time | Best Standby                     | Best Talk Time  |
| 244 hours                                   | 3 hours         | Up to 12 days<br>Music 7.7 hours | Up to 4.8 hours |

**Note:** Talk time and Standby time depends on network parameters and phone settings.

## Table of contents

|     |                               |    |
|-----|-------------------------------|----|
| 1.  | Change history .....          | 3  |
| 2.  | Copyright.....                | 4  |
| 3.  | Warnings and cautions.....    | 5  |
| 3.1 | Warnings .....                | 5  |
| 3.2 | Cautions .....                | 5  |
| 4.  | ESD protection.....           | 6  |
| 5.  | Care and maintenance .....    | 7  |
| 6.  | Battery information .....     | 8  |
| 7.  | Exploded view .....           | 9  |
| 8.  | Service devices.....          | 10 |
| 9.  | SW-update.....                | 11 |
| 10. | Disassembly instructions..... | 12 |
| 11. | Assembly hints .....          | 16 |
| 12. | Solder components.....        | 17 |

## 1. CHANGE HISTORY

| Status   | Version No. | Date      | Comments              |
|----------|-------------|-----------|-----------------------|
| Approved | 1.0         | 11.5.2009 |                       |
| Approved | 2.0         | 25.5.2009 | Exploded view updated |

The purpose of this document is to help NOKIA service levels 1 and 2 workshop technicians to carry out service to NOKIA products. This Service Manual is to be used only by authorized NOKIA service suppliers, and the content of it is confidential. Please note that NOKIA provides also other guidance documents (e.g. Service Bulletins) for service suppliers, follow these regularly and comply with the given instructions.

While every endeavor has been made to ensure the accuracy of this document, some errors may exist. If you find any errors or if you have further suggestions, please notify NOKIA using the address below:

**CMO Operation & Logistics**  
**Training and Vendor Development**  
**Multimedia Creation & Support**  
<mailto:Service.Manuals@nokia.com>

Please keep in mind also that this documentation is continuously being updated and modified, so watch always out for the newest version.

## 2. COPYRIGHT

Copyright © 2009 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

### **IMPORTANT**

This document is intended for use by qualified service personnel only.

### 3. WARNINGS AND CAUTIONS

Please refer to the phone's user guide for instructions relating to operation, care and maintenance including important safety information. Note also the following:

#### 3.1 Warnings

1. CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
2. THE HANDPORTABLE TELEPHONE MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, EG PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
3. OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.

#### 3.2 Cautions

1. Servicing and alignment must be undertaken by qualified personnel only.
2. Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
3. Use only approved components as specified in the parts list.
4. Ensure all components, modules screws and insulators are correctly re-fitted after servicing and alignment.
5. Ensure all cables and wires are repositioned correctly

#### 4. ESD PROTECTION

Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.



Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages **MUST NOT** be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

## 5. CARE AND MAINTENANCE

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

## 6. BATTERY INFORMATION

Note: A new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out.

When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer.

Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime.

If left unused a fully charged battery will discharge itself over time. Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMH batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product).

Do not attempt to discharge the battery by any other means. Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Shortcircuiting the terminals may damage the battery or the connecting object.


Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F).

A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose batteries in a fire! Dispose of batteries according to local regulations (e.g. recycling).

Do not dispose as household waste.

### 7. EXPLODED VIEW

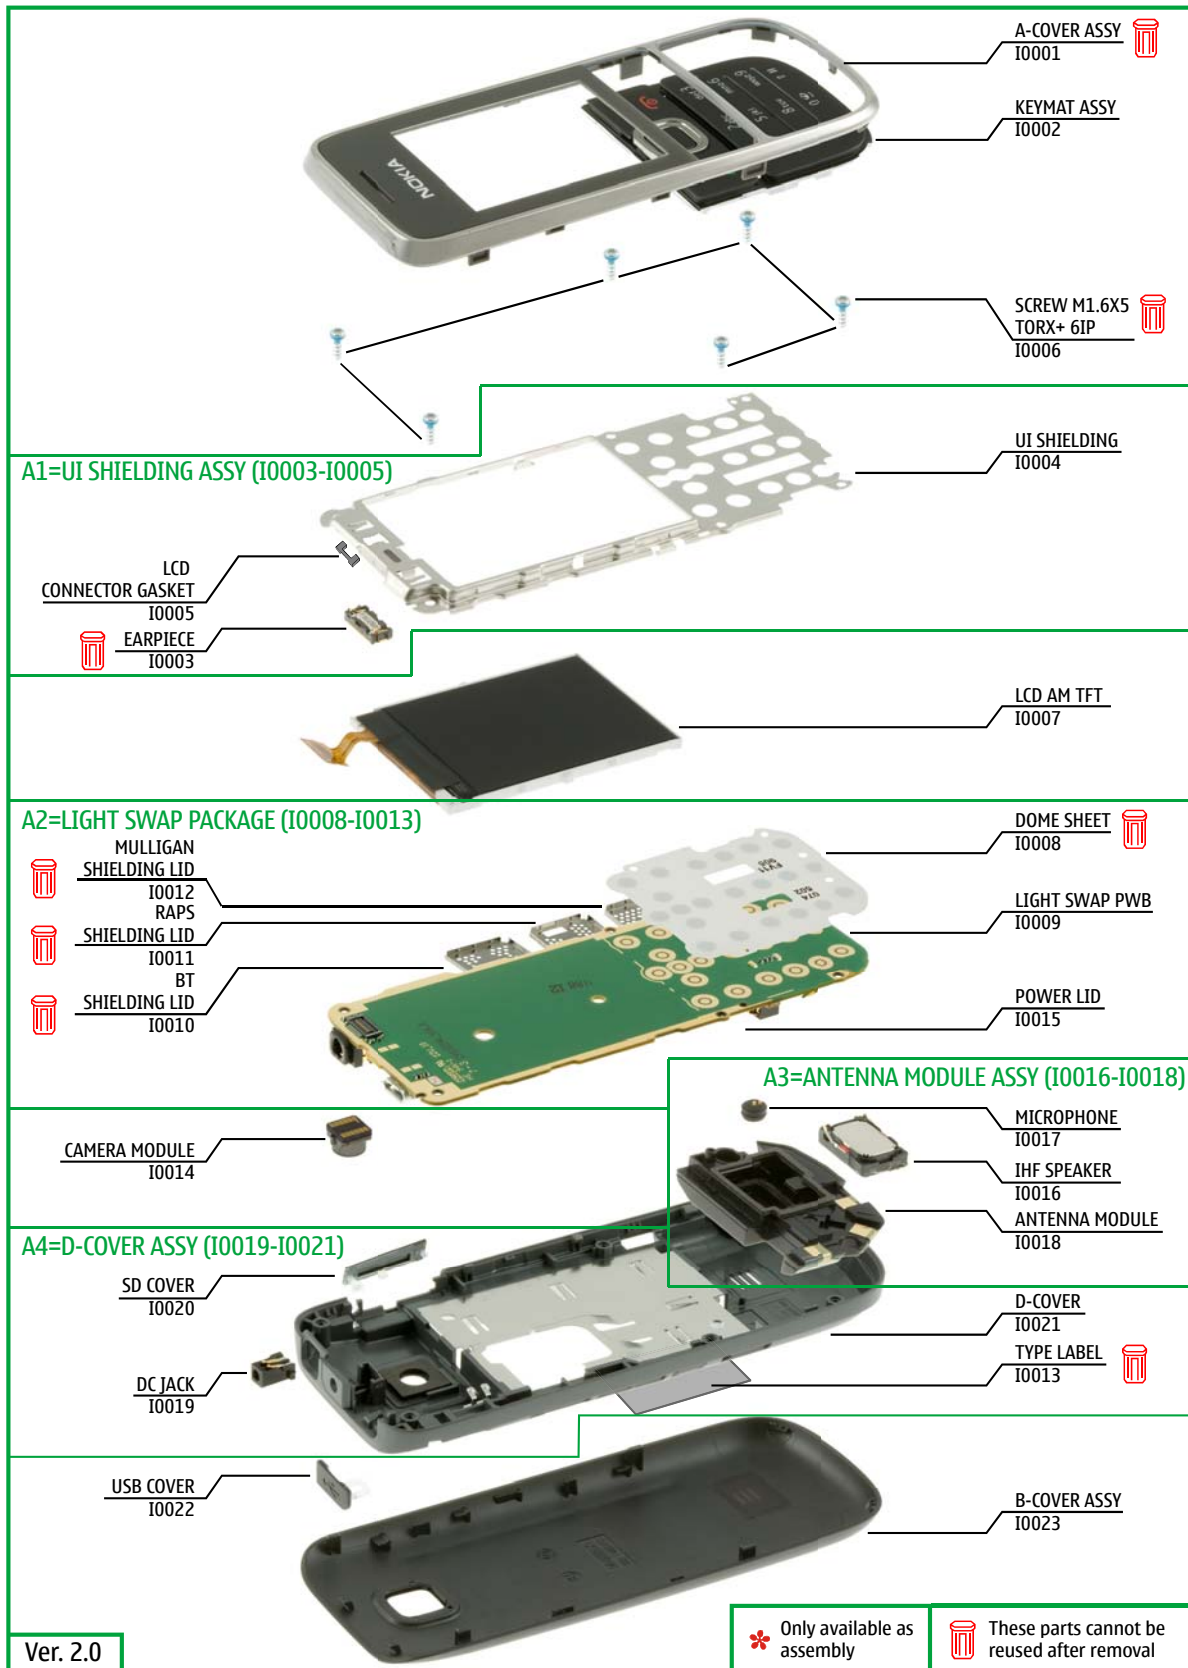


## 8. SERVICE DEVICES

|                                                                                                                                             |                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>FLS-5</p> <p>FLS-5 Flash Device</p>                    |  <p>CA-101<br/>100cm</p> <p>CA-101 Service Cable</p> |  <p>RJ-230 Universal soldering jig</p>                                                                                                                                                                                                                     |
|  <p>AC-3 for global<br/>AC-8C &amp; CA-100c for China</p> |  <p>BL-5C</p> <p>BL-5C Battery</p>                 |  <p>SS-88 Camera removal tool</p>                                                                                                                                                                                                                          |
|                                                                                                                                             |                                                                                                                                       |  <p><b>NMP standard toolkit (v2)</b><br/>For more information, refer to the Service Bulletin (SB-011) on NOKIA Online. Supplier or manufacturer contacts for tool re-order can be found in "Recommended service equipment" document on NOKIA Online.</p> |

**9. SW-UPDATE****Flash concept- (Point of Sales)**


To use the FLS-5 Flash Dongle, follow the user guide inside the sales package.  
Please check always for the latest version of flash software, which is available on Nokia Online.

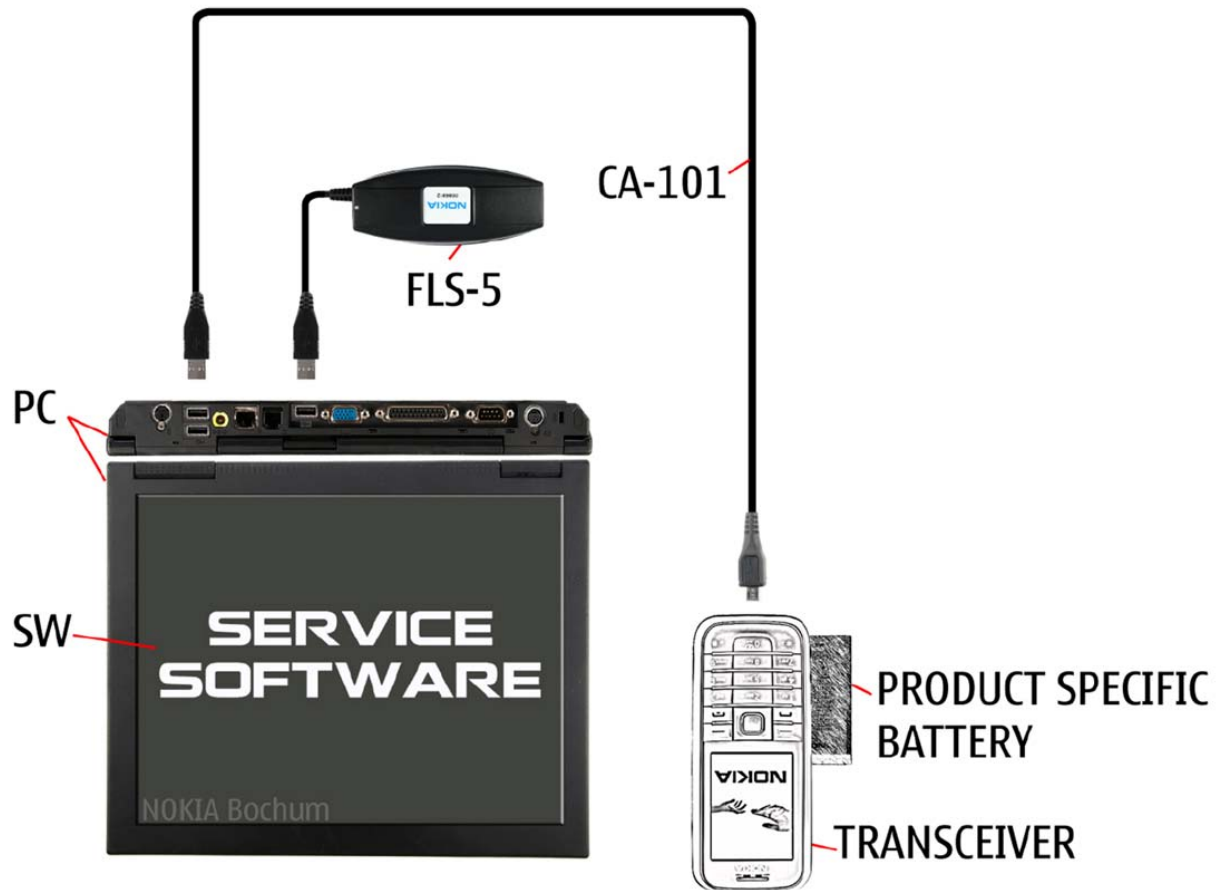

### 10. DISASSEMBLY INSTRUCTIONS



1) Nokia 2700 classic disassembly.

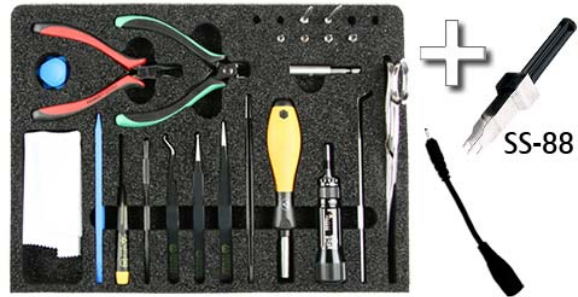

2) You must use the Nokia Standard Toolkit version. You will also need the SS-88 camera removal tool and the 2 mm charger plug.



3) To remove the B-COVER ASSY, press and push it in to the direction shown.



4) Remove the B-COVER ASSY. If there is a battery inserted, remove it also.



4) Detach the four A-COVER ASSY hooks with the SS-93.



6) Start releasing the clips by first pressing the clip inside as shown in the small picture. Then place the SS-93 between the A-COVER ASSY and B-COVER ASSY. Detach the clip by pushing the SS-93 downwards.




7) Remove the A-COVER ASSY. Make sure that the LCD is protected with protective film after removing the A-COVER ASSY.




8) Separate the KEYMAT ASSY from the A-COVER by pressing the keymat lightly. When the keymat is separated protect both sides of the window with protective film to avoid scratches.




9) Unscrew the six TORX + size 6 screws in the order shown. Do not use it again.

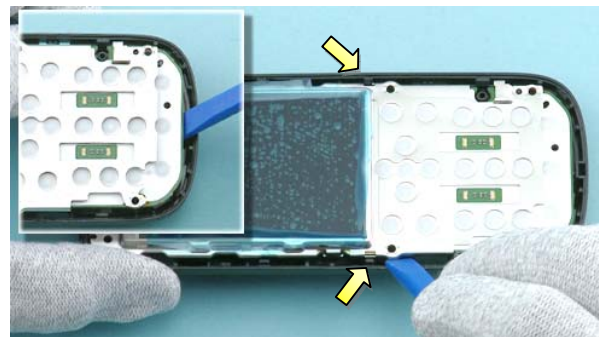

10) Release the clips holding the UI SHIELDING ASSY with the SS-93. Then lift up the assy as shown in the small picture.

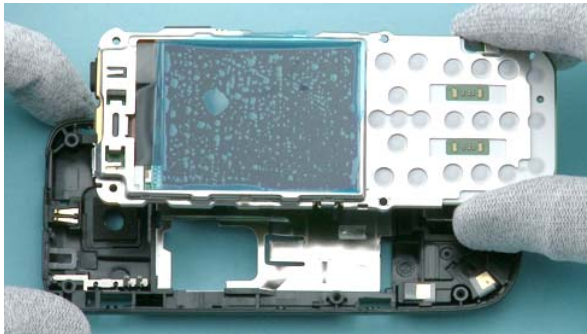


11) Remove the UI SHIELDING ASSY and the LIGHT SWAP PWB.

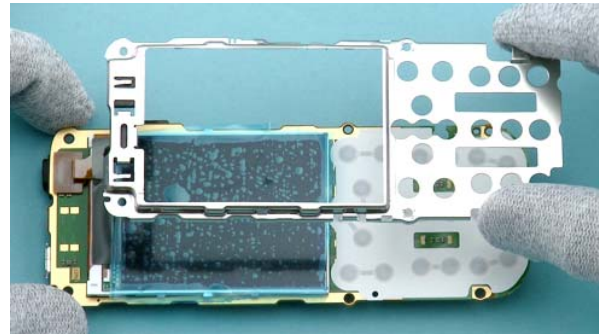


12) Separate the UI SHIELDING ASSY and the LIGHT SWAP PWB..




13) Detach the EARPIECE PIONEER and the EARPIECE NXP with the dental tool. Be aware of the sharp point of the dental tool!

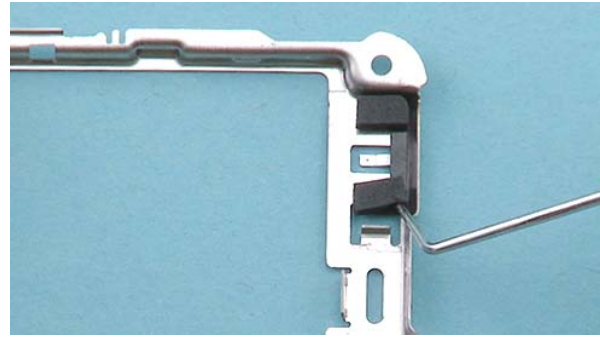


14) Detach the LCD CONNECTOR GASKET with the dental tool.

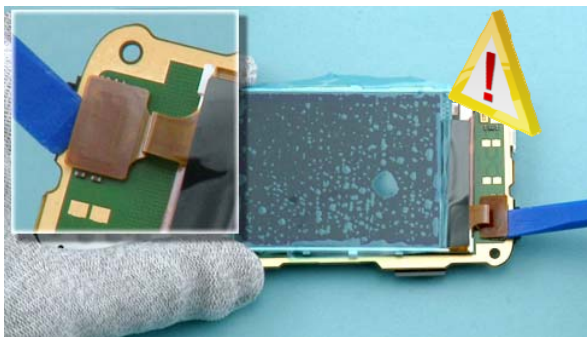


15) Use the SS-93 to open the LCD connector. Be careful not to damage the connector - or components nearby!

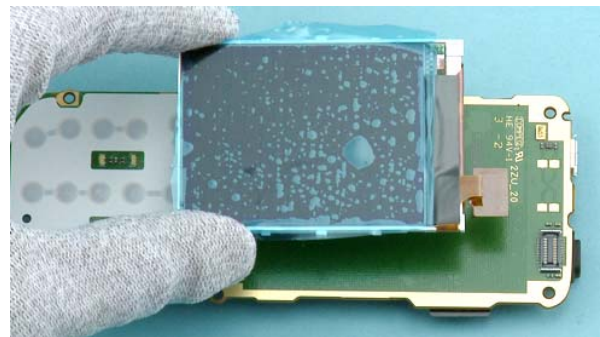


16) Remove the LCD AM TFT.

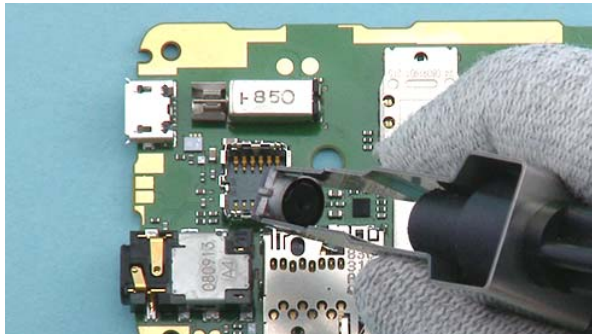


17) Remove the CAMERA MODULE with the SS-88.

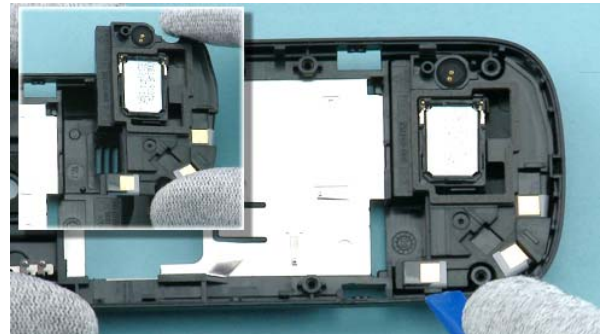


18) Use the SS-93 to lift up the ANTENNA MODULE from the D-COVER ASSY and then separate the module.

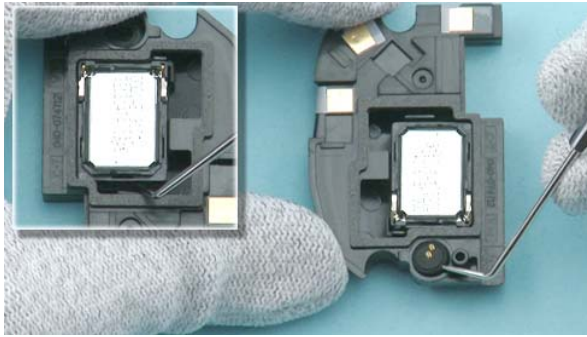


19) Remove the MICROPHONE with the dental tool. Detach the IHF SPEAKER with the dental tool and remove the speaker with the tweezers.

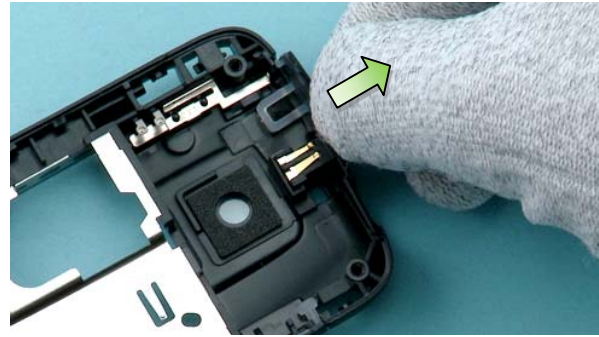


20) Remove the USB COVER by pulling it to the direction shown.

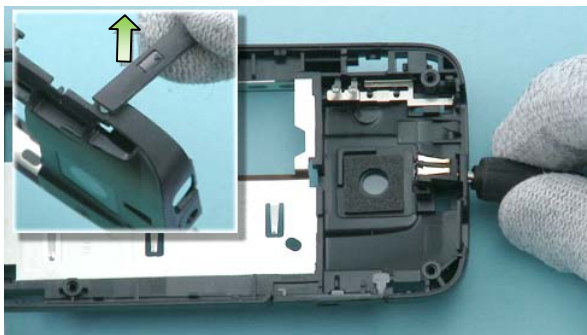

21) Release the AV jack with the charger plug and then remove the AV jack. Then remove the SD COVER by pulling it to the direction shown.

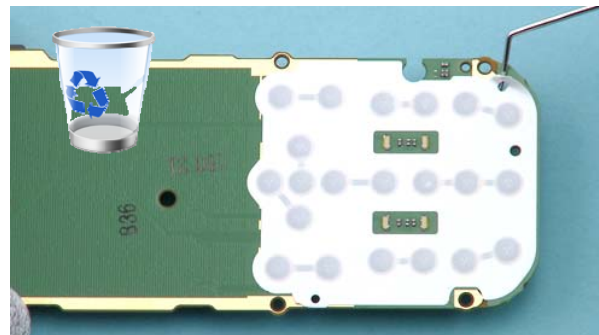

22) Detach the DOMESHEET with the dental tool. The domesheet cannot be reused.

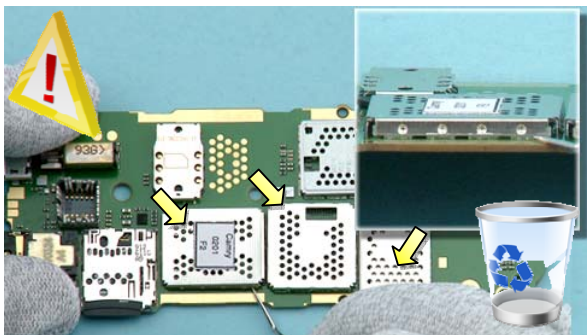

23) Use the dental tool to lever out the BT SHIELDING LID, RAPS SHIELDING LID, and the MULLIGAN SHIELDING LID. Be careful not to damage nearby components!



24) Nokia 2700 classic disassembly is now complete.

-END OF DISASSEMBLY-

## 11. ASSEMBLY HINTS



1) Tighten the six TORX + size 6 screws to the torque of 18 Ncm in the order shown.

The diagram illustrates the internal components of the LG V20 smartphone, showing both the TOP and BOTTOM views of the main board.

**TOP View:**

- X1001:** Points to the USB Type-C port connector.
- V2400, V2402, V2403, V2401:** Point to various vibration motors located along the right edge of the board.

**BOTTOM View:**

- E7702, E7710:** Point to the front-facing camera and its associated lens assembly.
- E7701:** Points to the rear camera assembly.

Other visible components include the battery, SIM card slot, microphone, and various integrated circuits.