

Service schematics

Nokia Lumia 1020

RM-877

18.07.2013

v1.0



IMPORTANT

This document is intended for use by authorized Nokia service centers only. Please use the document together with other documents such as the Service Manual and Service Bulletins.

Version information

While every effort has been made to ensure that the document is accurate, some errors may exist. Please always check for the latest published version for this document.

If you find any errors in the document please send email to: service.manuals@nokia.com

1.0 First approved version.

Contents


- 1 Front page
- 2 PM8921, Power, Wireless charging flex, Side key flex, NFC, SIM
- 3 PM8921, MSM8960
- 4 MSM8960, Memory, Display, Touch, Camera, Front camera flex, Flash, Sensors
- 5 Audio, AV flex, USB flex
- 6 RF Transceiver, GPS, BT/WLAN/FM
- 7 RF Transceiver
- 8 Component finder top
- 9 Component finder bottom
- 10 Component finder flex boards









Primary MIC flex board (Board: 3XU_10)

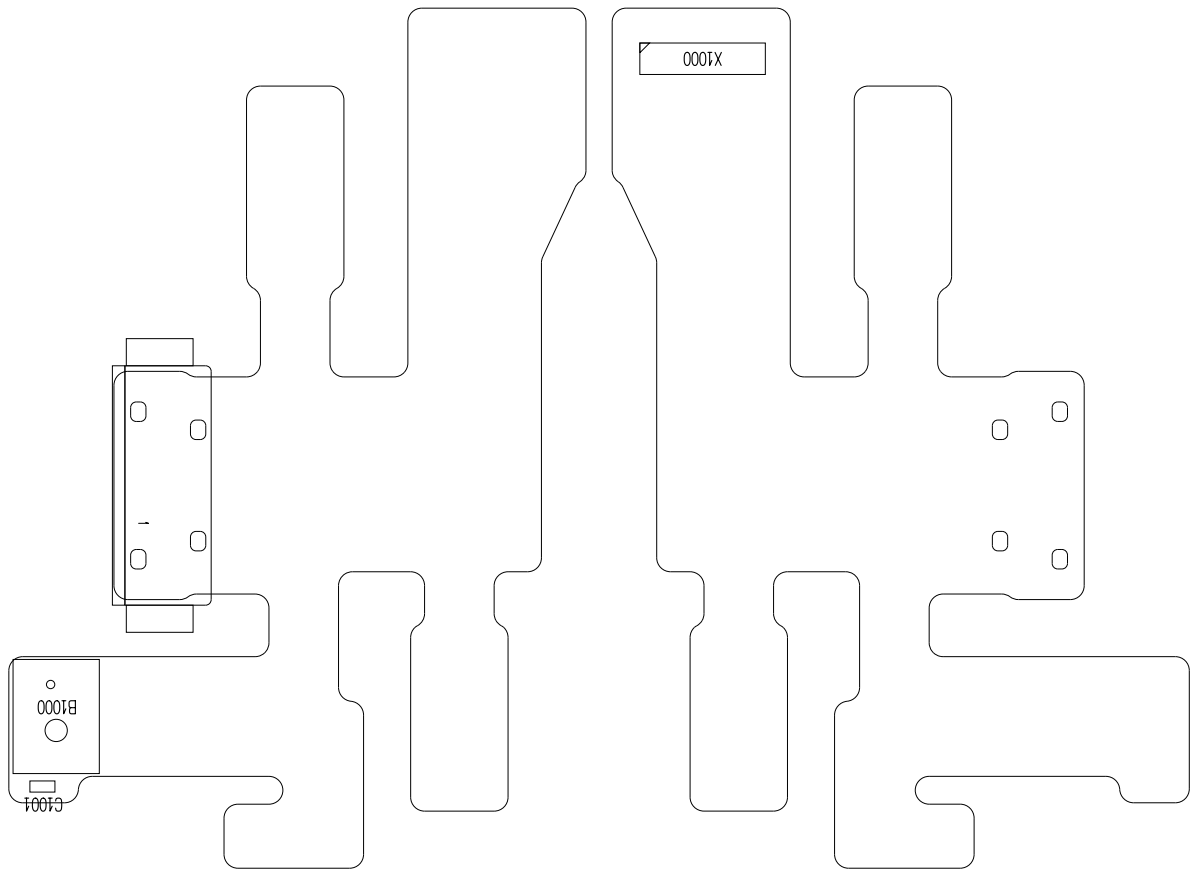

Sidekey flex board (Board: 3XV_12)

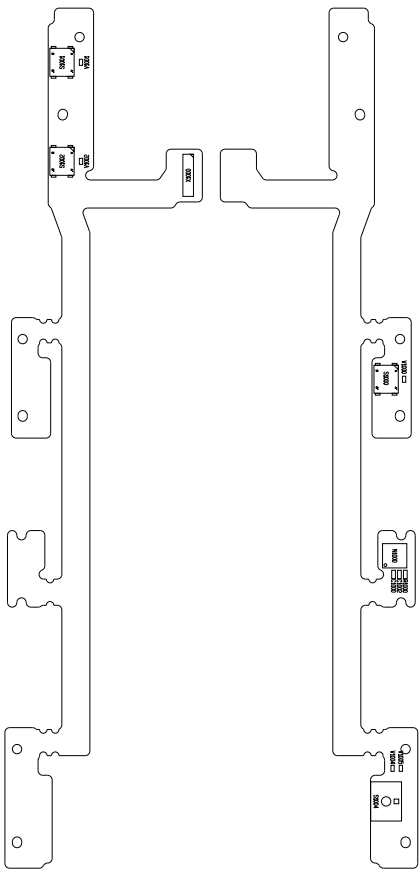

2nd Camera flex board (Board: 3YD_12)

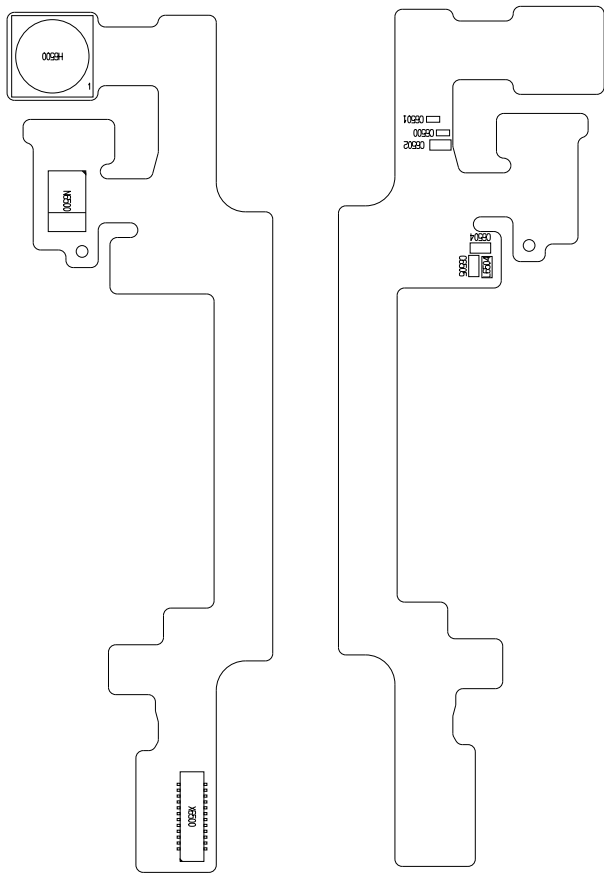

AV flex board (Board: 3YC_12)

