

Service schematics

NOKIA C6-01

RM-601
RM-718



IMPORTANT

This document is intended for use by authorized Nokia service centers only. Please use the document together with other documents such as the Service Manual and Service Bulletins.

Version information


While every effort has been made to ensure that the document is accurate, some errors may exist. Please always check for the latest published version for this document.


If you find any errors in the document please send email to: service.manuals@nokia.com


- 1.0 First approved version.
- 2.0 Fixed RM number information.
- 3.0 N1497 changed to N1476.
V3300 changed to N3300.


Contents


Front page	1
Imaging processor, Camera, Display IF, Camera LED flash	2
RAPS, Combo memory	3
RAPS, UI interface, UI interface flex board, Sensors, LEDs, Audio	4
GAZOO, Battery, HS USB	5
GAZOO, Audio, SIM, MMC, AV-connector	6
BTH FM, WLAN, GPS	7
RF part	8
Component finder top	9
Component finder bottom	10
Component finder UI interface flex board	11

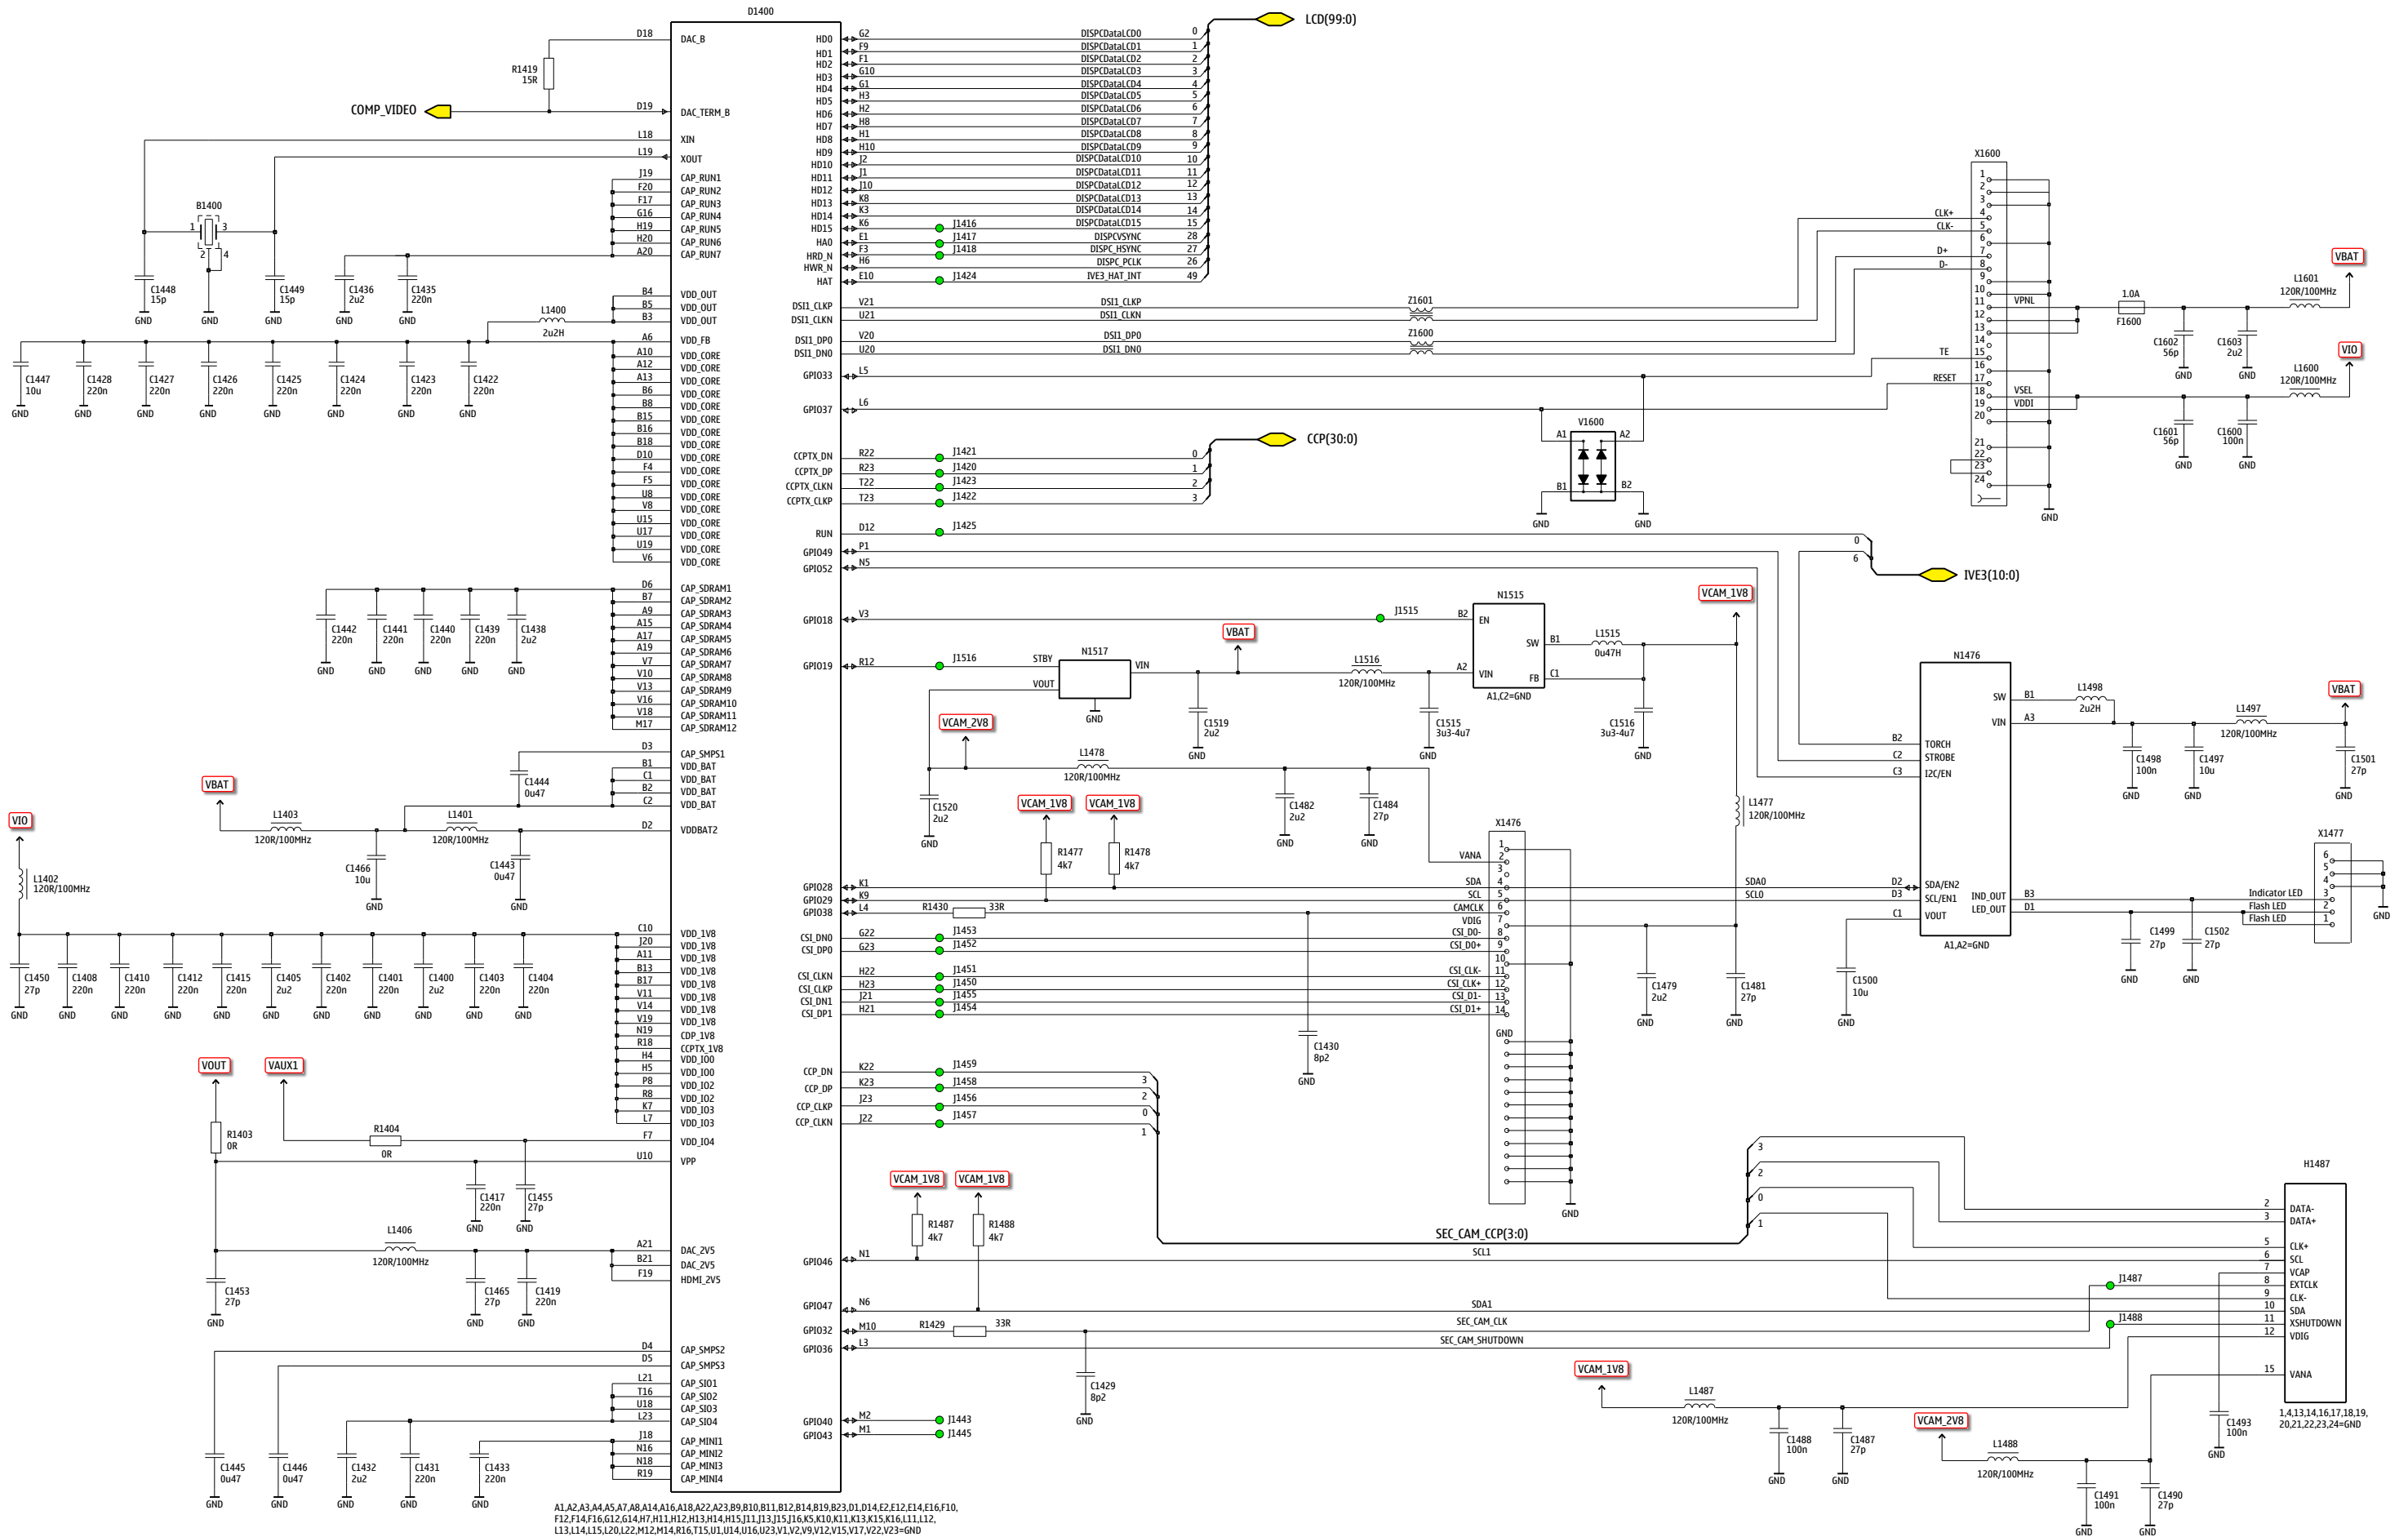

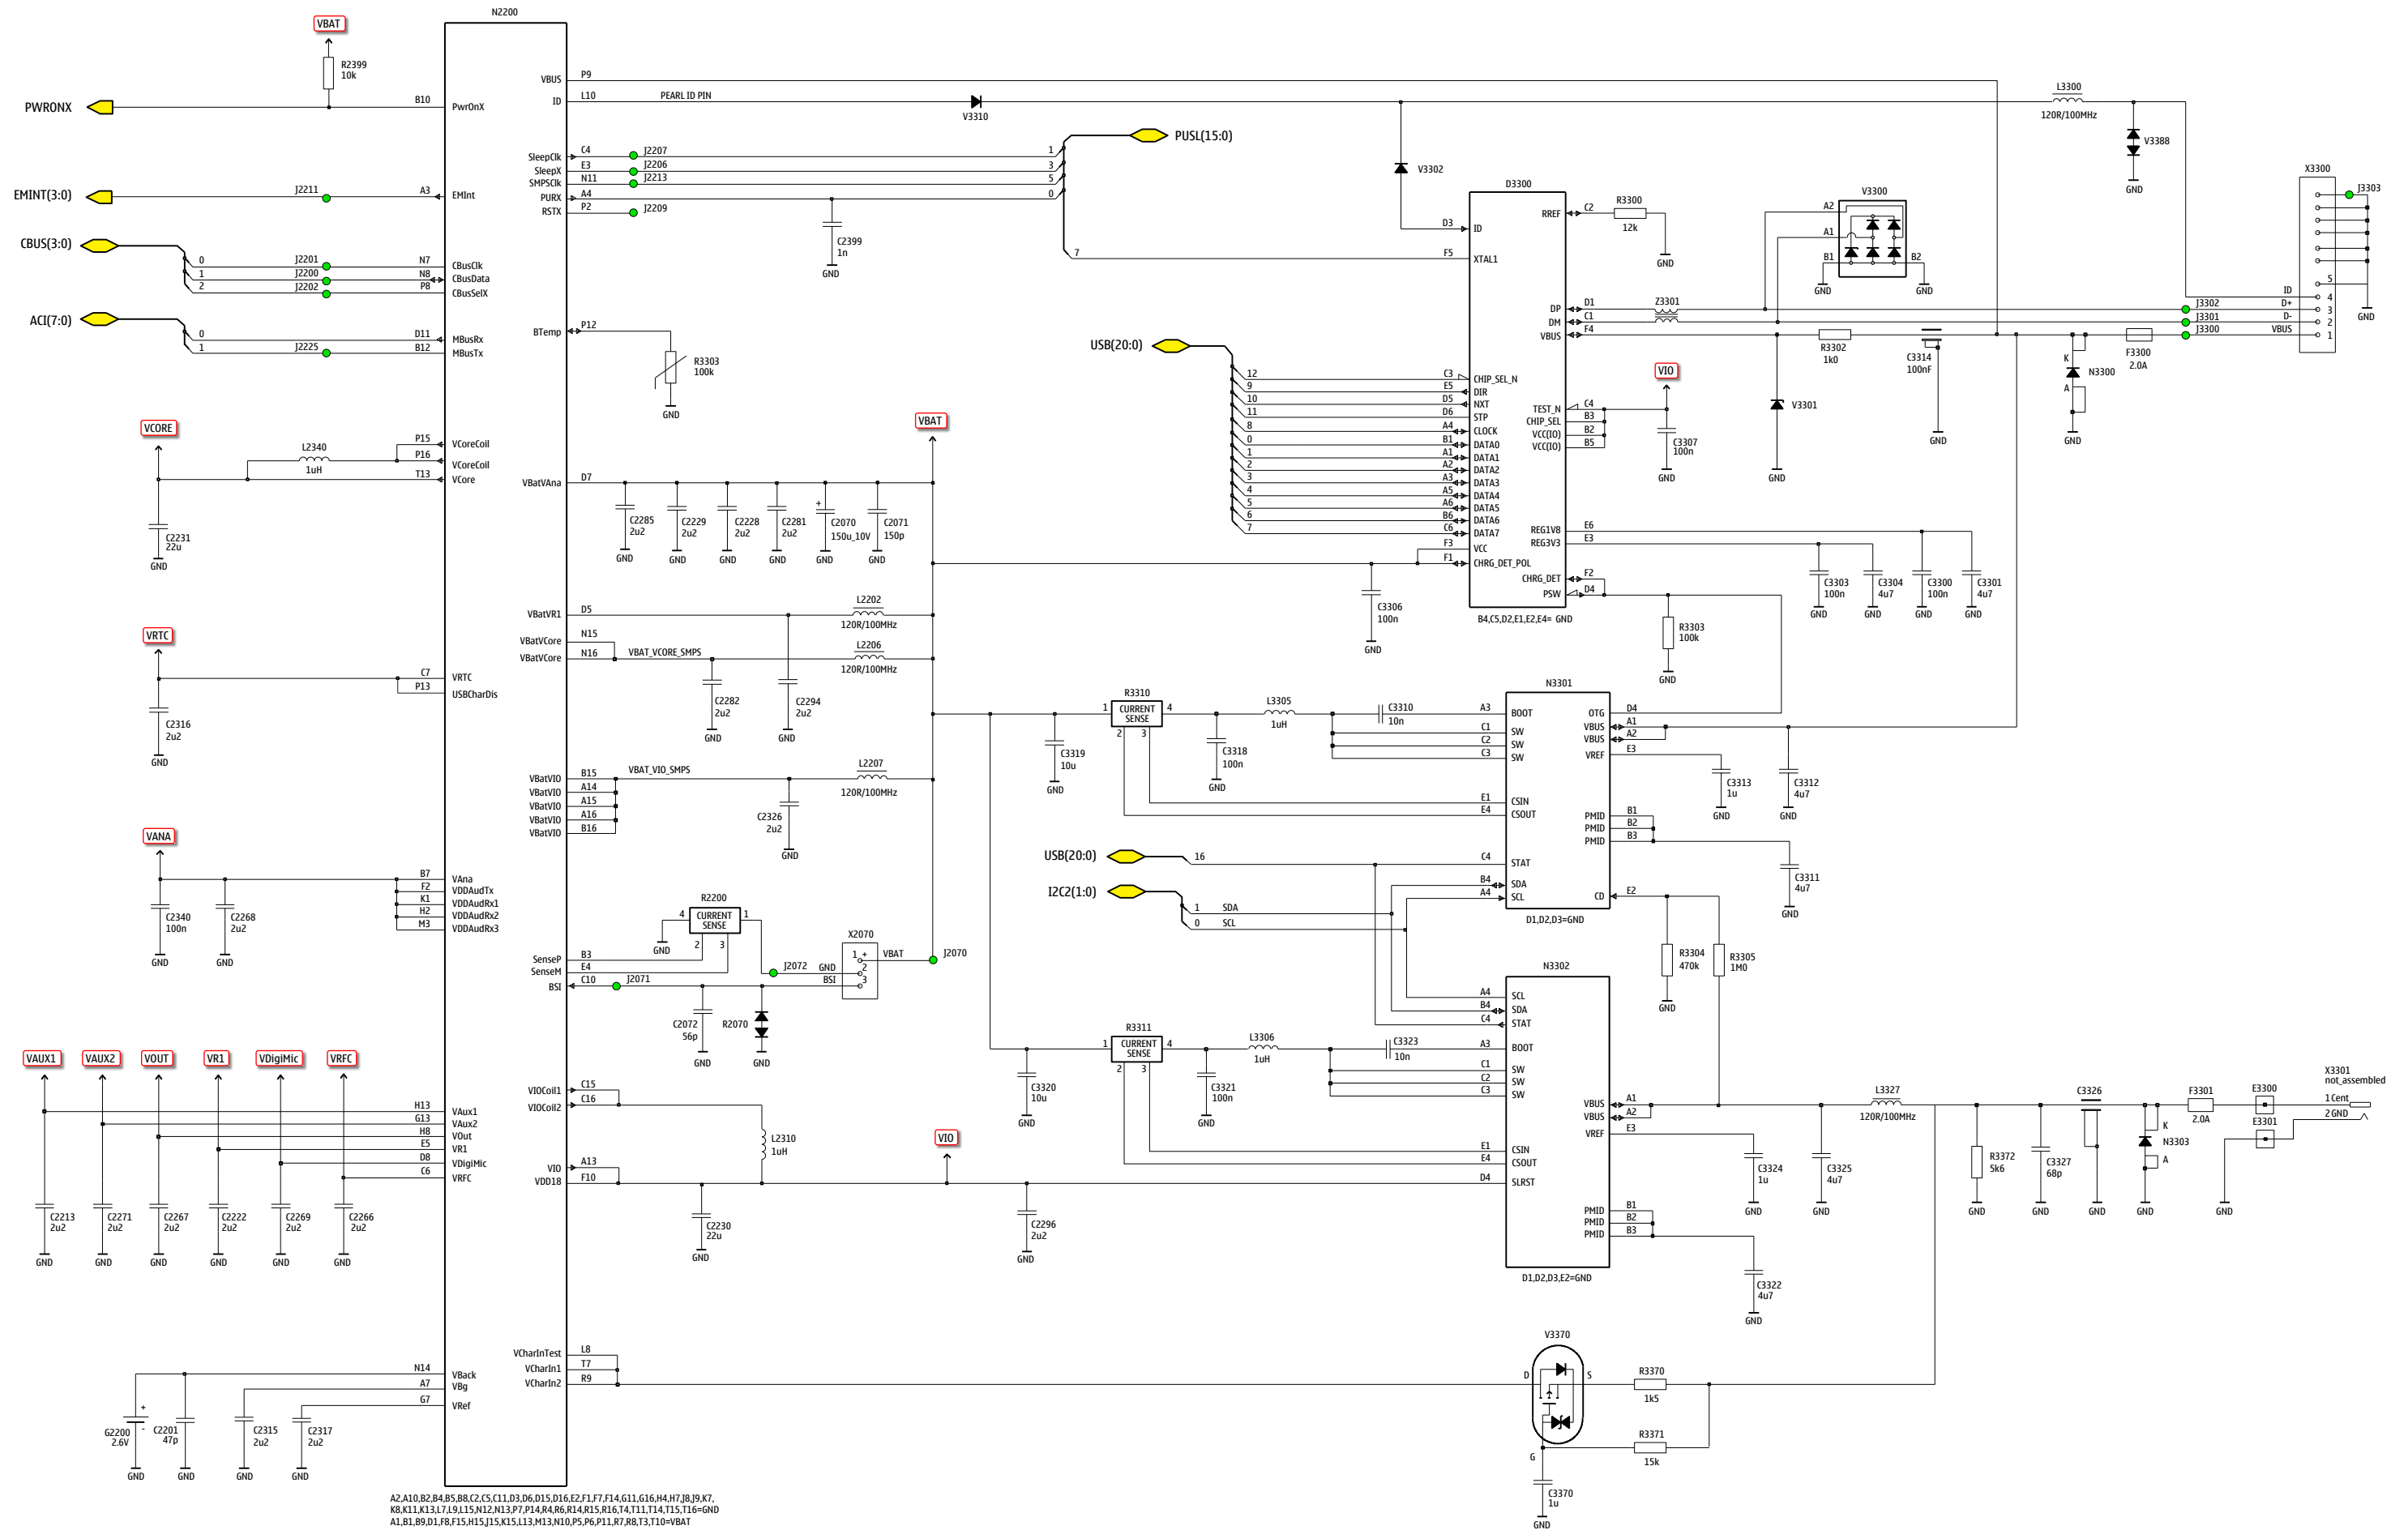


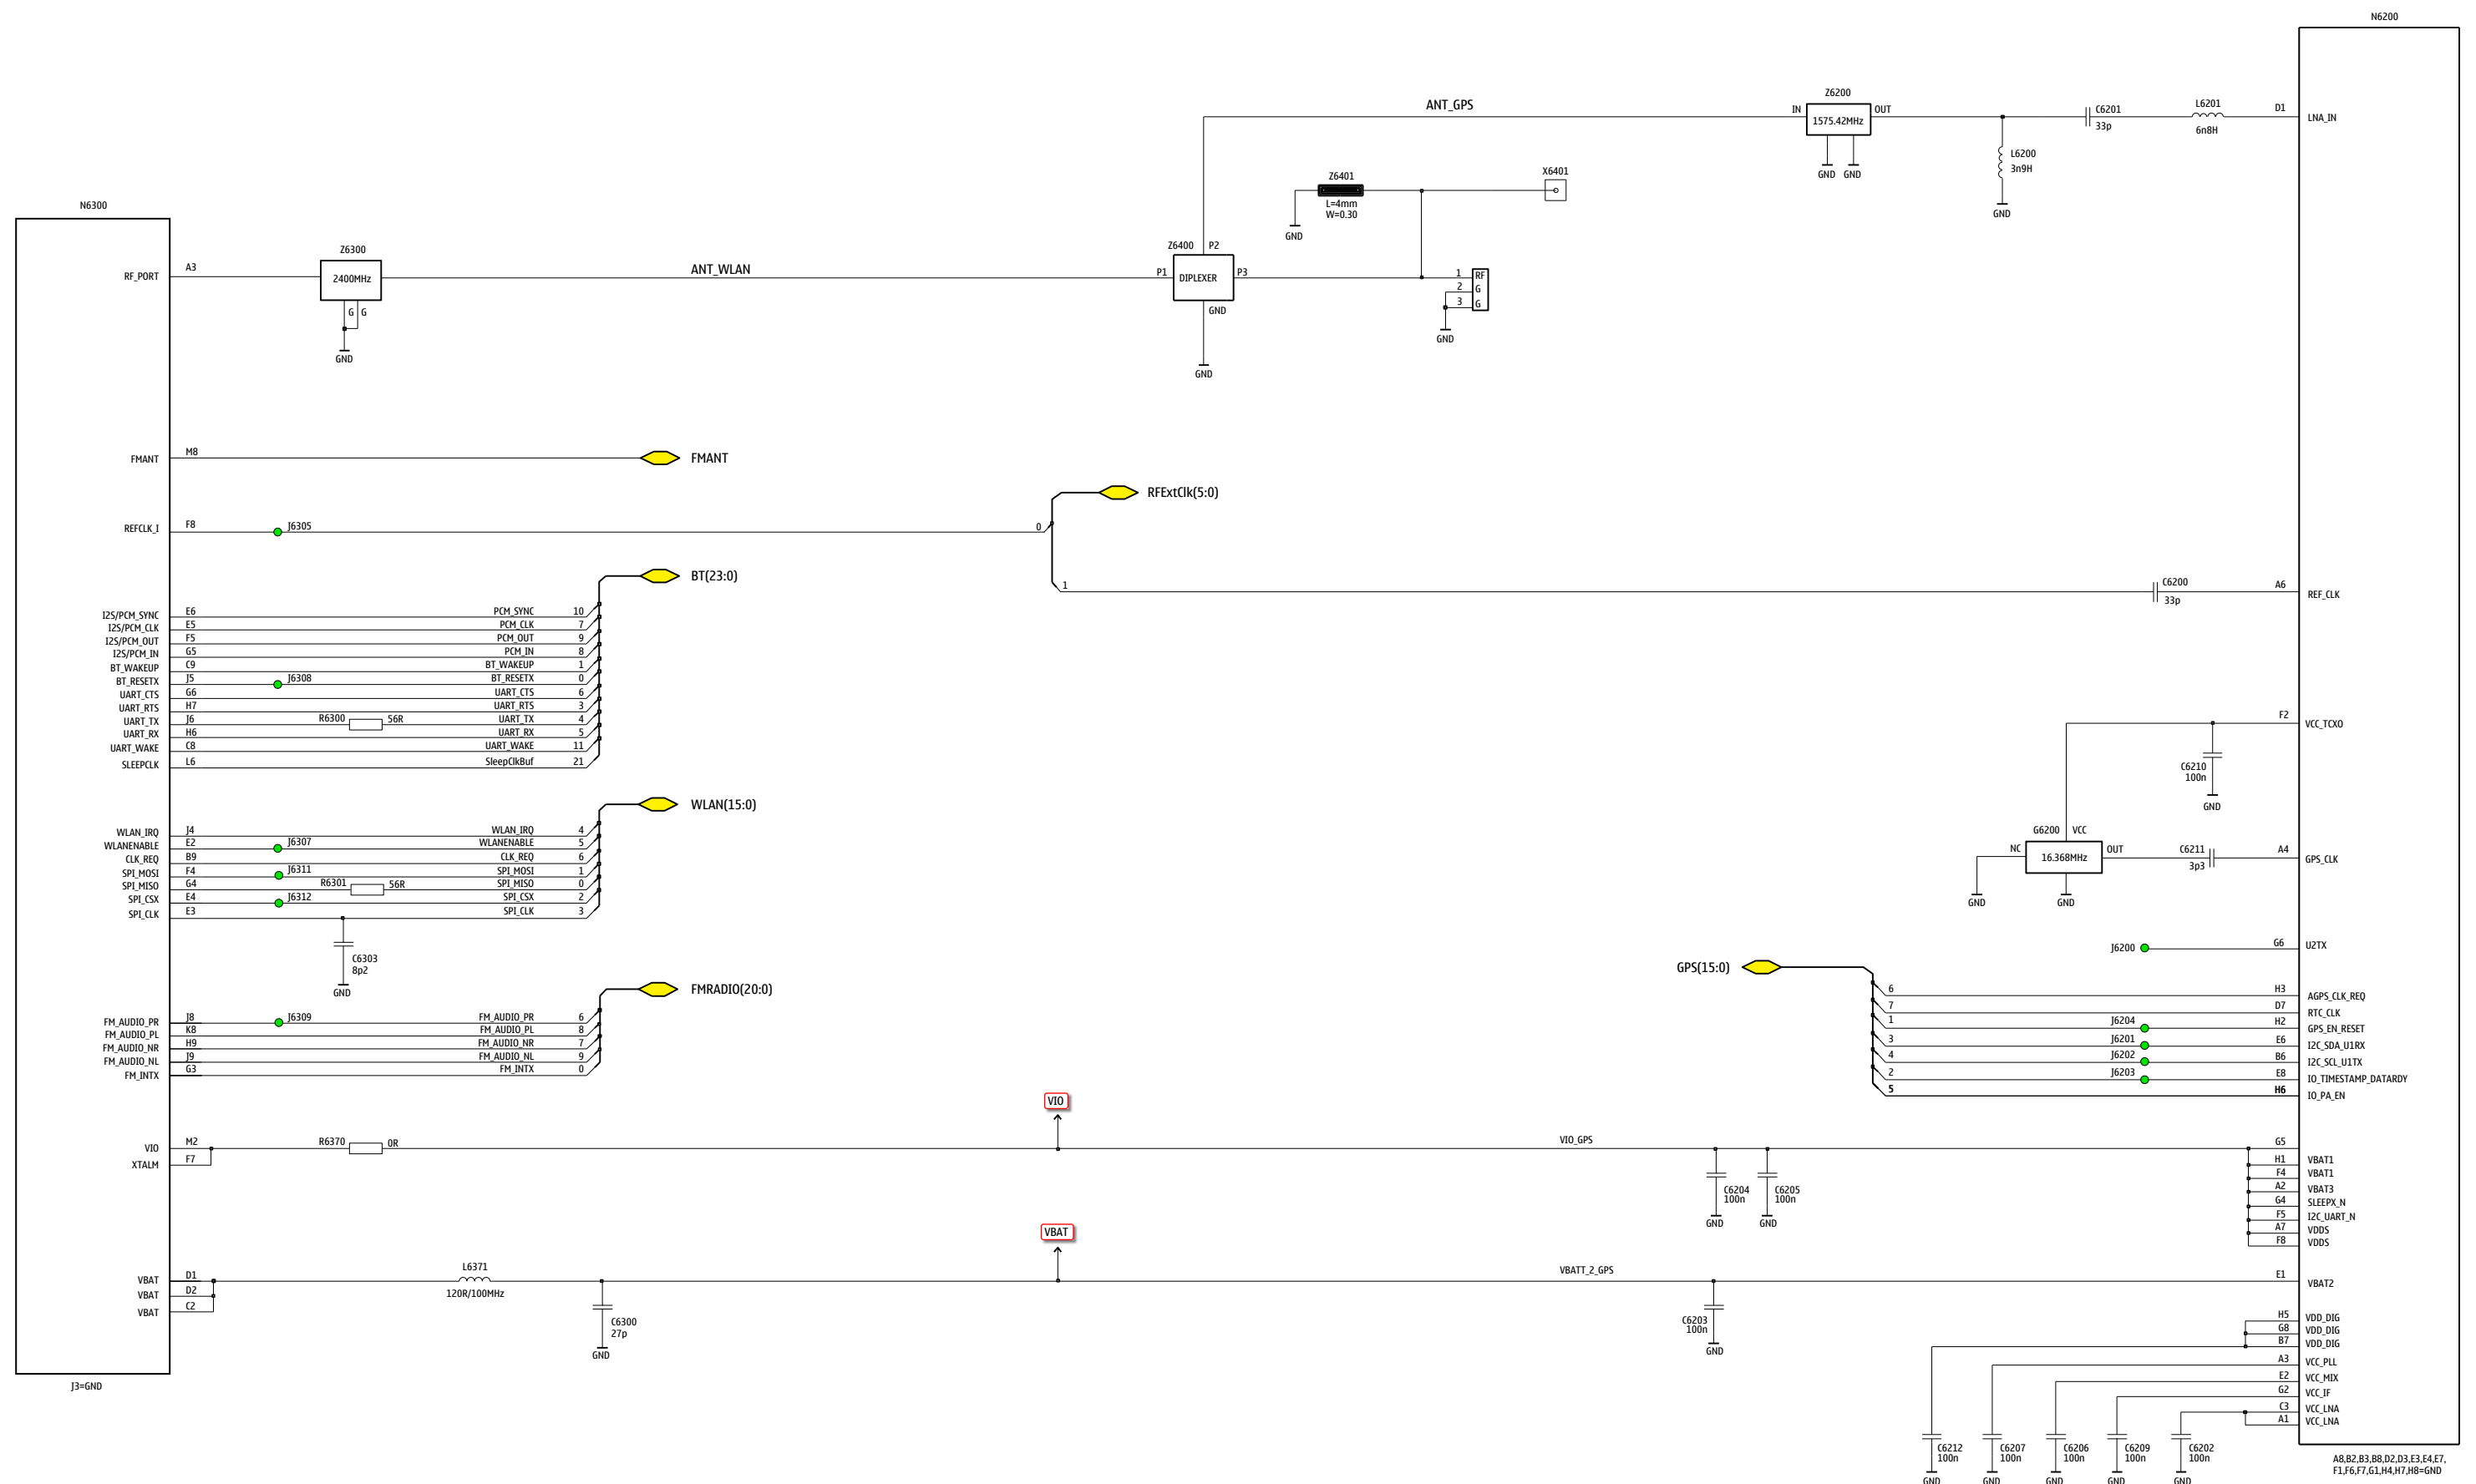

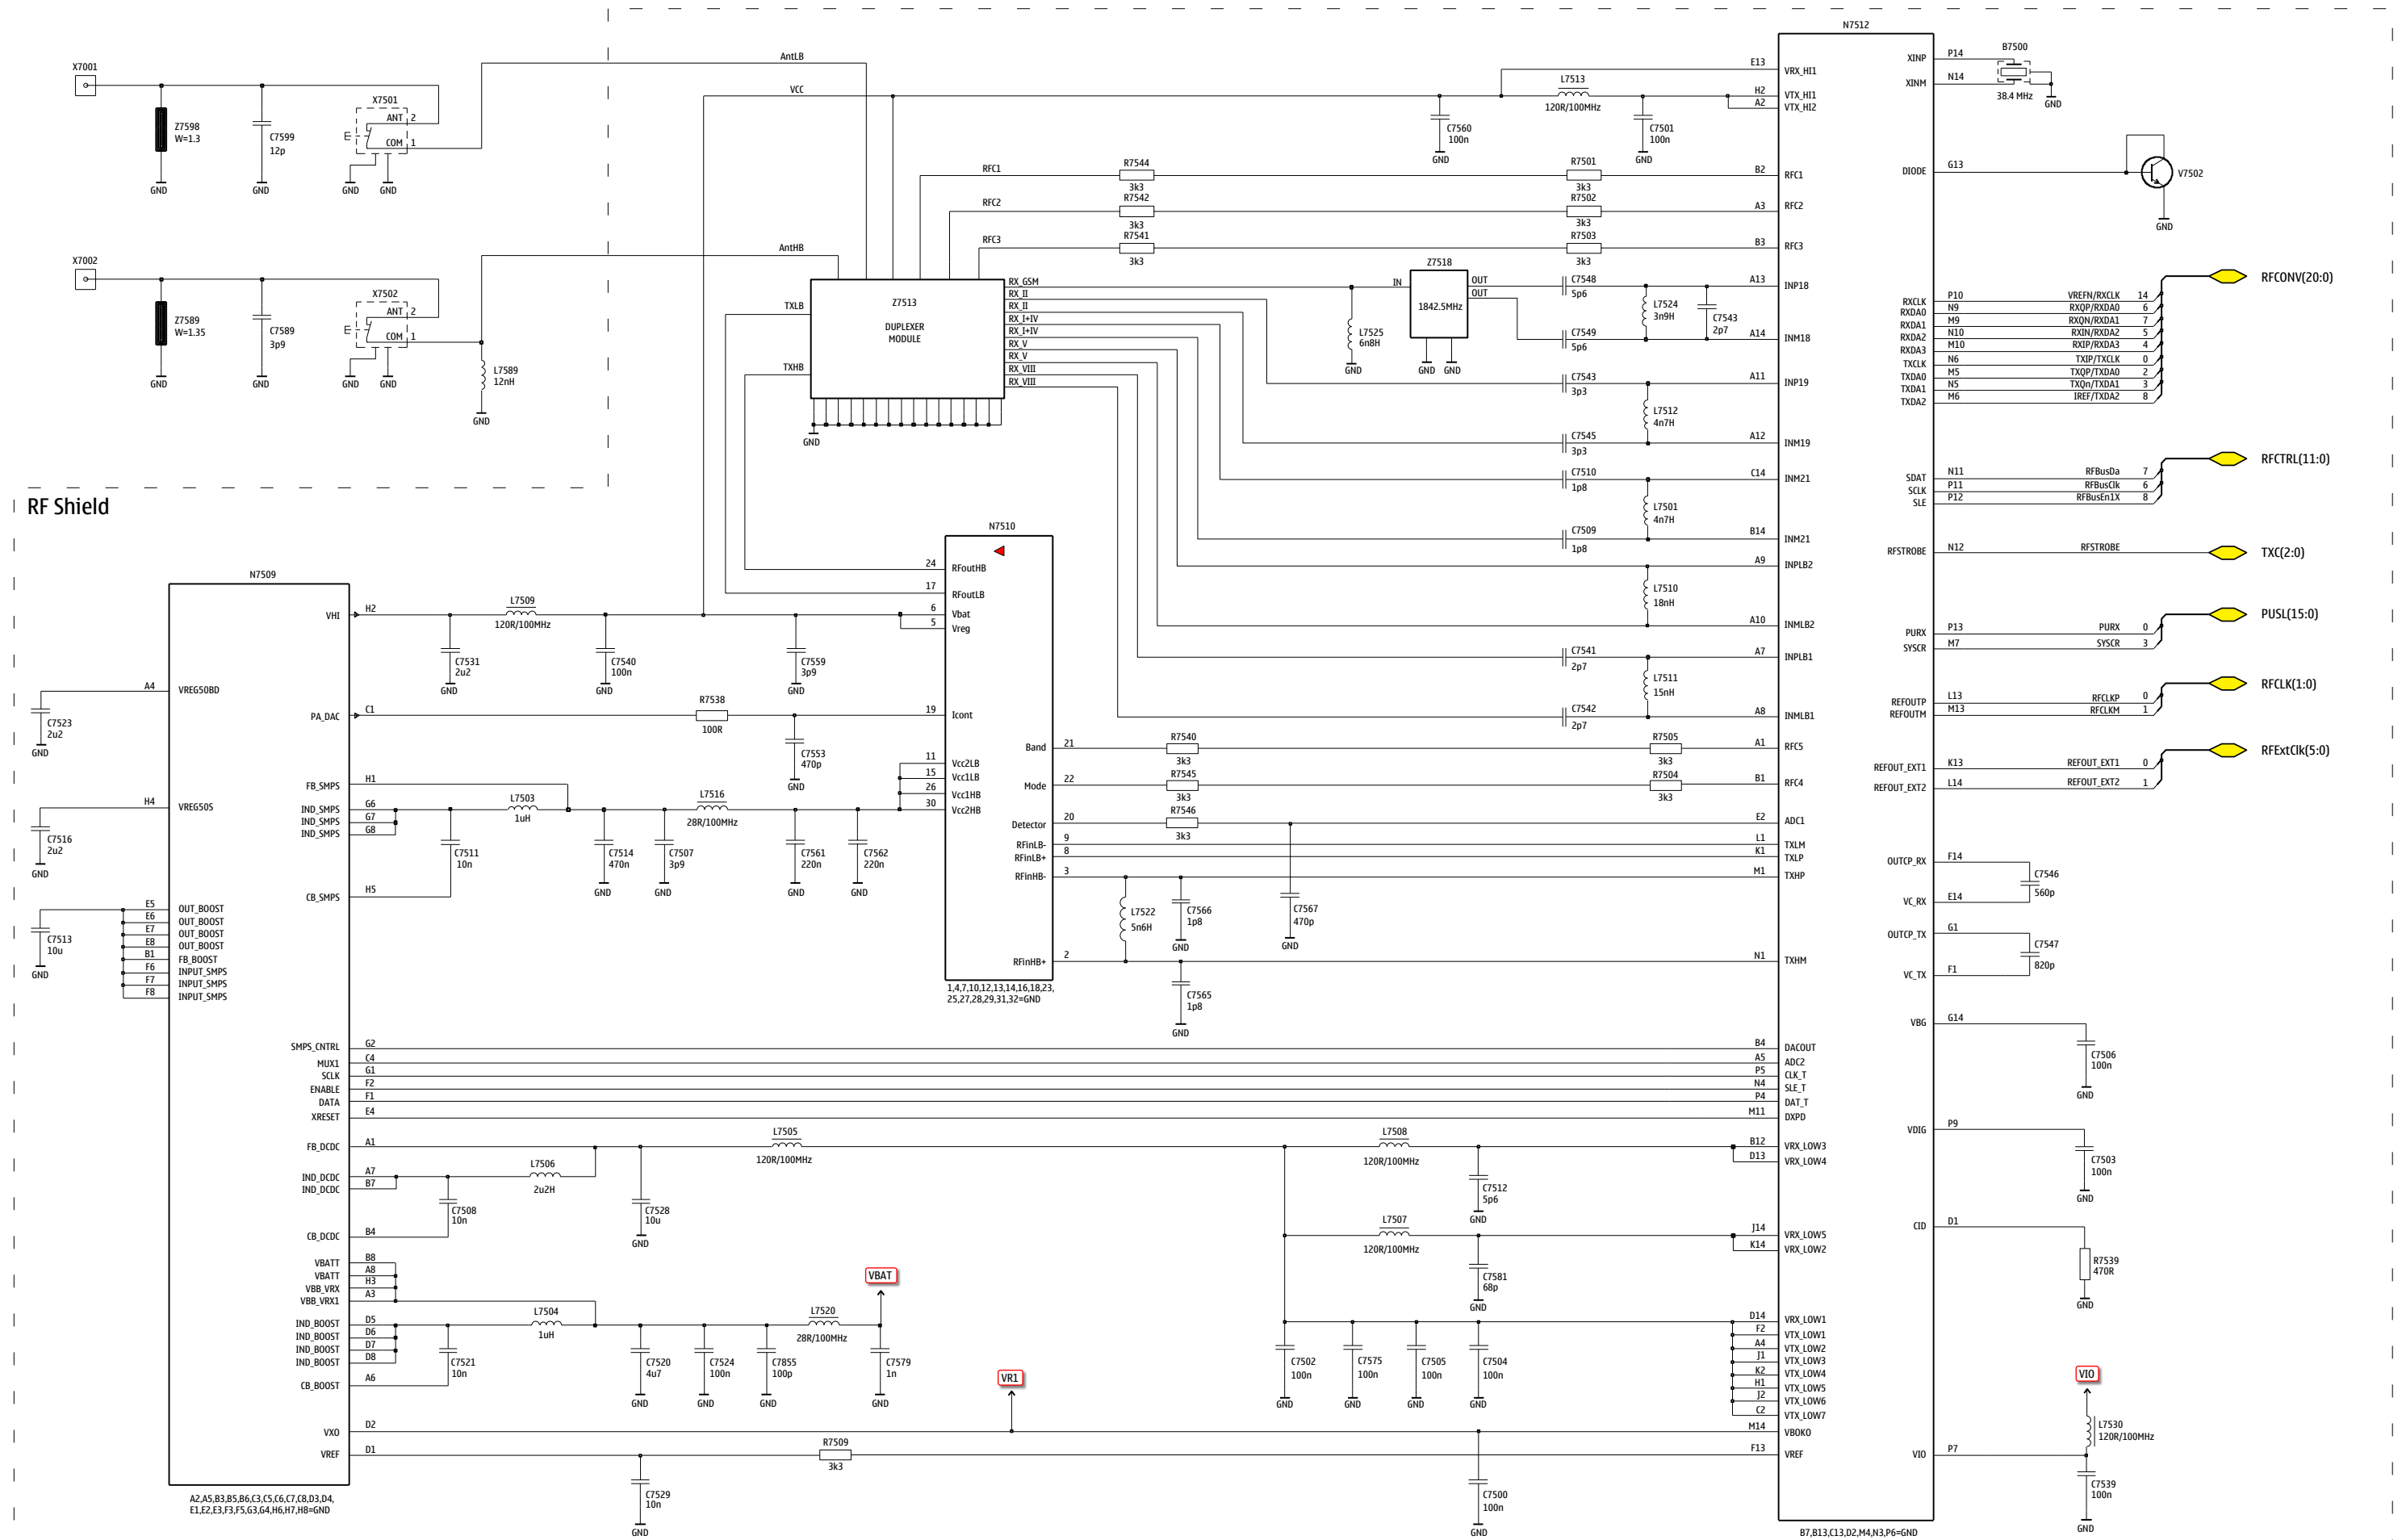

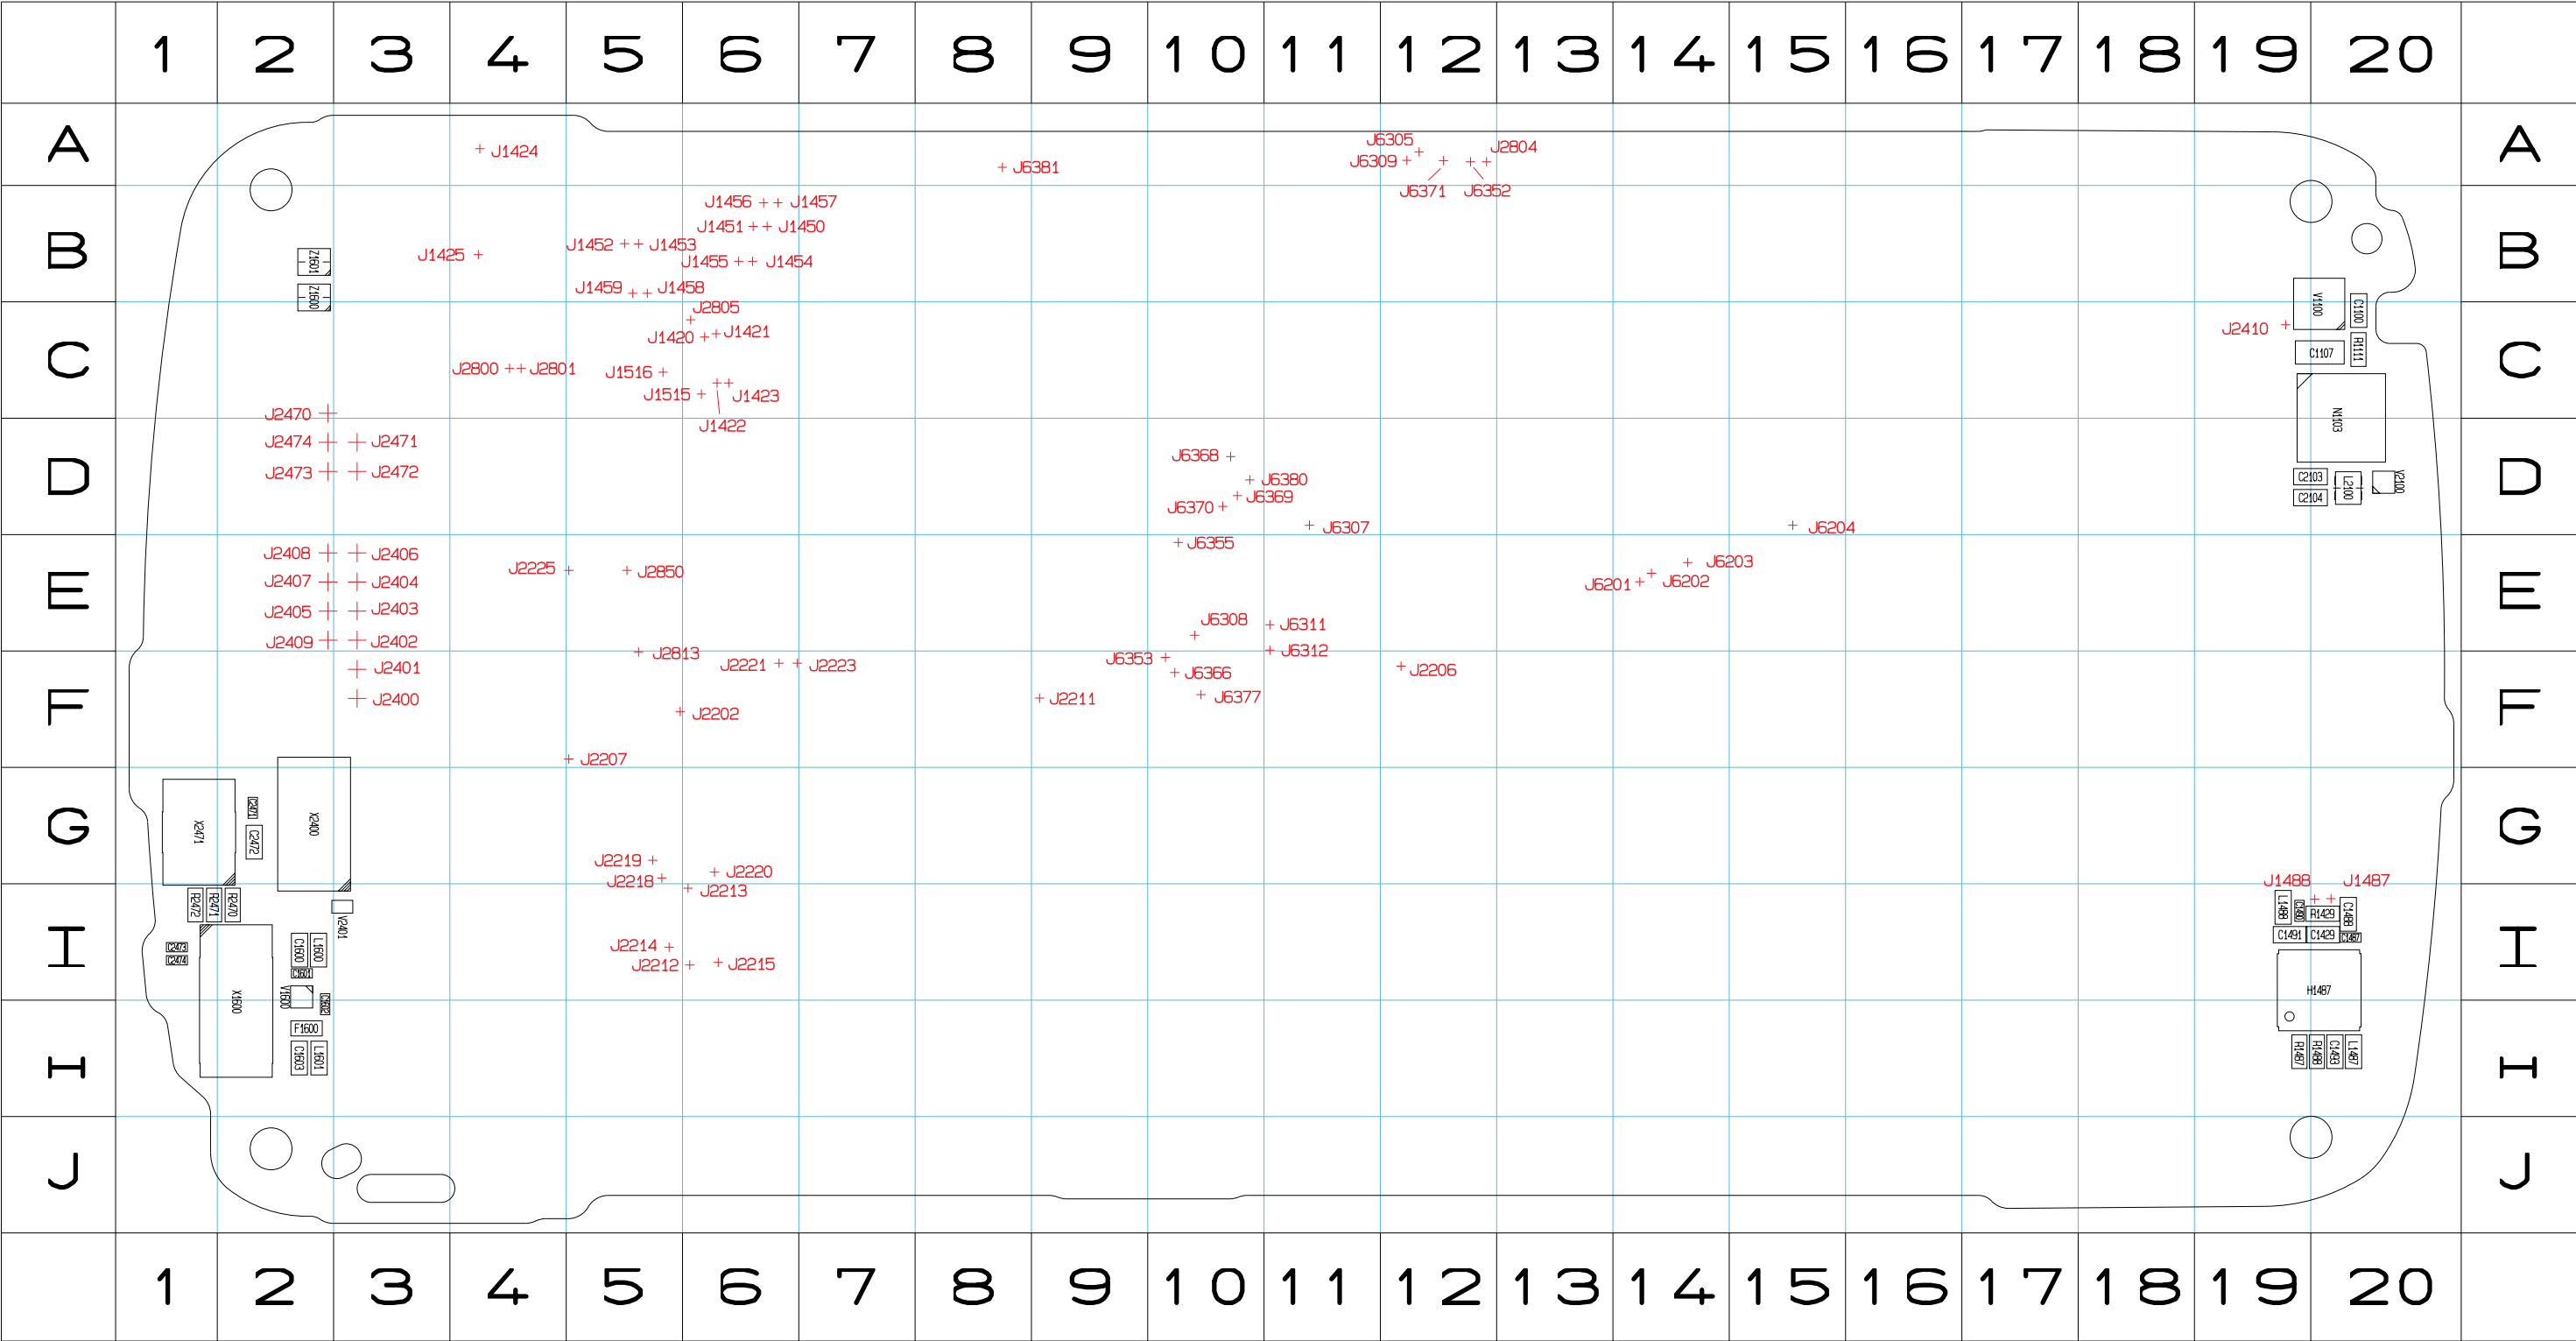

C		C1491	H19	C2104	D19	H		L2100	D20	R1488	I20	V2100	D20	Z1600	B2
C1100	C20	C1493	I20	C2471	G2	H1487	H20	N		R2470	H2	V2401	H3	Z1601	B2
C1107	C20	C1600	H2	C2472	G2	L		N1103	C20	R2471	H1	X			
C1429	H20	C1601	H2	C2473	H1	L1487	I20	R		R2472	H1	X1600	I2		
C1487	H20	C1602	I2	C2474	H1	L1488	H19	R1111	C20	V		X2400	G2		
C1488	H20	C1603	I2	F		L1600	H2	R1429	H20	V1100	C20	X2471	G1		
C1490	H19	C2103	D19	F1600	I2	L1601	I2	R1487	I19	V1600	H2	Z			

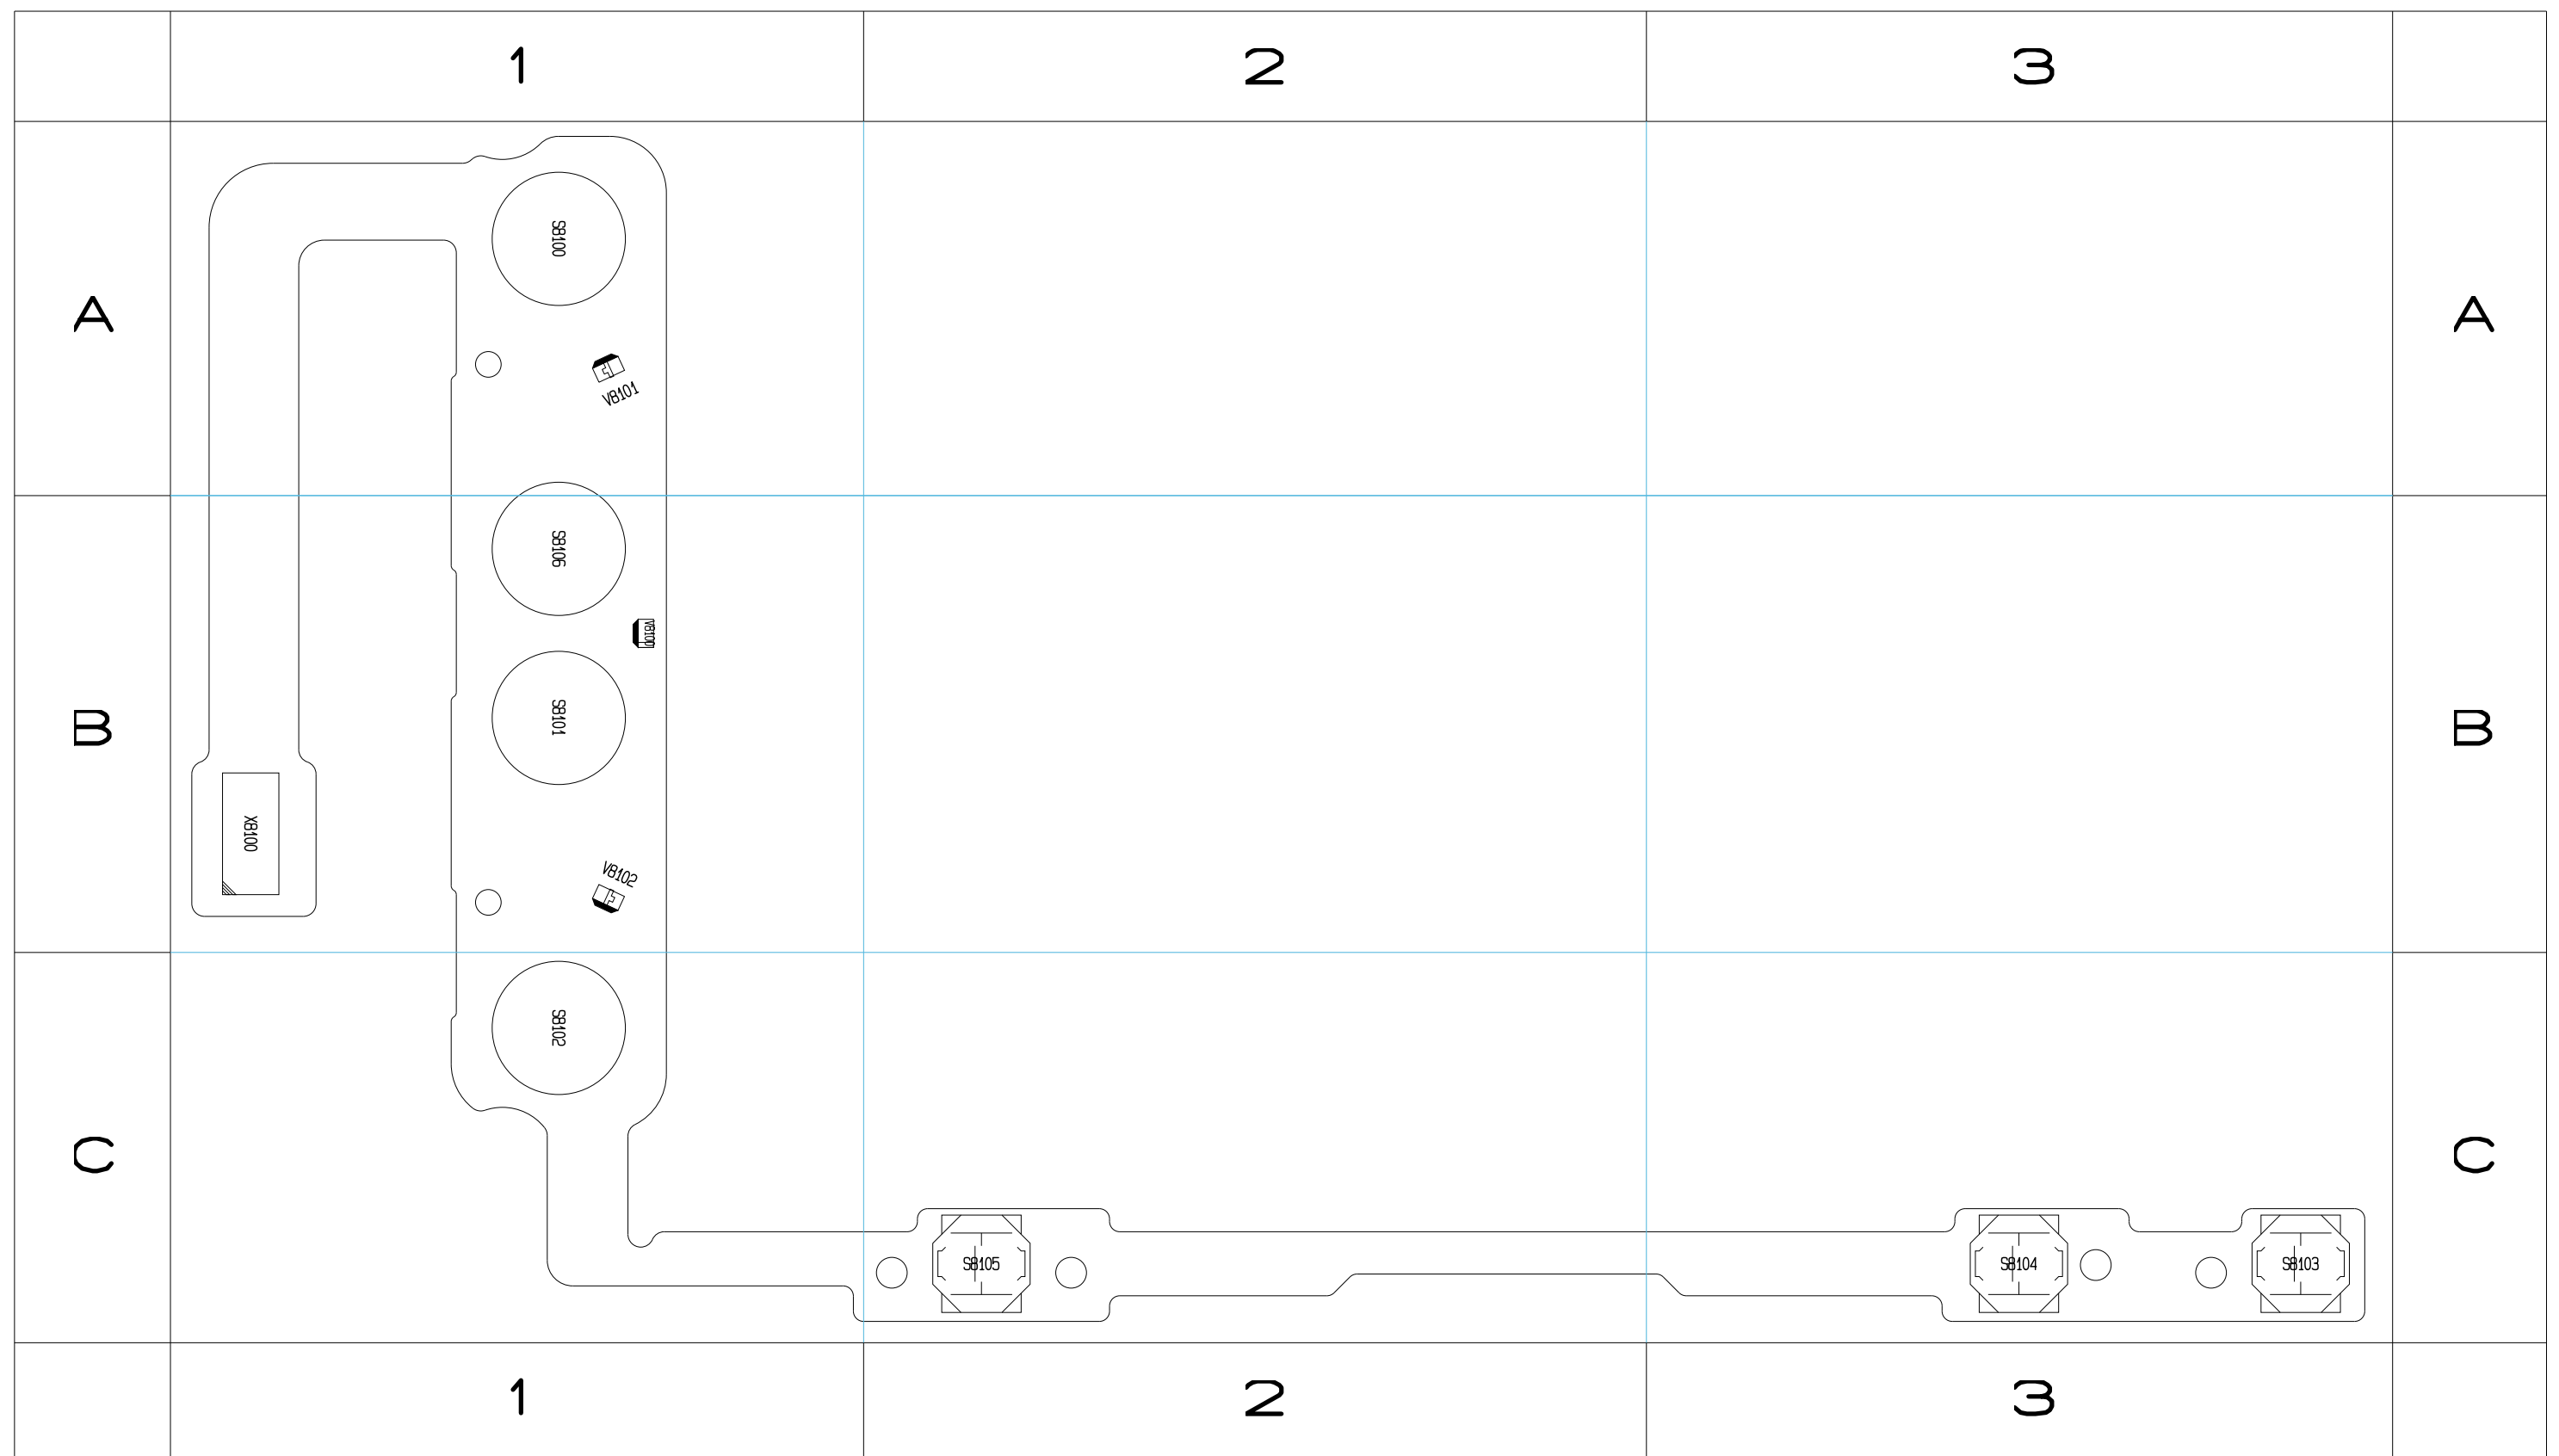

S		S8103	C3	V		X	
S8100	A1	S8104	C3	V8100	B2	X8100	B2
S8101	B2	S8105	C2	V8101	A1		
S8102	C1	S8106	B2	V8102	B2		