

# Nokia C5-00.2

RM-745

23.04.2012

v1.0



## IMPORTANT

This document is intended for use by authorized Nokia service centers only. Please use the document together with other documents such as the Service Manual and Service Bulletins.

## Version information

 
While every effort has been made to ensure that the document is accurate, some errors may exist. Please always check for the latest published version for this document.


If you find any errors in the document please send email to: [service.manuals@nokia.com](mailto:service.manuals@nokia.com)


1.0 First approved version.



## Contents

- 1 Front page
- 2 RAPS, Memory, Camera
- 3 RAPS, HS USB
- 4 GAZOO, Audio, Battery, MMC, SIM
- 5 UI, Keyboard flex
- 6 BTH FM, GPS
- 7 RF Part
- 8 Component finder top
- 9 Component finder bottom
- 10 Component finder flex



 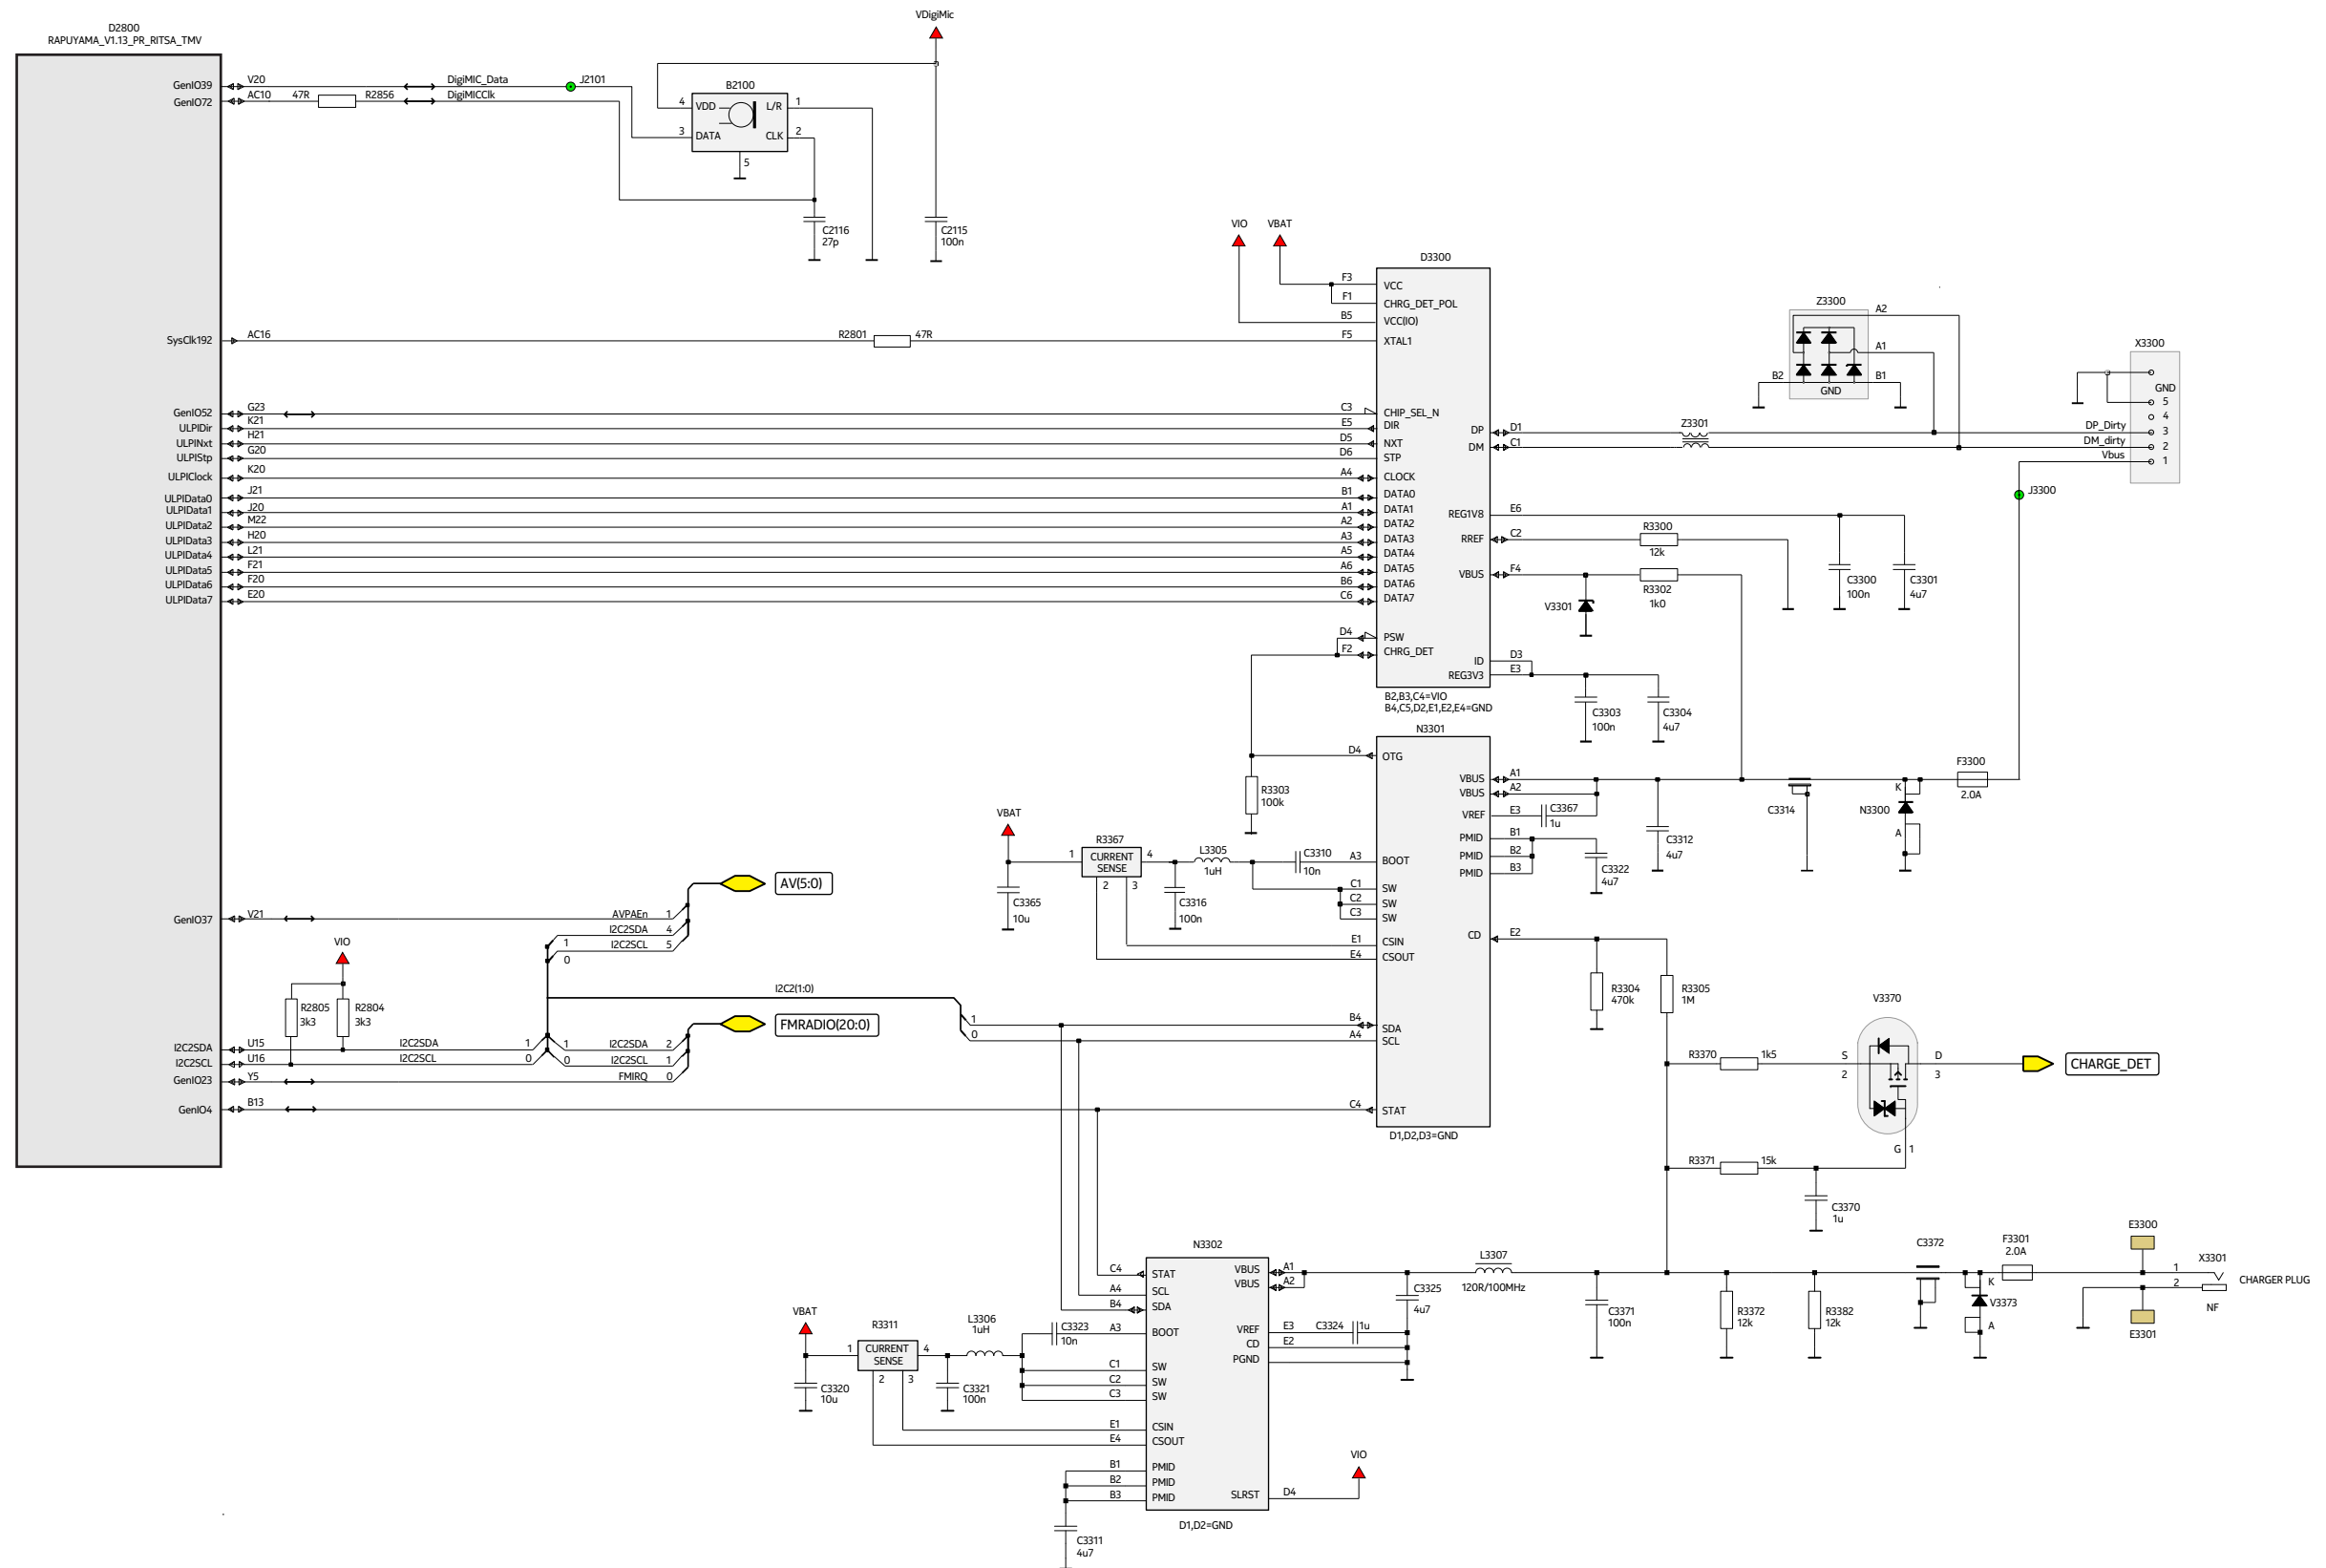


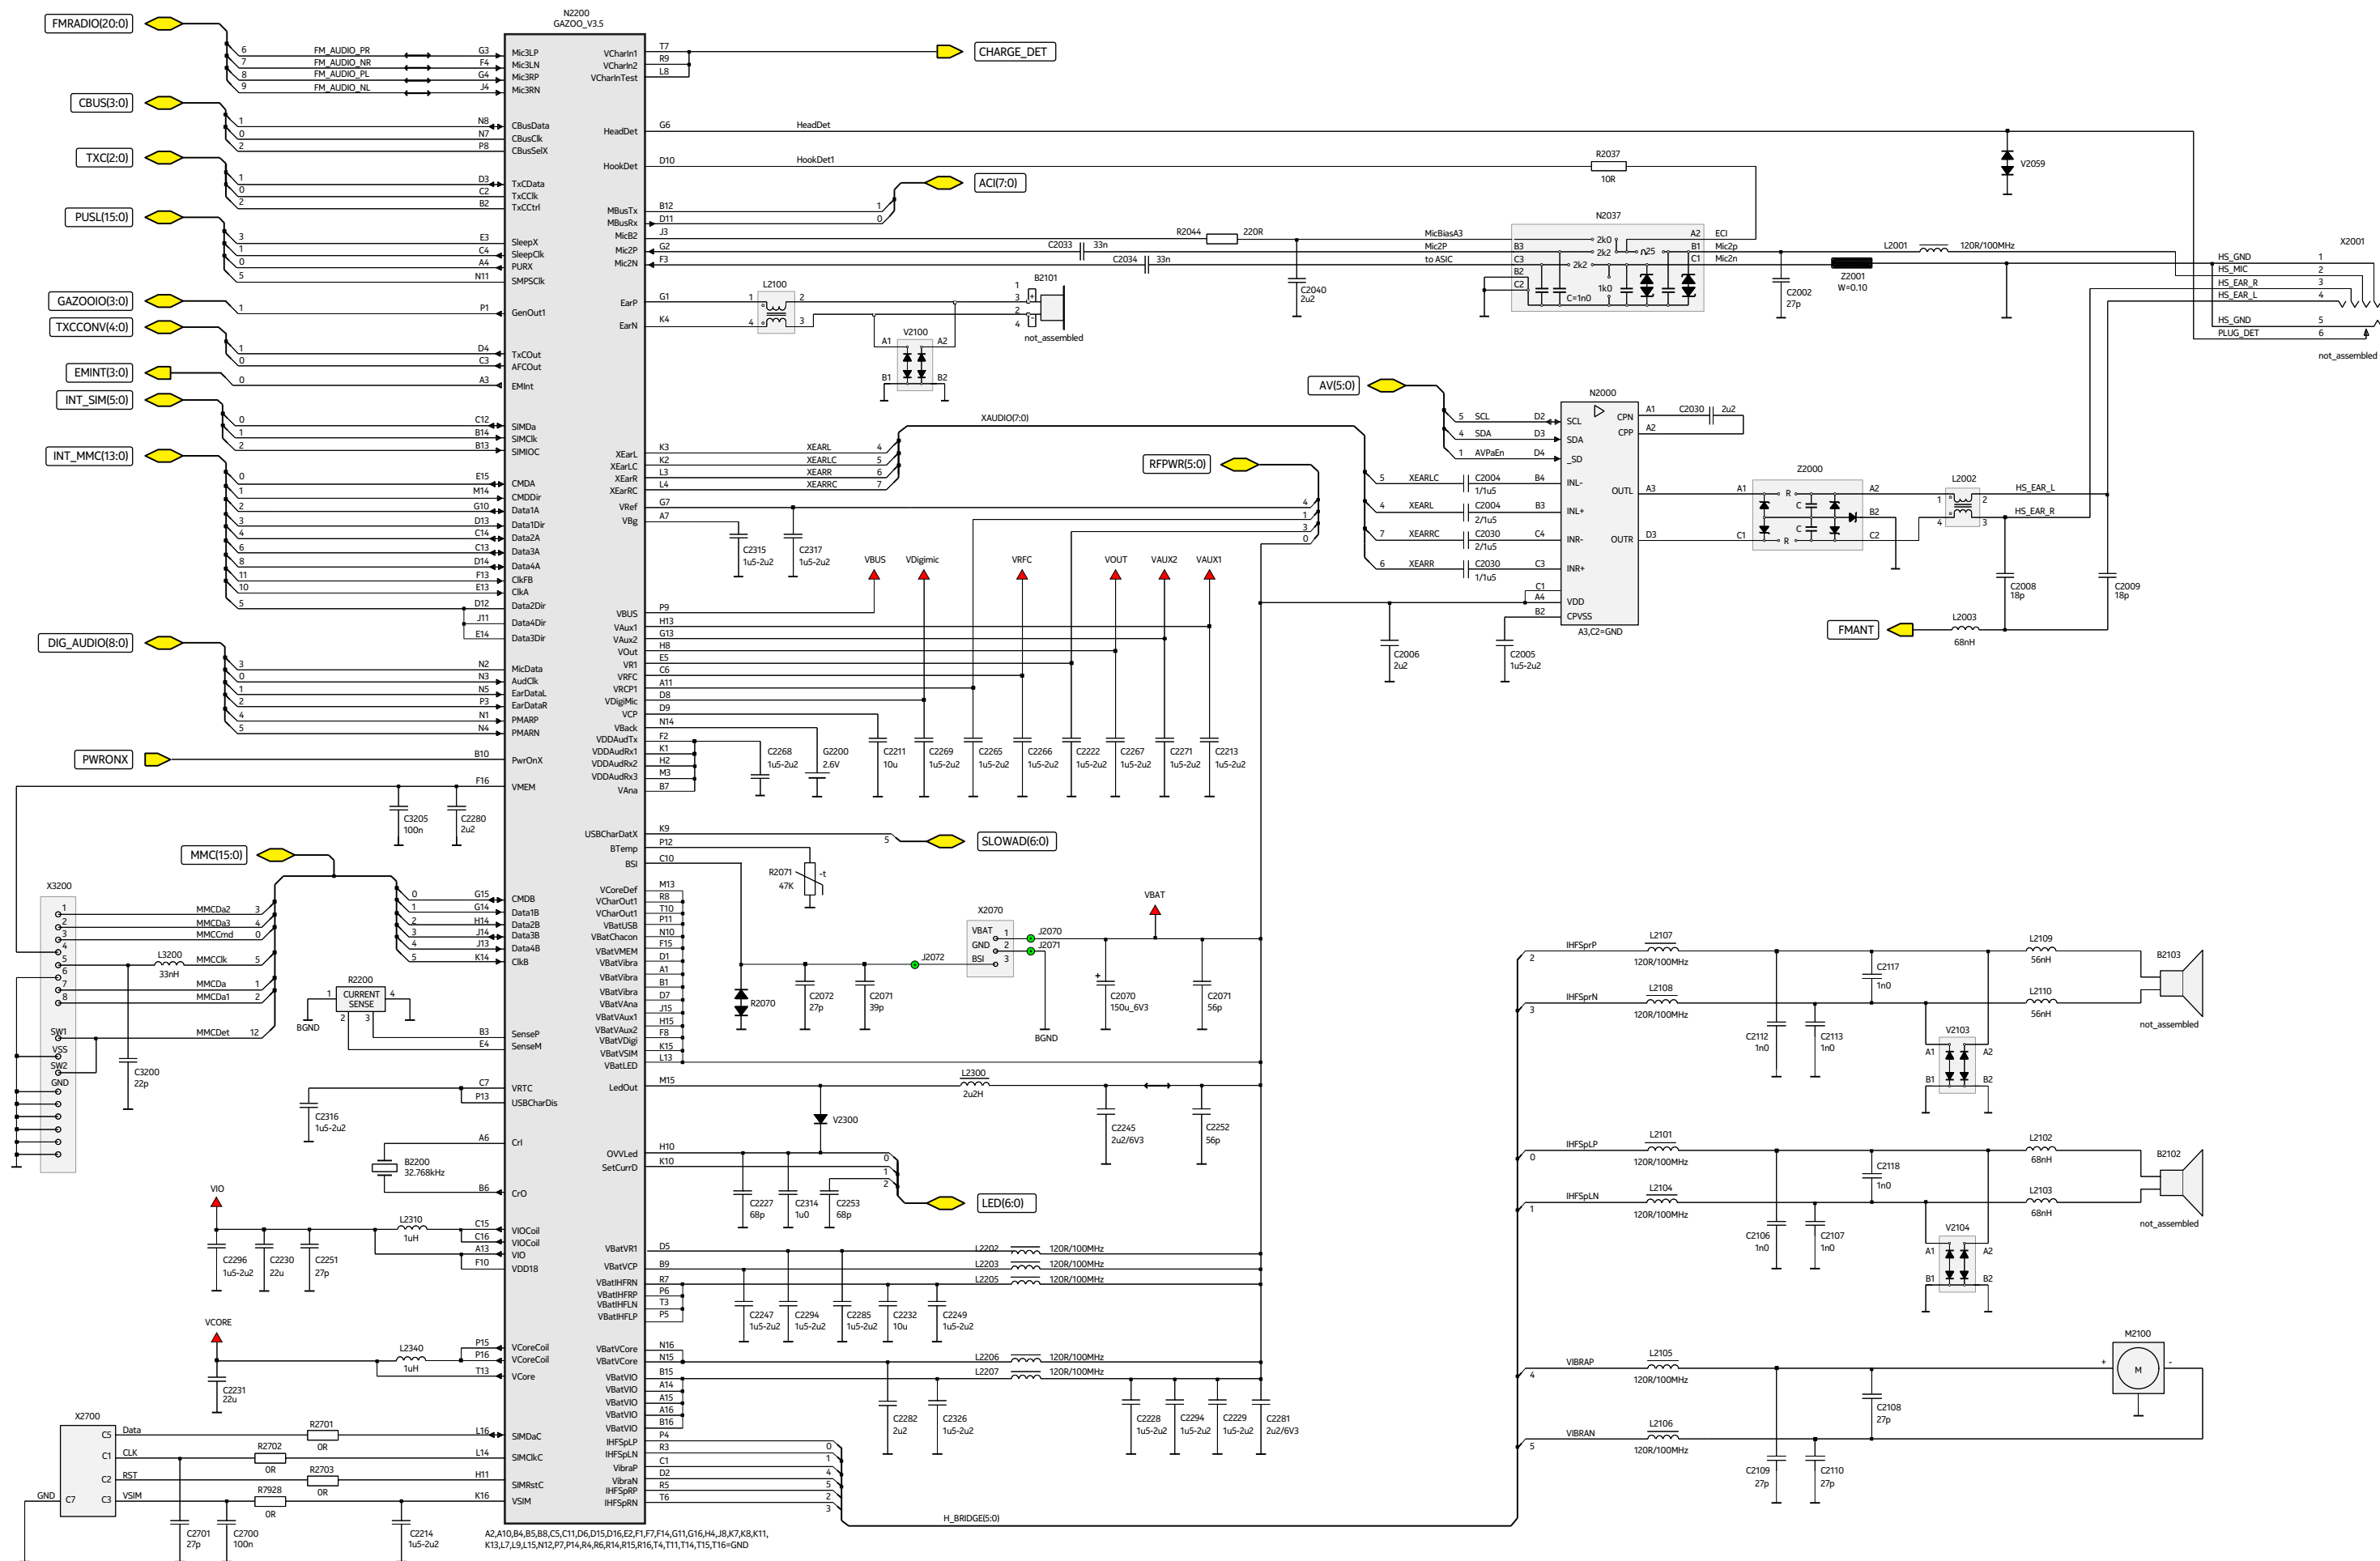

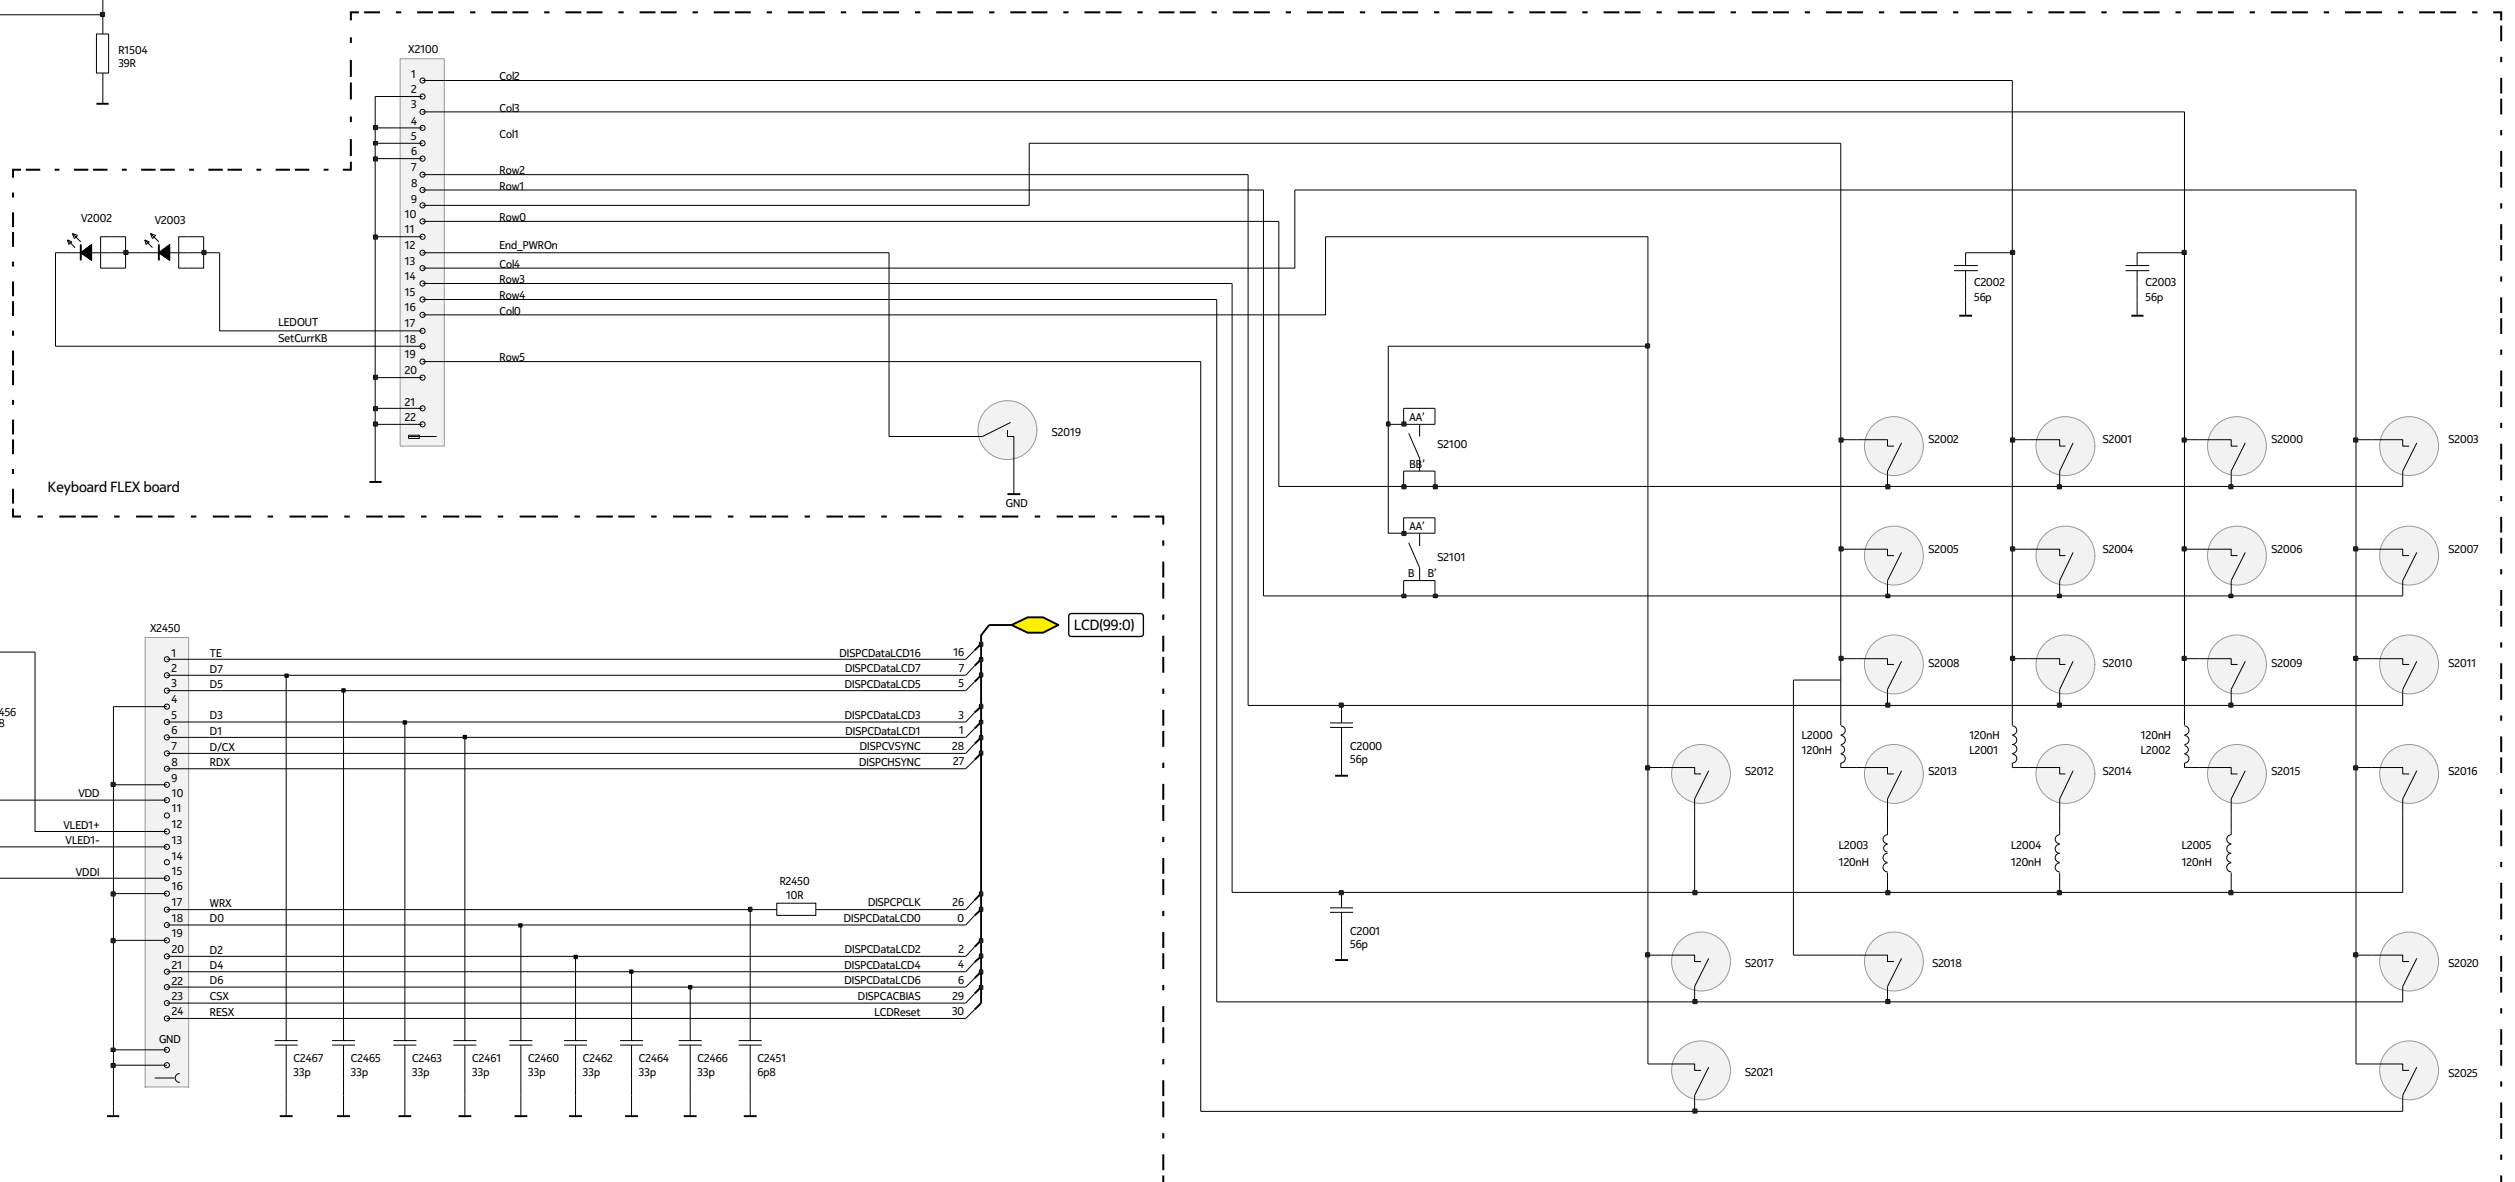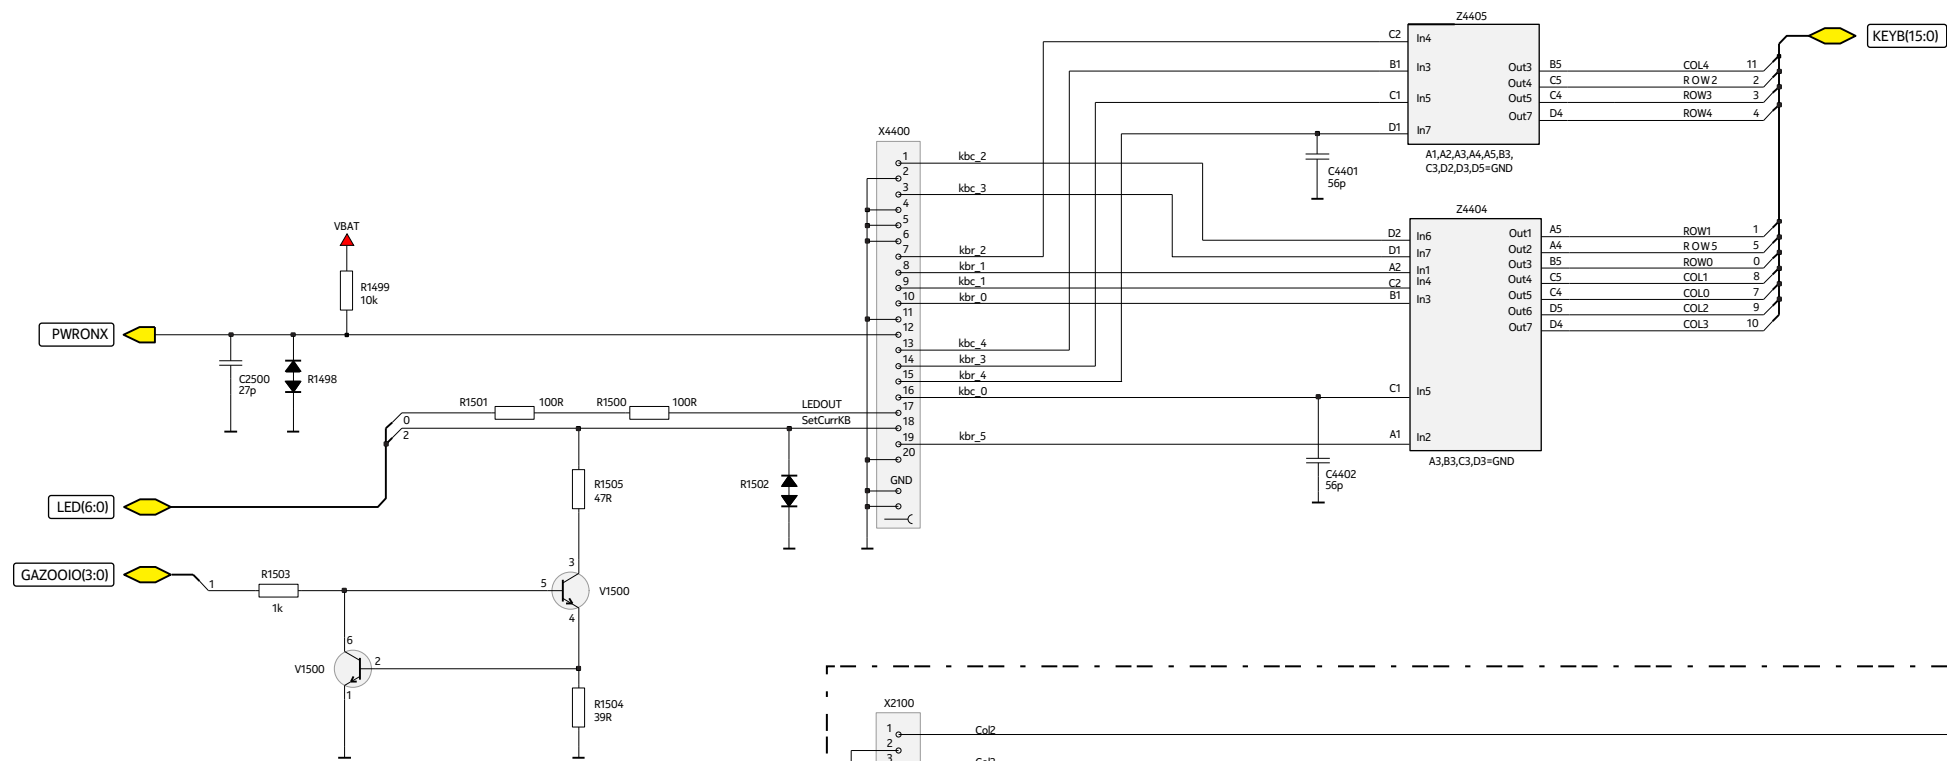












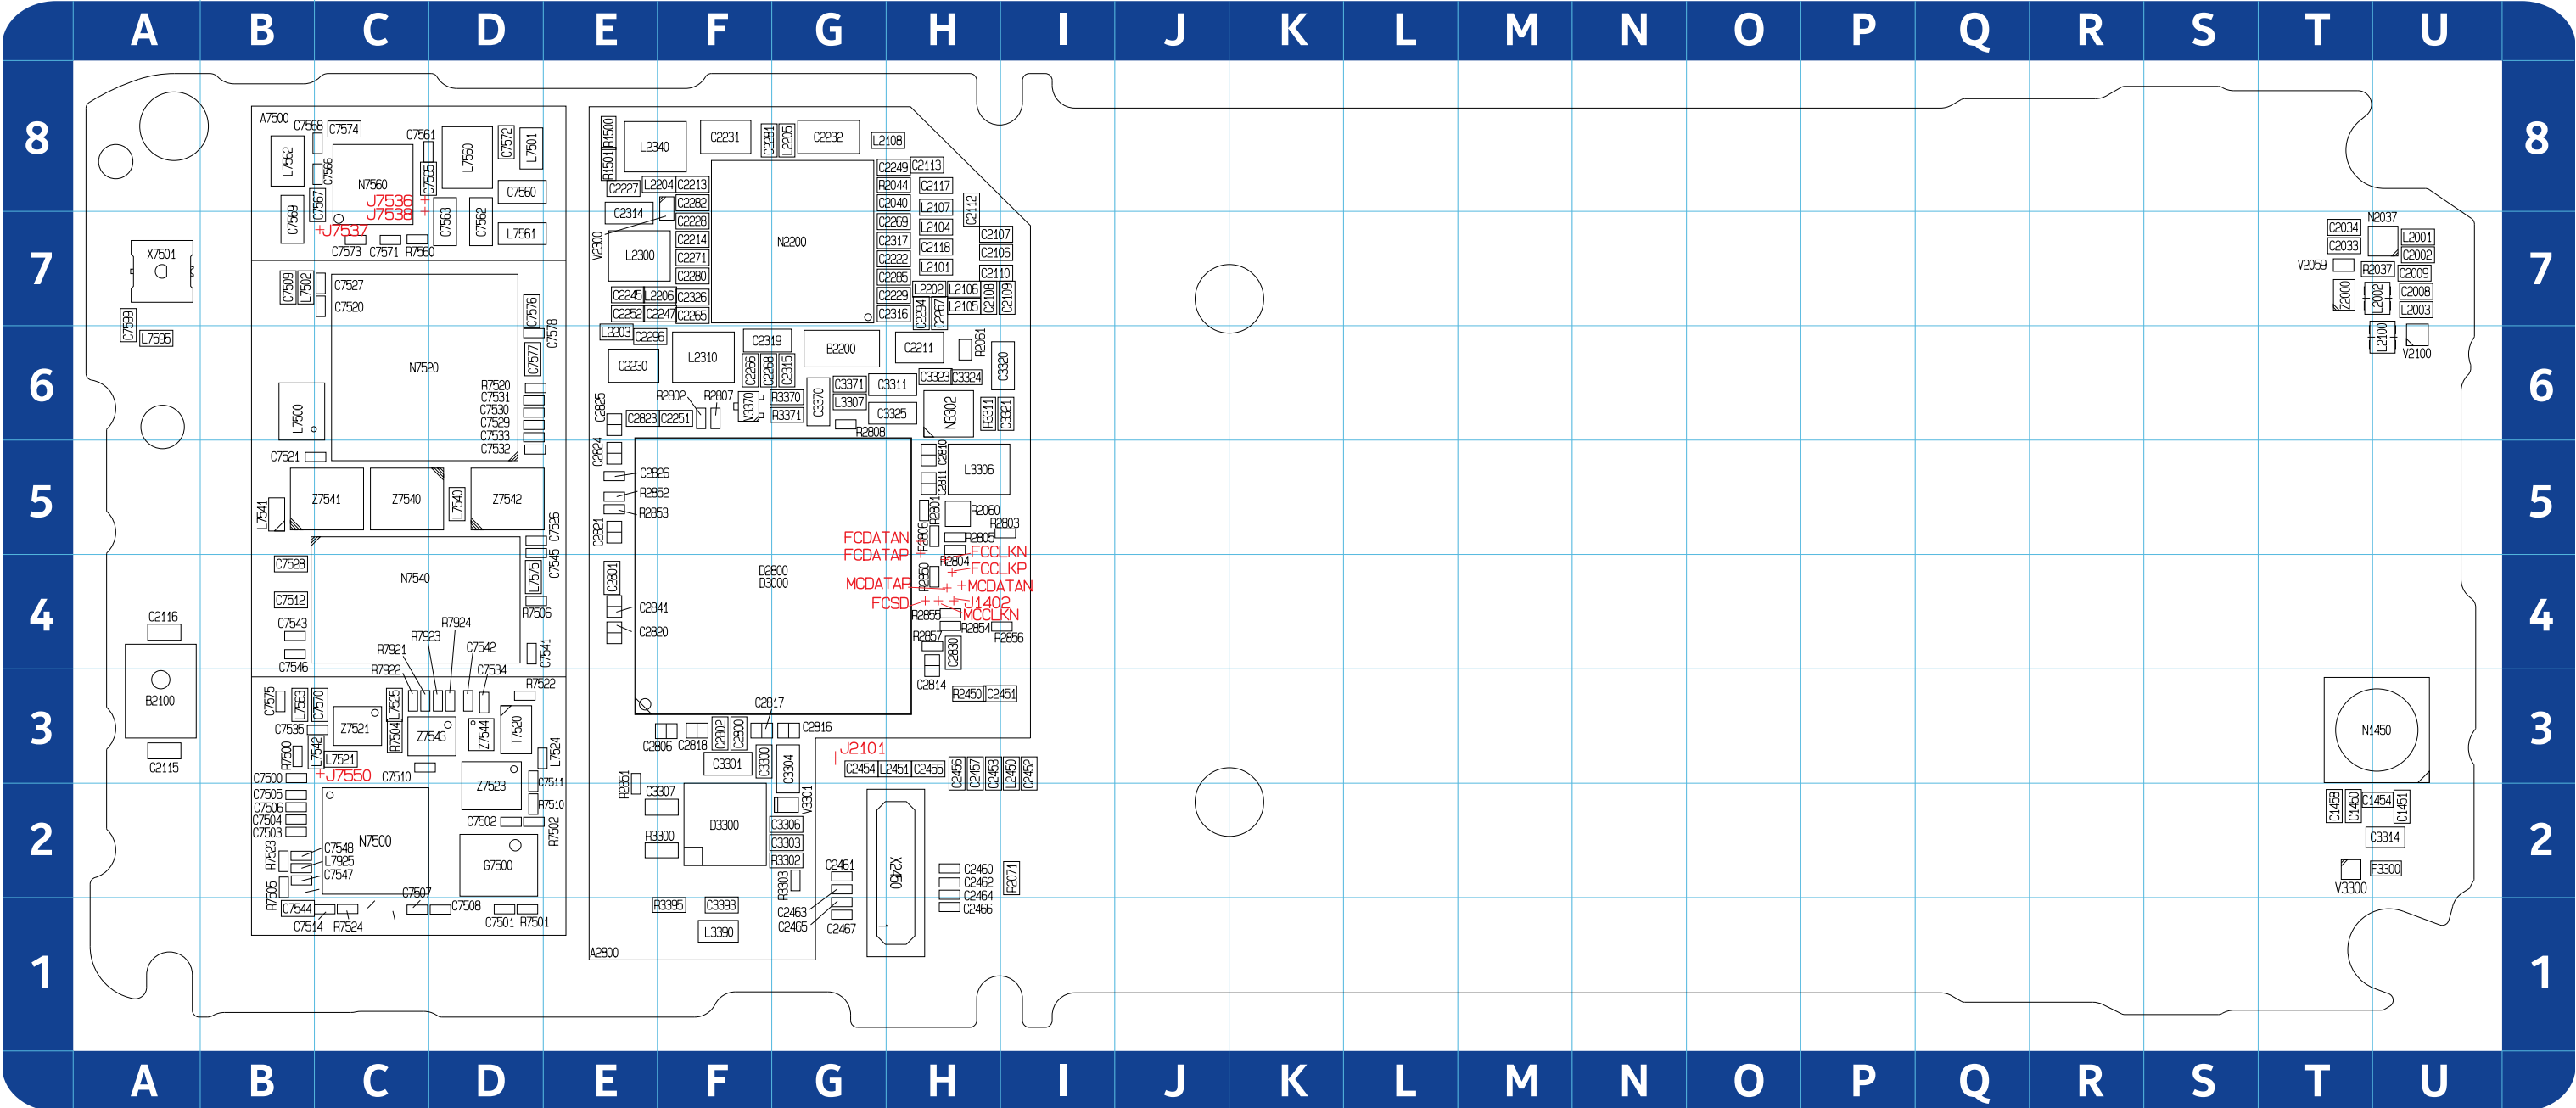



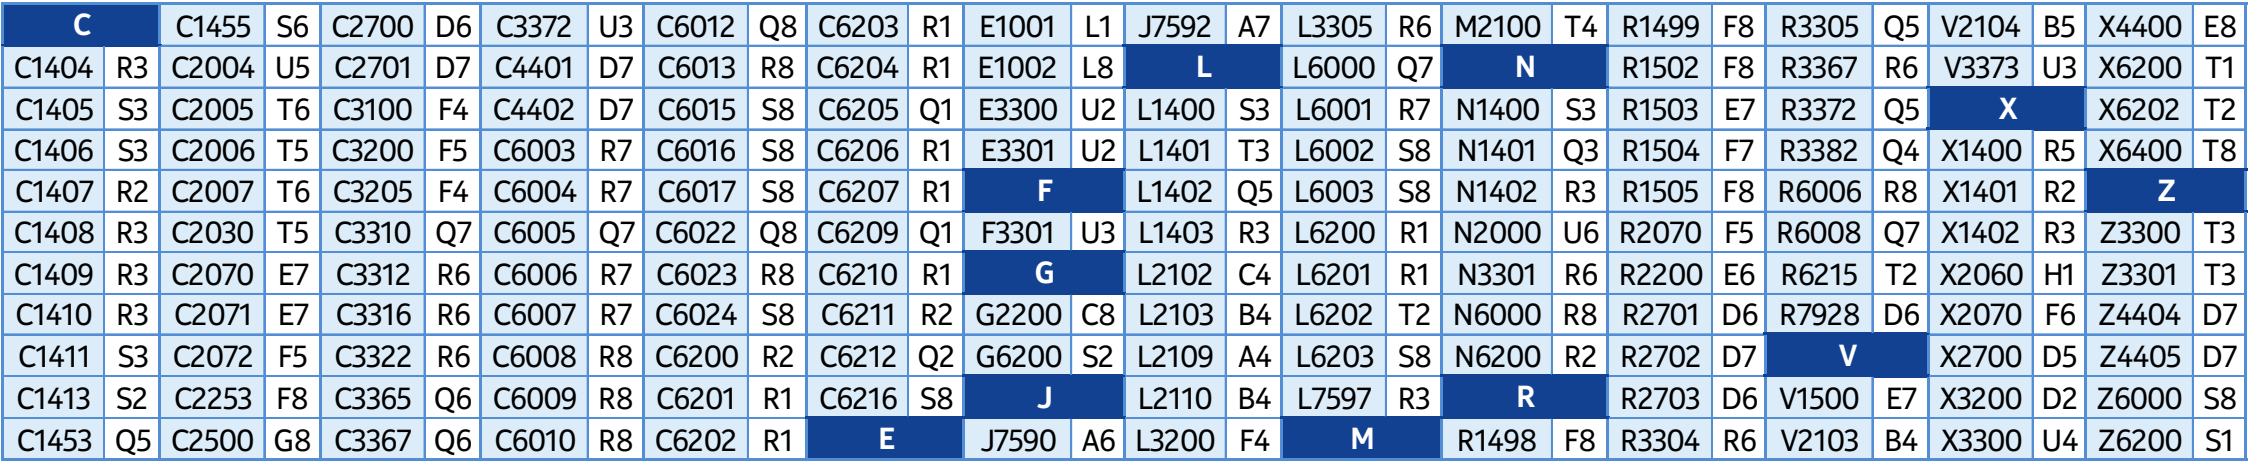

Keyboard flex top

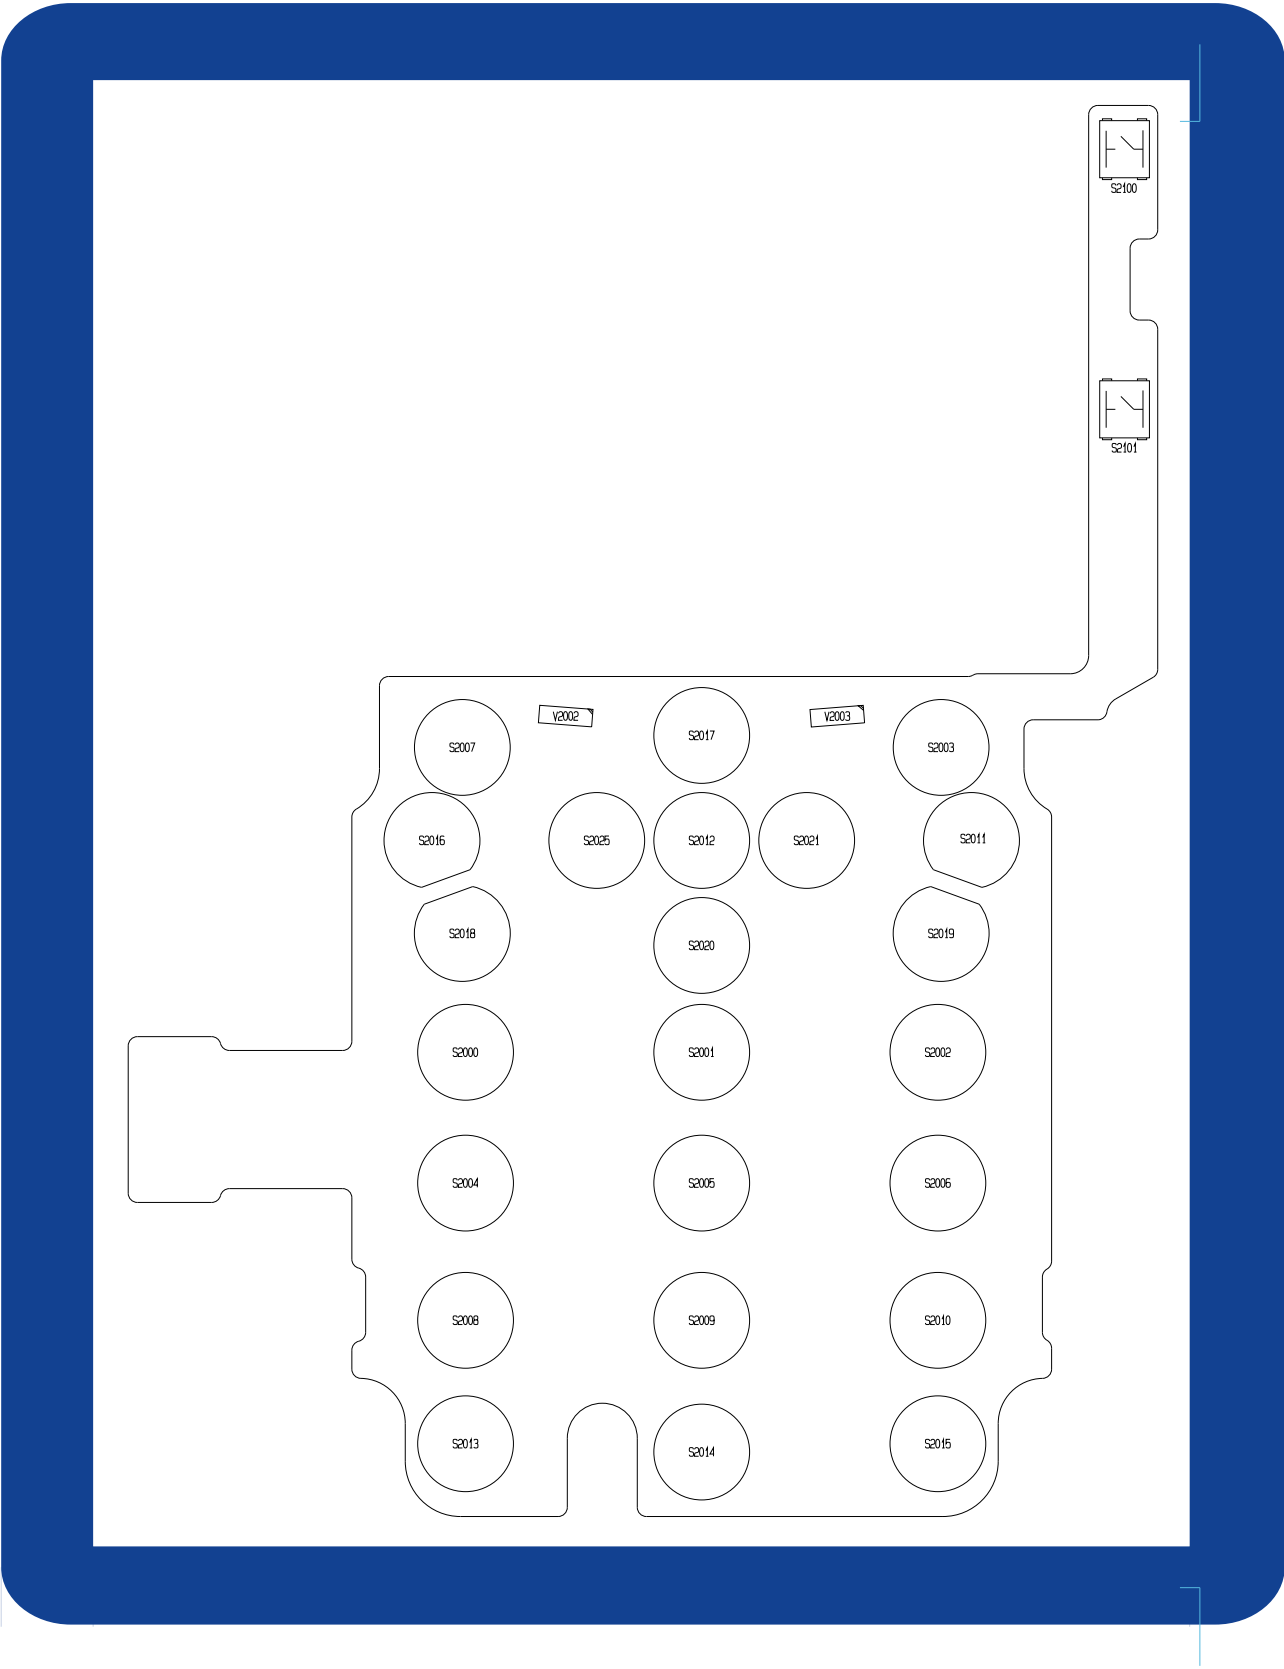

Keyboard flex bottom

