


Service Manual

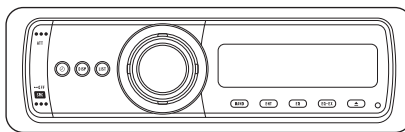

DEH-P8MP/XN/UC

ORDER NO.
CRT3219

MULTI-CD CONTROL HIGH POWER CD/MP3/WMA PLAYER WITH FM/AM TUNER

DEH-P8MP

 /XN/UC

DEH-P80MP

 /XN/UC

DEH-P1Y

 /XN/ES

This service manual should be used together with the following manual(s):

Model No.	Order No.	Mech.Module	Remarks
CX-3098	CRT3179	S10WMAcode2	CD Mech. Module:Circuit Description, Mech. Description, Disassembly



For details, refer to "Important symbols for good services".

SAFETY INFORMATION

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65

● Service Precaution



1. You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.
2. Before disassembling the unit, be sure to turn off the power. Unplugging and plugging the connectors during power-on mode may damage the ICs inside the unit.
3. To protect the pickup unit from electrostatic discharge during servicing, take an appropriate treatment (shorting-solder) by referring to "the DISASSEMBLY" on page 63.
4. After replacing the pickup unit, be sure to check the grating. (See page 59.)

[Important symbols for good services]

In this manual, the symbols shown-below indicate that adjustments, settings or cleaning should be made securely. When you find the procedures bearing any of the symbols, be sure to fulfill them:

1. Product safety



You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

2. Adjustments



To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

3. Cleaning



For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

4. Shipping mode and shipping screws



To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

5. Lubricants, glues, and replacement parts



Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount. For replacement parts or tools, the prescribed ones should be used.



CONTENTS

SAFETY INFORMATION.....	2
1. SPECIFICATIONS	4
2. EXPLODED VIEWS AND PARTS LIST	8
2.1 PACKING(DEH-P8MP/XN/UC,DEH-P80MP/XN/UC)	8
2.2 PACKING(DEH-P1Y/XN/ES)	10
2.3 EXTERIOR	12
2.4 CD MECHANISM MODULE	16
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	18
3.1 BLOCK DIAGRAM	18
3.2 OVERALL CONNECTION DIAGRAM(GUIDE PAGE)	20
3.3 KEYBOARD UNIT	26
3.4 CD MECHANISM MODULE(GUIDE PAGE)	28
4. PCB CONNECTION DIAGRAM	38
4.1 TUNER AMP UNIT	38
4.2 SWITCH UNIT	42
4.3 KEYBOARD UNIT	43
4.4 CD MECHANISM MODULE	44
5. ELECTRICAL PARTS LIST	46
6. ADJUSTMENT	55
6.1 CONNECTION DIAGRAM	55
6.2 OEL UNIT ADJUSTMENT	56
6.3 CD ADJUSTMENT	57
6.4 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT	59
6.5 ERROR MODE	61
6.6 OEL SCREENSAVER STUDIO LKA TO LKD APPLICATION	62
6.7 SYSTEM MICROCOMPUTER TEST PROGRAM	62
7. GENERAL INFORMATION	63
7.1 DIAGNOSIS	63
7.1.1 DISASSEMBLY	63
7.1.2 CONNECTOR FUNCTION DESCRIPTION	68
7.2 IC	69
7.3 EXPLANATION	81
7.3.1 OPERATIONAL FLOW CHART	81
7.3.2 CIRCUIT DESCRIPTIONS	82
7.4 CLEANING	84
8. OPERATIONS	85

1. SPECIFICATIONS

● DEH-P8MP/XN/UC

General

A	Power source	14.4 V DC (10.8 – 15.1 V allowable)
	Grounding system	Negative type
	Max. current consumption	20.0 A
	Backup current	5mA or less
	Dimensions (W × H × D):	
	DIN	
	Chassis	178 × 50 × 159 mm (7 × 2 × 6-1/4 in.)
B	Nose	188 × 58 × 19 mm (7-3/8 × 2-1/4 × 3/4 in.)
	D	
	Chassis	178 × 50 × 164 mm (7 × 2 × 6-1/2 in.)
	Nose	170 × 45 × 14 mm (6-3/4 × 1-3/4 × 1/2 in.)
	Weight	1.4 kg (3.5 lbs)

Audio

(When in 60W mode)

C Continuous power output is 27 W per channel minimum into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

(When in 40W mode)

Continuous power output is 20 W per channel minimum into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

Maximum power output 60W × 4

(When in 60W mode)

Maximum power output 40W × 4

(When in 40W mode)

D Load impedance 4 Ω (4 – 8 Ω allowable)

Preout max output level/output impedance
..... 6.5 V/100 Ω

Equalizer (3-Band Parametric Equalizer):

Low

Frequency 40/80/100/160 Hz
Q Factor 0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ± 12 dB

Mid

Frequency 200/500/1k/2k Hz
Q Factor 0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ± 12 dB

High

Frequency 3.15k/8k/10k/12.5k Hz
Q Factor 0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ± 12 dB

Loudness contour

Low +3.5 dB (100 Hz), +3 dB (10
kHz)

F

Mid +10 dB (100 Hz), +6.5 dB
(10 kHz)

High +11 dB (100 Hz), +11 dB
(10 kHz)
(volume: –30 dB)

Tone controls:

Bass

Frequency 40/63/100/160 Hz

Gain ± 12 dB

Treble

Frequency 2.5k/4k/6.3k/10k Hz

Gain ± 12 dB

HPF:

Frequency 50/80/125 Hz

Slope –12 dB/oct

Subwoofer:

Frequency 50/80/125 Hz

Slope –18 dB/oct

Gain ± 12 dB

Phase Normal/Reverse

CD player

System Compact disc audio system

Usable discs Compact disc

Signal format:

Sampling frequency 44.1 kHz

Number of quantization bits

..... 16; linear

Frequency characteristics ... 5 – 20,000 Hz (± 1 dB)

Signal-to-noise ratio 94 dB (1 kHz) (IHF-A net-
work)

Dynamic range 92 dB (1 kHz)

Number of channels 2 (stereo)

MP3 decoding format MPEG-1 & 2 Audio Layer 3

WMA decoding format Ver. 7, 7.1, 8, 9

WAV signal format Linear PCM & MS ADPCM

FM tuner

Frequency range 87.9 – 107.9 MHz

Usable sensitivity 8 dBf (0.7 μ V/75 Ω , mono,
S/N: 30 dB)

50 dB quieting sensitivity 10 dBf (0.9 μ V/75 Ω , mono)

Signal-to-noise ratio 75 dB (IHF-A network)

Distortion 0.3 % (at 65 dBf, 1 kHz,
stereo)

0.1 % (at 65 dBf, 1 kHz,
mono)

Frequency response 30 – 15,000 Hz (± 3 dB)

Stereo separation 45 dB (at 65 dBf, 1 kHz)

Selectivity 80 dB (± 200 kHz)

Three-signal intermodulation (desired signal level)

..... 30 dBf (two undesired sig-
nal level: 100 dBf)

AM tuner

Frequency range 530 – 1,710 kHz (10 kHz)

Usable sensitivity 18 μ V (S/N: 20 dB)

Signal-to-noise ratio 65 dB (IHF-A network)

● DEH-P80MP/XN/UC

General

Power source	14.4 V DC (10.8 – 15.1 V allowable)
Grounding system	Negative type
Max. current consumption	20.0 A
Backup current	5mA or less
Dimensions (W × H × D):	
DIN	
Chassis	178 × 50 × 159 mm (7 × 2 × 6-1/4 in.)
Nose	188 × 58 × 19 mm (7-3/8 × 2-1/4 × 3/4 in.)
D	
Chassis	178 × 50 × 164 mm (7 × 2 × 6-1/2 in.)
Nose	170 × 45 × 14 mm (6-3/4 × 1-3/4 × 1/2 in.)
Weight	1.4 kg (3.5 lbs)

Audio

(When in 60W mode)

Continuous power output is 27 W per channel minimum into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

(When in 40W mode)

Continuous power output is 20 W per channel minimum into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

Maximum power output 60W × 4
(When in 60W mode)

Maximum power output 40W × 4
(When in 40W mode)

Load impedance 4 Ω (4 – 8 Ω allowable)

Preout max output level/output impedance
..... 6.5 V/100 Ω

Equalizer (3-Band Parametric Equalizer):

Low

Frequency 40/80/100/160 Hz
Q Factor 0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain ± 12 dB

Mid

Frequency 200/500/1k/2k Hz
Q Factor 0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain ± 12 dB

High

Frequency 3.15k/8k/10k/12.5k Hz
Q Factor 0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain ± 12 dB

Loudness contour

Low +3.5 dB (100 Hz), +3 dB (10 kHz)

Mid +10 dB (100 Hz), +6.5 dB (10 kHz)
High +11 dB (100 Hz), +11 dB (10 kHz)
(volume: –30 dB)

Tone controls:

Bass

Frequency 40/63/100/160 Hz
Gain ± 12 dB

Treble

Frequency 2.5k/4k/6.3k/10k Hz
Gain ± 12 dB

HPF:

Frequency 50/80/125 Hz
Slope –12 dB/oct

Subwoofer:

Frequency 50/80/125 Hz
Slope –18 dB/oct
Gain ± 12 dB
Phase Normal/Reverse

CD player

System Compact disc audio system

Usable discs Compact disc

Signal format:

Sampling frequency 44.1 kHz
Number of quantization bits
..... 16; linear

Frequency characteristics 5 – 20,000 Hz (± 1 dB)

Signal-to-noise ratio 94 dB (1 kHz) (IHF-A network)

Dynamic range 92 dB (1 kHz)

Number of channels 2 (stereo)

MP3 decoding format MPEG-1 & 2 Audio Layer 3

WMA decoding format Ver. 7, 7.1, 8, 9

WAV signal format Linear PCM & MS ADPCM

FM tuner

Frequency range 87.9 – 107.9 MHz

Usable sensitivity 8 dBf (0.7 μ V/75 Ω mono, S/N: 30 dB)

50 dB quieting sensitivity 10 dBf (0.9 μ V/75 Ω mono)

Signal-to-noise ratio 75 dB (IHF-A network)

Distortion 0.3 % (at 65 dBf, 1 kHz, stereo)
0.1 % (at 65 dBf, 1 kHz, mono)

Frequency response 30 – 15,000 Hz (± 3 dB)

Stereo separation 45 dB (at 65 dBf, 1 kHz)

Selectivity 80 dB (± 200 kHz)

Three-signal intermodulation (desired signal level)
..... 30 dBf (two undesired signal level: 100 dBf)

AM tuner

Frequency range 530 – 1,710 kHz (10 kHz)

Usable sensitivity 18 μ V (S/N: 20 dB)

Signal-to-noise ratio 65 dB (IHF-A network)

● DEH-P1Y/XN/ES

General

Rated power source 14.4 V DC
(allowable voltage range:
12.0 – 14.4 V DC)
Grounding system Negative type
Backup current 5mA or less

Max. current consumption
..... 20.0 A

Dimensions (W × H × D):

DIN Chassis 178 × 50 × 159 mm
Nose 188 × 58 × 19 mm

D Chassis 178 × 50 × 164 mm
Nose 170 × 45 × 14 mm

Weight 1.6 kg

Audio

(When in 60W mode)

Continuous power output is 27 W per channel minimum
into 4 ohms, both channels driven 50 to 15,000 Hz with
no more than 5% THD.

(When in 40W mode)

Continuous power output is 20 W per channel minimum
into 4 ohms, both channels driven 50 to 15,000 Hz with
no more than 5% THD.

Maximum power output 60W × 4

(When in 60W mode)

Maximum power output 40W × 4

(When in 40W mode)

Load impedance 4 Ω (4 – 8 Ω allowable)

Preout max output level/output impedance

..... 6.5 V/100Ω

Equalizer (3-Band Parametric Equalizer):

Low

Frequency 40/80/100/160 Hz

Q Factor 0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ±12dB

Mid

Frequency 200/500/1k/2k Hz

Q Factor 0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ±12dB

High

Frequency 3.15k/8k/10k/12.5k Hz

Q Factor 0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ±12dB

Loudness contour

Low +3.5 dB (100 Hz), +3 dB (10
kHz)

Mid +10 dB (100 Hz), +6.5 dB
(10 kHz)

High +11 dB (100 Hz), +11 dB
(10 kHz) (volume: –30 dB)

Tone controls:

Bass

Frequency 40/63/100/160 Hz

Gain ±12dB

Treble

Frequency 2.5k/4k/6.3k/10k Hz

Gain ±12dB

HPF:

Frequency 50/80/125 Hz

Slope –12 dB/oct

Subwoofer:

Frequency 50/80/125 Hz

Slope –18 dB/oct

Gain ±12dB

Phase Normal/Reverse

CD player

System Compact disc audio system

Usable discs Compact disc

Signal format:

Sampling frequency 44.1 kHz

Number of quantization bits

..... 16; linear

Frequency characteristics 5 – 20,000 Hz (±1 dB)

Signal-to-noise ratio 94 dB (1 kHz) (IEC-A net-
work)

Dynamic range 92 dB (1 kHz)

Number of channels 2 (stereo)

MP3 decoding format MPEG-1 & 2 Audio Layer 3

WMA decoding format Ver. 7, 7.1, 8, 9

WAV signal format Linear PCM & MS ADPCM

FM tuner

Frequency range 87.5 – 108.0 MHz

Usable sensitivity 8 dBf (0.7 μV/75 Ω, mono,
S/N: 30 dB)

50 dB quieting sensitivity 10 dBf (0.9 μV/75 Ω, mono)

Signal-to-noise ratio 75 dB (IEC-A network)

Distortion 0.3 % (at 65 dBf, 1 kHz,
stereo)

0.1 % (at 65 dBf, 1 kHz,

mono)

Frequency response 30 – 15,000 Hz (±3 dB)

Stereo separation 45 dB (at 65 dBf, 1 kHz)

AM tuner

Frequency range 531 – 1,602 kHz (9 kHz)

530 – 1,640 kHz (10 kHz)

Usable sensitivity 18 μV (S/N: 20 dB)

Signal-to-noise ratio 65 dB (IEC-A network)

Infrared remote control

Wavelength 940 nm ±50 nm

Output typ; 12 mw/sr per Infrared
LED



Notes

- Specifications and the design are subject to possible modifications without notice due to improvements.
- When the built-in tuner is engaged, the amplifier operates with 40W mode even if 60W mode is selected. ■

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

DEH-P8MP/XN/UC

■

7

■

8

7

■

2. EXPLODED VIEWS AND PARTS LIST


NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

• Screw adjacent to ▽mark on the product are used for disassembly.

• For the applying amount of lobaricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING(DEH-P8MP/XN/UC,DEH-P80MP/XN/UC)

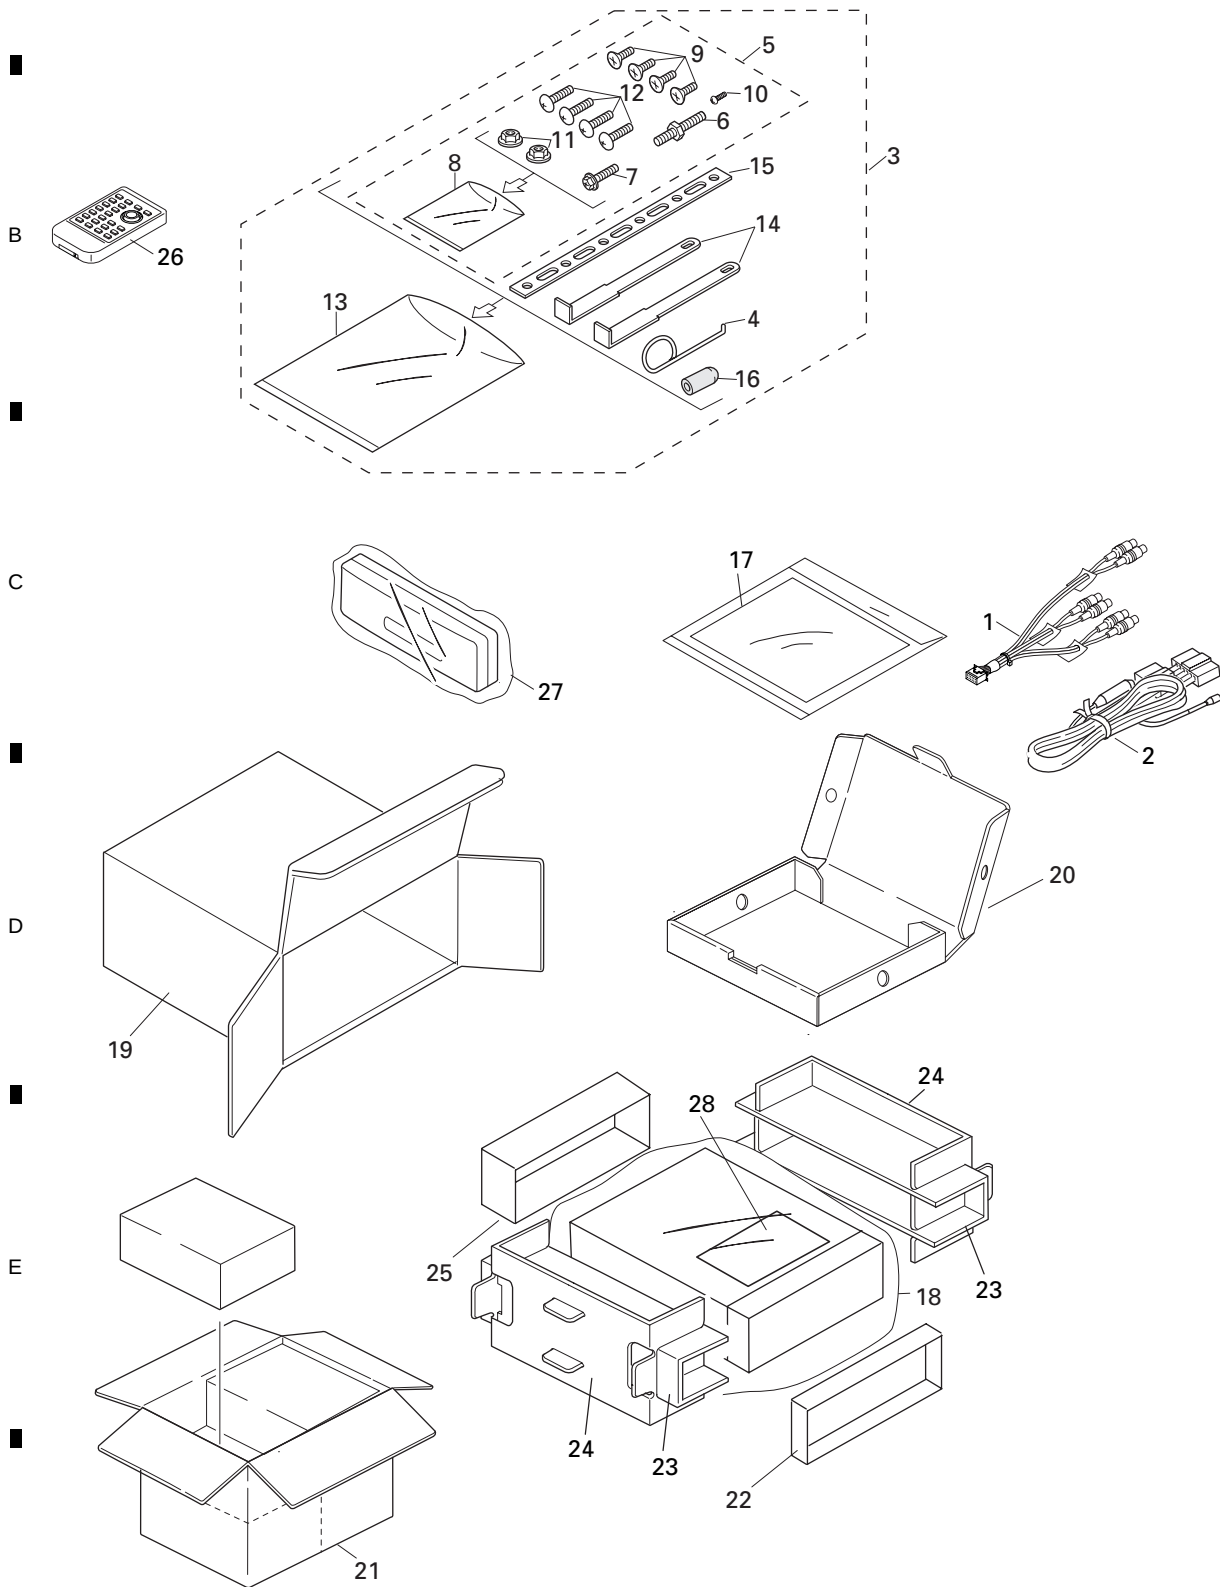

(1) PACKING(DEH-P8MP/XN/UC,DEH-P80MP/XN/UC) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Cord Assy	CDE7612	17-2	Owner's Manual	See Contrast table(2)
2	Cord Assy	CDE7482	17-3	Installation Manual	See Contrast table(2)
3	Accessory Assy	CEA4302	* 17-4	Caution Card	CRP1307
4	Spring	CBH1650	17-5	Caution Card	CRP1310
5	Screw Assy	CEA4303	* 17-6	Warranty Card	See Contrast table(2)
6	Screw	CBA1650	* 17-7	Card	See Contrast table(2)
7	Bolt(M5x16)	CBA1783	18	Polyethylene Bag	CEG1173
* 8	Polyethylene Bag	CEG-127	19	Carton	See Contrast table(2)
9	Screw	CRZ50P090FTC	20	Sub Carton	CHA3258
10	Screw	JPZ20P060FZK	21	Contain Box	See Contrast table(2)
11	Nut	NF50FTC	22	Protector	CHP2546
12	Screw	TRZ50P080FTC	23	Protector	CHP2539
* 13	Polyethylene Bag	CEG-158	24	Protector	CHP2538
14	Handle	CNC5395	25	Protector	CHP2541
15	Strap	CNC5402	26	Remote Control Unit	CXC2665
16	Bush	CNV3930	27	Case Assy	CXC3572
17-1	Polyethylene Bag	CEG1116	* 28	Caution Card	CRP1311

(2) CONTRAST TABLE

DEH-P8MP/XN/UC and DEH-P80MP/XN/UC are constructed the same except for the following:

Mark	NO	Description	DEH-P8MP/XN/UC	DEH-P80MP/XN/UC
*	17-2	Owner's Manual	CRD3844	CRD3846
	17-3	Installation Manual	CRD3845	CRD3847
	17-6	Warranty Card	CRY1070	Not used
	17-7	Card	Not used	ARY1048
	19	Carton	CHG5212	CHG5211
	21	Contain Box	CHL5212	CHL5211

Owner's Manual,Installation Manual

Part No.	Language
CRD3844	English, French
CRD3845	English, French
CRD3846	English, French
CRD3847	English, French

1 2 3 4

2.2 PACKING(DEH-P1Y/XN/ES)

A


B

C

D

E

F

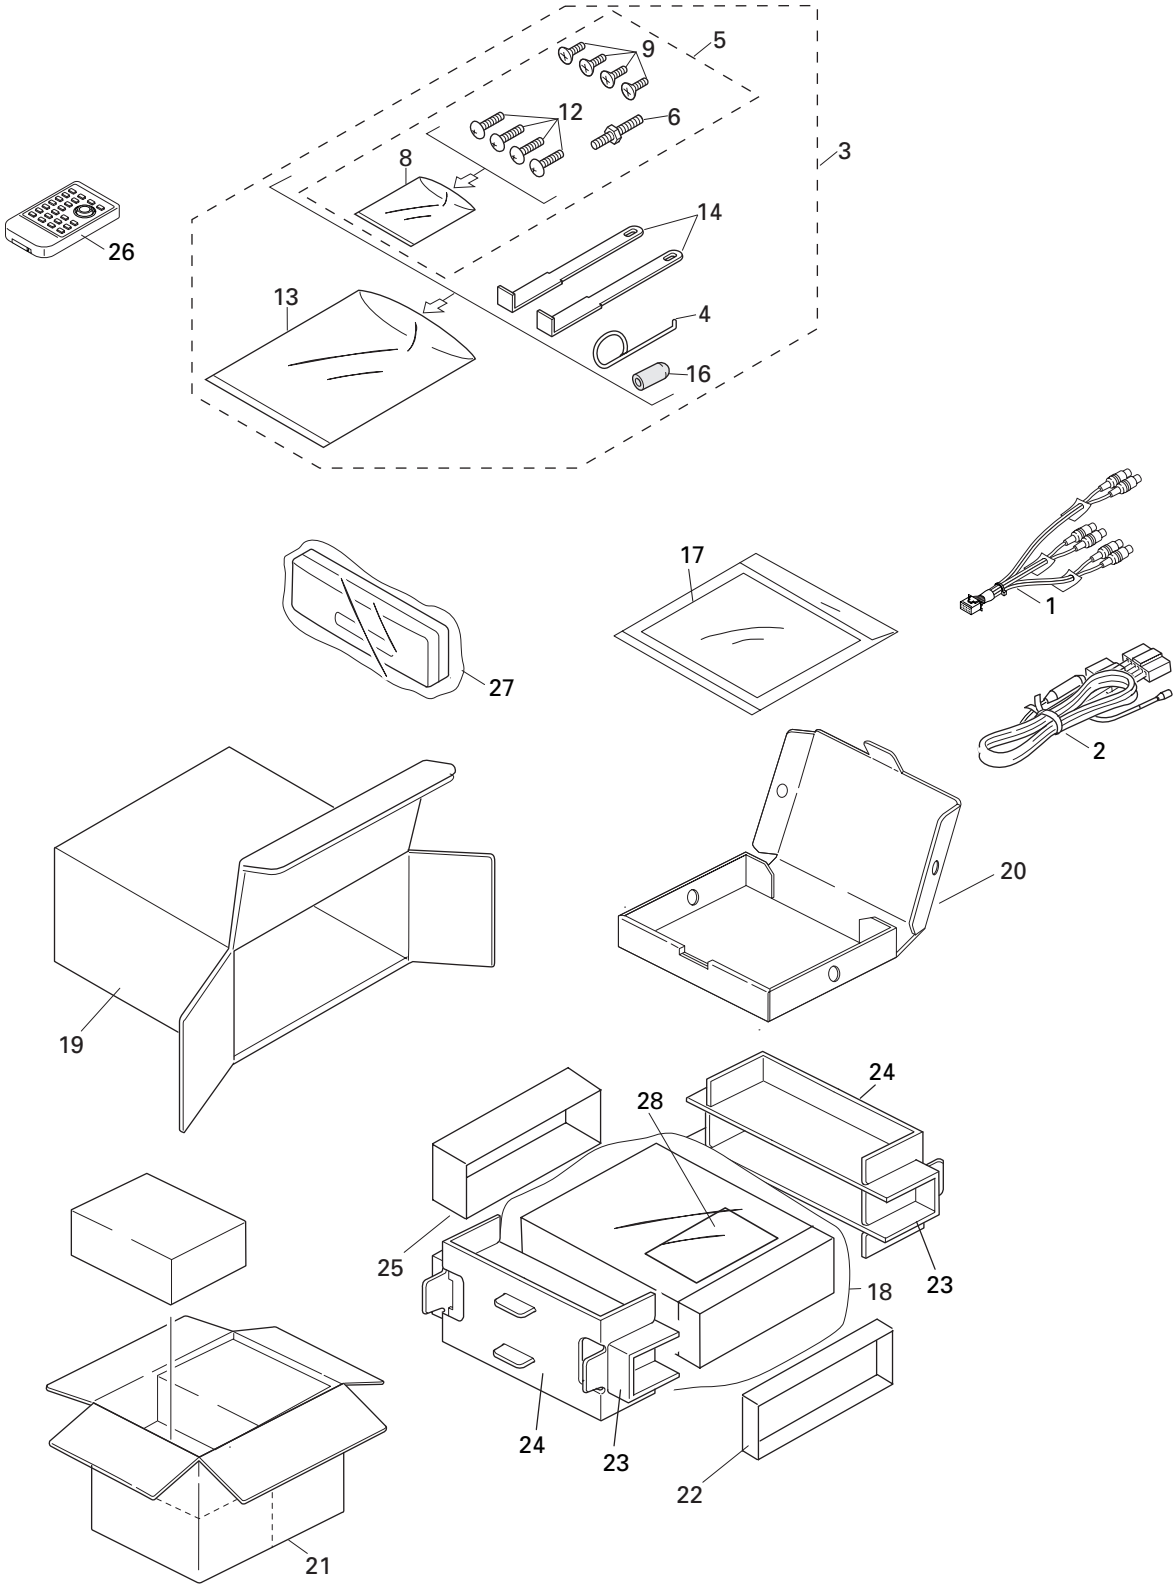


PACKING(DEH-P1Y/XN/ES) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Cord Assy	CDE7612	17-2	Owner's Manual	CRD3848
2	Cord Assy	CDE7482	17-3	Owner's Manual	CRD3849
3	Accessory Assy	CEA4301	17-4	Installation Manual	CRD3850
4	Spring	CBH1650			
5	Screw Assy	CEA3849	*	17-5 Caution Card	CRP1307
				17-6 Caution Card	CRP1310
6	Screw	CBA1650	18	Polyethylene Bag	CEG-162
7	*****		19	Carton	CHG5210
* 8	Polyethylene Bag	CEG-127	20	Sub Carton	CHA3258
9	Screw	CRZ50P090FTC			
10	*****		21	Contain Box	CHL5210
			22	Protector	CHP2546
11	*****		23	Protector	CHP2539
12	Screw	TRZ50P080FTC	24	Protector	CHP2538
* 13	Polyethylene Bag	CEG-158	25	Protector	CHP2541
14	Handle	CNC5395			
15	*****		26	Remote Control Unit	CXC2665
			27	Case Assy	CXC3572
16	Bush	CNV3930	*	28 Caution Card	CRP1311
17-1	Polyethylene Bag	CEG1116			

Owner's Manual,Installation Manual

Part No.	Language
CRD3848	English, Spanish, Portuguese(B)
CRD3849	Traditional Chinese, Arabic
CRD3850	English, Spanish, Portuguese(B), Traditional Chinese, Arabic

2.3 EXTERIOR

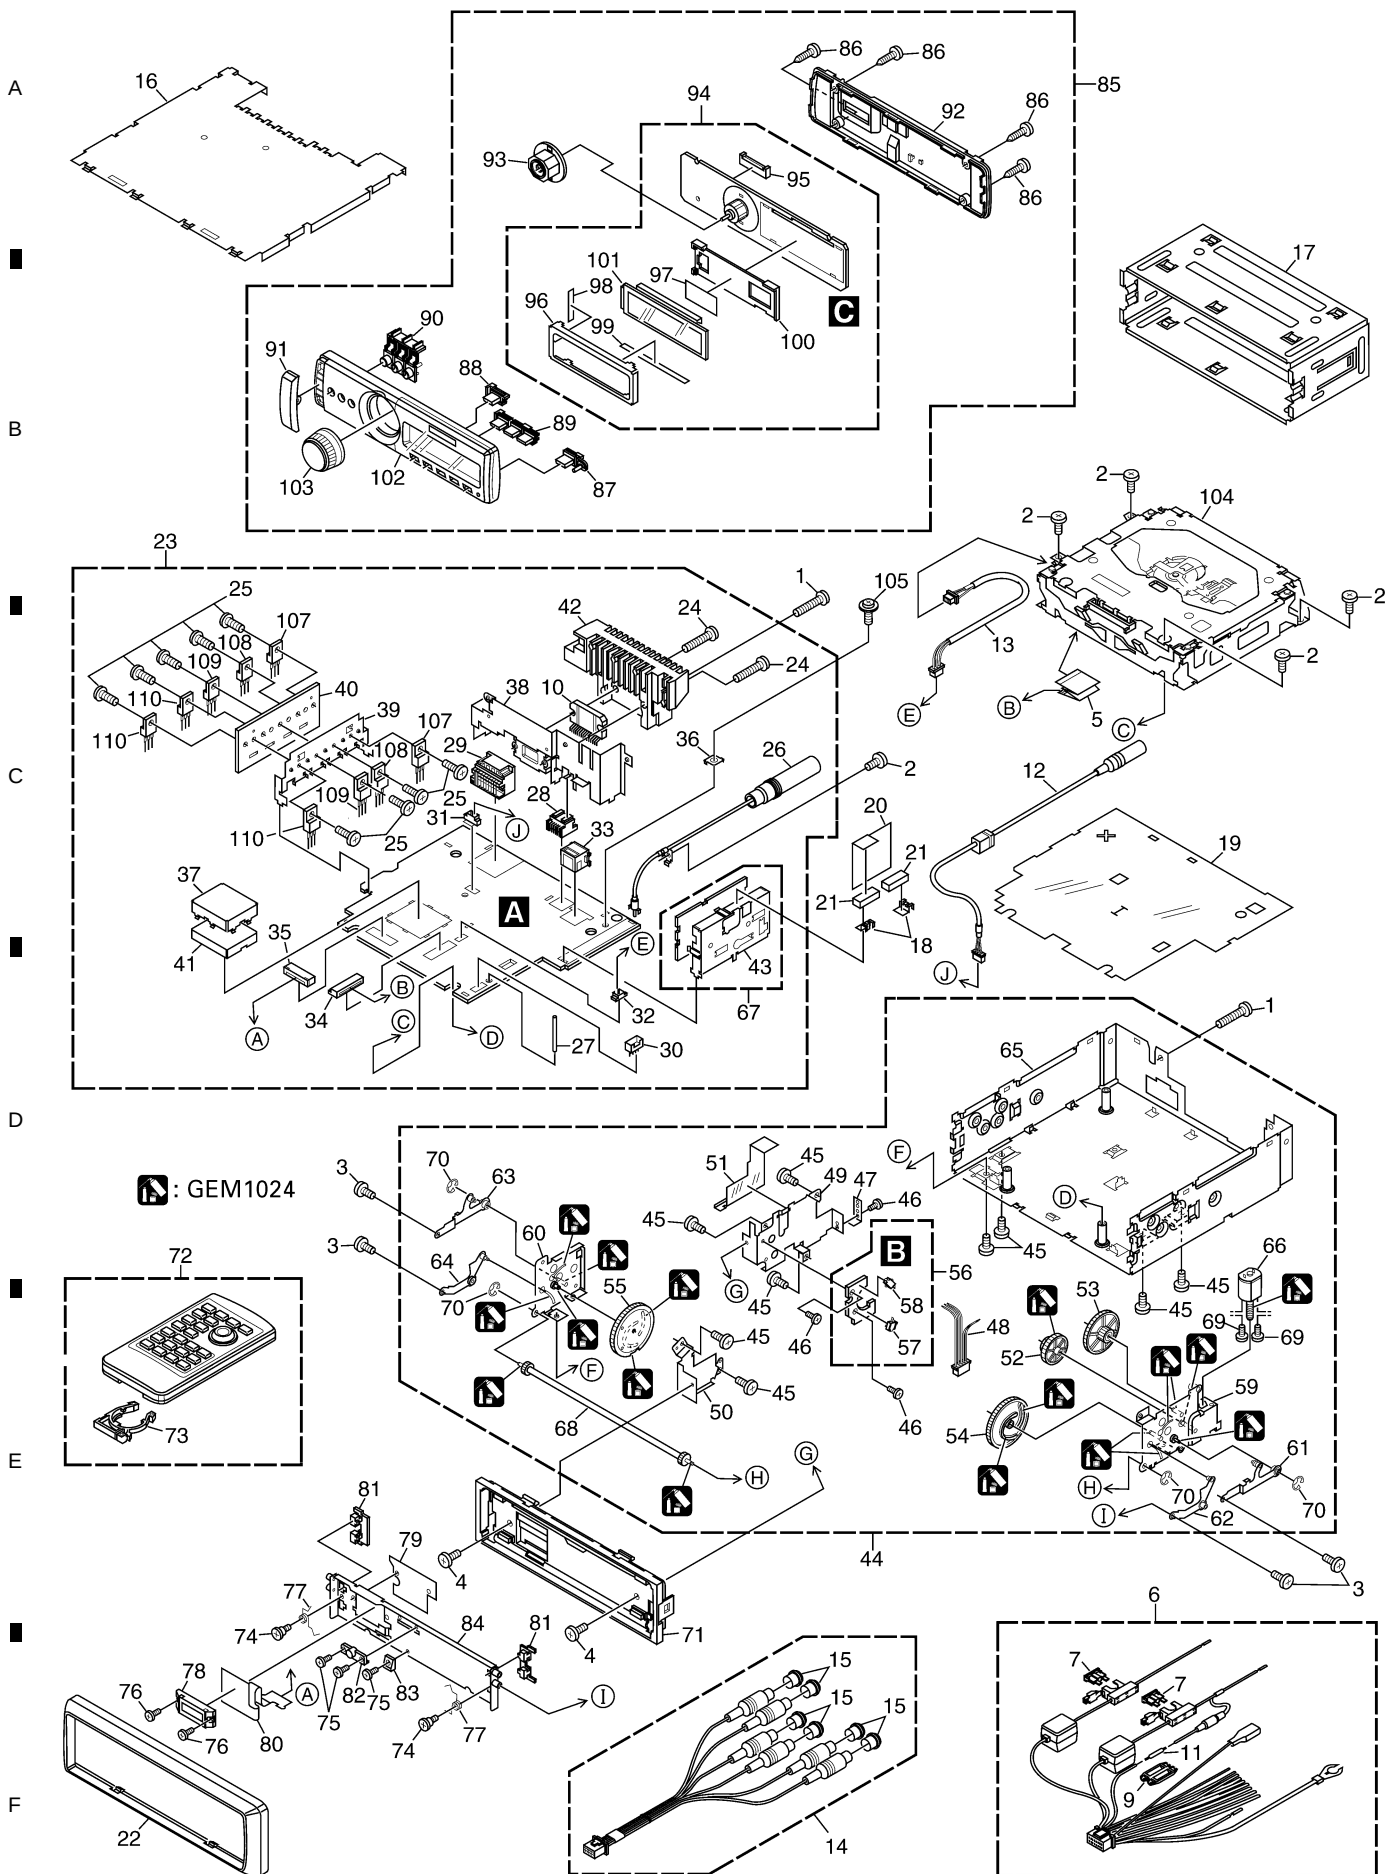

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	BMZ26P200FTC	56	Switch Unit	CWS1389	
2	Screw	BSZ26P060FTC	57	Switch(S1)	CSN1051	
3	Screw(M2x2.5)	CBA1641	58	Spring Switch(S2)	CSN1052	A
4	Screw(M2.6x4)	CBA1769	59	Holder Unit	CXC2196	
5	Flat Cable	CDE7468	60	Holder Unit	CXC2197	
6	Cord Assy	CDE7482	61	Arm Unit	CXC2198	
7	Fuse(10A)	CEK1136	62	Arm Unit	CXC2199	
8			63	Arm Unit	CXC2200	
9	Cap	CNS1472	64	Arm Unit	CXC2201	
10	IC(IC201)	PAL008A	65	Chassis Unit	See Contrast table(2)	
11	Resistor	RS1/2PMF102J	66	Motor Unit(M871)	CXC2204	
12	Cord Assy	See Contrast table(2)	67	FM/AM Tuner Unit	CWE1646	
13	Cord Assy	CDE7484	68	Gear Unit	CXC2205	B
14	Cord Assy	CDE7612	69	Screw	JFZ20P025FTC	
15	Cap	CNV6727	70	Washer	YE15FTC	
16	Case	CNB2945	71	Panel Unit	CXC2603	
17	Holder	CNC8659	72	Remote Control Unit	CXC2665	
18	Earth Plate	CND2171	73	Cover	CZN5357	
19	Insulator	CNM8638	74	Screw(M2x2)	CBA1561	
20	Insulator	CNM8790	75	Screw(M2x2)	CBA1633	
21	Cushion	CNM9126	76	Screw(M2x3.5)	CBA1754	
22	Panel	CNS7772	77	Spring	CBH2530	
23	Tuner Amp Unit	See Contrast table(2)	78	Connector	CKS4796	C
24	Screw	BMZ26P200FTC	79	Holder	CND2172	
25	Screw	BSZ26P080FTC	80	Flexible PCB	CNP7698	
26	Antenna Cable	CDH1336	81	Arm	CNV6962	
27	Clamper	CEF1033	82	Guide	CNV6967	
28	Connector(CN361)	CKM1389	83	Guide	CNV6968	
29	Plug(CN981)	CKM1428	84	Case Unit	CXC2670	
30	Plug(CN871)	CKS-786	85	Detach Grille Assy	See Contrast table(2)	
31	Connector(CN571)	See Contrast table(2)	86	Screw	BPZ20P060FZK	
32	Connector(CN704)	CKS3125	87	Button(OPEN/RESET)	CAC8442	
33	Connector(CN101)	CKS3408	88	Button(BAND)	CAC8443	D
34	Connector(CN701)	CKS3837	89	Button(ENT/EQ/EQ-EX)	CAC8444	
35	Connector(CN801)	CKS4811	90	Button(CLOCK/DISP/LIST)	CAC8450	
36	Holder(CN402)	CNC5399	91	Button(ATT/OFF/SRC)	CAC9003	
37	Case	CNC8138	92	Cover	CNS7770	
38	Holder	CND2029	93	Lighting Conductor	CNV7966	
39	Holder	CND2030	94	Keyboard Unit	CWM9290	
40	Heat Sink	CND2031	95	Connector(CN1901)	CKS4795	
41	Insulator	CNM6249	96	Holder	CND2028	
42	Heat Sink	CNR1728	97	Double-sided Seal	CNM8673	
43	Holder	CND1054	98	Spacer	CNM9141	
44	Drive Unit	See Contrast table(2)	99	Spacer	CNM9142	E
45	Screw	BMZ26P040FTC	100	Holder	CNV7965	
46	Screw(M2x2)	CBA1633	101	OEL Unit	MXS8202	
47	Spring	CBL1632	102	Sub Grille Assy	See Contrast table(2)	
48	Cord	CDE7392	103	Knob Unit	CXC3581	
49	Holder	CND1848	104	CD Mechanism Module(S10CODE2)	CXK5666	
50	Holder	CND1850	105	Screw	ISS26P055FTC	
51	Insulator	CNM8797	106			
52	Gear	CNV7752	107	Diode(D241,242)	FMG22	
53	Gear	CNV7753	108	Diode(D243,244)	FMJ-2303	
54	Gear	CNV7754	109	Transistor(Q241,242)	FKV550N	F
55	Gear	CNV7755	110	Transistor(Q742,902,921)	2SD2375	

(2) CONTRAST TABLE

DEH-P8MP/XN/UC, DEH-P80MP/XN/UC and DEH-P1Y/XN/ES are constructed the same except for the following:

Mark	NO	Description	DEH-P8MP/XN/UC	DEH-P80MP/XN/UC	DEH-P1Y/XN/ES
A	12	Cord Assy	CDE7483	CDE7483	Not used
	23	Tuner Amp Unit	CWM9287	CWM9288	CWM9289
	31	Connector(CN571)	CKS3125	CKS3125	Not used
	44	Drive Unit	CXC2206	CXC2206	CXC3562
	65	Chassis Unit	CXC2203	CXC2203	CXC3561
	85	Detach Grille Assy	CXC2695	CXC2696	CXC2697
	102	Sub Grille Assy	CXC3235	CXC3236	CXC3237

B

C

D

E

F

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

DEH-P8MP/XN/UC

■

7

■

8

15

■

4




CD MECHANISM MODULE PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10WMACODE2)	CWX2952	50	Gear	CNV7207	
2	Connector(CN101)	CKS4182				A
3	Connector(CN901)	CKS4017	51	Gear	CNV7208	
4	Screw	BMZ20P035FTC	52	Gear	CNV7209	
5	Screw	BSZ20P040FTC	53	Gear	CNV7210	
			54	Gear	CNV7211	
6	Screw(M2x4)	CBA1362	55	Gear	CNV7212	
7	Screw(M2x3)	CBA1511				
8	Screw(M2x3)	CBA1527	56	Rack	CNV7214	
9			57	Arm	CNV7215	
10	Washer	CBF1038	58	Arm	CNV7216	
			59	Guide	CNV7217	
11	Washer	CBF1060	60	Roller	CNV7218	B
12	Spring	CBH2390				
13	Spring	CBH2606	61	Gear	CNV7219	
14	Spring	CBH2607	62	Arm	CNV7221	
15	Spring	CBH2608	63	Arm	CNV7220	
			64	Arm	CNV7222	
16	Spring	CBH2609	65	Damper	CNV7313	
17	Spring	CBH2610				
18	Spring	CBH2735	66	Damper	CNV7314	
19	Spring	CBH2612	67	Arm	CNV7341	
20	Spring	CBH2613	68	Arm	CNV7342	
			69	Guide	CNV7360	C
21	Spring	CBH2614	70	Guide	CNV7361	
22	Spring	CBH2615				
23	Spring	CBH2616	71	Holder	CNV7437	
24	Spring	CBH2617	72	Arm	CNV7805	
25	Spring	CBH2620	73	Gear	CNV7595	
			74	Damper	CNV7618	
26	Spring	CBH2621	75	Motor Unit(M1)	CXB6007	
27	Spring	CBH2641				
28	Spring	CBH2642	76	Chassis Unit	CXC2318	
29	Spring	CBH2643	77	Screw Unit	CXB8729	
30	Spring	CBH2659	78	Gear Unit	CXC2397	D
			79	Arm Unit	CXC2316	
31	Spring	CBH2688	80	Arm	CND1896	
32						
33	Shaft	CLA4441	81	Arm	CND1894	
34	Frame	CNC9962	82	Motor Unit(M2)	CXB8933	
35	Frame	CNC9963	83	Bracket	CNC9985	
			84			
36	Bracket	CNC9966	85	Screw(M2x5)	EBA1028	
37	Bracket	CND1895				
38	Arm	CNC9968	86	Screw	JFZ20P020FTC	E
39	Arm	CND1909	87	Screw	JGZ17P022FTC	
40	Lever	CND2032	88			
			89	Washer	YE20FTC	
41	Lever	CNC9984	90	Pickup Unit(P9.9MP3)(Service)	CXX1805	
42	Sheet	CNM8134				
43	Collar	CNV7798	91	Screw	IMS26P030FTC	
44	Guide	CNV7799	92	Spring	CBL1635	
45	Arm	CNV7800	93	Clamper	CNV7197	
			94	Connector(CN902)	CKS2193	
46	Rack	CNV7199				
47	Holder	CNV7201				F
48	Holder	CNV7202				
49	Arm	CNV7203				


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

A TUNER AMP UNIT


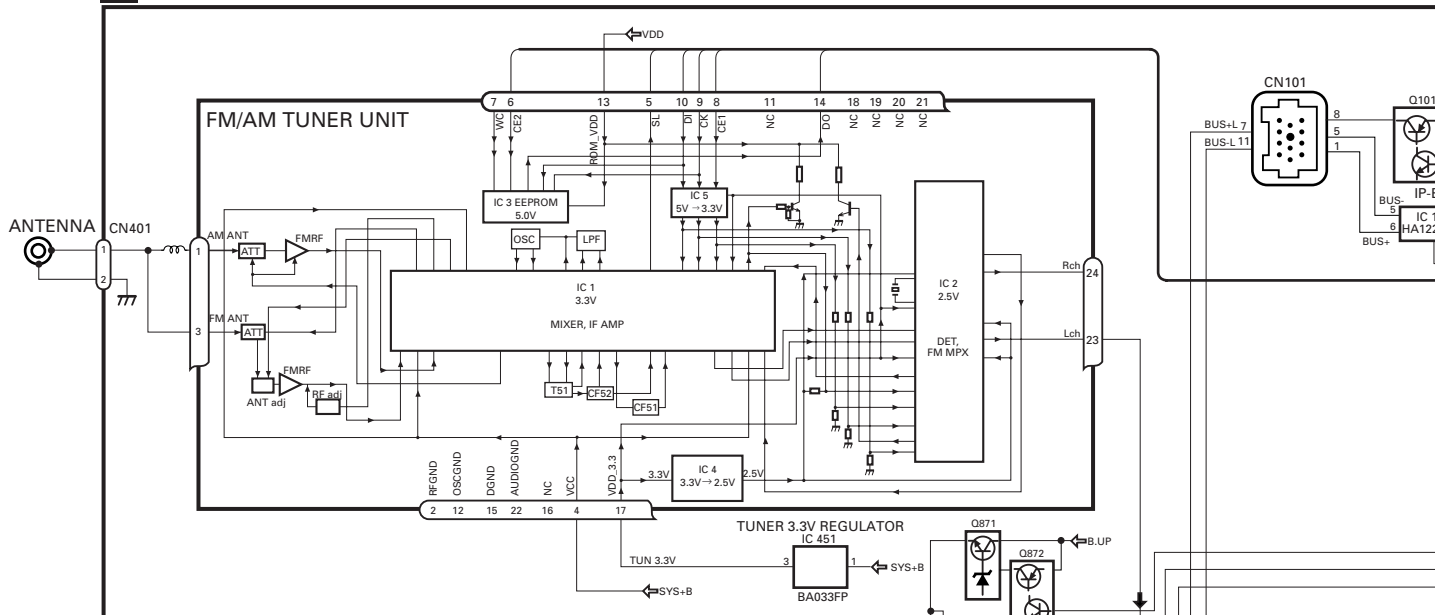



B SWITCH UNIT

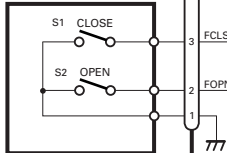

D CD CORE UNIT(S10WMA CODE2)

PICKUP UNIT (P9.9MP3)(SERVICE)

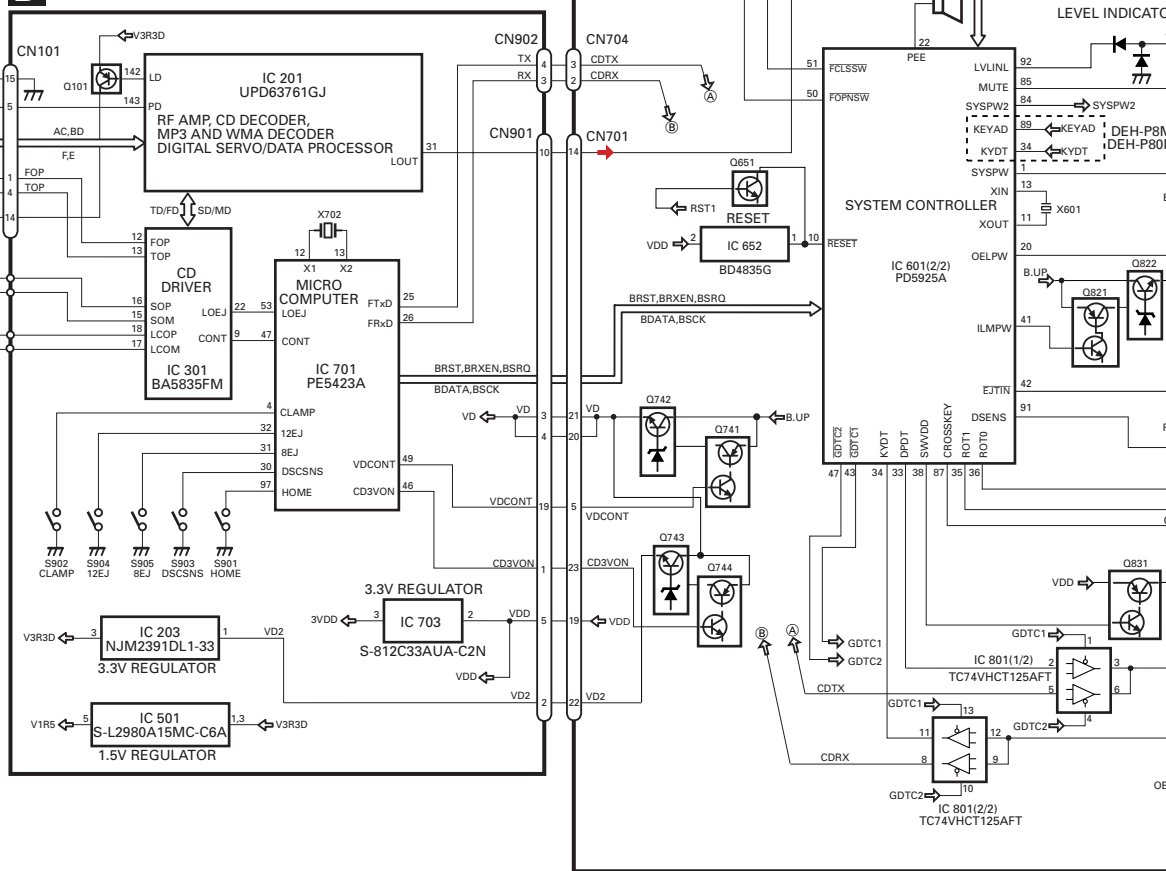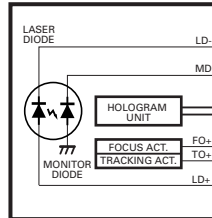

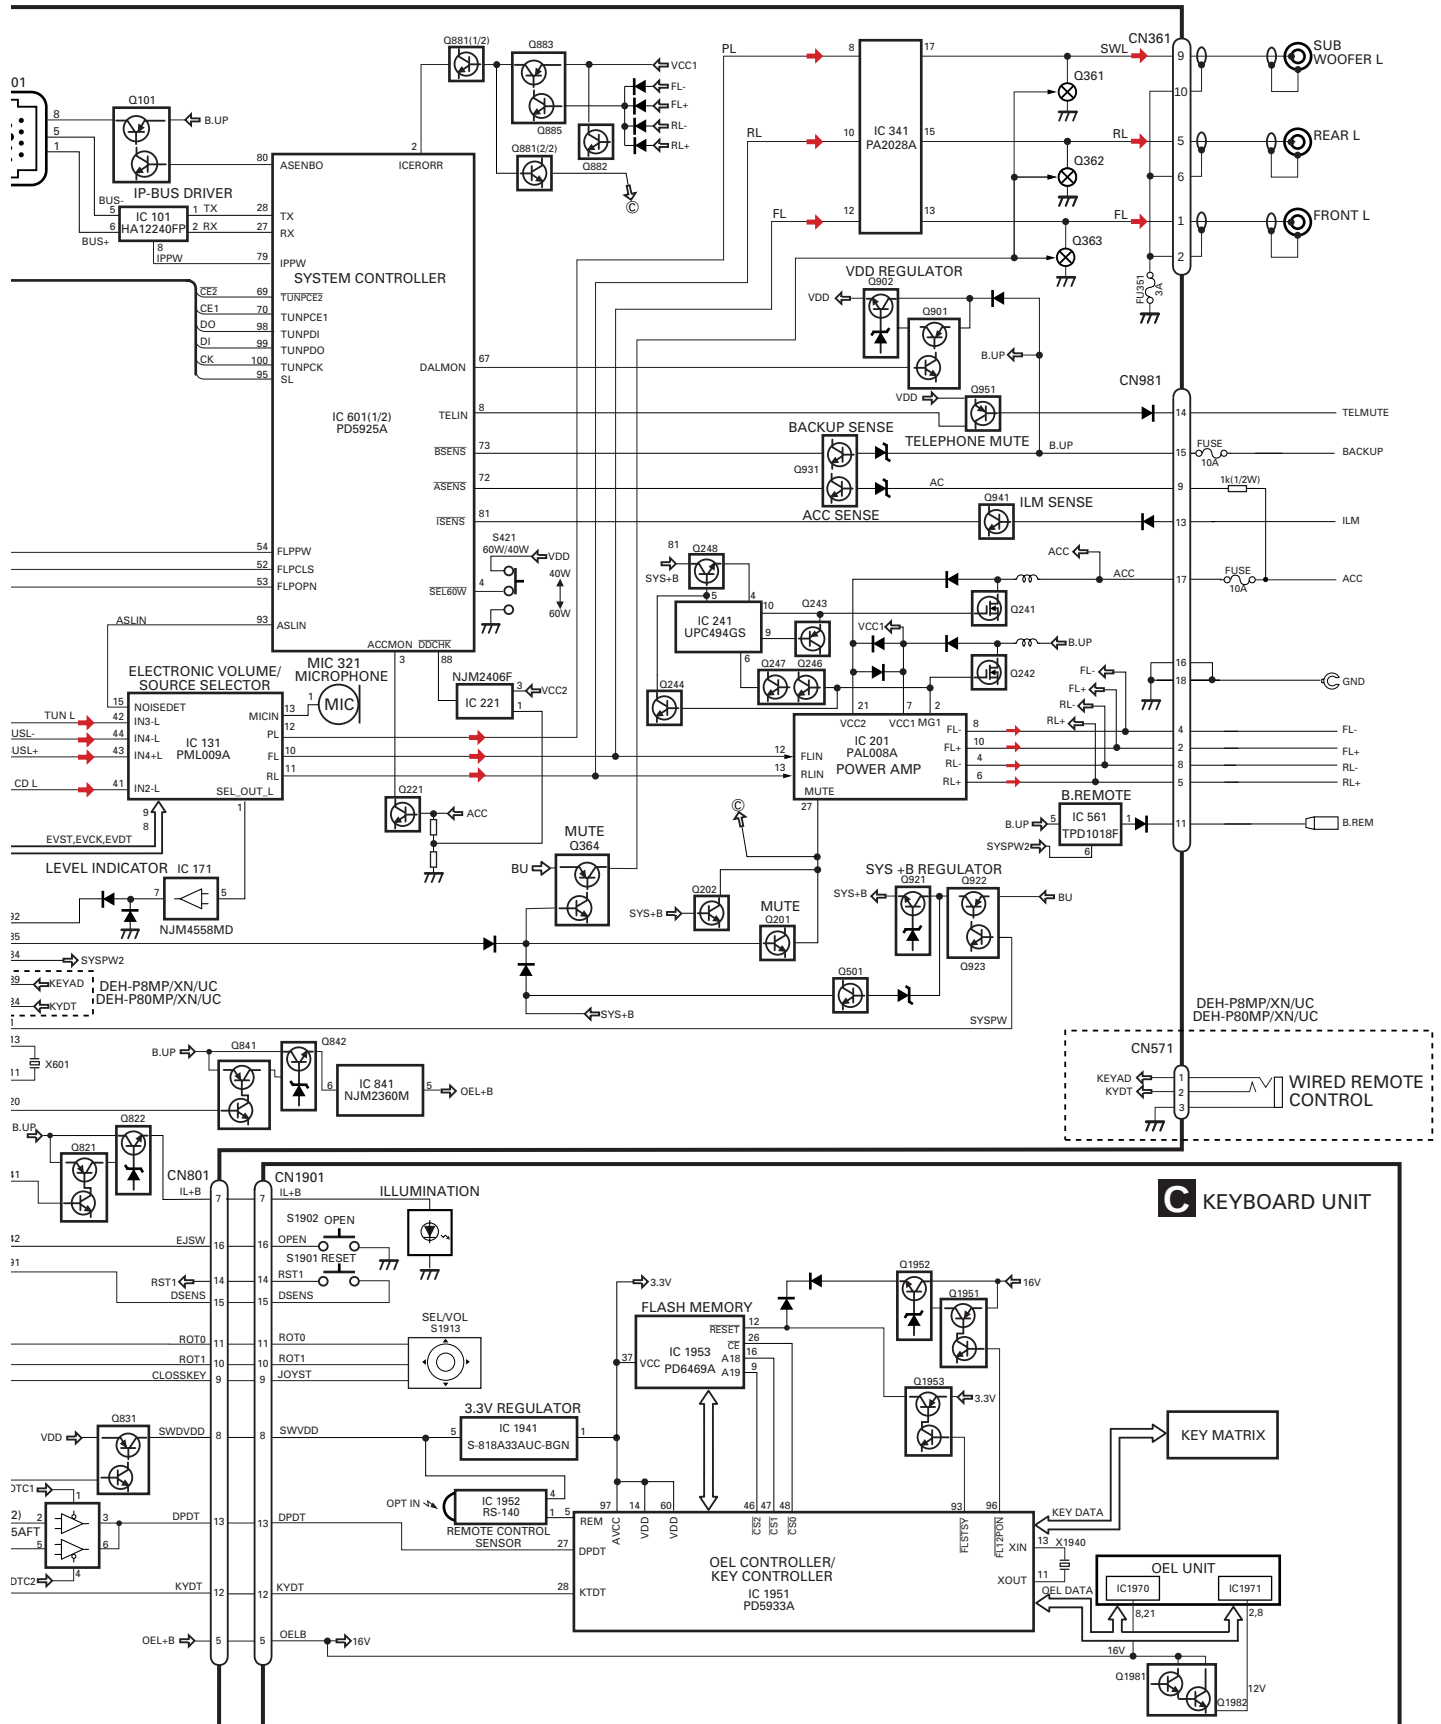

4

A

B

C

D

F

F




DEH-P8MP/XN/UC

A-b

A TUNER AMP UNIT

A : DEH-P8MP/XN/UC
 B : DEH-P8MP/XN/UC
 C : DEH-P1Y/XN/ES

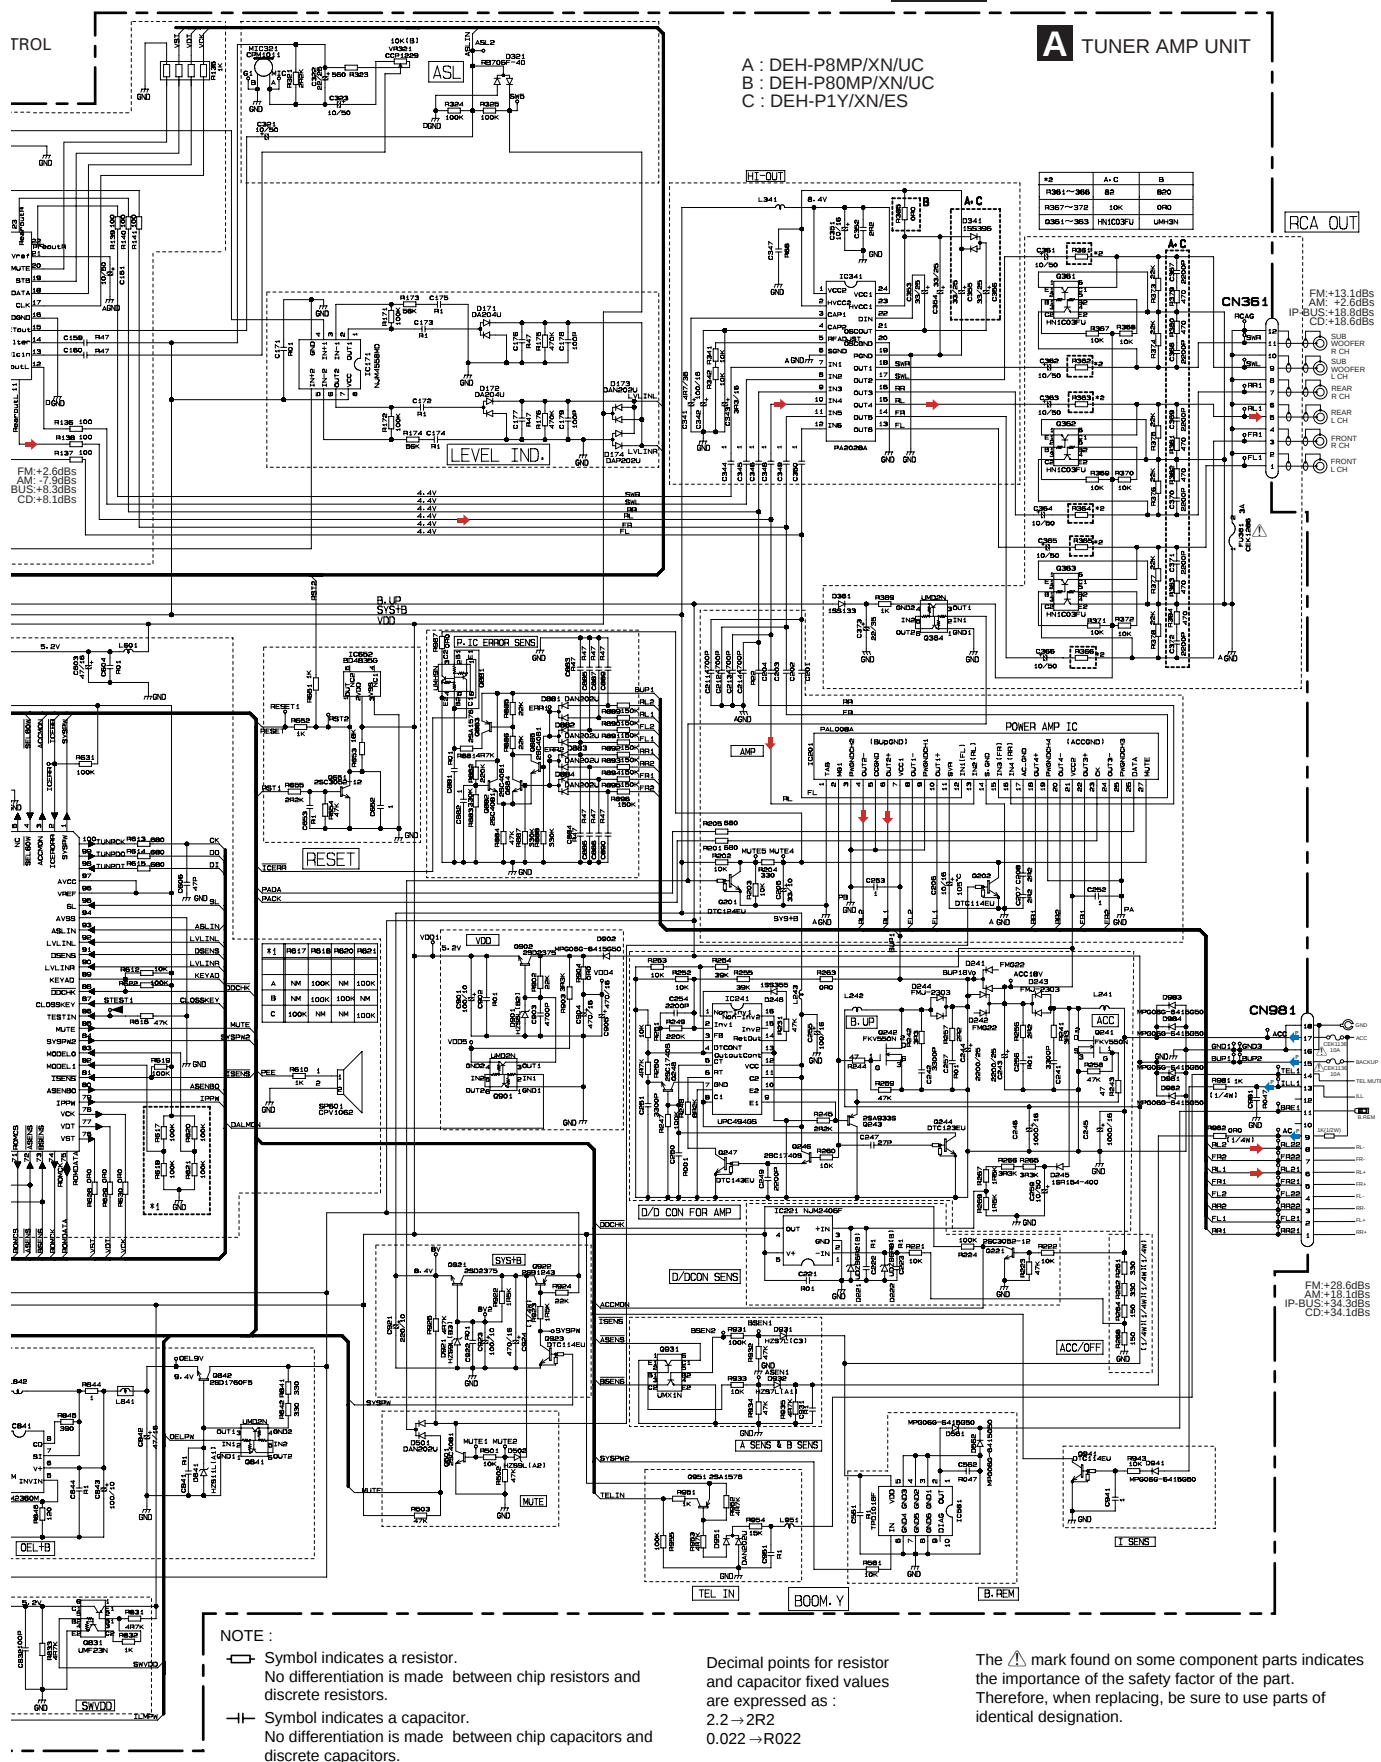

DEH-P8MP/XN/UC

A

A

B

C

D


E


F


A-b


A-a A-b

A-a

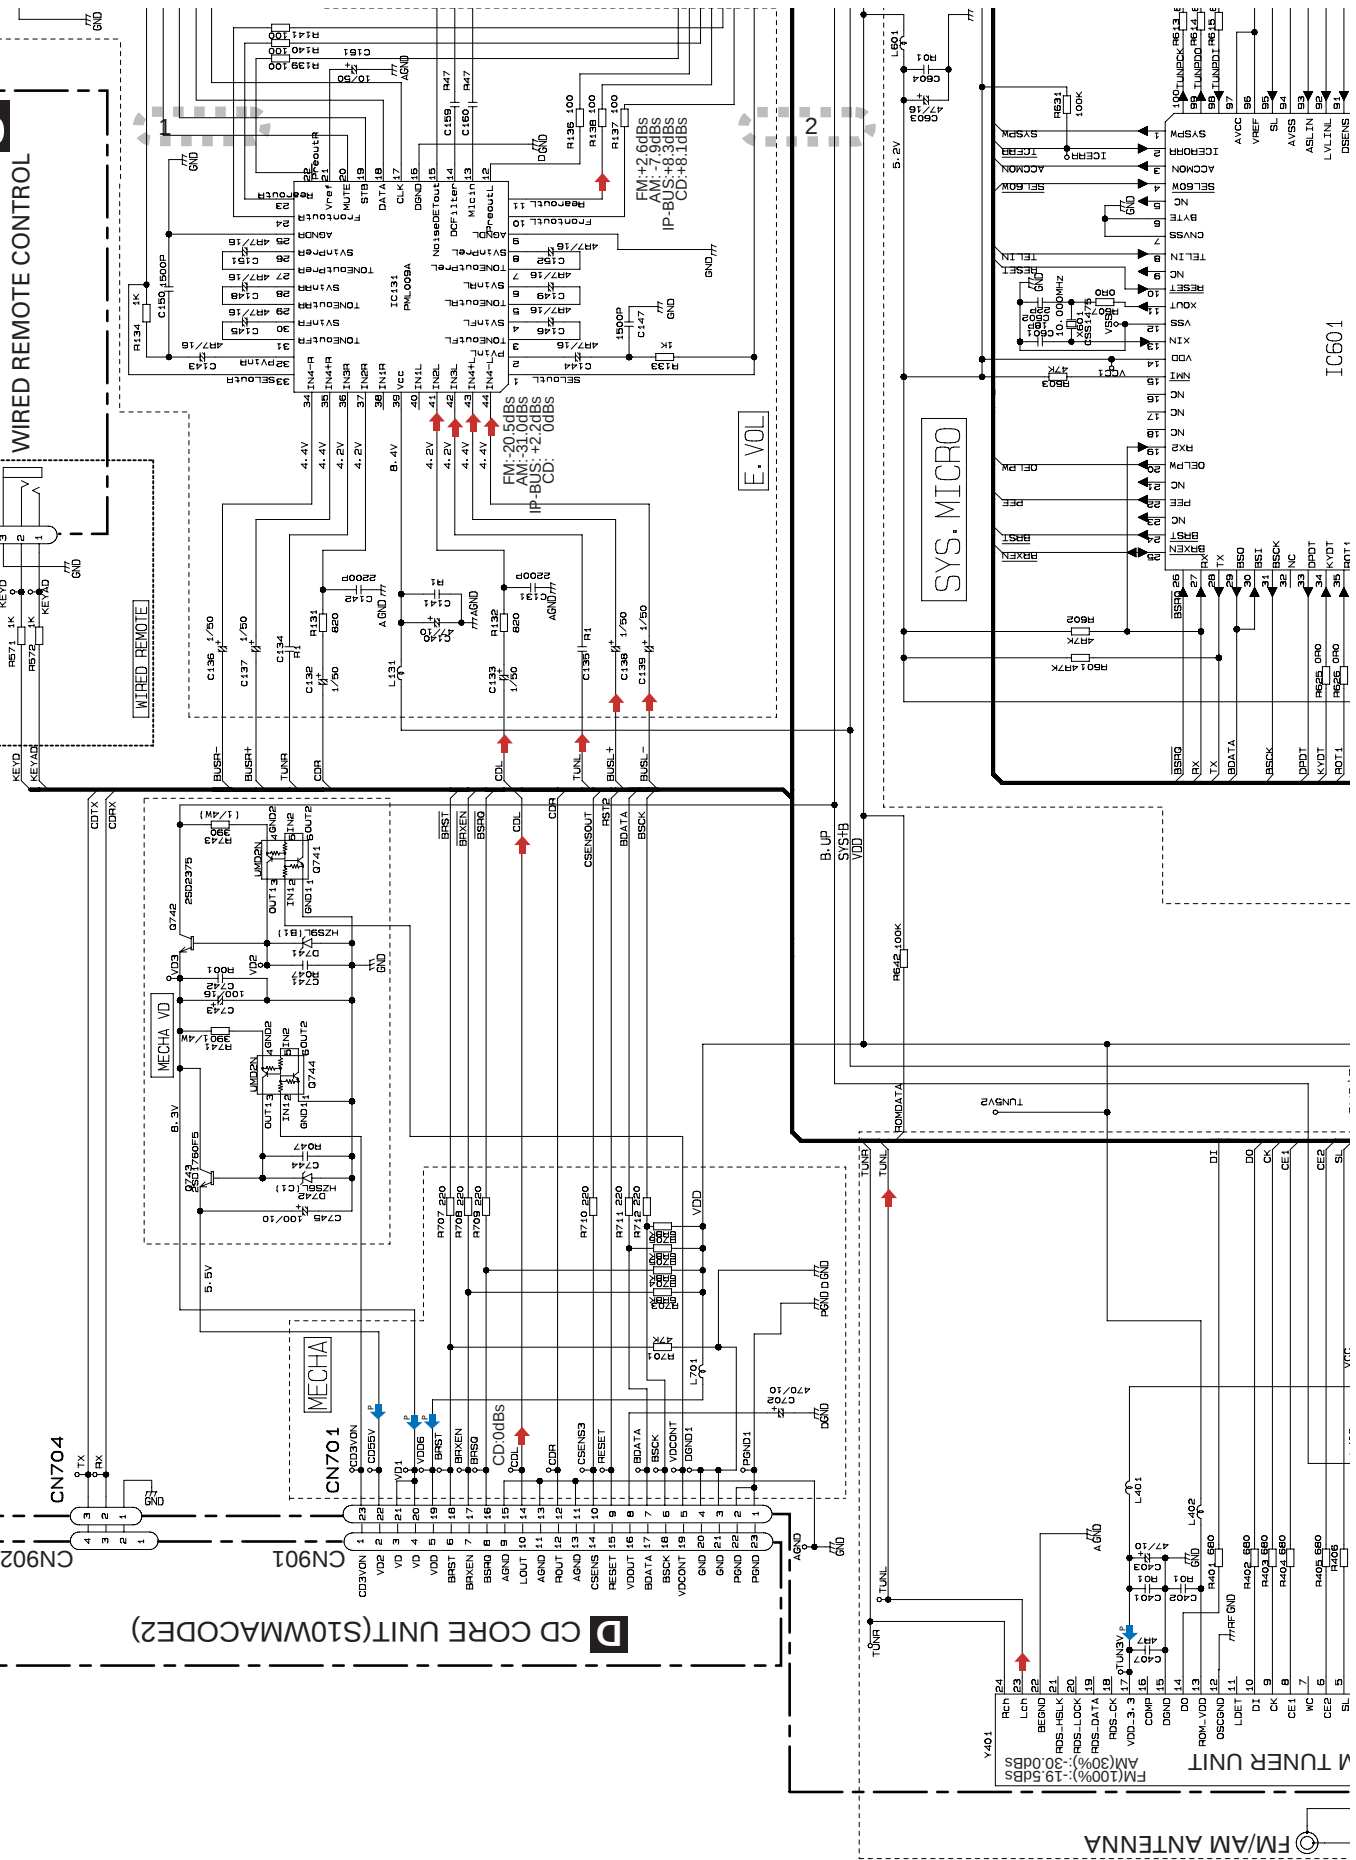

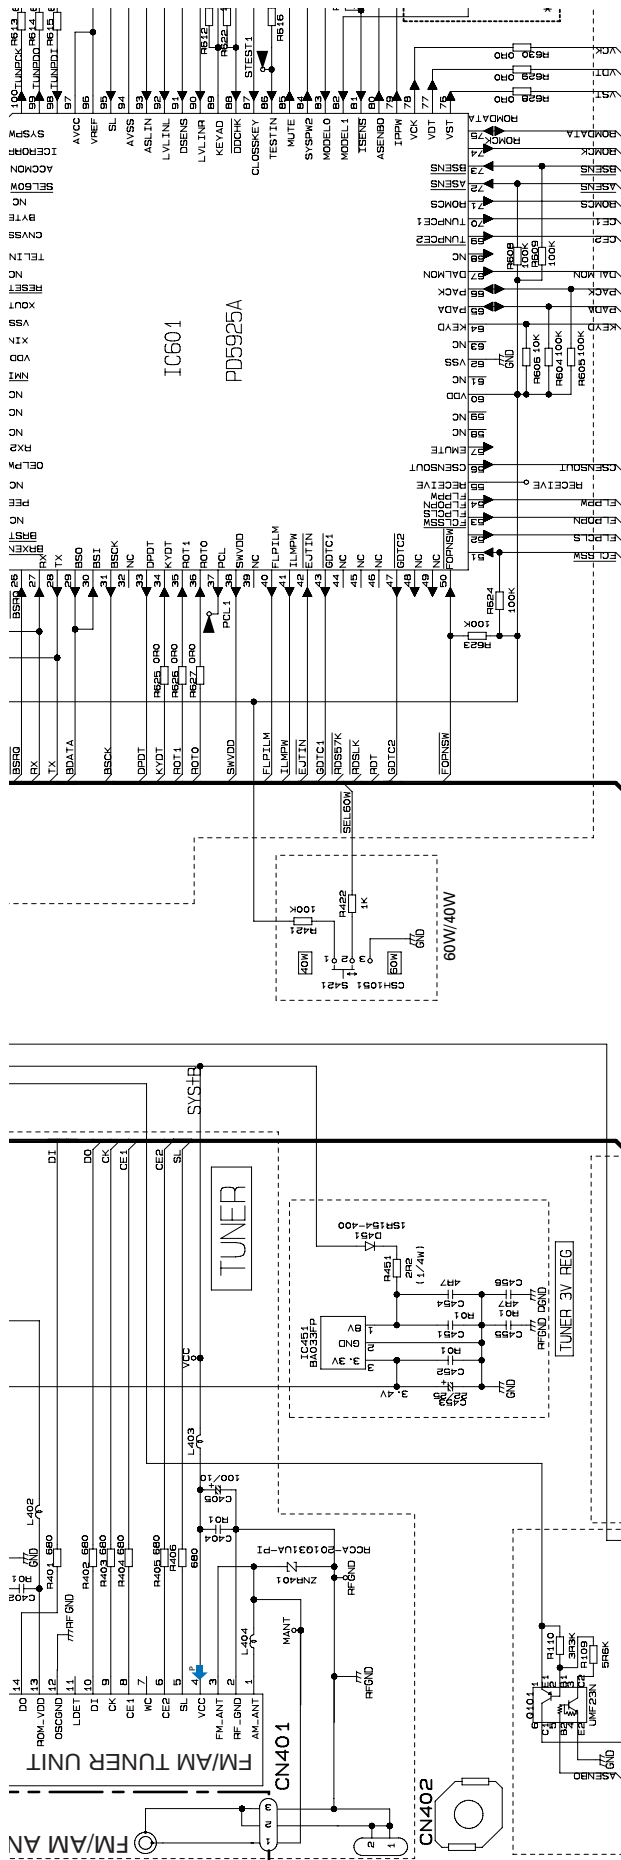

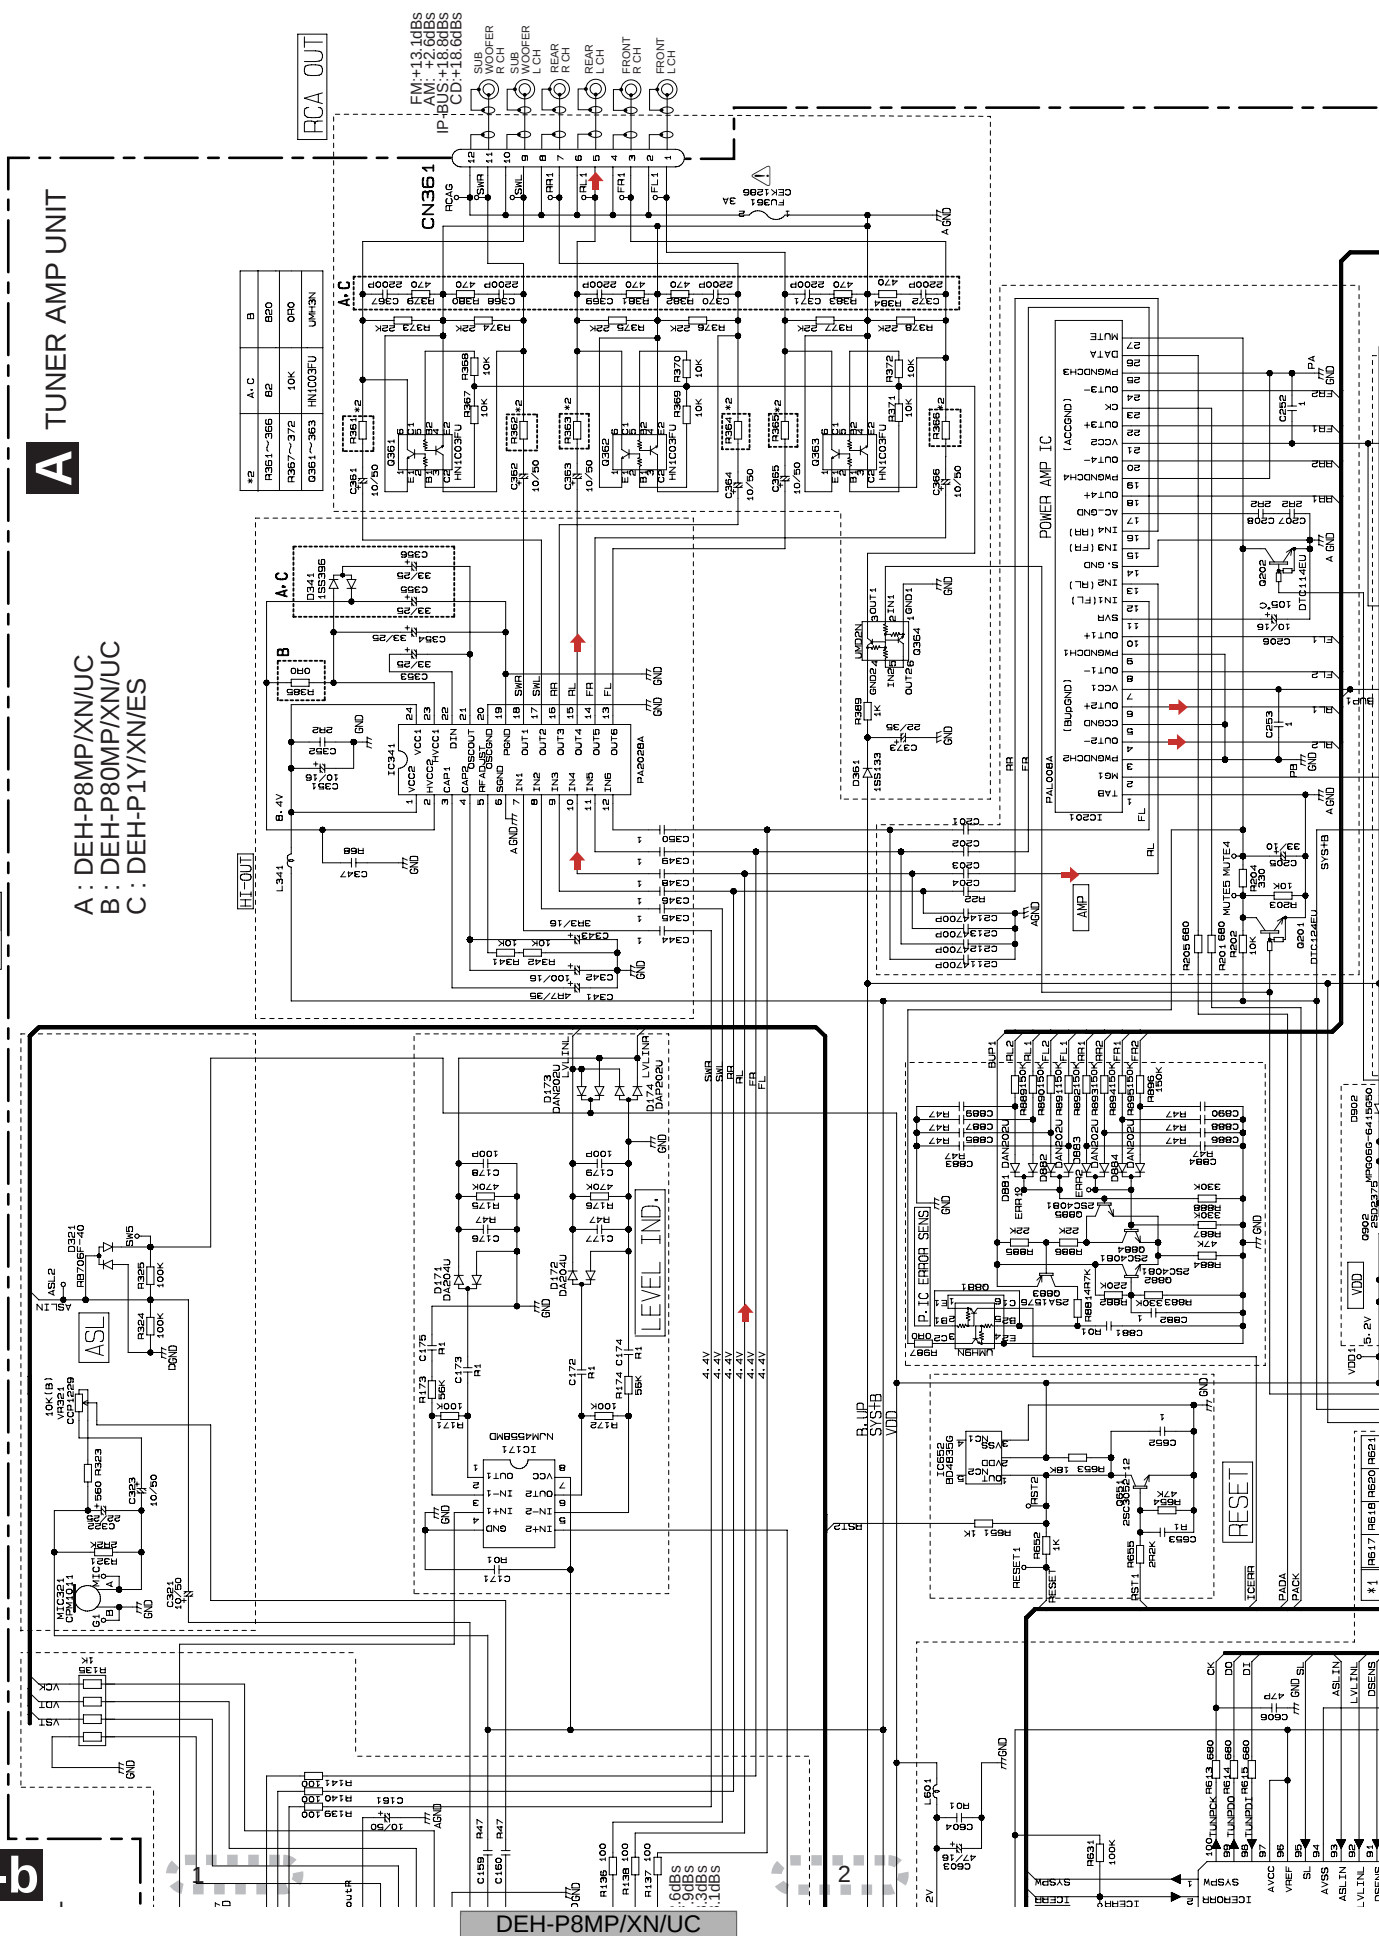

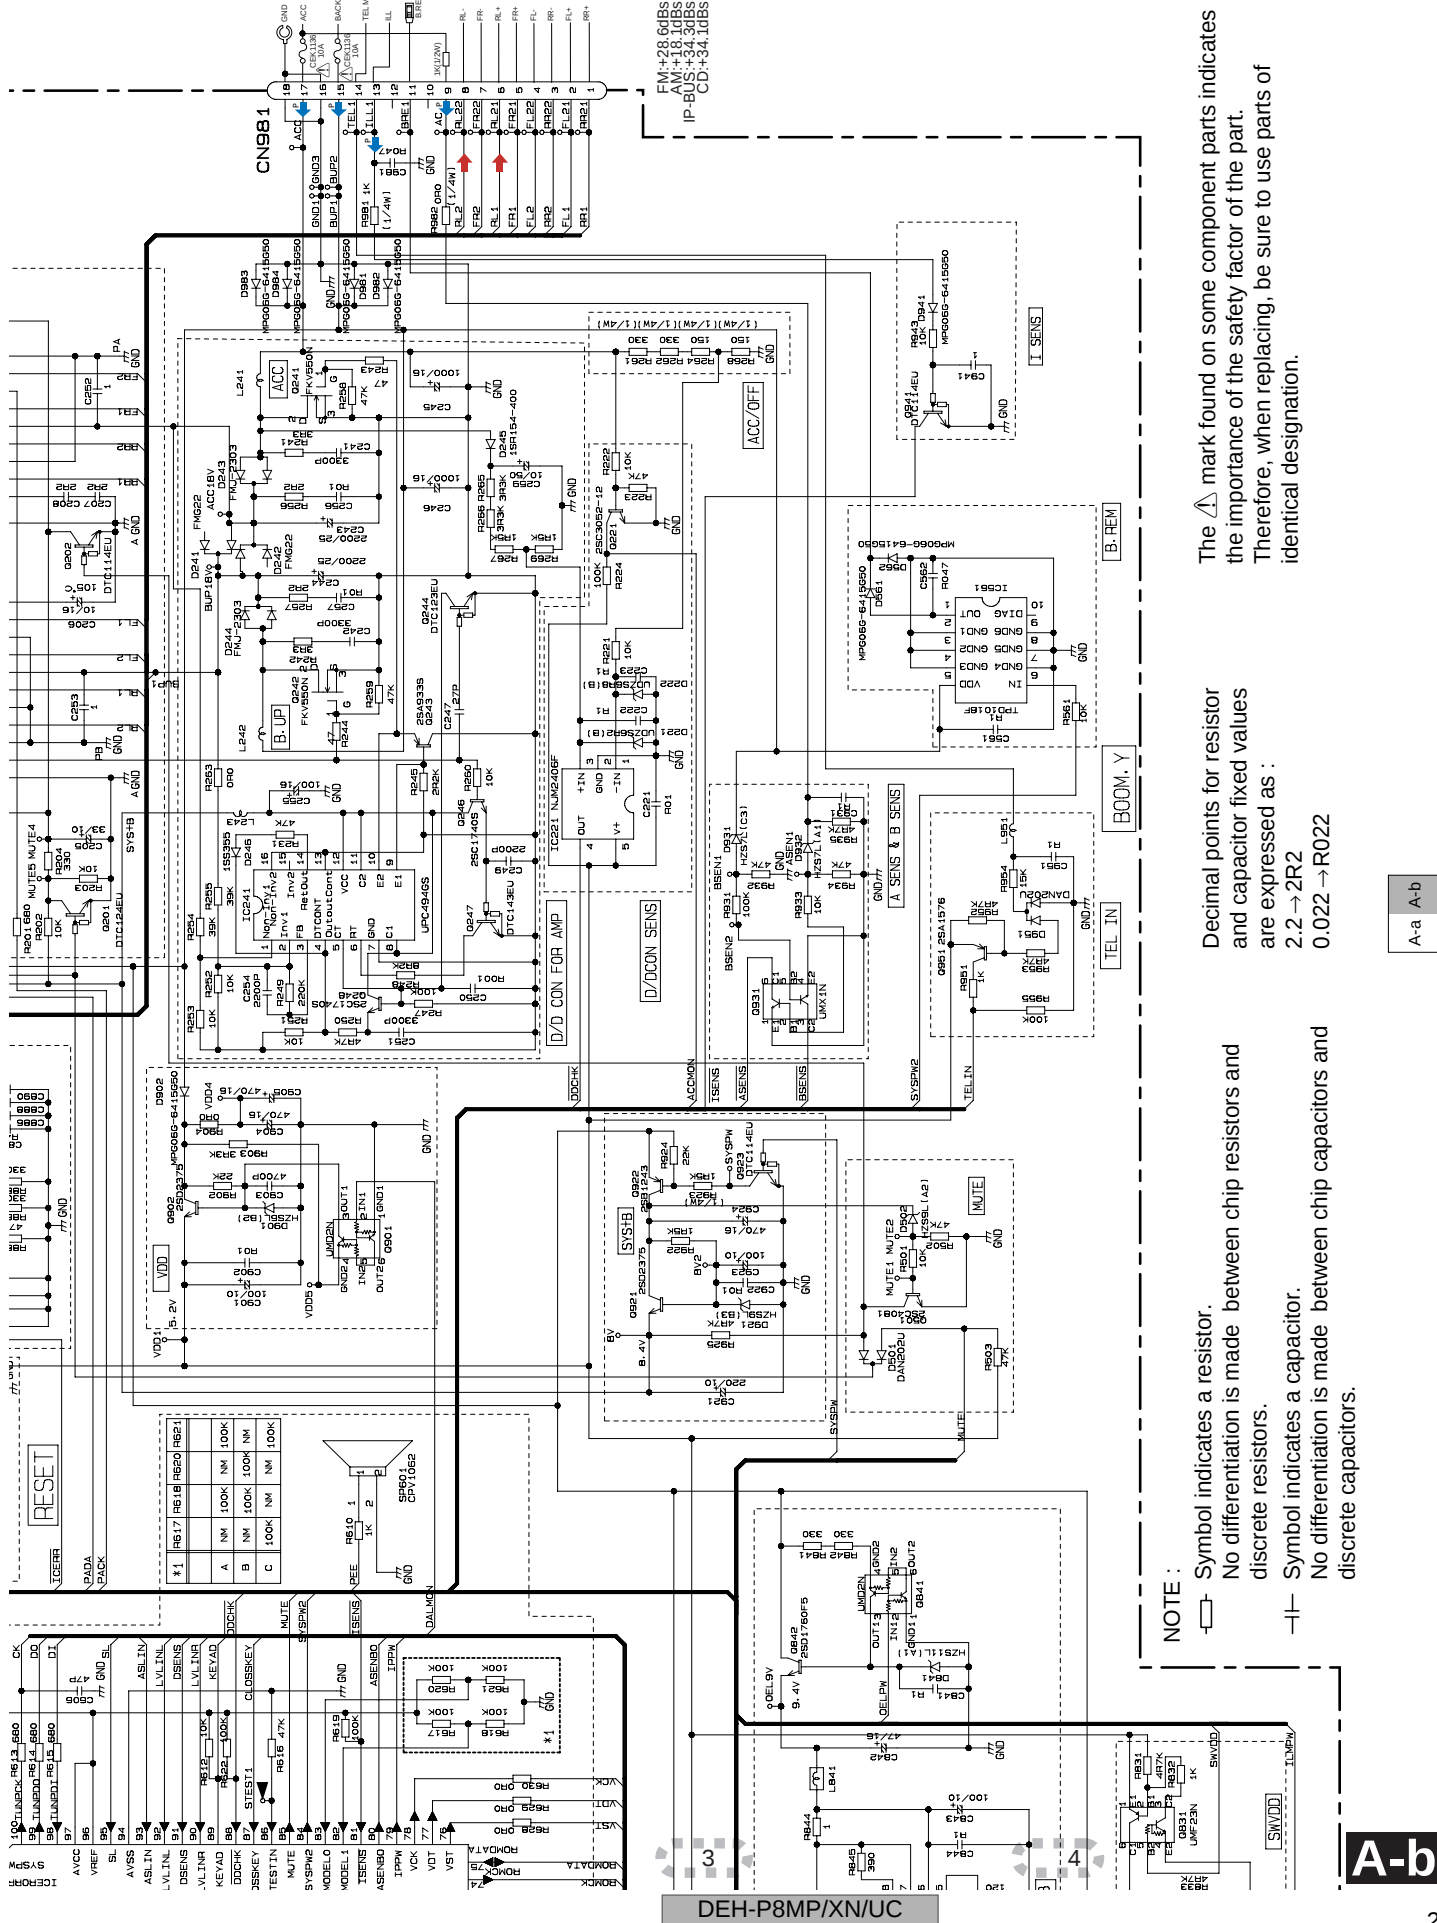

NOTE :

—□— Resistor indicates a resistor.

—□— No differentiation is made between chip resistors and discrete resistors.

—||— Resistor indicates a capacitor.

—||— No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor

and capacitor fixed values

are expressed as :

2.2 → 2R2

0.022 → R022

The Δ mark found on some component parts indicates

the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.


4






3.4 CD MECHANISM MODULE(GUIDE PAGE)

D-a

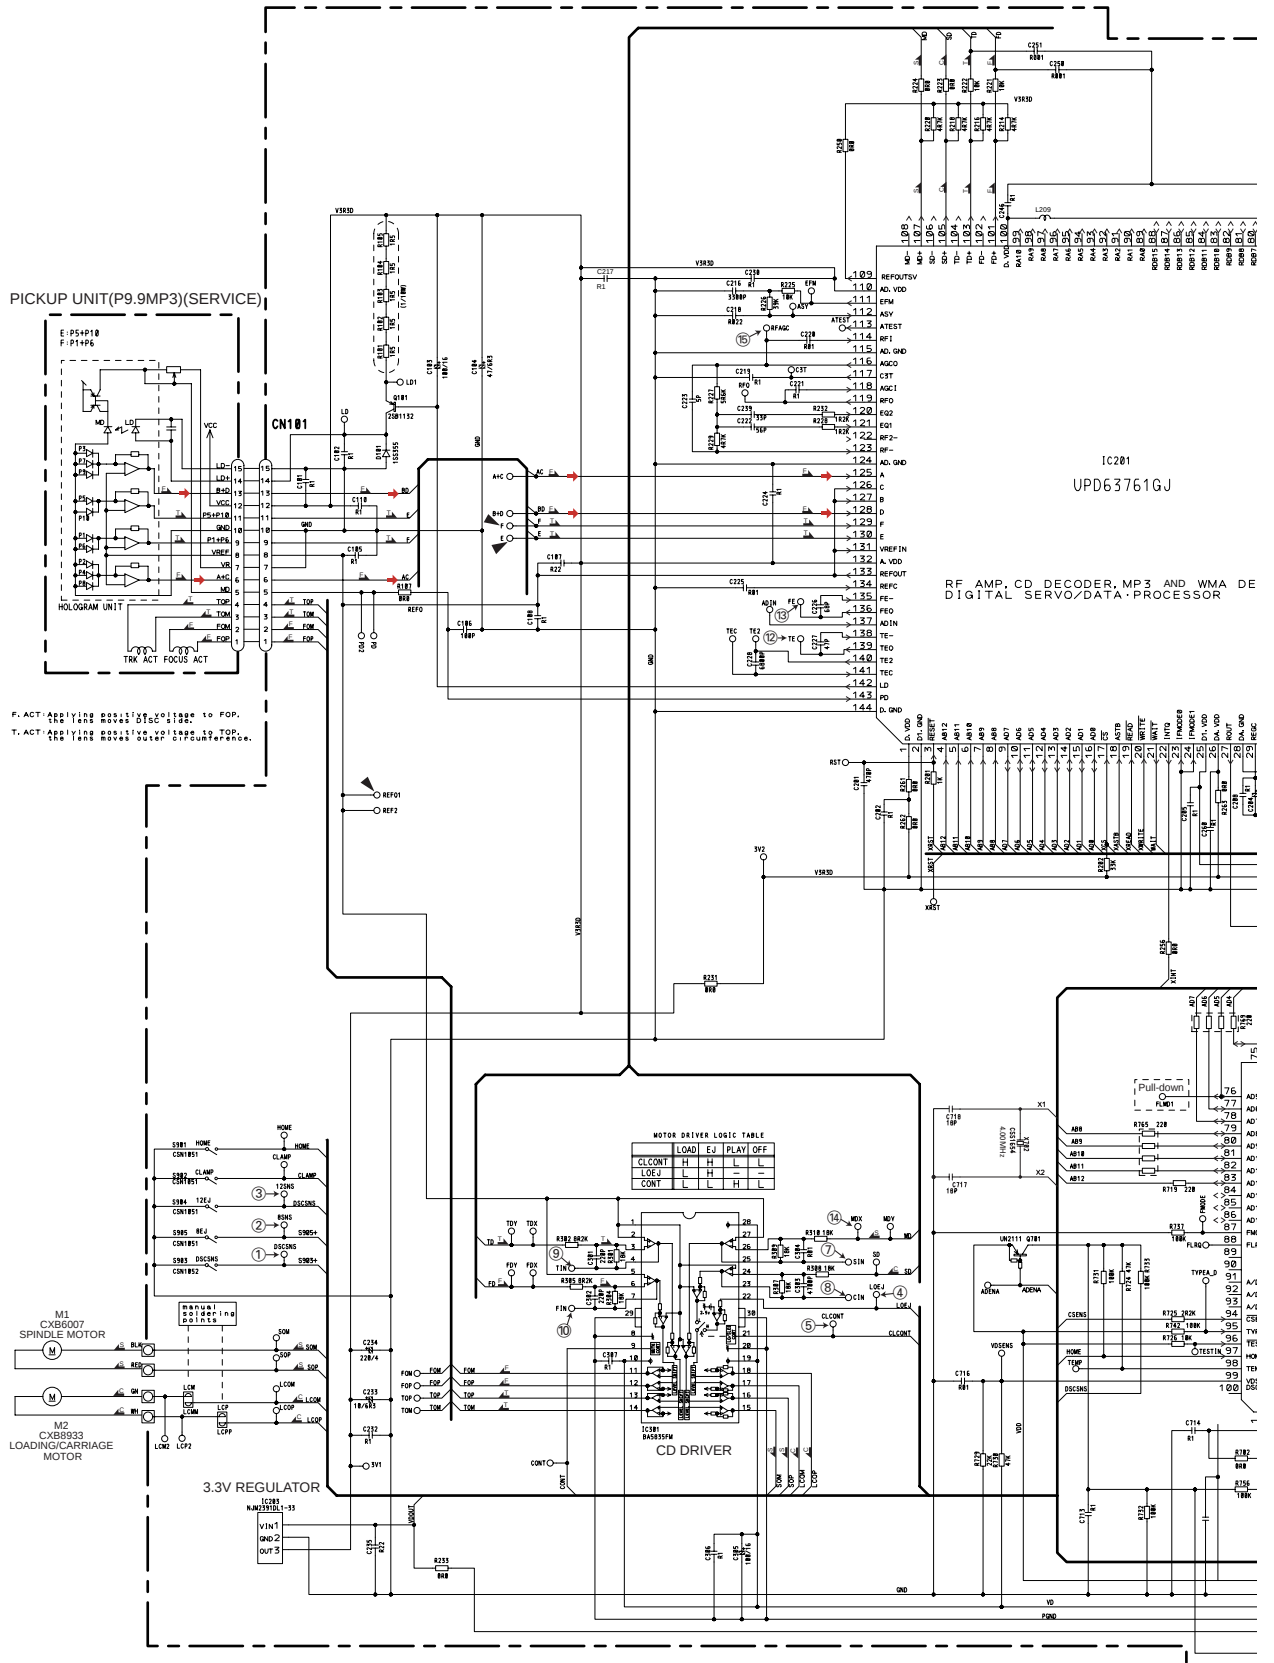

D-b

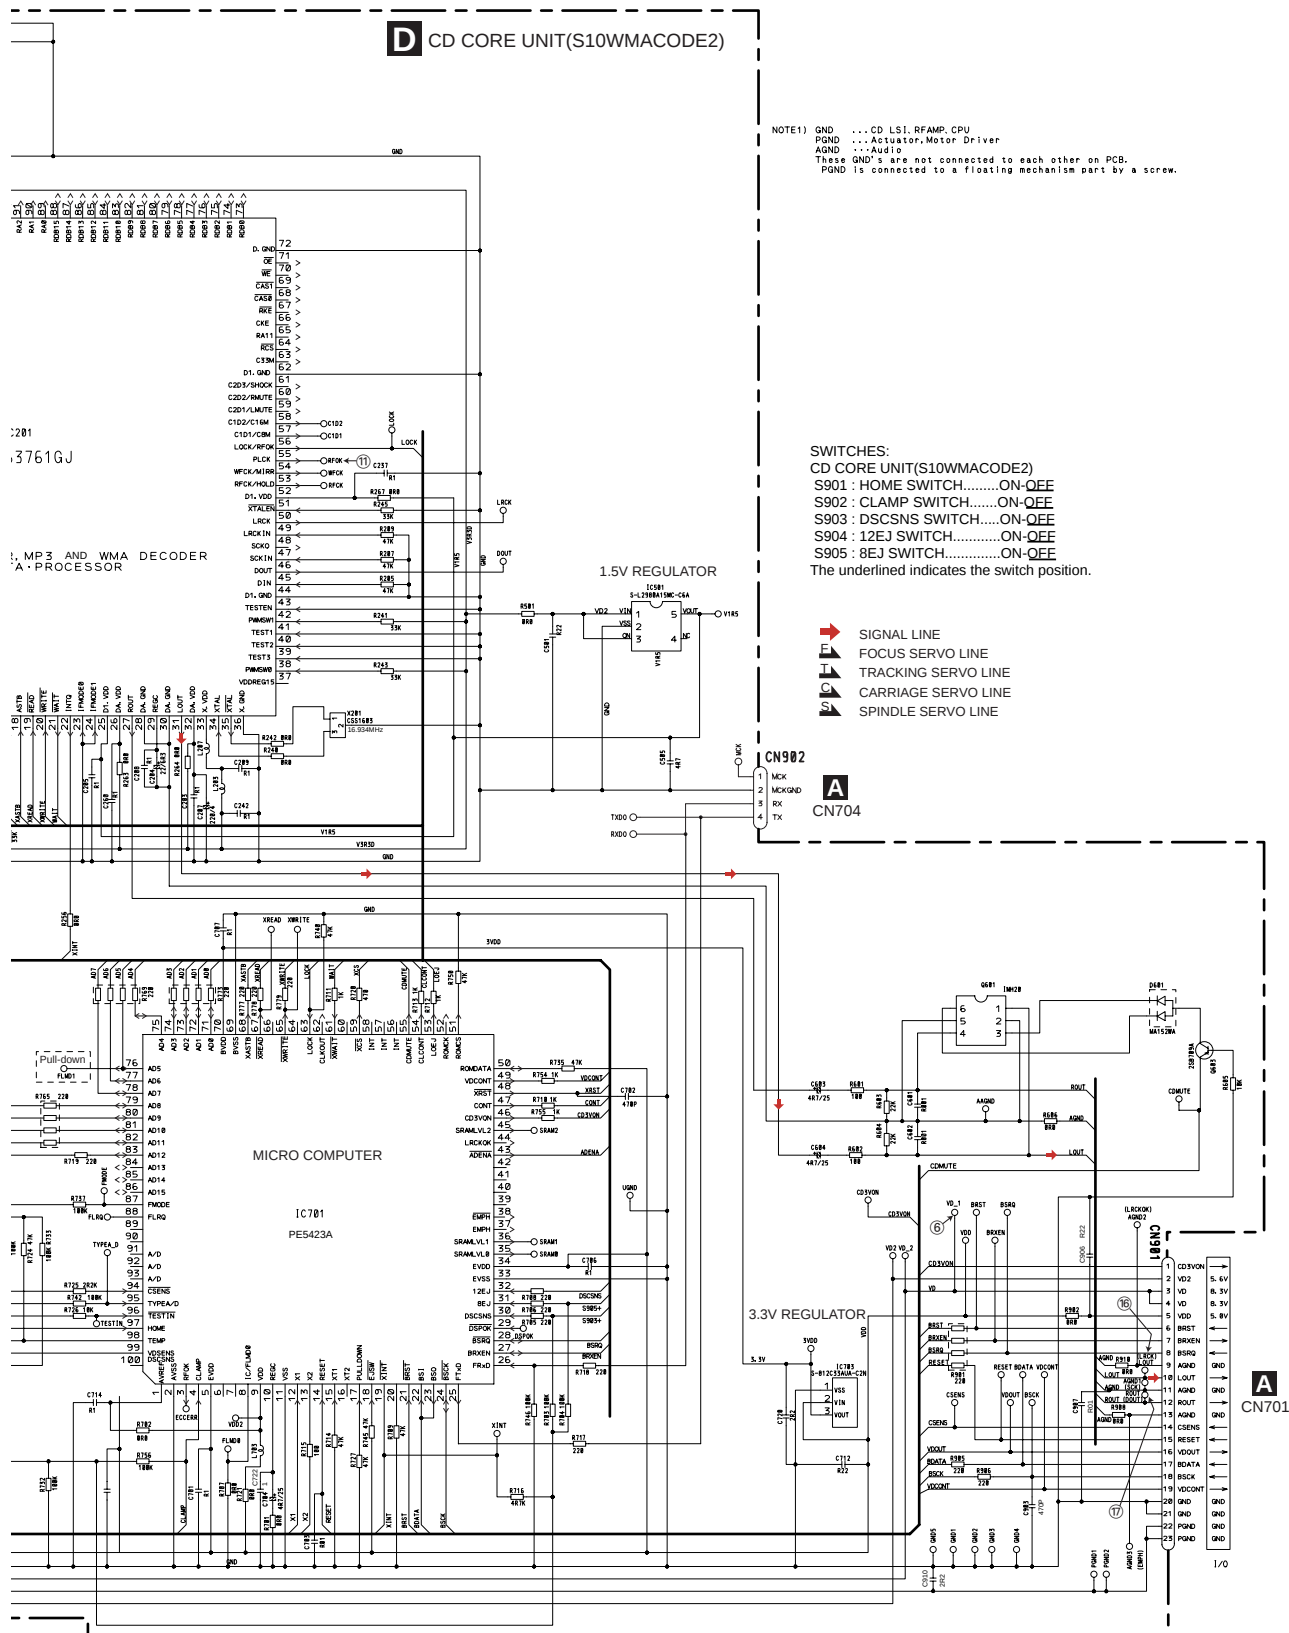

A

B


C

D


E

F

D

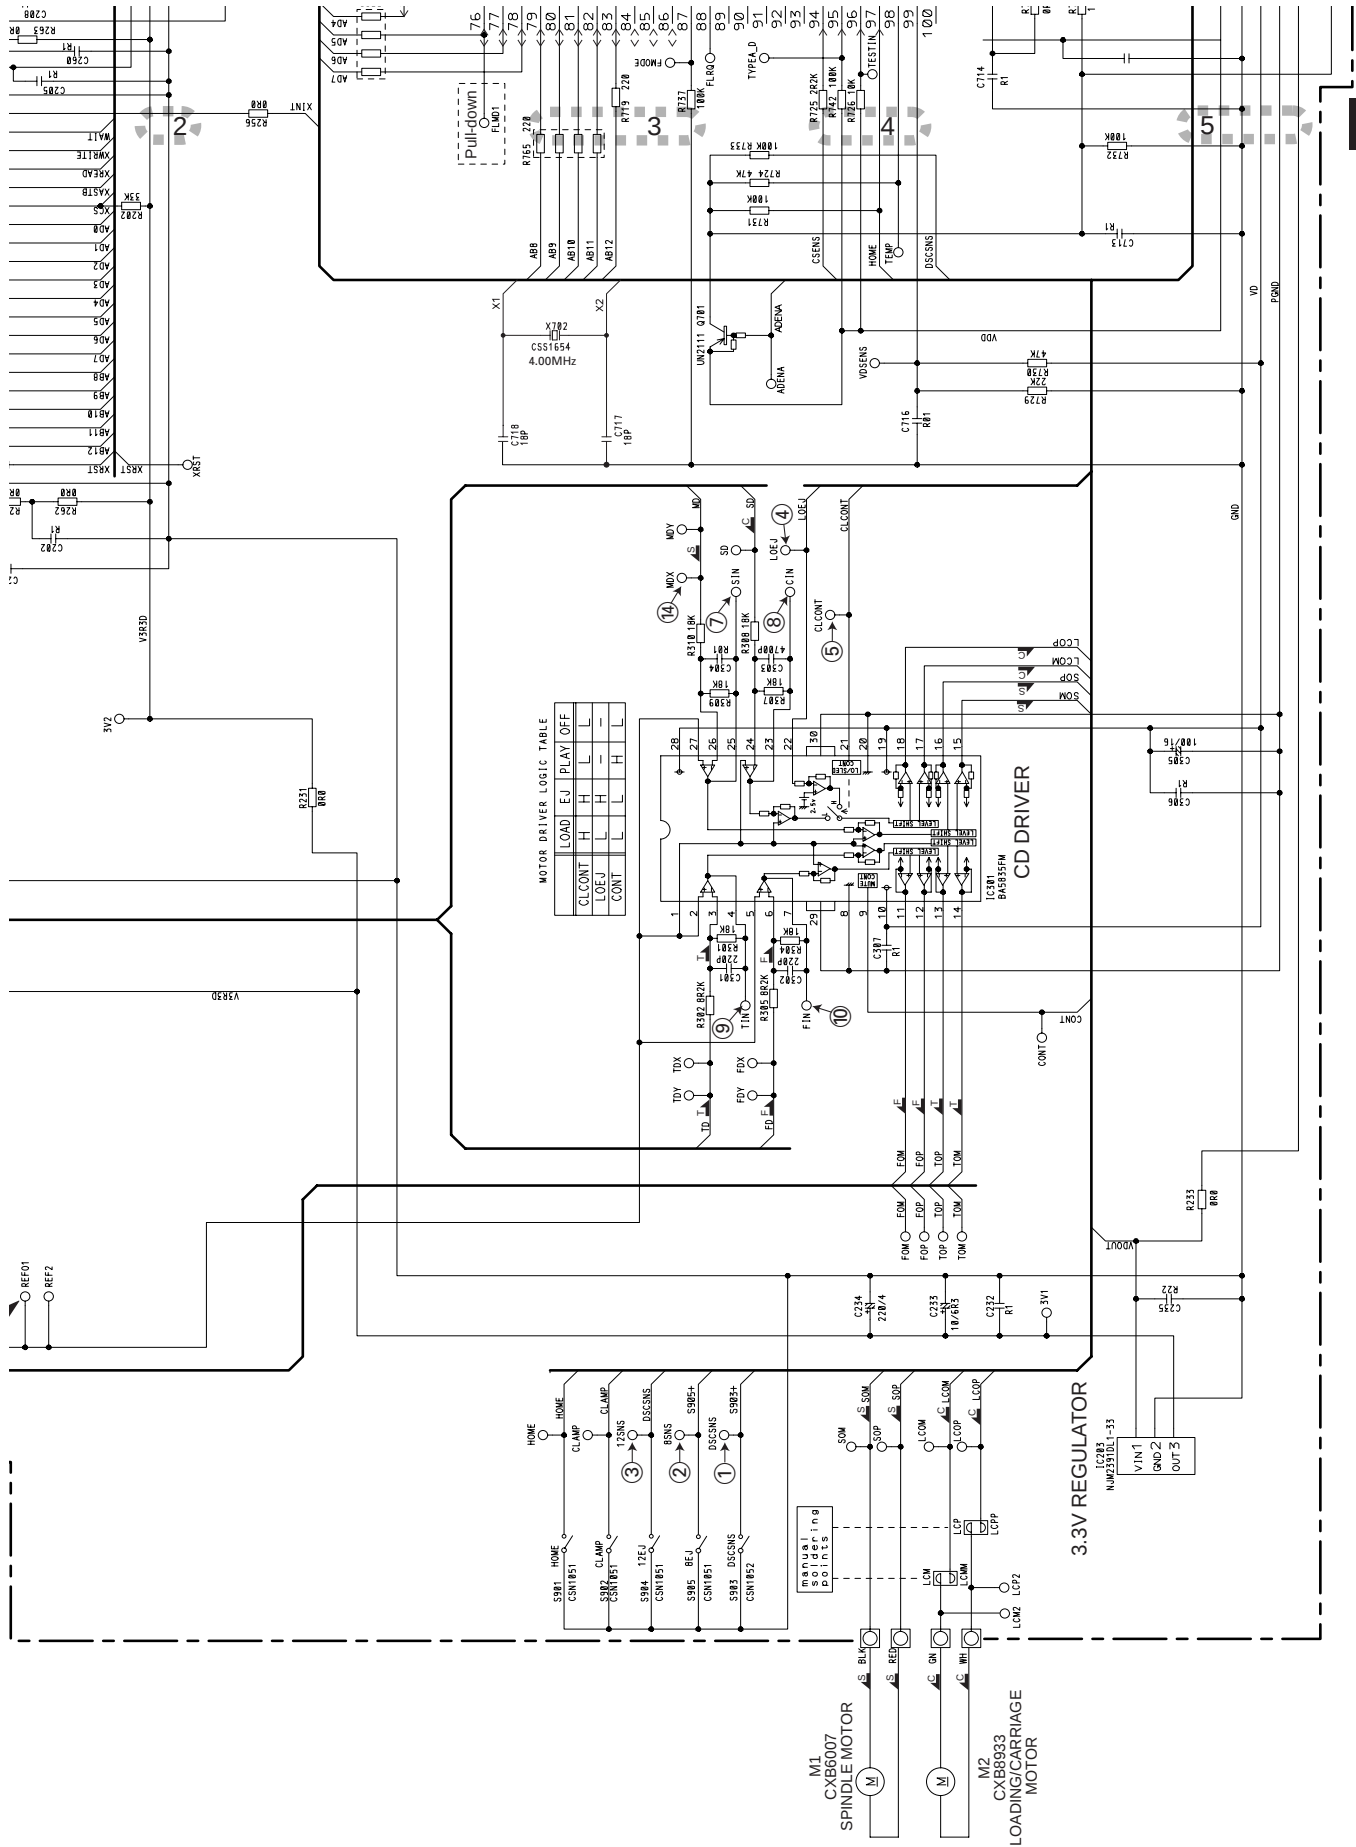

D CD CORE UNIT(S10WMACODE2)

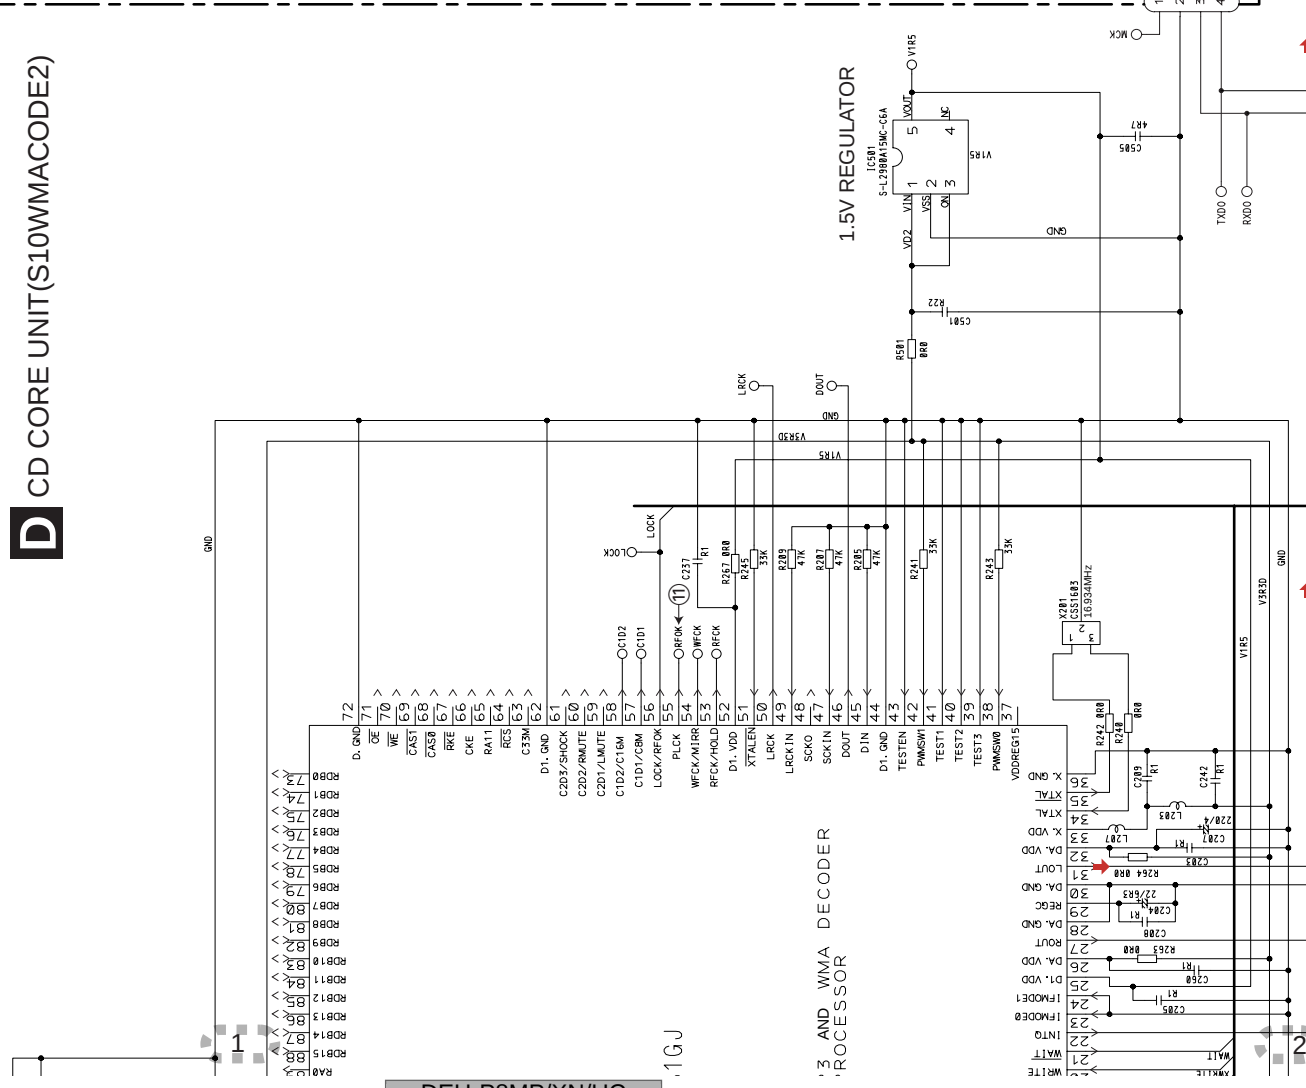

NOTE1) GND ...CD LSI, RFAMP, CPU
PGND ...Actuator, Motor Driver
AGND ...Audio
These GND's are not connected to each other on PCB.
PGND is connected to a floating mechanism part by a screw.

SWITCHES:
CD CORE UNIT(S10WMACODE2)
S901 : HOME SWITCH.....ON-OFF
S902 : CLAMP SWITCH.....ON-OFF
S903 : DSCSNS SWITCH.....ON-OFF
S904 : 12EJ SWITCH.....ON-OFF
S905 : 8EJ SWITCH.....ON-OFF
The underlined indicates the switch position.

↑ SIGNAL LINE
↑ FOCUS SERVO LINE
↑ TRACKING SERVO LINE
↑ CARRIAGE SERVO LINE
↑ SPINDLE SERVO LINE



A

B

C


D

E

F

D-a D-b

D-b

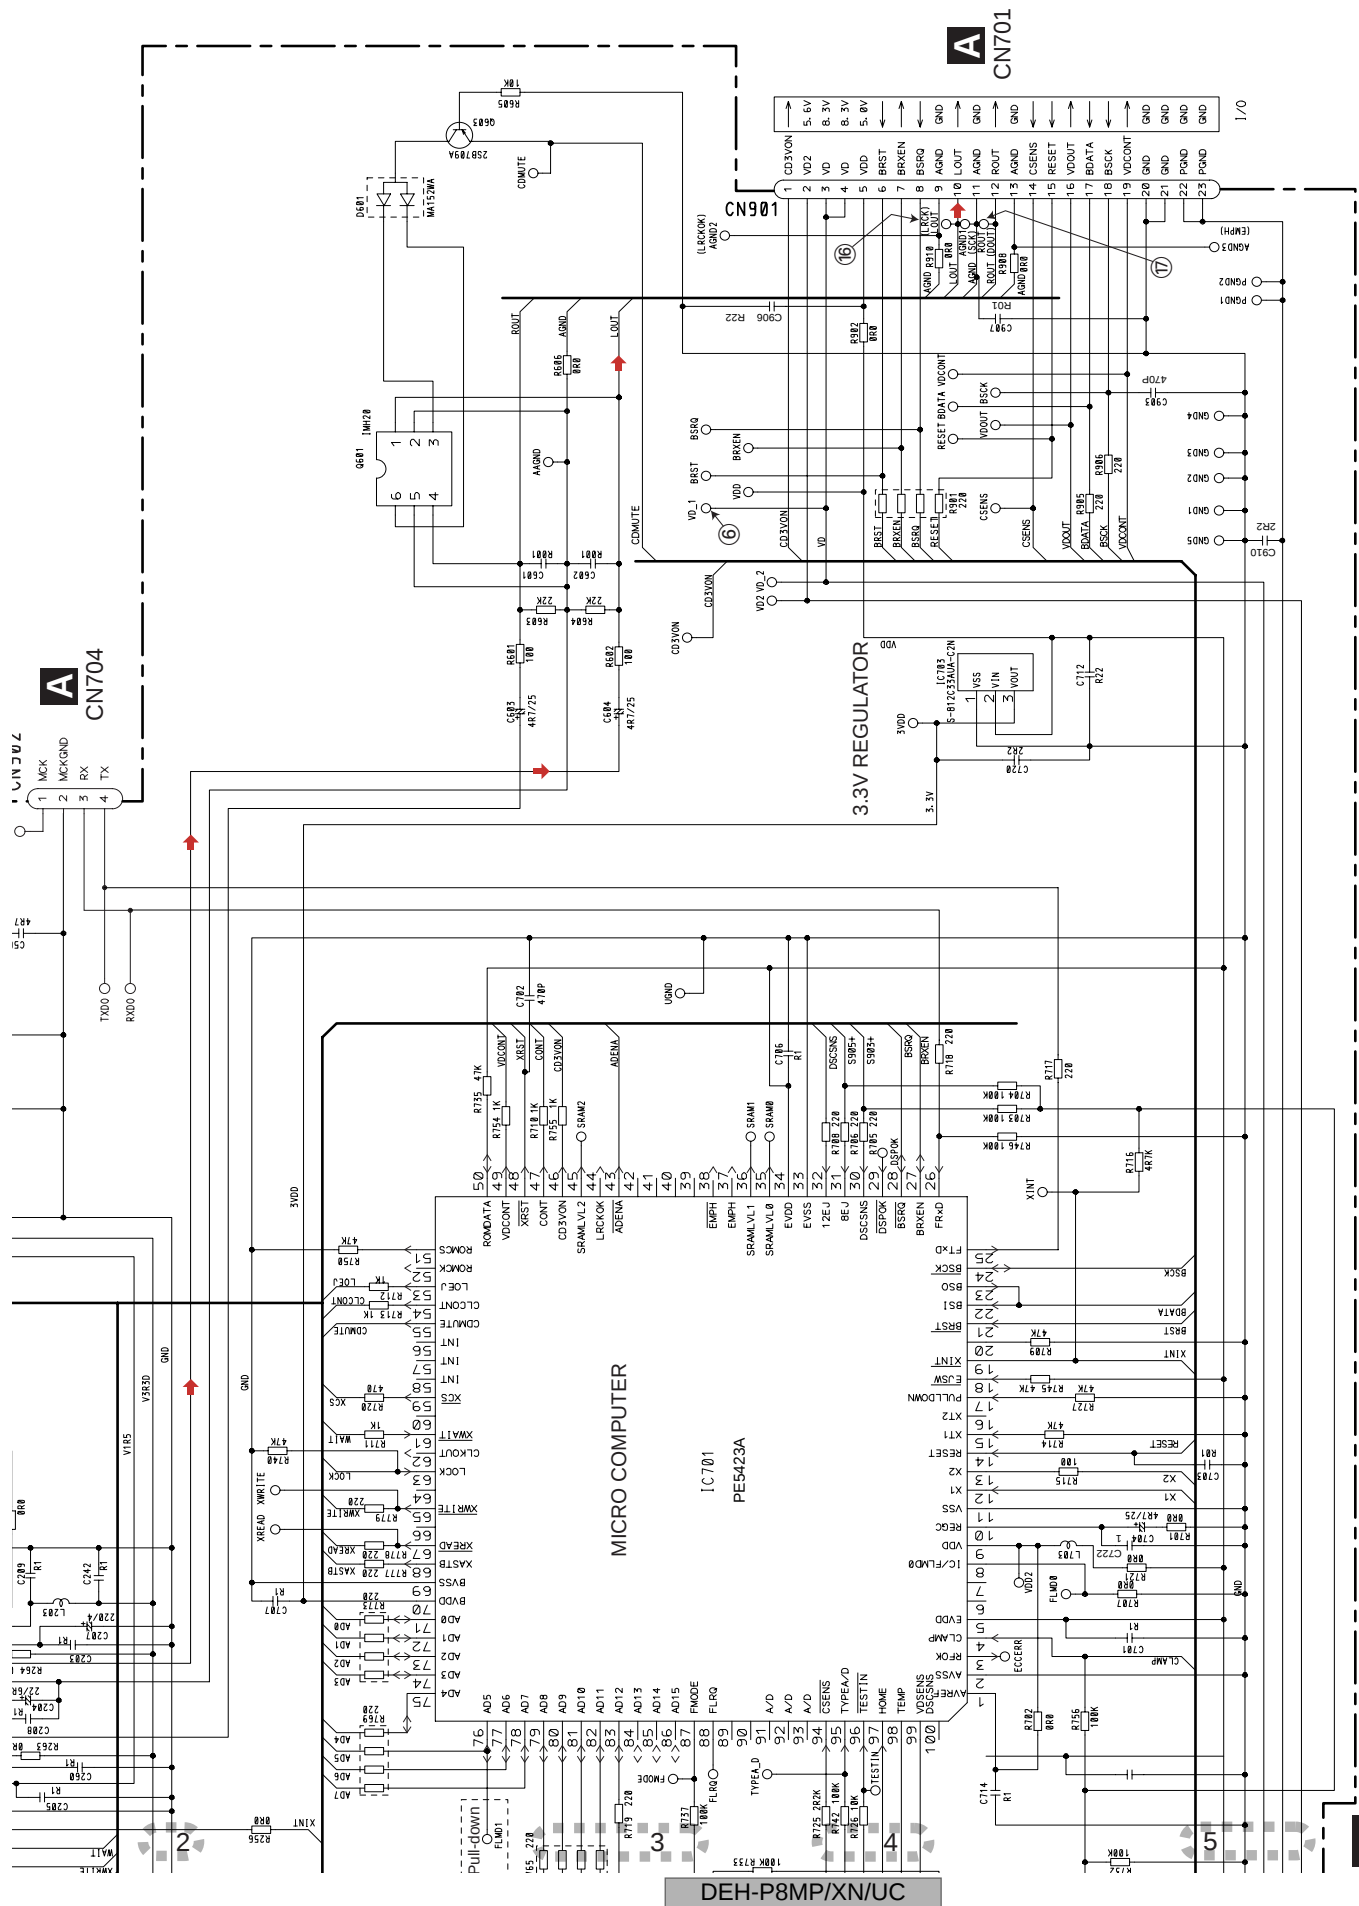

D-a D-b

D-b

Waveforms

Note : 1. The encircled numbers denote measuring points in the circuit diagram.
2. Reference voltage REFO1(1.65V)

A













B


C

D

E

F

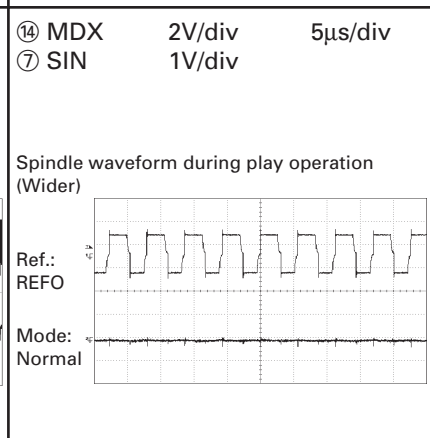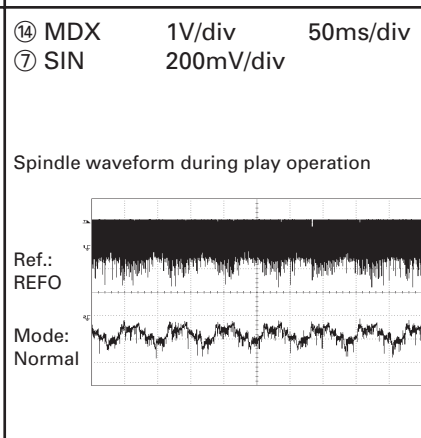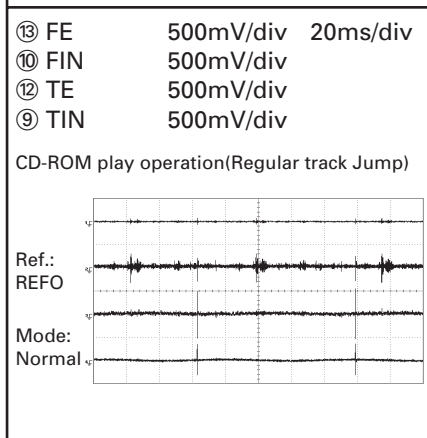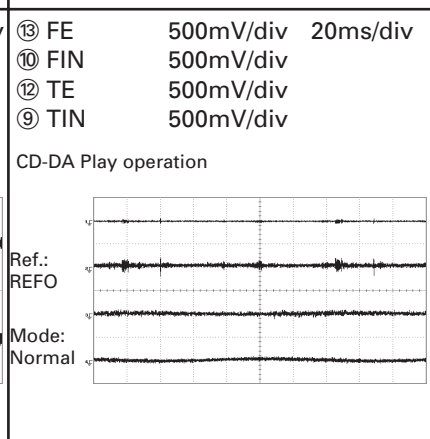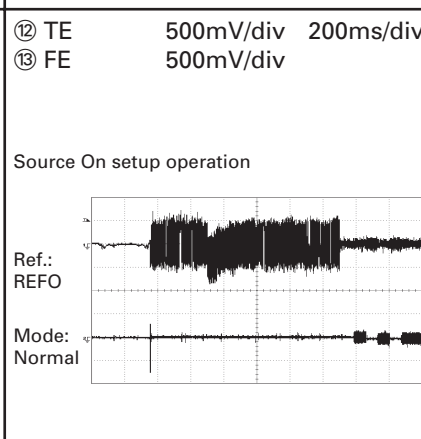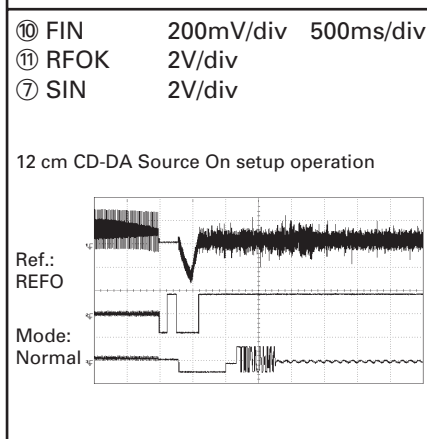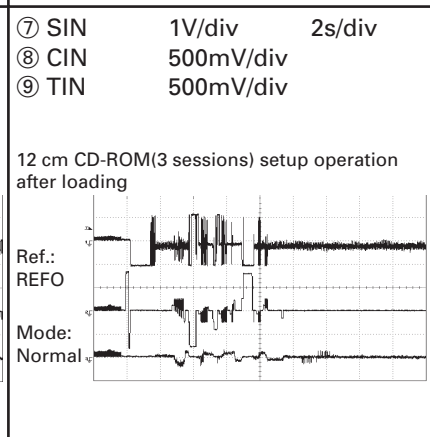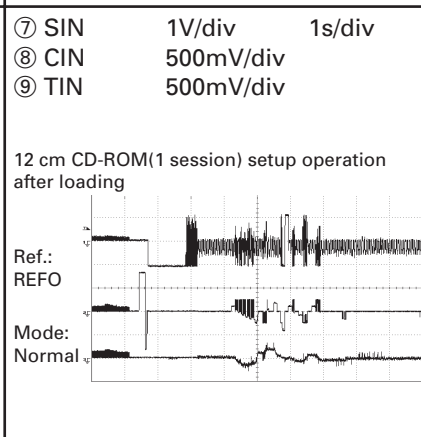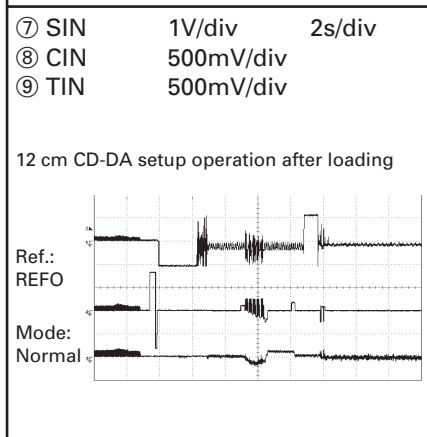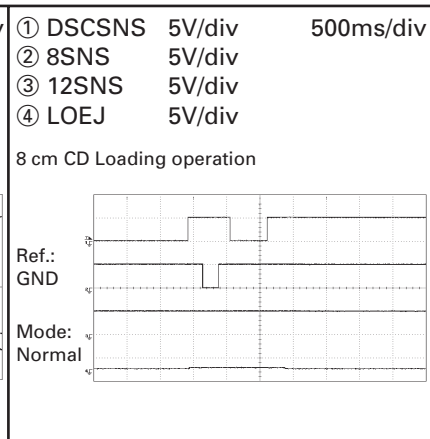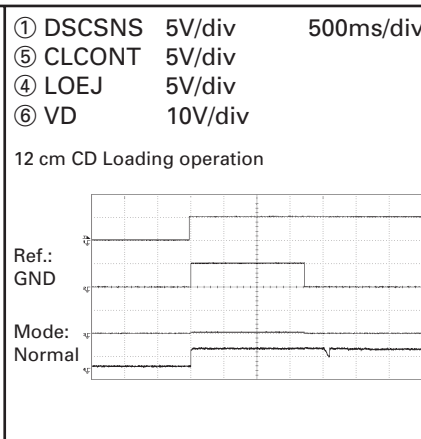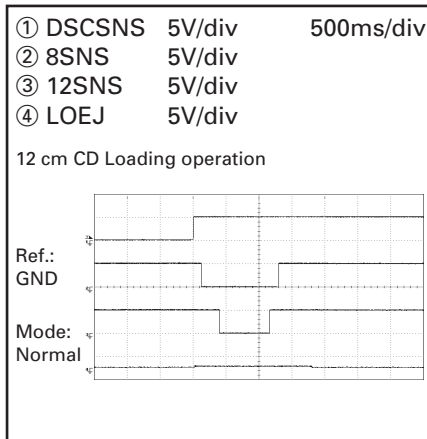


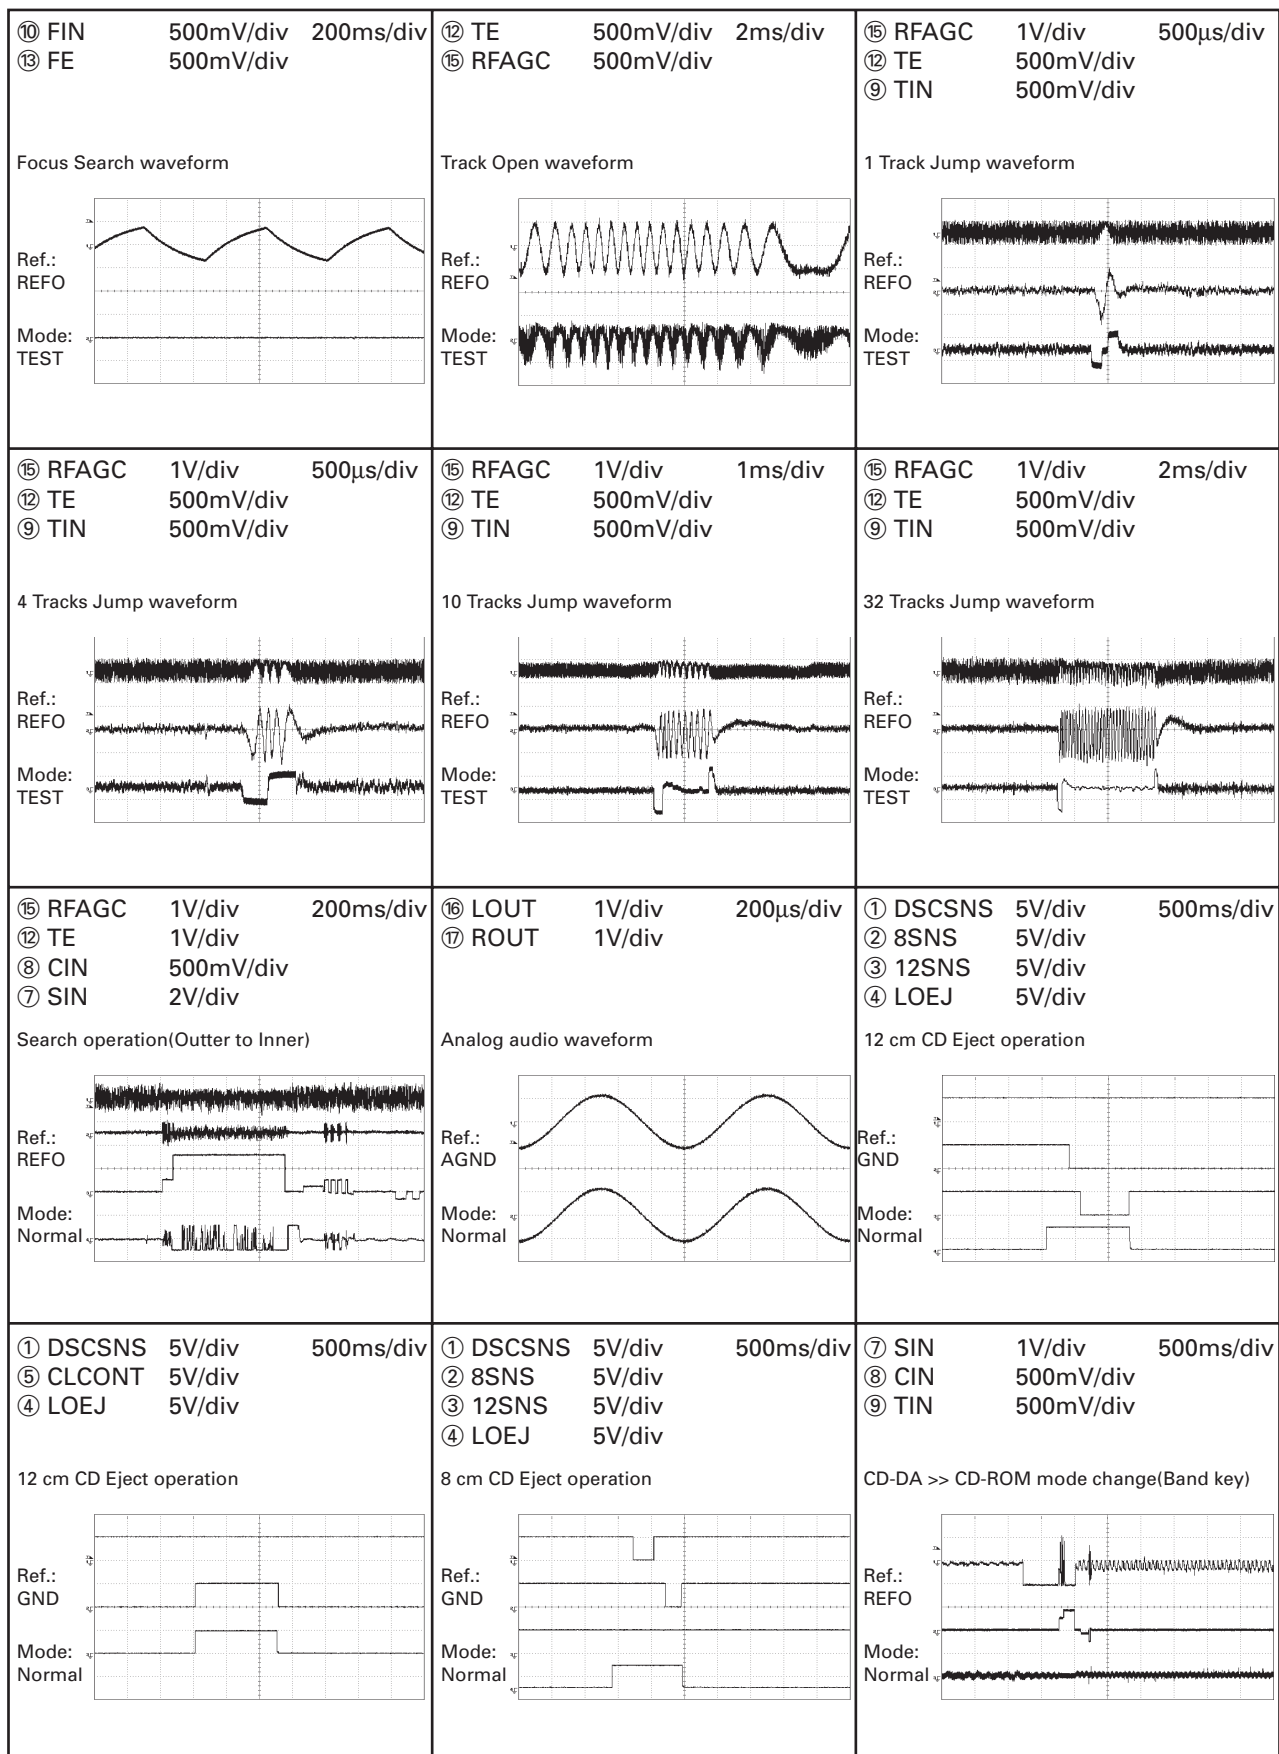

A


⑦ SIN 1V/div 500ms/div
⑧ CIN 500mV/div
⑨ TIN 500mV/div

CD-ROM >> CD-DA mode change(Band key)

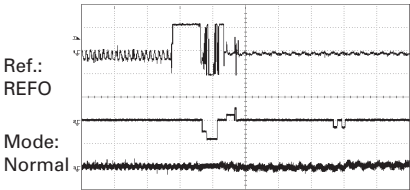

⑮ RFAGC 1V/div 500μs/div
⑨ TIN 1V/div
⑫ TE 1V/div
⑩ FIN 1V/div

Black dot(800μm) during play

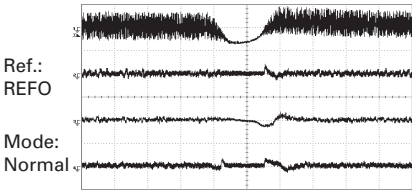

B

C

D

E

F

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

DEH-P8MP/XN/UC

■

7

■

8

■


4. PCB CONNECTION DIAGRAM

4.1 TUNER AMP UNIT

NOTE FOR PCB DIAGRAMS

1. The parts mounted on this PCB include all necessary parts for several destination.
For further information for respective destinations, be sure to check with the schematic diagram.


2. Viewpoint of PCB diagrams

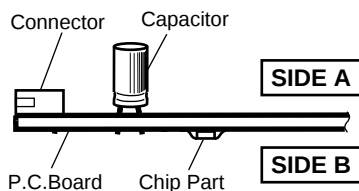

A TUNER AMP UNIT

WIRED REMOTE CONTROL
(DEH-P8MP/XN/UC,
DEH-P80MP/XN/UC)


CORD ASSY
(POWER SUPPLY, SPEAKER)

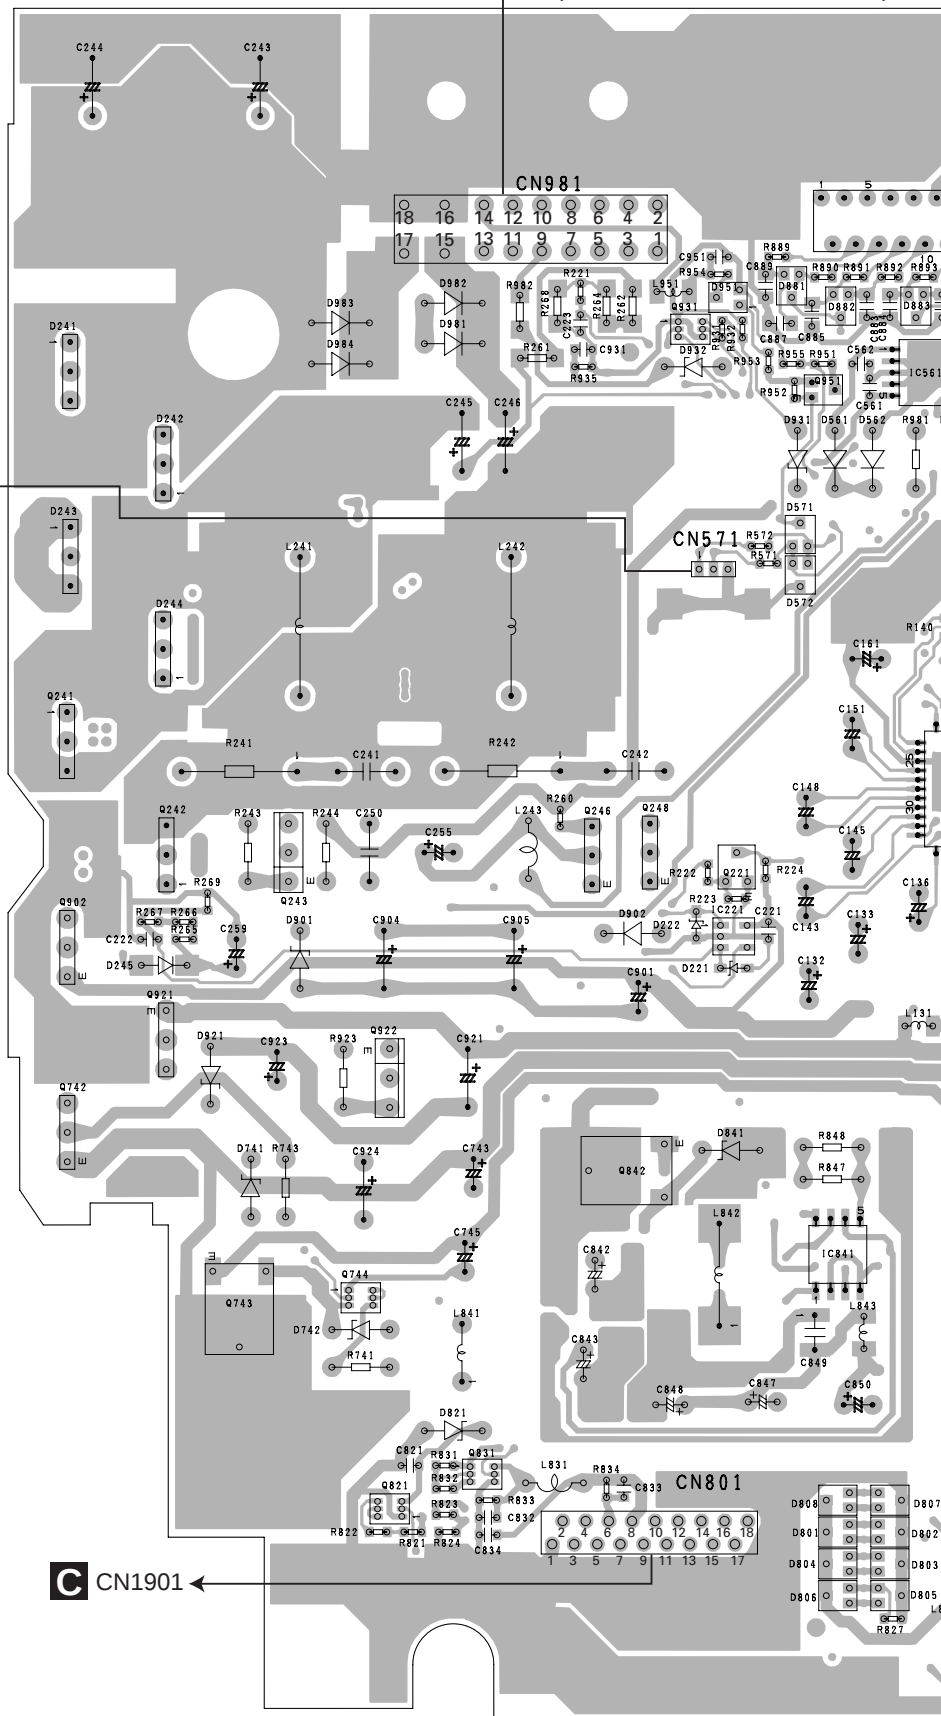


FRONT

DEH-P8MP/XN/UC


A

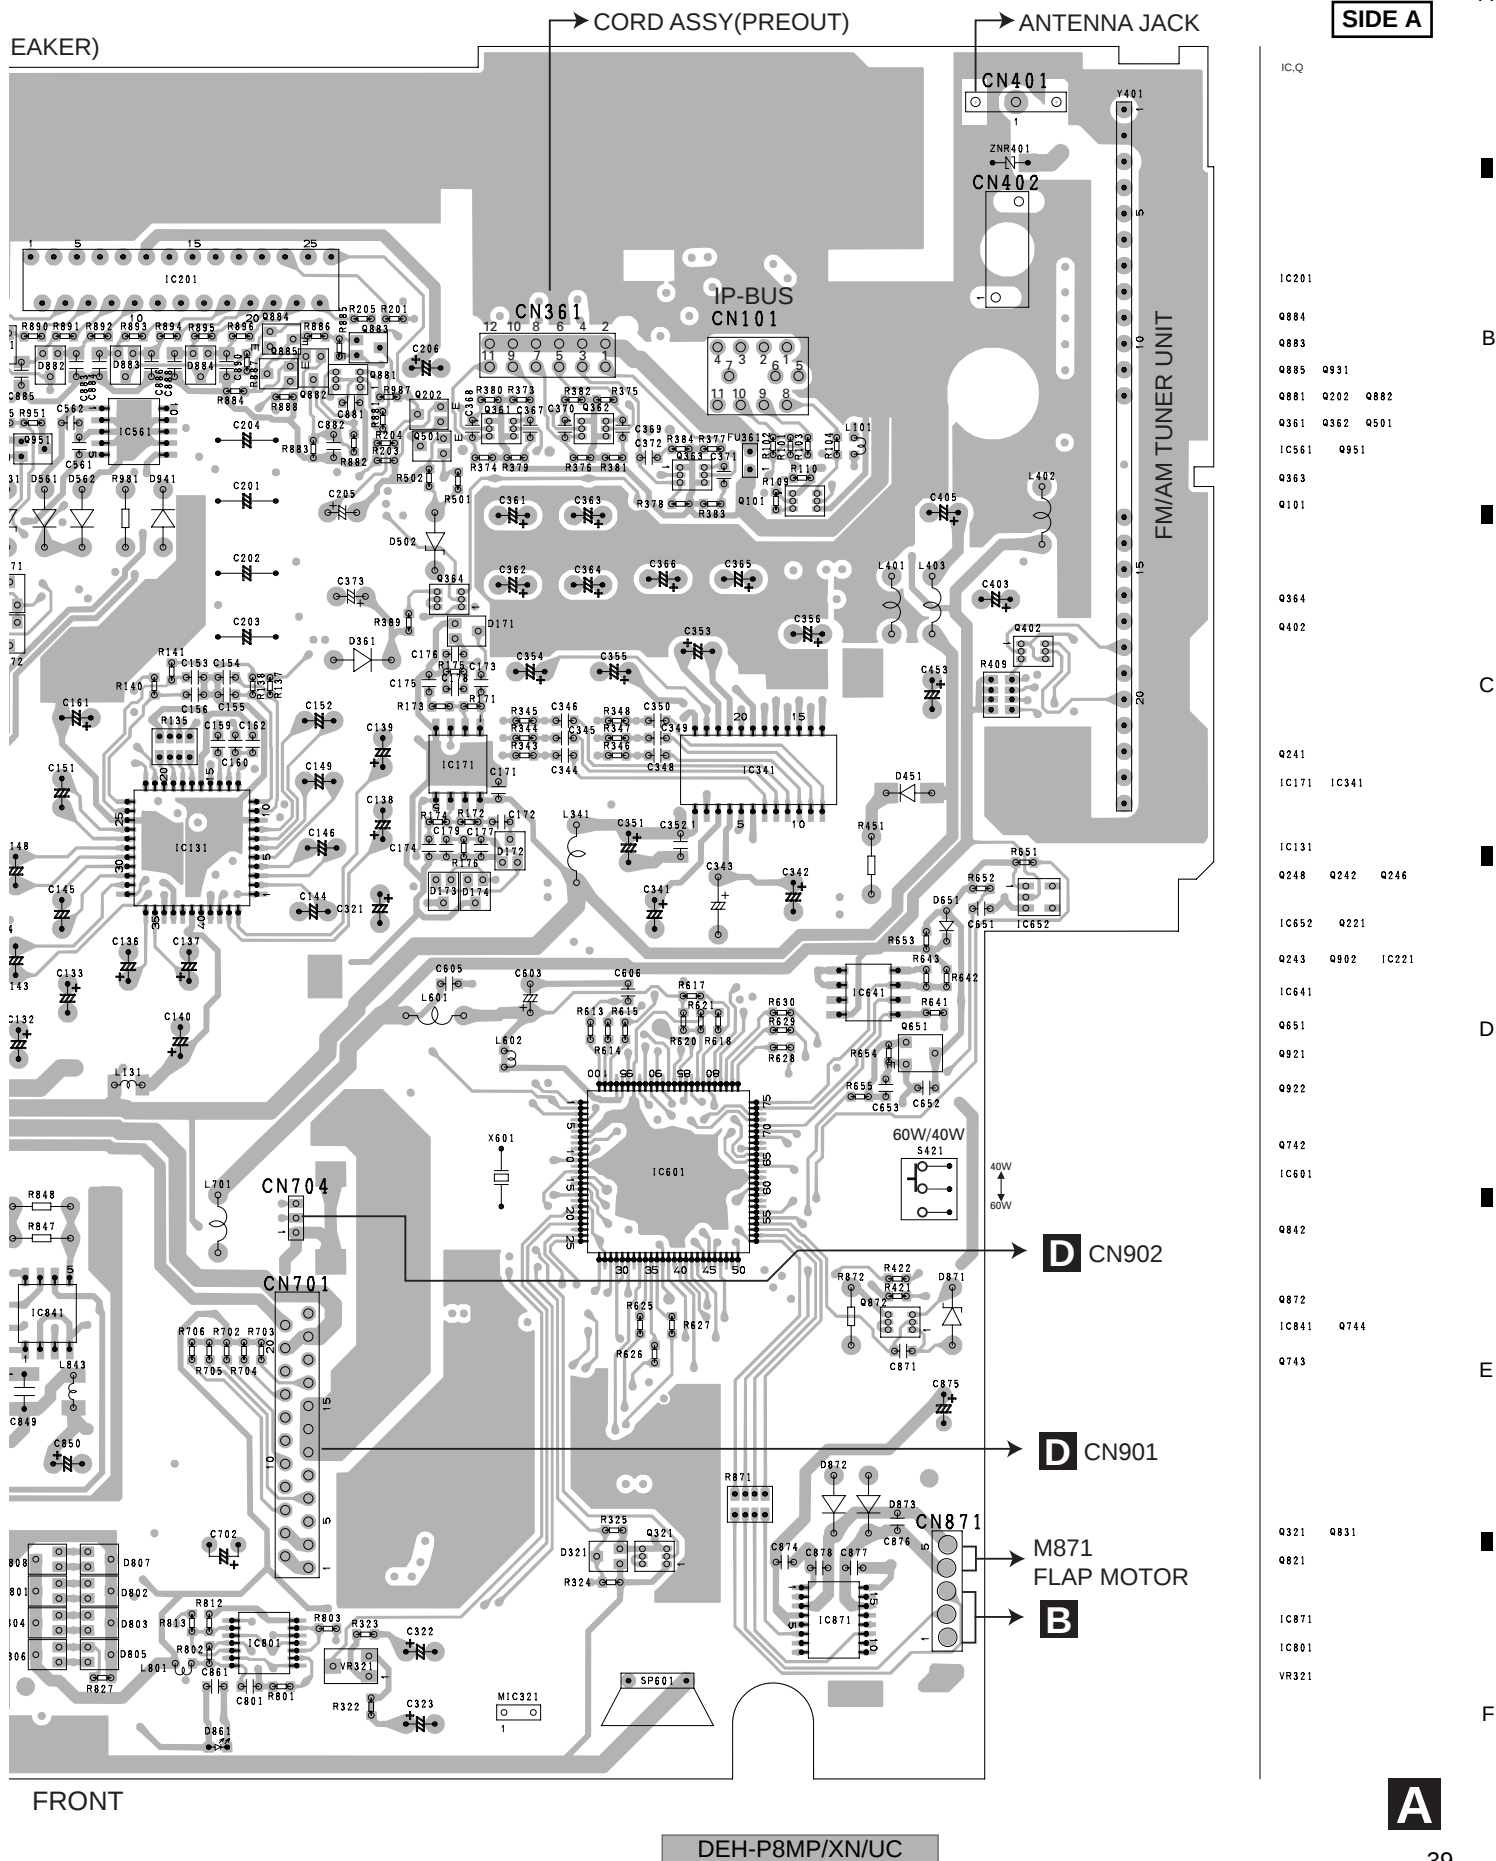

A TUNER AMP UNIT

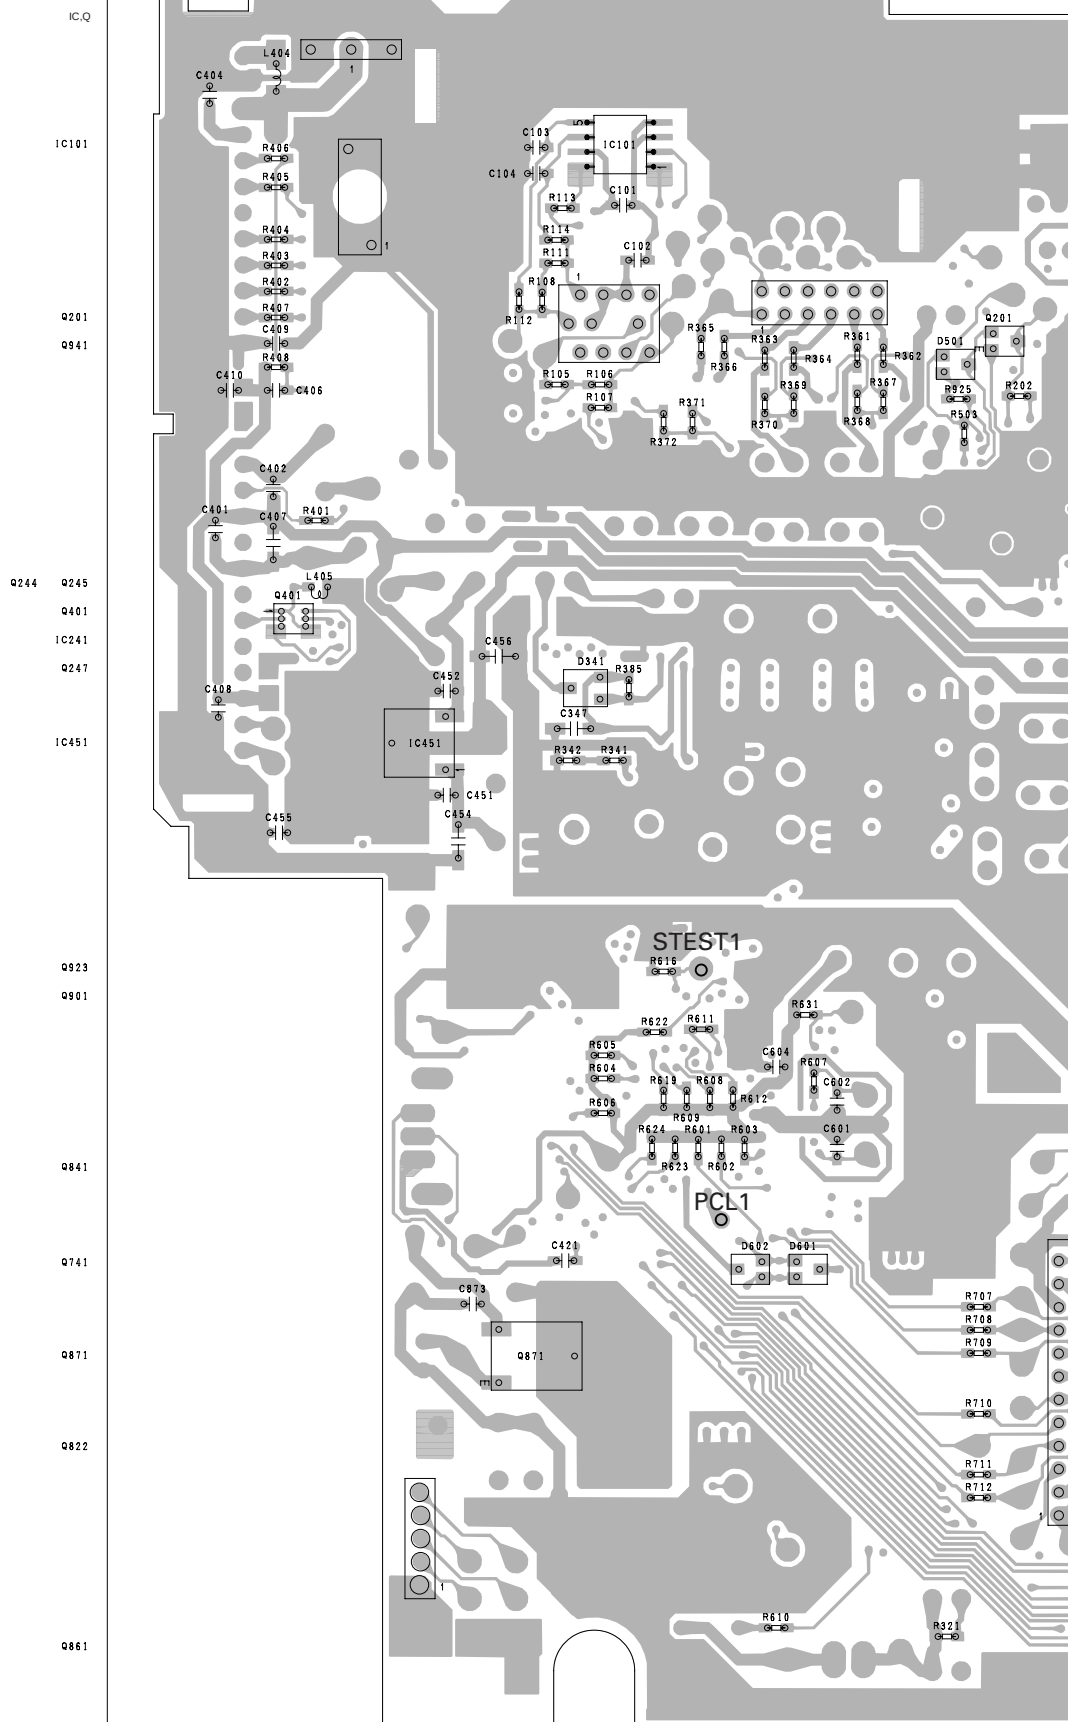

SIDE B

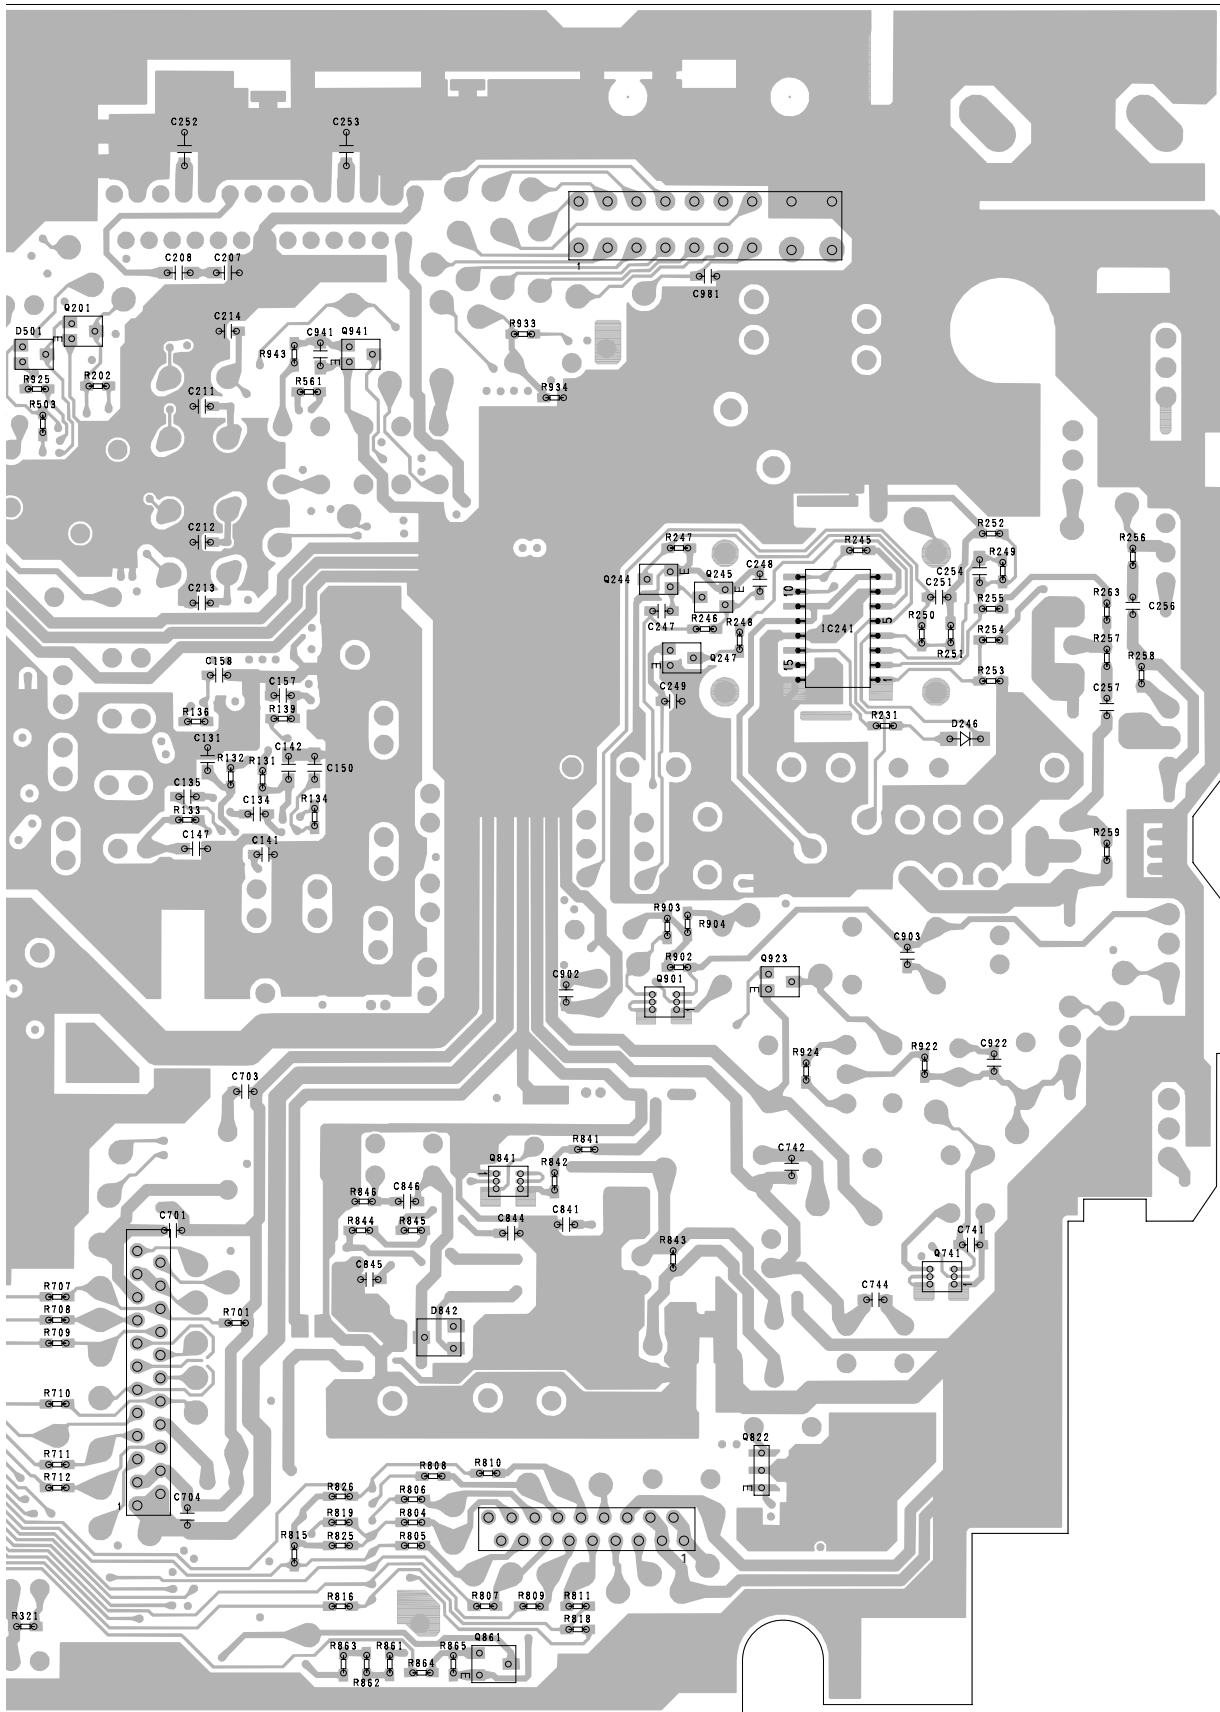

A

B

C

D

E

F

A


1 2 3 4

4.2 SWITCH UNIT

A

B SWITCH UNIT

B

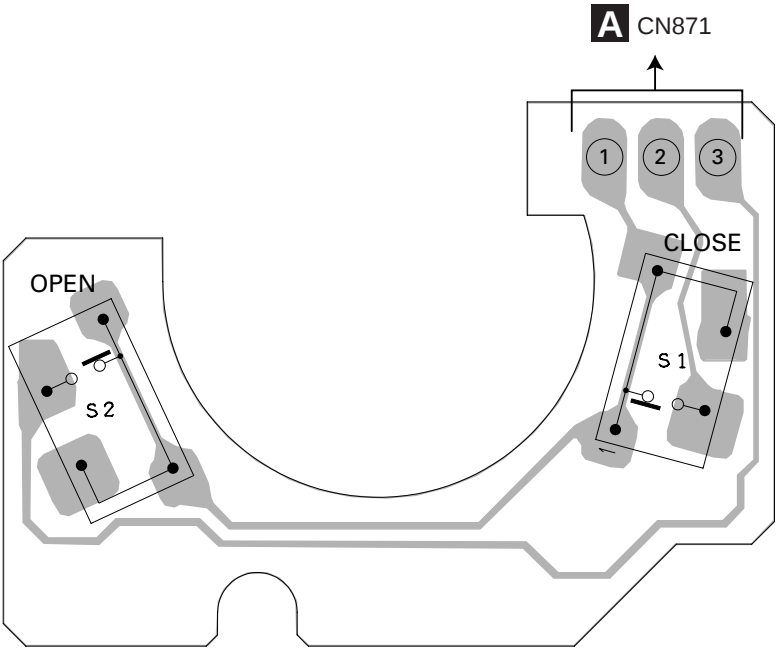

C



D

E

F

B

4.3 KEYBOARD UNIT

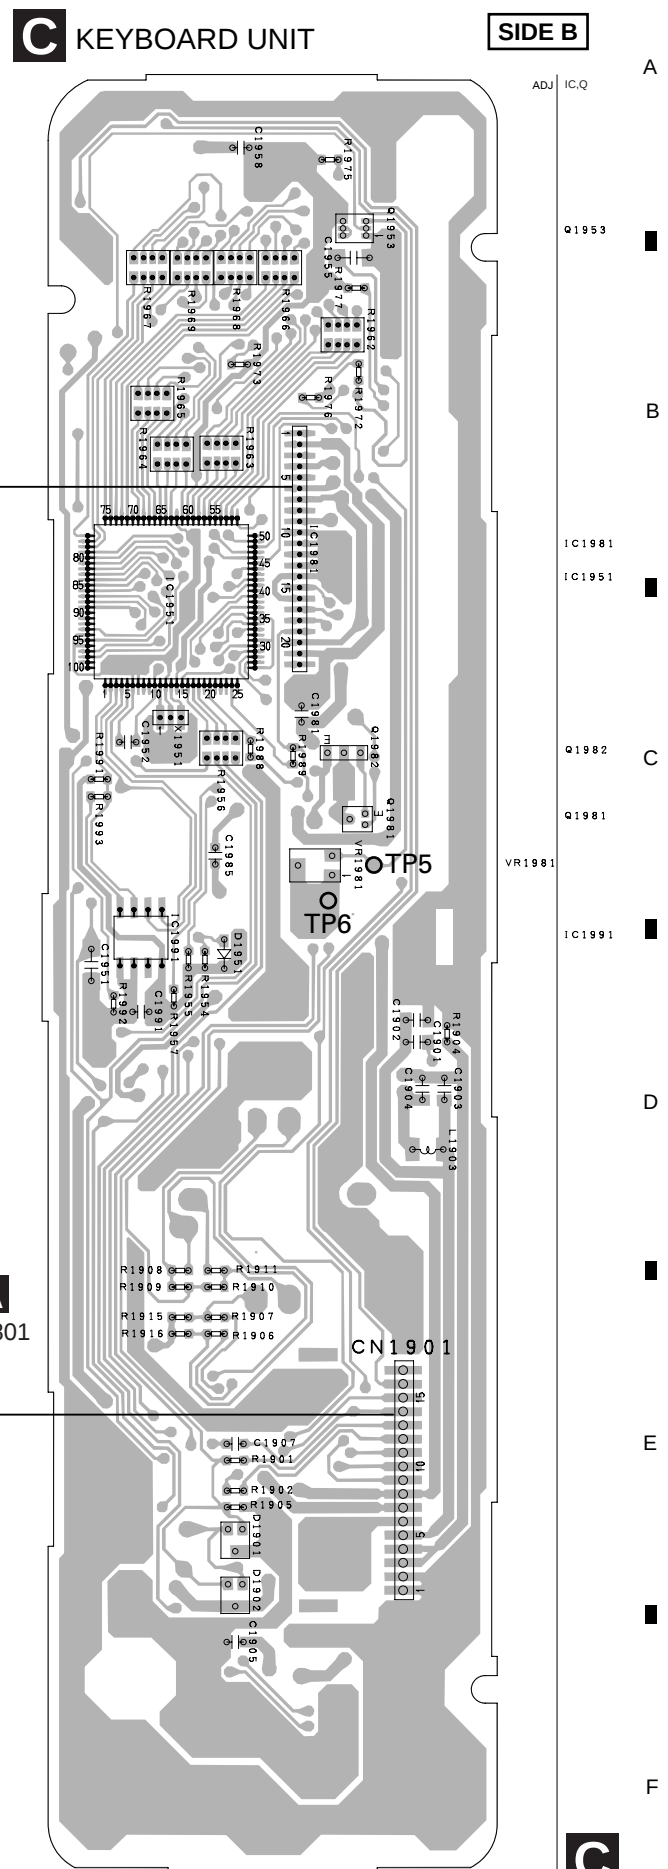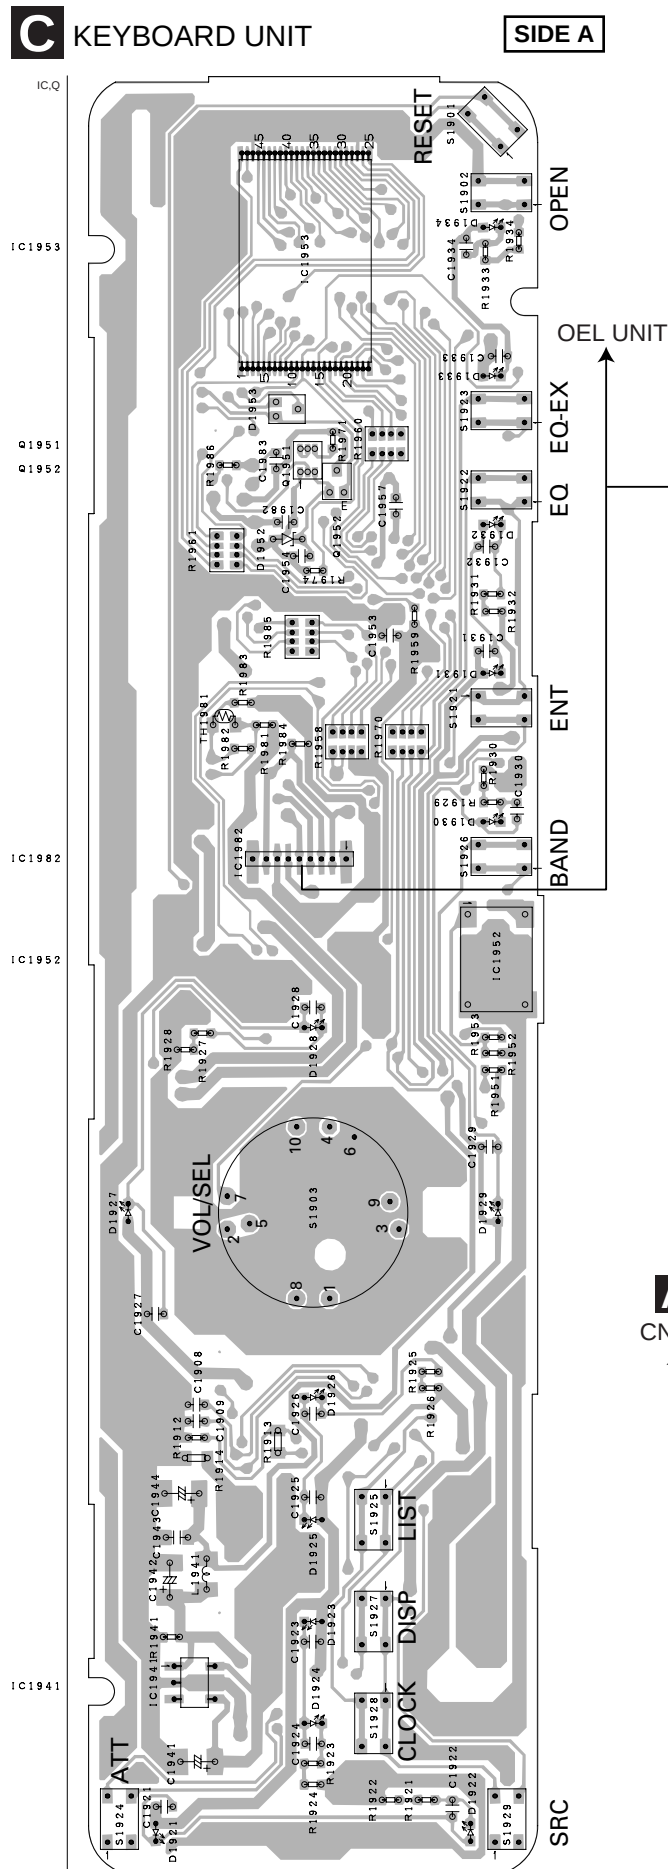

4.4 CD MECHANISM MODULE

D CD CORE UNIT(S10WMACODE2)

SIDE A

IC, Q

IC301

IC704

IC701

IC703

Q101

IC201

M2
LOADING
/CARRIAGE
MOTOR

M1
SPINDLE
MOTOR

A CN701

CN901

HOME

PICKUP UNIT(P9.9MP3)(SERVICE)

CN101

CN902

A CN704

DEH-P8MP/XN/UC

D CD CORE UNIT(S10WMACODE2)

SIDE B

A


B

C

D

E

F

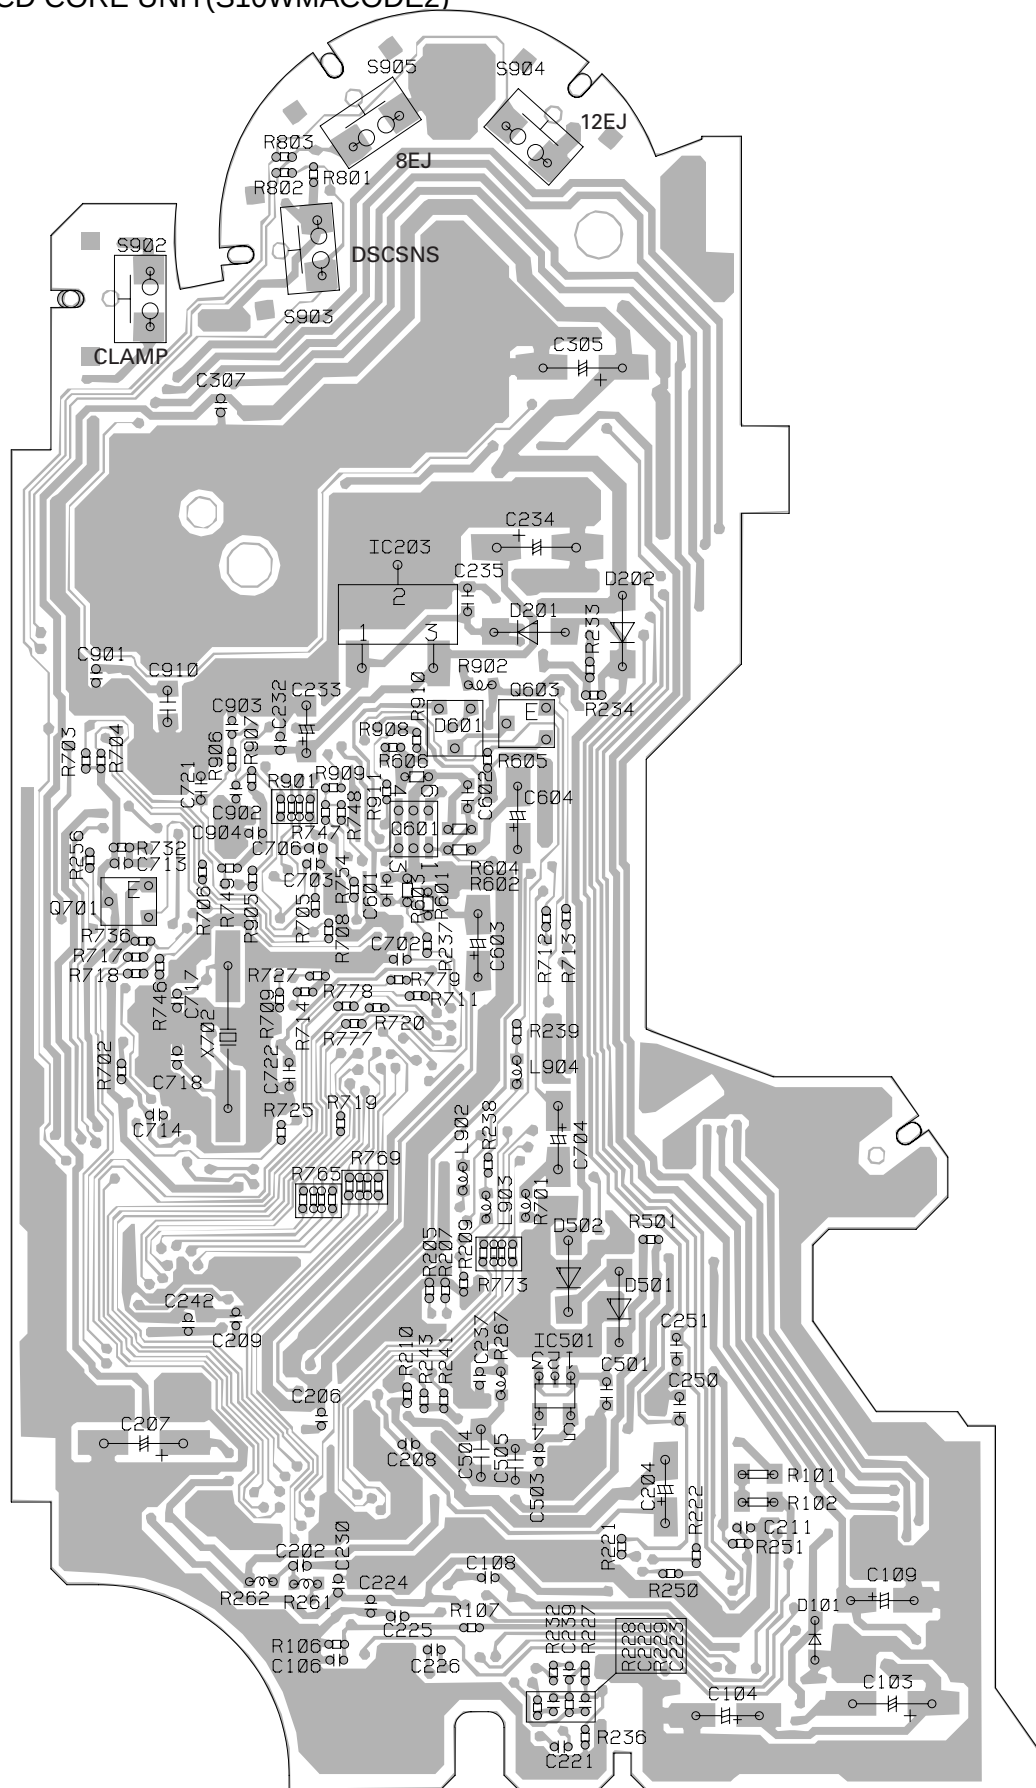

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
			Transistor		UMH3N
			(P80MP/XN/UC)		
			Q 364	Transistor	UMD2N
			Q 501	Transistor	2SC4081
			Q 651	Transistor	2SC3052-12
			Q 741	Transistor	UMD2N
			Q 742	Transistor	2SD2375
			Q 743	Transistor	2SD1760F5
			Q 744	Transistor	UMD2N
			Q 821	Transistor	UMD2N
			Q 822	Transistor	2SD1767
			Q 831	Transistor	UMF23N
			Q 841	Transistor	UMD2N
			Q 842	Transistor	2SD1760F5
			Q 861	Transistor	2SC3052-12
			Q 871	Transistor	2SD1760F5
			Q 872	Transistor	UMD3N
			Q 881	Transistor	UMH9N
			Q 882	Transistor	2SC4081
			Q 883	Transistor	2SA1576
			Q 884	Transistor	2SC4081
			Q 885	Transistor	2SC4081
			Q 901	Transistor	UMD2N
			Q 902	Transistor	2SD2375
			Q 921	Transistor	2SD2375
			Q 922	Transistor	2SB1243
			Q 923	Transistor	DTC114EU
			Q 931	Transistor	UMX1N
			Q 941	Transistor	DTC114EU
			Q 951	Transistor	2SA1576
			D 171	Diode Network	DA204U
			D 172	Diode Network	DA204U
			D 173	Diode	DAN202U
			D 174	Diode	DAP202U
			D 221	Diode	UDZS6R2(B)
			D 222	Diode	UDZS6R8(B)
			D 241	Diode	FMG22
			D 242	Diode	FMG22
			D 243	Diode	FMJ-2303
			D 244	Diode	FMJ-2303
			D 245	Diode	1SR154-400
			D 246	Diode	1SS355
			D 321	Diode	RB706F-40
			D 341	Diode(P8MP/XN/UC,P1Y/XN/ES)	1SS396
			D 361	Diode	1SS133
			D 451	Diode	1SR154-400

Unit Number:CWM9287(P8MP/XN/UC)
Unit Number:CWM9288(P80MP/XN/UC)
Unit Number:CWM9289(P1Y/XN/ES)
Unit Name:Tuner Amp Unit

MISCELLANEOUS

C	IC 101	IC	HA12240FP		
	IC 131	IC	PML009A		
	IC 171	IC	NJM4558MD		
	IC 201	IC	PAL008A		
	IC 221	IC	NJM2406F		
	IC 241	IC	UPC494GS		
	IC 341	IC	PA2028A		
	IC 451	IC	BA033FP		
	IC 561	IC	TPD1018F		
	IC 601	IC	PD5925A		
D	IC 652	IC	BD4835G		
	IC 801	IC	TC74VHCT125AFT		
	IC 841	IC	NJM2360M		
	IC 871	IC	BA6288FS		
	Q 101	Transistor	UMF23N		
	Q 201	Transistor	DTC124EU		
	Q 202	Transistor	DTC114EU		
	Q 221	Transistor	2SC3052-12		
	Q 241	Transistor	FKV550N		
	Q 242	Transistor	FKV550N		
E	Q 243	Transistor	2SA933S		
	Q 244	Transistor	DTC123EU		
	Q 246	Transistor	2SC1740S		
	Q 247	Transistor	DTC143EU		
	Q 248	Transistor	2SC1740S		
	Q 361	Chip Transistor (P8MP/XN/UC,P1Y/XN/ES)	HN1C03FU		
		Transistor (P80MP/XN/UC)	UMH3N		
	Q 362	Chip Transistor (P8MP/XN/UC,P1Y/XN/ES)	HN1C03FU		
		Transistor (P80MP/XN/UC)	UMH3N		
	Q 363	Chip Transistor (P8MP/XN/UC,P1Y/XN/ES)	HN1C03FU		

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
D 501	Diode	DAN202U		SP601	Buzzer	CPV1062	
D 502	Diode	HZS9L(A2)			FM/AM Tuner Unit	CWE1646	
D 561	Diode	MPG06G-6415G50		<u>RESISTORS</u>			
D 562	Diode	MPG06G-6415G50					A
D 741	Diode	HZS9L(B1)		R 101		RS1/16S102J	
D 742	Diode	HZS6L(C1)		R 102		RS1/16S223J	
D 801	Diode	DAN202U		R 103		RS1/16S181J	
				R 104		RS1/16S222J	
D 802	Diode	DAP202U		R 105		RS1/16S181J	
D 803	Diode	DAP202U					
D 804	Diode	DAN202U		R 106		RS1/16S223J	
D 805	Diode	DAP202U		R 107		RS1/16S102J	
D 806	Diode	DAN202U		R 108		RS1/16S150J	
				R 109		RS1/16S562J	
D 807	Diode	DAP202U		R 110		RS1/16S332J	
D 808	Diode	DAN202U					B
D 821	Diode	HZS11L(A1)		R 111		RS1/16S470J	
D 841	Diode	HZS11L(A1)		R 112		RS1/16S101J	
D 842	Diode	RB411D		R 113		RS1/16S102J	
				R 114		RS1/16S101J	
D 861	LED	SML311BBT(PQ)		R 131		RS1/16S821J	
D 871	Diode	HZS6L(C3)					
D 872	Diode	1SS133		R 132		RS1/16S821J	
D 873	Diode	1SS133		R 133		RS1/16S102J	
D 881	Diode	DAN202U		R 134		RS1/16S102J	
				R 135		RAB4C102J	
D 882	Diode	DAN202U		R 136		RS1/16S101J	
D 883	Diode	DAN202U					
D 884	Diode	DAN202U		R 137		RS1/16S101J	C
D 901	Diode	HZS6L(B2)		R 138		RS1/16S101J	
D 902	Diode	MPG06G-6415G50		R 139		RS1/16S101J	
				R 140		RS1/16S101J	
D 921	Diode	HZS9L(B3)		R 141		RS1/16S101J	
D 931	Diode	HZS7L(C3)					
D 932	Diode	HZS7L(A1)		R 171		RS1/16S104J	
D 941	Diode	MPG06G-6415G50		R 172		RS1/16S104J	
D 951	Diode	DAN202U		R 173		RS1/16S563J	
				R 174		RS1/16S563J	
D 981	Diode	MPG06G-6415G50		R 175		RS1/16S474J	
D 982	Diode	MPG06G-6415G50					
D 983	Diode	MPG06G-6415G50		R 176		RS1/16S474J	
D 984	Diode	MPG06G-6415G50		R 201		RS1/16S681J	D
ZNR401	Surge Protector	RCCA-201Q31UA-PI		R 202		RS1/16S103J	
				R 203		RS1/16S103J	
L 101	Inductor	LCTC2R2K1608		R 204		RS1/16S331J	
L 131	Inductor	LCTA2R2J2520					
L 241	Coil	CTH1310		R 205		RS1/16S681J	
L 242	Coil	CTH1310		R 221		RS1/16S103J	
L 243	Ferri-Inductor	LAU220K		R 222		RS1/16S103J	
				R 223		RS1/16S473J	
L 341	Ferri-Inductor	LAU220K		R 224		RS1/16S104J	
L 401	Inductor	LAU1R0K					
L 402	Inductor	LAU2R2K		R 231		RS1/16S473J	
L 403	Inductor	LAU1R0K		R 241		RS1/2PMF3R3J	E
L 404	Inductor	LCTA4R7J2520		R 242		RS1/2PMF3R3J	
				R 243		RD1/4MUF470J	
L 601	Ferri-Inductor	LAU100K		R 244		RD1/4MUF470J	
L 701	Ferri-Inductor	LAU100K					
L 801	Inductor	CTF1379		R 245		RS1/16S222J	
L 831	Ferri-Inductor	LAU100K		R 247		RS1/16S104J	
L 841	Inductor	CTF1489		R 248		RS1/16S822J	
				R 249		RS1/16S224J	
L 842	Inductor	CTF1510		R 250		RS1/16S472J	
L 843	Chip-Inductor	LCTA2R2J3225					
L 951	Chip-Inductor	LCTA2R2J3225		R 251		RS1/16S103J	
X 601	Radiator 10.00MHz	CSS1475		R 252		RS1/16S1002D	
S 421	Slide Switch(60W/40W)	CSH1051		R 253		RS1/16S1002D	F
				R 254		RS1/16S3902D	
VR321	Semi-fixed 10kΩ(B)	CCP1229		R 255		RS1/16S3902D	
FU361	Fuse 3A 	CEK1286					
MIC321	Microphone	CPM1011					

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	R 256		RS1/16S2R2J	R 404		RS1/16S681J
	R 257		RS1/16S2R2J	R 405		RS1/16S681J
	R 258		RS1/16S473J	R 406		RS1/16S681J
	R 259		RS1/16S473J			
	R 260		RS1/16S103J			
	R 261		RS1/4SA331J	R 421		RS1/16S104J
	R 262		RS1/4SA331J	R 422		RS1/16S102J
	R 263		RS1/16S0R0J	R 451		RD1/4PU2R2J
	R 264		RS1/4SA151J	R 501		RS1/16S103J
	R 265		RS1/16S332J	R 502		RS1/16S473J
	R 266		RS1/16S332J	R 503		RS1/16S473J
	R 267		RS1/16S152J	R 561		RS1/16S103J
	R 268		RS1/4SA151J	R 571	(P8MP/XN/UC,P80MP/XN/UC)	RS1/16S102J
	R 269		RS1/16S152J	R 572	(P8MP/XN/UC,P80MP/XN/UC)	RS1/16S102J
	R 321		RS1/16S222J	R 601		RS1/16S472J
B	R 323		RS1/16S561J	R 602		RS1/16S472J
	R 324		RS1/16S104J	R 603		RS1/16S473J
	R 325		RS1/16S104J	R 604		RS1/16S104J
	R 341		RS1/16S103J	R 605		RS1/16S104J
	R 342		RS1/16S103J	R 606		RS1/16S103J
	R 361	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S820J	R 607		RS1/16S0R0J
		(P80MP/XN/UC)	RS1/16S821J	R 608		RS1/16S104J
	R 362	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S820J	R 609		RS1/16S104J
		(P80MP/XN/UC)	RS1/16S821J	R 610		RS1/16S102J
	R 363	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S820J	R 612		RS1/16S103J
C		(P80MP/XN/UC)	RS1/16S821J			
	R 364	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S820J	R 613		RS1/16S681J
		(P80MP/XN/UC)	RS1/16S821J	R 614		RS1/16S681J
	R 365	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S820J	R 615		RS1/16S681J
		(P80MP/XN/UC)	RS1/16S821J	R 616		RS1/16S473J
	R 366	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S820J	R 617	(P1Y/XN/ES)	RS1/16S104J
		(P80MP/XN/UC)	RS1/16S821J			
	R 367	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S103J	R 618	(P8MP/XN/UC,P80MP/XN/UC)	RS1/16S104J
		(P80MP/XN/UC)	RS1/16S0R0J	R 619		RS1/16S104J
	R 368	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S103J	R 620	(P80MP/XN/UC)	RS1/16S104J
D		(P80MP/XN/UC)	RS1/16S0R0J	R 621	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S104J
	R 369	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S103J	R 622		RS1/16S104J
		(P80MP/XN/UC)	RS1/16S0R0J			
	R 370	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S103J	R 623		RS1/16S104J
		(P80MP/XN/UC)	RS1/16S0R0J	R 624		RS1/16S104J
	R 371	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S103J	R 625		RS1/16S0R0J
		(P80MP/XN/UC)	RS1/16S0R0J	R 626		RS1/16S0R0J
	R 372	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S103J	R 627		RS1/16S0R0J
		(P80MP/XN/UC)	RS1/16S0R0J			
	R 373		RS1/16S223J	R 628		RS1/16S0R0J
E	R 374		RS1/16S223J	R 629		RS1/16S0R0J
	R 375		RS1/16S223J	R 630		RS1/16S0R0J
	R 376		RS1/16S223J	R 631		RS1/16S104J
	R 377		RS1/16S223J	R 642		RS1/16S104J
	R 378		RS1/16S223J	R 651		RS1/16S102J
	R 379	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S471J	R 652		RS1/16S102J
	R 380	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S471J	R 653		RS1/16S183J
	R 381	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S471J	R 654		RS1/16S473J
	R 382	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S471J	R 655		RS1/16S222J
	R 383	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S471J	R 701		RS1/16S473J
	R 384	(P8MP/XN/UC,P1Y/XN/ES)	RS1/16S471J	R 703		RS1/16S682J
	R 385	(P80MP/XN/UC)	RS1/16S0R0J	R 704		RS1/16S682J
	R 389		RS1/16S102J	R 705		RS1/16S682J
	R 401		RS1/16S681J	R 706		RS1/16S682J
F						
	R 402		RS1/16S681J	R 707		RS1/16S221J
	R 403		RS1/16S681J	R 708		RS1/16S221J
				R 709		RS1/16S221J
				R 710		RS1/16S221J
				R 711		RS1/16S221J
				R 712		RS1/16S221J

5	6	7	8	
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	
R 741	RD1/4PU391J	R 903	RS1/16S332J	A
R 743	RD1/4PU391J	R 904	RS1/16S0R0J	
R 801	RS1/16S104J	R 922	RS1/16S152J	
R 802	RS1/16S104J	R 923	RD1/4PU152J	
R 803	RS1/16S102J	R 924	RS1/16S223J	
R 804	RS1/16S222J	R 925	RS1/16S472J	
R 805	RS1/16S472J	R 931	RS1/16S104J	B
R 806	RS1/16S222J	R 932	RS1/16S473J	
R 807	RS1/16S222J	R 933	RS1/16S103J	
R 808	RS1/16S222J	R 934	RS1/16S473J	
R 809	RS1/16S222J	R 935	RS1/16S472J	
R 810	RS1/16S222J	R 943	RS1/16S103J	
R 811	RS1/16S0R0J	R 951	RS1/16S102J	C
R 812	RS1/16S104J	R 952	RS1/16S472J	
R 813	RS1/16S102J	R 953	RS1/16S472J	
R 815	RS1/16S104J	R 954	RS1/16S153J	
R 816	RS1/16S221J	R 955	RS1/16S104J	
R 818	RS1/16S103J	R 981	RD1/4PU102J	
R 819	RS1/16S122J	R 982	RS1/4SA0R0J	D
R 821	RS1/16S221J	R 987	RS1/16S0R0J	
R 822	RS1/16S221J			
R 823	RS1/16S1R0J			
R 824	RS1/16S473J			
		<u>CAPACITORS</u>		
R 825	RS1/16S473J	C 102	CKSRYB104K16	E
R 826	RS1/16S473J	C 103	CKSRYB102K50	
R 827	RS1/16S104J	C 104	CKSRYB102K50	
R 831	RS1/16S472J	C 131	CCSQCH222J50	
R 832	RS1/16S102J	C 132	CEAL1R0M50	
R 833	RS1/16S472J	C 133	CEAL1R0M50	
R 841	RS1/16S331J	C 134	CKSRYB104K16	F
R 842	RS1/16S331J	C 135	CKSRYB104K16	
R 844	RS1/16S1R0J	C 136	CEAL1R0M50	
R 845	RS1/16S391J	C 137	CEAL1R0M50	
R 846	RS1/16S121J	C 138	CEAL1R0M50	
R 847	RD1/4PU302J	C 139	CEAL1R0M50	
R 848	RD1/4PU302J	C 140	CEJQ470M10	G
R 861	RS1/16S331J	C 141	CKSRYB104K16	
R 862	RS1/16S331J	C 142	CCSQCH222J50	
R 863	RS1/16S331J	C 143	CEALNP4R7M16	
R 864	RS1/16S103J	C 144	CEALNP4R7M16	
R 865	RS1/16S103J	C 145	CEALNP4R7M16	
R 871	RAB4C102J	C 146	CEALNP4R7M16	H
R 872	RD1/4PU391J	C 147	CCSQCH152J50	
R 881	RS1/16S472J	C 148	CEALNP4R7M16	
R 882	RS1/16S2203D	C 149	CEALNP4R7M16	
R 883	RS1/16S3303D	C 150	CCSQCH152J50	
R 884	RS1/16S4702D	C 151	CEALNP4R7M16	
R 885	RS1/16S223J	C 152	CEALNP4R7M16	I
R 886	RS1/16S223J	C 159	CKSRYB474K10	
R 887	RS1/16S3303D	C 160	CKSRYB474K10	
R 888	RS1/16S3303D	C 161	CEJQ100M50	
R 889	RS1/16S1503D	C 171	CKSRYB103K50	
R 890	RS1/16S1503D	C 172	CKSRYB104K16	
R 891	RS1/16S1503D	C 173	CKSRYB104K16	J
R 892	RS1/16S1503D	C 174	CKSRYB104K16	
R 893	RS1/16S1503D	C 175	CKSRYB104K16	
R 894	RS1/16S1503D	C 176	CKSRYB474K10	
R 895	RS1/16S1503D	C 177	CKSRYB474K10	
R 896	RS1/16S1503D	C 178	CCSRCH101J50	
R 902	RS1/16S223J			

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	C 179		CCSRCH101J50	C 369	(P8MP/XN/UC,P1Y/XN/ES)	CKSRYB222K50
	C 201		CFTNA224J50	C 370	(P8MP/XN/UC,P1Y/XN/ES)	CKSRYB222K50
	C 202		CFTNA224J50	C 371	(P8MP/XN/UC,P1Y/XN/ES)	CKSRYB222K50
	C 203		CFTNA224J50	C 372	(P8MP/XN/UC,P1Y/XN/ES)	CKSRYB222K50
B	C 204		CFTNA224J50	C 373		CEAL220M35
	C 205		CEAL330M10	C 401		CKSRYB103K50
	C 206		CEHAR100M16	C 402		CKSRYB103K50
	C 207		CKSQYB225K10	C 403		CEJQ470M10
	C 208		CKSQYB225K10	C 404		CKSRYB103K50
	C 211		CKSRYB472K50	C 405		CEJQ101M10
	C 212		CKSRYB472K50	C 407		CKSYB475K10
	C 213		CKSRYB472K50	C 451		CKSRYB103K50
	C 214		CKSRYB472K50	C 452		CKSRYB103K50
	C 221		CKSRYB103K50	C 453		CEJQ220M25
	C 222		CKSRYB104K25	C 454		CKSYB475K10
	C 223		CKSRYB104K25	C 455		CKSRYB103K50
C	C 241		CQMA332J50	C 456		CKSYB475K10
	C 242		CQMA332J50	C 561		CKSRYB104K25
	C 243	2200μF/25V	CCH1594	C 562		CKSRYB473K25
	C 244	2200μF/25V	CCH1594	C 601		CCSRCH180J50
	C 245		CEHAZL102M16	C 602		CCSRCH220J50
	C 246		CEHAZL102M16	C 603		CEAL470M16
	C 247		CCSRCH270J50	C 604		CKSRYB103K50
	C 249		CKSRYB222K50	C 606		CCSRCH470J50
	C 250		CQMAQ102J50	C 652		CKSRYB105K10
	C 251		CKSRYB332K50	C 653		CKSRYB104K16
	C 252		CKSYB105K25	C 702	470μF/10V	CCH1438
	C 253		CKSYB105K25	C 741		CKSRYB473K16
D	C 254		CCSQCH222J50	C 742		CKSRYB102K50
	C 255		CEJQ101M16	C 743		CEJQ101M16
	C 256		CKSRYB103K50	C 744		CKSRYB473K16
	C 257		CKSRYB103K50	C 745		CEJQ101M10
	C 259		CEHAZL100M50	C 801		CKSRYB473K16
	C 321		CEJQ100M50	C 821		CKSRYB473K25
	C 322		CEJQ220M25	C 832		CCSRCH101J50
	C 323		CEJQ100M50	C 833		CKSRYB473K50
	C 341		CEAL4R7M35	C 834		CKSRYB105K10
	C 342		CEJQ101M16	C 841		CKSRYB104K16
	C 343		CASAQ3R3M16	C 842		CEAL470M16
	C 344		CKSRYB105K10	C 843		CEAL101M10
E	C 345		CKSRYB105K10	C 844		CKSRYB104K16
	C 346		CKSRYB105K10	C 845		CCSRCH331J50
	C 347		CKSYB684K16	C 846		CKSRYB103K50
	C 348		CKSRYB105K10	C 847		CEAL330M25
	C 349		CKSRYB105K10	C 848		CEAL100M25
	C 350		CKSRYB105K10	C 849	4.7μF	CCG1111
	C 351		CEAL100M16	C 861		CKSRYB104K25
	C 352		CKSQYB225K10	C 873		CKSRYB224K10
	C 353		CEJQ330M25	C 874		CKSRYB224K10
	C 354		CEJQ330M25	C 875		CEAT331M10
	C 355	(P8MP/XN/UC,P1Y/XN/ES)	CEJQ330M25	C 876		CKSRYB102K50
	C 356	(P8MP/XN/UC,P1Y/XN/ES)	CEJQ330M25	C 877		CCSRCH101J50
F	C 361		CEJQ100M50	C 878		CCSRCH101J50
	C 362		CEJQ100M50	C 881		CKSRYB103K50
	C 363		CEJQ100M50	C 882		CKSQYB105K16
	C 364		CEJQ100M50	C 883		CKSQYB474K25
	C 365		CEJQ100M50	C 884		CKSQYB474K25
	C 366		CEJQ100M50	C 885		CKSQYB474K25
	C 367	(P8MP/XN/UC,P1Y/XN/ES)	CKSRYB222K50	C 886		CKSQYB474K25
	C 368	(P8MP/XN/UC,P1Y/XN/ES)	CKSRYB222K50	C 887		CKSQYB474K25

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 888			CKSQYB474K25			TH1981	Thermistor		CCX1037		
C 889			CKSQYB474K25			X 1951	Ceramic Resonator 16MHz		CCS1616		
C 890			CKSQYB474K25			S 1901	Push Switch		CSG1155		A
C 901			CEJQ101M10			S 1902	Push Switch		CSG1155		
						S 1903	Switch(SEL/VOL)		CSX1065		
C 902			CKSRYB103K50								
C 903			CKSRYB472K50			S 1921	Push Switch		CSG1155		
C 904	470μF/16V		CCH1331			S 1922	Push Switch		CSG1155		
C 905	470μF/16V		CCH1331			S 1923	Push Switch		CSG1155		
C 921			CEJQ221M10			S 1924	Push Switch		CSG1155		
						S 1925	Push Switch		CSG1155		
C 922			CKSRYB103K50								
C 923			CEJQ101M10			S 1926	Push Switch		CSG1155		
C 924	470μF/16V		CCH1331			S 1927	Push Switch		CSG1155		
C 931			CKSRYB104K25			S 1928	Push Switch		CSG1155		
C 941			CKSQYB105K16			S 1929	Push Switch		CSG1155		B
C 951			CKSRYB104K25			VR1981	Semi-fixed 10kΩ(B)		CCP1229		
C 981			CKSRYB473K50								
							OEL Unit		MXS8202		

B
Unit Number:CWS1389
Unit Name:Switch Unit

S 1	Switch(CLOSE)	CSN1051
S 2	Switch(OPEN)	CSN1052

C
Unit Number:CWM9290
Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1941	IC	S-818A33AUC-BGN
IC 1951	IC	PD5933A
IC 1952	IC	RS-140
IC 1953	IC	PD6469A
Q 1951	Transistor	UMD2N
Q 1952	Transistor	2SC4154-11
Q 1953	Transistor	UMD2N
Q 1981	Transistor	2SC4617
Q 1982	Transistor	2SD1664
D 1901	Diode	DAP202U
D 1902	Diode	DAN202U
D 1921	LED	SML311BBT(PQ)
D 1922	LED	SML311BBT(PQ)
D 1923	LED	SML311BBT(PQ)
D 1924	LED	SML311BBT(PQ)
D 1925	LED	SML311BBT(PQ)
D 1926	LED	SML311BBT(PQ)
D 1927	LED	SML311BBT(PQ)
D 1928	LED	SML311BBT(PQ)
D 1929	LED	SML311BBT(PQ)
D 1930	LED	SML311BBT(PQ)
D 1931	LED	SML311BBT(PQ)
D 1932	LED	SML311BBT(PQ)
D 1933	LED	SML311BBT(PQ)
D 1934	LED	SML311BBT(PQ)
D 1951	Diode	1SS355
D 1952	Diode	UDZS13(B)
D 1953	Diode	DAN202U
L 1903	Inductor	CTF1530
L 1941	Inductor	CTF1530

RESISTORS

R 1901	RS1/16S222J
R 1902	RS1/16S222J
R 1905	RS1/16S822J
R 1906	RS1/16S102J
R 1907	RS1/16S102J
R 1908	RS1/16S222J
R 1909	RS1/16S332J
R 1910	RS1/16S822J
R 1911	RS1/16S473J
R 1912	RS1/16S154J
R 1913	RS1/10S0R0J
R 1914	RS1/10S0R0J
R 1916	RS1/16S103J
R 1921	RS1/16S221J
R 1922	RS1/16S560J
R 1923	RS1/16S221J
R 1924	RS1/16S560J
R 1925	RS1/16S221J
R 1926	RS1/16S560J
R 1927	RS1/16S221J
R 1928	RS1/16S560J
R 1929	RS1/16S221J
R 1930	RS1/16S560J
R 1931	RS1/16S221J
R 1932	RS1/16S560J
R 1933	RS1/16S221J
R 1934	RS1/16S560J
R 1941	RS1/16S222J
R 1951	RS1/16S121J
R 1952	RS1/16S184J
R 1953	RS1/16S2R2J
R 1954	RS1/16S154J
R 1955	RS1/16S473J
R 1956	RAB4C102J
R 1957	RS1/16S103J
R 1958	RAB4C473J
R 1959	RS1/16S473J
R 1960	RAB4C101J
R 1961	RAB4C101J
R 1962	RAB4C101J

Circuit Symbol and No.Part No.Circuit Symbol and No.Part No.**Unit Number: CWX2952****Unit Name: CD CORE UNIT(S10WMA CODE2)**MISCELLANEOUS

IC 201	IC	UPD63761GJ
IC 203	IC	NJM2391DL1-33
IC 301	IC	BA5835FM
IC 501	IC	S-L2980A15MC-C6A
IC 701	IC	PE5423A
IC 703	IC	S-812C33AUA-C2N
Q 101	Transistor	2SB1132
Q 601	Transistor	IMH20
Q 603	Transistor	2SB709A
Q 701	Transistor	UN2111
D 101	Diode	1SS355
D 601	Diode	MA152WA
L 203	Inductor	CTF1389
L 207	Inductor	CTF1389
L 209	Inductor	CTF1389
L 703	Inductor	CTF1389
X 201	Ceramic Resonator 16.934MHz	CSS1603
X 702	Resonator 4.00MHz	CSS1654
S 901	Switch(HOME)	CSN1051
S 902	Switch(CLAMP)	CSN1051
S 903	Spring Switch(DSCSNS)	CSN1052
S 904	Switch(12EJ)	CSN1051
S 905	Switch(8EJ)	CSN1051

RESISTORS

R 101	RS1/10S1R5J
R 102	RS1/10S1R5J
R 103	RS1/10S1R5J
R 104	RS1/10S1R5J
R 105	RS1/10S1R5J
R 107	RS1/16SS0R0J
R 201	RS1/16SS102J
R 202	RS1/16SS333J
R 205	RS1/16SS473J
R 207	RS1/16SS473J
R 209	RS1/16SS473J
R 214	RS1/16SS472J
R 216	RS1/16SS472J
R 218	RS1/16SS472J
R 220	RS1/16SS472J
R 221	RS1/16SS103J
R 222	RS1/16SS103J
R 223	RS1/16SS0R0J
R 224	RS1/16SS0R0J
R 225	RS1/16SS103J
R 226	RS1/16SS393J
R 227	RS1/16SS562J
R 228	RS1/16SS122J
R 229	RS1/16SS472J
R 231	RS1/16SS0R0J
R 232	RS1/16SS122J
R 233	RS1/16SS0R0J
R 240	RS1/16SS0R0J
R 241	RS1/16SS333J
R 242	RS1/16SS0R0J

R 1963
R 1964
R 1965
R 1966
R 1967

RAB4C101J
RAB4C101J
RAB4C101J
RAB4C101J
RAB4C101J

R 1968
R 1969
R 1970
R 1971
R 1972

RAB4C101J
RAB4C101J
RAB4C102J
RS1/16S102J
RS1/16S0R0J

R 1973
R 1974
R 1975
R 1977
R 1981

RS1/16S473J
RS1/16S473J
RS1/16S473J
RS1/16S473J
RS1/16S333J

R 1982
R 1983
R 1984
R 1985
R 1986

RS1/16S683J
RS1/16S393J
RS1/16S392J
RAB4C101J
RS1/16S152J

R 1988
R 1989
R 1991

RS1/16S101J
RS1/16S101J
RS1/16S104J

CAPACITORS

C 1905
C 1908
C 1909
C 1921
C 1922

CKSRYB104K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25

C 1923
C 1924
C 1925
C 1926
C 1927

CKSRYB104K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25

C 1928
C 1929
C 1930
C 1931
C 1932

CKSRYB104K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25

C 1933
C 1934
C 1941
C 1942
C 1943

CKSRYB104K25
CKSRYB104K25
CSZSR4R7M16
CSZSR4R7M10
CKSQYB103K50

C 1944
C 1951
C 1952
C 1953
C 1954

CSZSR4R7M10
CKSYF106Z10
CKSRYB473K50
CKSRYB103K25
CKSRYB103K25

C 1955
C 1957
C 1981
C 1982
C 1983

CKSYF475Z16
CKSRYB103K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25

C 1985

CKSRYB104K25

D

5		7		8	
Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.		
R 243	RS1/16SS333J	R 750	RS1/16SS473J		
R 245	RS1/16SS333J	R 754	RS1/16SS102J		
R 250	RS1/16SS0R0J	R 755	RS1/16SS102J		A
R 256	RS1/16SS0R0J	R 756	RS1/16SS104J		
R 261	RS1/16S0R0J	R 765	RAB4CQ221J		
R 262	RS1/16S0R0J	R 769	RAB4CQ221J		
R 263	RS1/16S0R0J	R 773	RAB4CQ221J		
R 264	RS1/16S0R0J	R 777	RS1/16SS221J		
R 267	RS1/16S0R0J	R 778	RS1/16SS221J		
R 301	RS1/16SS183J	R 779	RS1/16SS221J		
R 302	RS1/16SS822J	R 901	RAB4CQ221J		
R 304	RS1/16SS183J	R 902	RS1/16S0R0J		
R 305	RS1/16SS822J	R 905	RS1/16SS221J		B
R 307	RS1/16SS183J	R 906	RS1/16SS221J		
R 308	RS1/16SS183J	R 908	RS1/16SS0R0J		
R 309	RS1/16SS183J	R 910	RS1/16SS0R0J		
R 310	RS1/16SS183J				
R 501	RS1/16SS0R0J				
R 601	RS1/16S101J				
R 602	RS1/16S101J				
R 603	RS1/16S223J				
R 604	RS1/16S223J				
R 605	RS1/16SS103J				
R 606	RS1/16S0R0J				
R 701	RS1/16S0R0J				
R 702	RS1/16SS0R0J				
R 703	RS1/16SS104J				
R 704	RS1/16SS104J				
R 705	RS1/16SS221J				
R 706	RS1/16SS221J				
R 707	RS1/16SS0R0J				
R 708	RS1/16SS221J				
R 709	RS1/16SS473J				
R 710	RS1/16SS102J				
R 711	RS1/16SS102J				
R 712	RS1/16SS102J				
R 713	RS1/16SS102J				
R 714	RS1/16SS473J				
R 715	RS1/16SS101J				
R 716	RS1/16SS472J				
R 717	RS1/16SS221J				
R 718	RS1/16SS221J				
R 719	RS1/16SS221J				
R 720	RS1/16SS471J				
R 721	RS1/16S0R0J				
R 724	RS1/16S473J				
R 725	RS1/16SS222J				
R 726	RS1/16SS103J				
R 727	RS1/16SS473J				
R 729	RS1/16SS223J				
R 730	RS1/16SS473J				
R 731	RS1/16SS104J				
R 732	RS1/16SS104J				
R 733	RS1/16SS104J				
R 735	RS1/16SS473J				
R 737	RS1/16SS104J				
R 740	RS1/16SS473J				
R 742	RS1/16SS104J				
R 745	RS1/16SS473J				
R 746	RS1/16SS104J				

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
R 750	RS1/16SS473J	R 754	RS1/16SS102J
R 755	RS1/16SS102J	R 756	RS1/16SS104J
R 765	RAB4CQ221J	R 769	RAB4CQ221J
R 773	RAB4CQ221J	R 777	RS1/16SS221J
R 778	RS1/16SS221J	R 779	RS1/16SS221J
R 901	RAB4CQ221J	R 902	RS1/16S0R0J
R 905	RS1/16SS221J	R 906	RS1/16SS221J
R 908	RS1/16SS0R0J	R 910	RS1/16SS0R0J
CAPACITORS			
C 101	CKSSYB104K10	C 102	CKSSYB104K10
C 103	100µF/16V	C 104	CCH1504
C 104	47µF/6.3V	C 105	CCH1506
C 106	CCSSCH101J50	C 107	CKSRYB224K16
C 108	CKSSYB104K10	C 110	CKSSYB104K10
C 201	CKSSYB471K50	C 202	CKSSYB104K10
C 203	CKSSYB104K10	C 204	22µF/6.3V
C 205	CKSSYB104K10	C 207	220µF/4V
C 208	CKSSYB104K10	C 209	CKSSYB104K10
C 216	CKSSYB332K50	C 217	CKSSYB104K10
C 218	CKSSYB223K16	C 219	CKSSYB104K10
C 220	CKSSYB103K16	C 221	CKSSYB104K10
C 222	CCSSCH560J50	C 223	CCSSCH5R0C50
C 224	CKSSYB104K10	C 225	CKSSYB103K16
C 226	CCSSCH680J50	C 227	CCSSCH470J50
C 228	CKSSYB682K25	C 230	CKSSYB104K10
C 232	CKSSYB104K10	C 233	10µF/6.3V
C 234	CCH1470	C 235	220µF/4V
C 237	CKSRYB224K16	C 239	CKSSYB104K10
C 242	CCSSCH330J50	C 246	CKSSYB104K10
C 250	CKSRYB102K50		

Circuit Symbol and No.

Part No.

A

C 251		CKSRYB102K50
C 260		CKSSYB104K10
C 301		CKSSYB221K50
C 302		CKSSYB221K50
C 303		CKSSYB472K25
C 304		CKSSYB103K16
C 305	100μF/16V	CCH1504
C 306		CKSSYB104K10
C 307		CKSSYB104K10
C 501		CKSRYB224K16

B

C 505		CKSQYB475K6R3
C 601		CCSRCH102J50
C 602		CCSRCH102J50
C 603	4.7μF/25V	CCH1568
C 604	4.7μF/25V	CCH1568

C

C 701		CKSSYB104K10
C 702		CKSSYB471K50
C 703		CKSSYB103K16
C 704	4.7μF/25V	CCH1592
C 706		CKSSYB104K10
C 707		CKSSYB104K10
C 712		CKSRYB224K16
C 713		CKSSYB104K10
C 714		CKSSYB104K10
C 716		CKSSYB103K16
C 717		CCSSCH180J50
C 718		CCSSCH180J50
C 720		CKSQYB225K10
C 722		CKSRYB105K10
C 903		CKSSYB471K50
C 906		CKSRYB224K16
C 907		CKSSYB103K16
C 910		CKSQYB225K10

Miscellaneous Parts List

D


	Pickup Unit(P9.9MP3)(Service)	CXX1805
M 1	Motor Unit(SPINDLE)	CXB6007
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933
M 871	Motor Unit(FLAP)	CXC2204

E

F

6. ADJUSTMENT

6.1 CONNECTION DIAGRAM

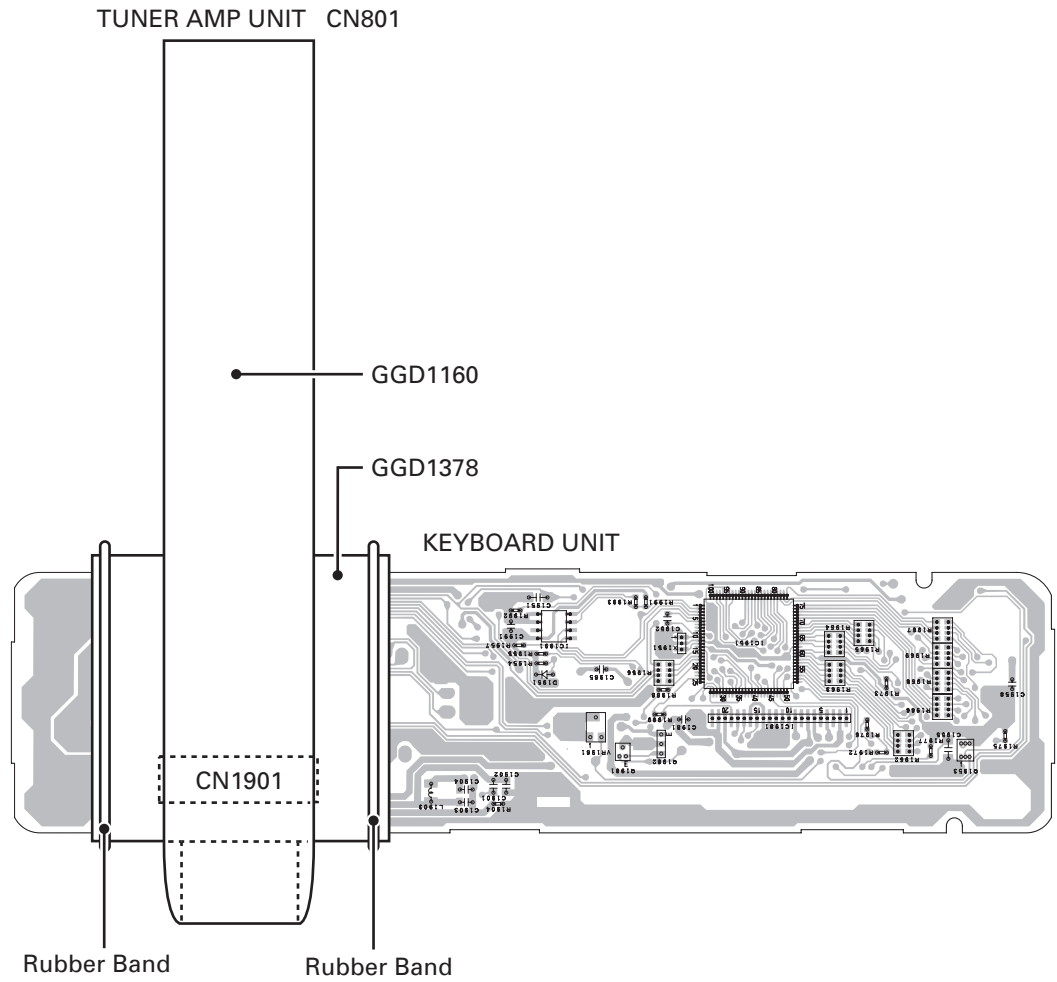

6.2 OEL UNIT ADJUSTMENT



● Adjustment point

KEYBOARD UNIT (SIDE B)

Digital Multi-Meter

VR1981 TP5
TP6

CN1901

<When the OEL Unit has been replaced>

1. Use VR1981 to adjust the resistance between TP5 and TP6 to 2.3 k Ω .

1) Cautions on adjustments

• In this product the single voltage (3.3V) is used for the regulator. The reference voltage is the REFO1 (1.65V) instead of the GND.

If you should mistakenly short the REFO1 with the GND during adjustment, accurate voltage will not be obtained, and the servo's misoperation will apply excessive shock to the pickup. To avoid such problems:

a. Do not mix up the REFO1 with the GND when connecting the (-) probe of measuring instruments. Especially on an oscilloscope, avoid connecting the (-) probe for CH1 to the GND.

b. In many cases, measuring instruments have the same potential as that for the (-) probe. Be sure to set the measuring instruments to the floating state.

c. If you have mistakenly connected the REFO1 to the GND, turn off the regulator or the power immediately.

• Before mounting and removing filters or leads for adjustment, be sure to turn off the regulator.

• For stable circuit operation, keep the mechanism operating for about one minute or more after the regulator is turned on.

• In the test mode, any software protections will not work. Avoid applying any mechanical or electrical shock to the mechanism during adjustment.

• The RFI and RFO signals with a wide frequency range are easy to oscillate. When observing the signals, insert a resistor of 1k ohms in series.

• The load and eject operation is not guaranteed with the mechanism upside down. If the mechanism is blocked due to mistaken eject operation, reset the product or turn off and on the ACC to restore it.

2) Test mode

This mode is used to adjust the CD mechanism module.

• To enter the test mode.

While pressing the LIST and EQ keys at the same time, reset.

• To exit from the test mode.

Turn off the ACC and back up.

Notes:

a. During ejection, do not press any other keys than the EJECT key until the loaded disc is ejected.

b. If you have pressed the (→) key or (←) key during focus search, turn off the power immediately to protect the actuator from damage caused by the lens stuck.

c. For the TR jump modes except 100TR, the track jump operation will continue even if the key is released.

d. For the CRG move and 100TR jump modes, the tracking loop will be closed at the same time when the key is released.

e. When the power is turned off and on, the jump mode is reset to the single TR (91), the RF amp gain is set to 0dB, and the auto-adjustment values are reset to the default settings.

Flow Chart


A

[KEY]	[LIST]+[EQ]+Reset or [LIST]+[EQ]+BU+ACC
Contents	Test Mode In
Display	

Key of the head unit

Key of the remote control unit

B

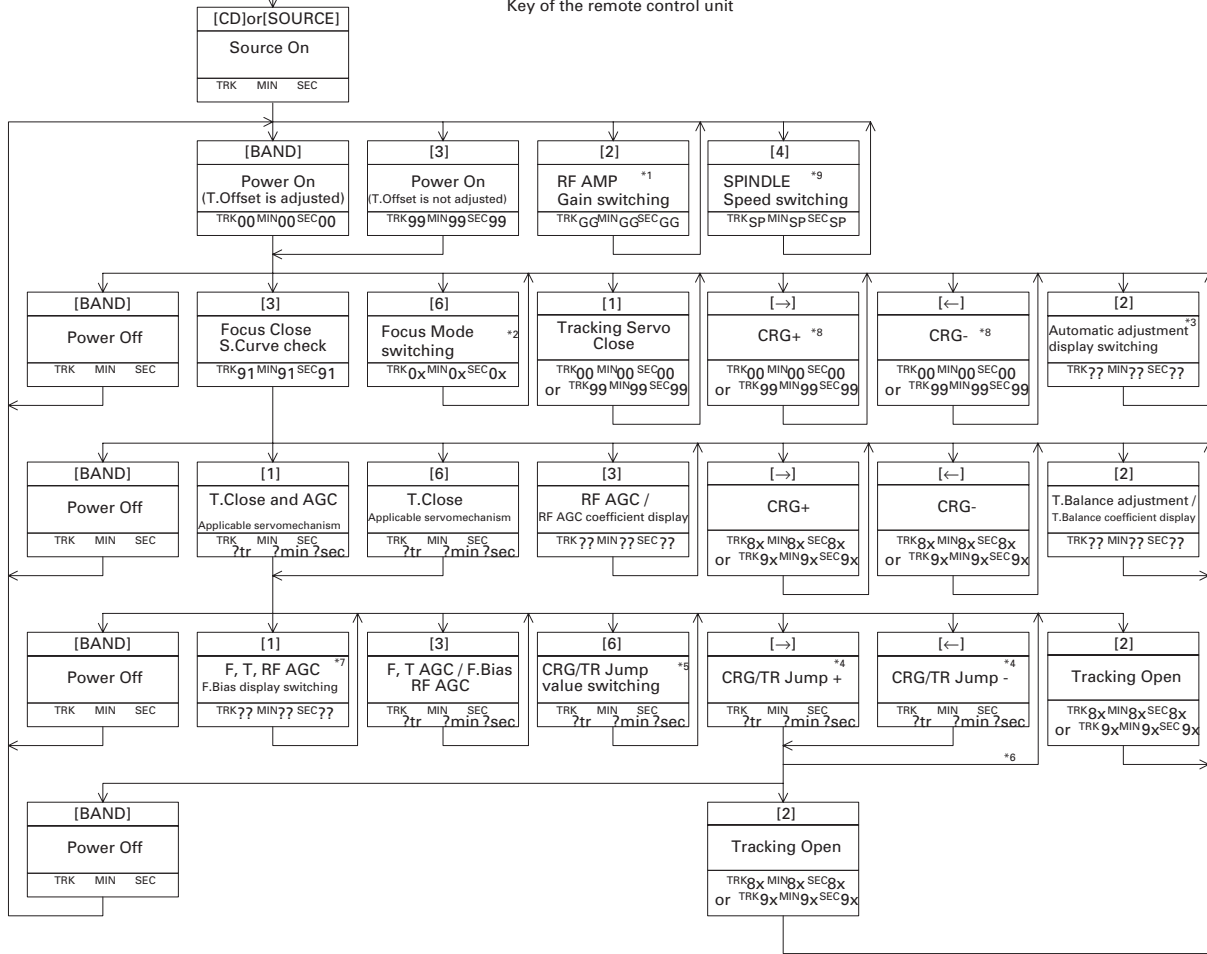

C

D

- *1) TYP → -6dB → -12dB
TRK MIN SEC → TRK 06 MIN 06 SEC 06 → TRK 12 MIN 12 SEC 12
- *2) Focus Close → S.Curve cck setting → F EQ measurement setting
TRK 00 MIN 00 SEC 00 → TRK 01 MIN 01 SEC 01 → TRK 02 MIN 02 SEC 02
(TRK 99 MIN 99 SEC 99)
- *3) F.Offset Display → T.Offset Display → Switch to the order of the original display
- *4) 1TR / 32TR / 100TR
- *5) Single TR → 32TR → 100TR → CRG Move
9x(8x) : 91(81) 92(82) 93(83) 94(84)
- *6) Only at the time of CRG Move, 100TR Jump
- *7) TRK/MIN/SEC → F.AGC → T.AGC → F.Bias → RF AGC
- *8) CRG motor voltage = 2[V]
- *9) TYP(1X) → 2X → 1X
TRK MIN SEC → TRK 22 MIN 22 SEC 22 → TRK 11 MIN 11 SEC 11

As for the double speed (2x), audio output cannot be supported.

TYP(2X) → 1X → 2X
TRK MIN SEC → TRK 11 MIN 11 SEC 11 → TRK 22 MIN 22 SEC 22

F

[Key]	Operation
	Test Mode
[BAND]	Power On/Off
[→]	CRG + / TR Jump + (Direction of the external surface)
[←]	CRG - / TR Jump - (Direction of the internal surface)
[1]	T.CLS and AGC and Applicable servomechanism / AGC, AGC display switching
[2]	RF Gain switching / Offset adjustment display / T.Balance adjustment / T.Open
[3]	F.Close, S.Curve / Rough Servo and RF AGC / F, T, RF AGC
[4]	SPDL 1X/2X switching As for the double speed (2x), audio output cannot be supported.
[5]	Error Rate measurement 1st-ON : ERR count beginning(30Sec) 2nd-ON : BER display data[%]
[6]	F. Mode switching / Tracking Close / CRG, TR Jump switching

6.4 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT



• Note :

The grating angle of the PU unit cannot be adjusted after the PU unit is changed. The PU unit in the CD mechanism module is adjusted on the production line to match the CD mechanism module and is thus the best adjusted PU unit for the CD mechanism module. Changing the PU unit is thus best considered as a last resort. However, if the PU unit must be changed, the grating should be checked using the procedure below.

• Purpose :

To check that the grating is within an acceptable range when the PU unit is changed.


• Symptoms of Mal-adjustment :

If the grating is off by a large amount symptoms such as being unable to close tracking, being unable to perform track search operations, or taking a long time for track searching.

• Method :

- | | |
|-----------------------|----------------------------|
| • Measuring Equipment | • Oscilloscope, Two L.P.F. |
| • Measuring Points | • E, F, REFO1 |
| • Disc | • TCD-782 |
| • Mode | • TEST MODE |

CD CORE UNIT(S10WMACODE2)

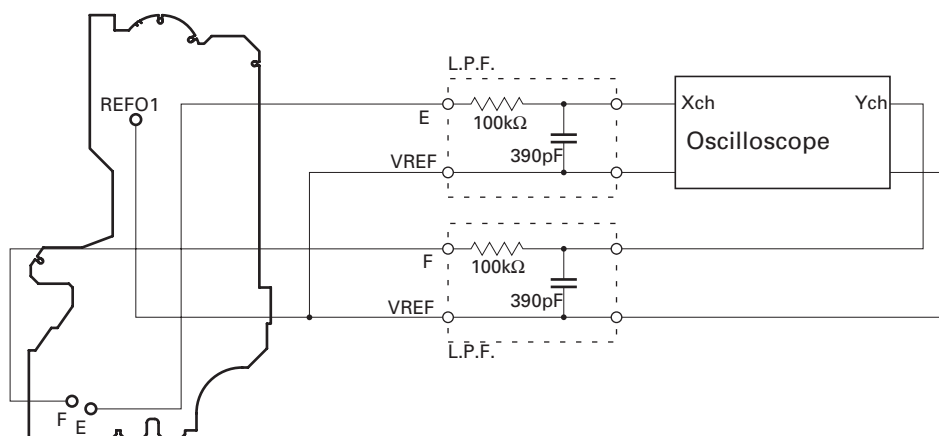

• Checking Procedure

1. In test mode, load the disc and switch the 3V regulator on.
2. Using the → and ← buttons, move the PU unit to the innermost track.
3. Press key 3 to close focus, the display should read "91". Press key 2 to implement the tracking balance adjustment the display should now read "81". Press key 3. The display will change, returning to "81" on the fourth press.
4. As shown in the diagram above, monitor the LPF outputs using the oscilloscope and check that the phase difference is within 75°. Refer to the photographs supplied to determine the phase angle.
5. If the phase difference is determined to be greater than 75° try changing the PU unit to see if there is any improvement. If, after trying this a number of times, the grating angle does not become less than 75° then the mechanism should be judged to be at fault.

• Note

Because of eccentricity in the disc and a slight misalignment of the clamping center the grating waveform may be seen to "wobble" (the phase difference changes as the disc rotates). The angle specified above indicates the average angle.

• Hint

Reloading the disc changes the clamp position and may decrease the "wobble".


Grating waveform

Ech → Xch 20mV/div, AC

Fch → Ych 20mV/div, AC


A

0°

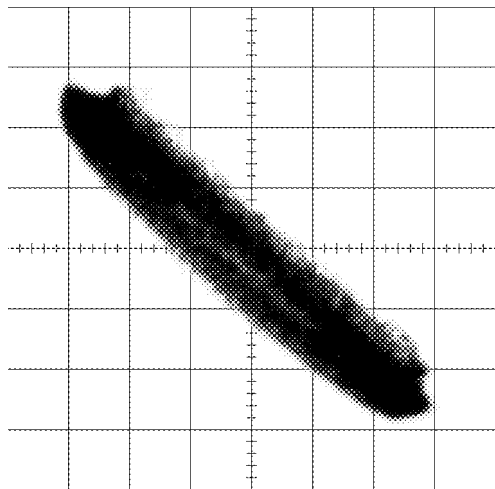


B

30°

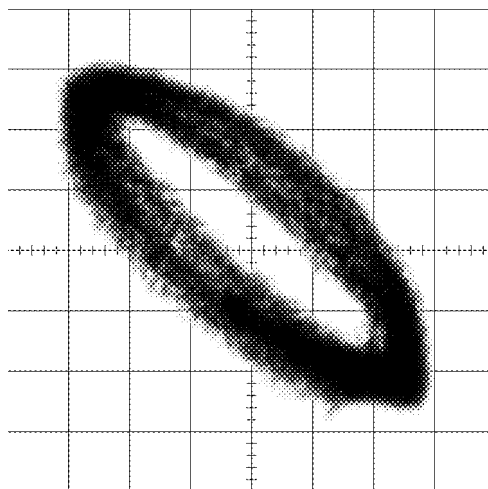


C

45°

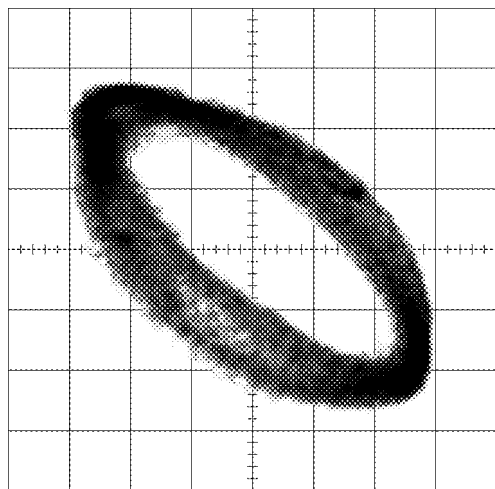


D

60°

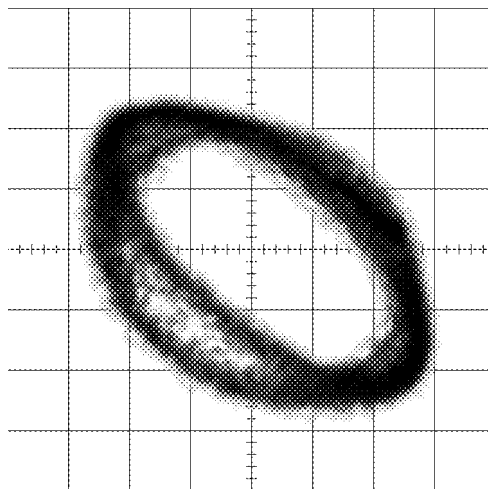


E

75°

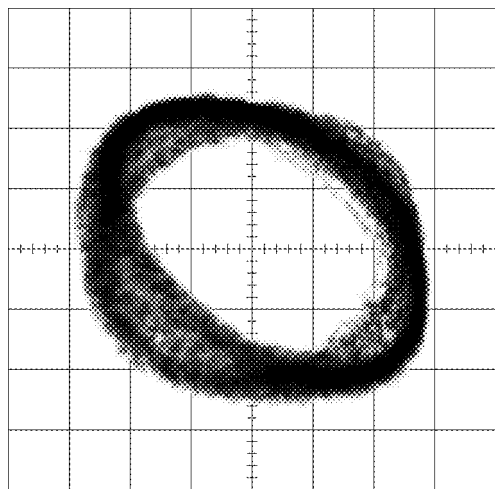

F

90°

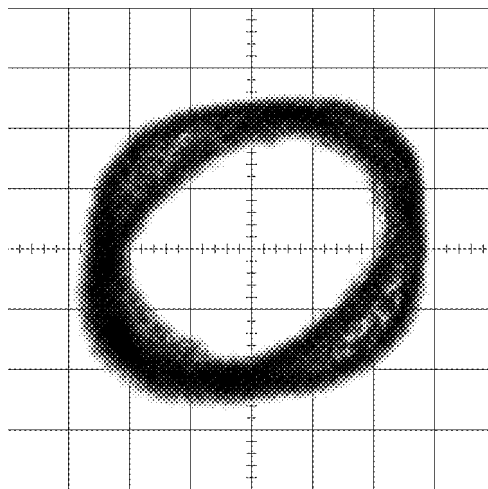

6.5 ERROR MODE

● Error Messages

If a CD is not operative or stopped during operation due to an error, the error mode is turned on and cause(s) of the error is indicated with a corresponding number. This arrangement is intended at reducing nonsense calls from the users and also for facilitating trouble analysis and repair work in servicing.

(1) Basic Indication Method

1) When SERRORM is selected for the CSMOD (CD mode area for the system), error codes are written to DMIN (minutes display area) and DSEC (seconds display area). The same data is written to DMIN and DSEC. DTNO remains in blank as before.

2) Head unit display examples

Depending on display capability of LCD used, display will vary as shown below. xx contains the error number.

8-digit display	6-digit display	4-digit display
ERROR-xx	ERR-xx	E-xx

(2) Error Code List

Code	Class	Displayed error code	Description of the code and potential cause(s)
10	Electricity	Carriage Home NG SERVO LSI Com- munication Error	CRG can't be moved to inner diameter. CRG can't be moved from inner diameter. → Failure on home switch or CRG move mechanism. Communication error between microcomputer and SERVO LSI.
11	Electricity	Focus Servo NG	Focusing not available. → Stains on rear side of disc or excessive vibrations on REWRITABLE.
12	Electricity	Spindle Lock NG Subcode NG	Spindle not locked. Sub-code is strange (not readable). → Failure on spindle, stains or damages on disc, or excessive vibrations. A disc not containing CD-R data is found. Turned over disc are found, though rarely. CD signal error.
17	Electricity	Setup NG	AGC protection doesn't work. Focus can be easily lost. → Damages or stains on disc, or excessive vibrations on REWRITABLE.
30	Electricity	Search Time Out	Failed to reach target address. → CRG tracking error or damages on disc.
44	Electricity	ALL Skip	Skip setting for all track. (CD-R/RW)
50	Mechanism	CD On Mech Error	Mechanical error during CD ON. → Defective loading motor, mechanical lock and mechanical sensor.
A0	System	Power Supply NG	Power (VD) is ground faulted. → Failure on SW transistor or power supply (failure on connector).

Remarks: Mechanical errors are not displayed (because a CD is turned off in these errors).

Unreadable TOC does not constitute an error. An intended operation continues in this case.

Upper digits of an error code are subdivided as shown below:

1x: Setup relevant errors, 3x: Search relevant errors, Ax: Other errors.

6.6 OEL SCREENSAVER STUDIO LKA TO LKD APPLICATION

A

"OEL Screensaver Studio" is an application to create OEL display image file. The customer write the image file on a CD-R disc and install it to car audio. This function is similar to PC link-kit (CD-PC1).

"OEL Screensaver Studio" is available to the public on the PIONEER Home Page.

This software (GGV1169) is added LKA to LKD file conversion function to original "OEL Screensaver Studio".

● How to check:

1. Set up GGV1169 application.

2. Confirm the LKA file (ent_disp.lka) is converted to LKD file correctly or not.

Please see a Readme.txt in the GGV1169 or help file of "OEL Screensaver Studio" for more information.

B

6.7 SYSTEM MICROCOMPUTER TEST PROGRAM



● PCL output

In the normal operation mode (with the detachable panel installed, the ACC switched ON, the standby mode cancelled), shift the STTEST1 (Pin 86) terminal to H.

The clock signal is output from the PCL1 terminal (Pin 37).

The frequency of the clock signal is 312.500kHz that is one 32nd of the fundamental frequency.

C

The clock signal should be $312.500\text{kHz} \pm 13\text{Hz}$.

If the clock signal is out of the range, the X'tal (X601) should be replaced with new one.

D

E

F

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DISASSEMBLY

● Removing the Case (not shown)

1. Remove the Case.

● Removing the CD Mechanism Module (Fig.1)

1 Remove the four screws.

Disconnect the connector and then remove the CD Mechanism Module.

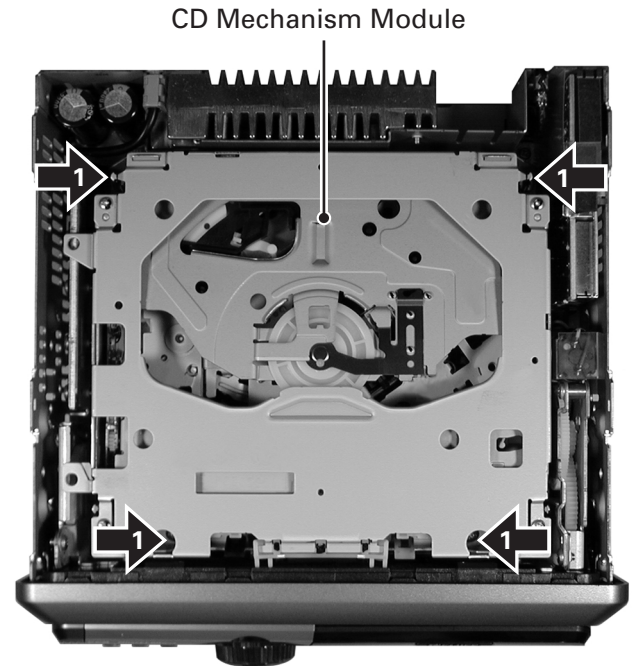


Fig.1

● Removing the Grille Assy (Fig.2)

1 Remove the four screws.

Disconnect the connector and then remove the Grille Assy.

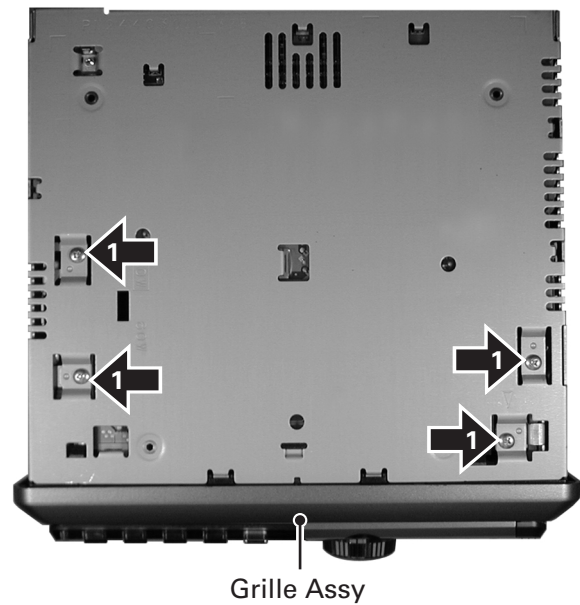


Fig.2

● Removing the Tuner Amp Unit (Fig.3)

- A
- ➡ **1** Remove the screw.
 - ➡ **2** Remove the screw.
 - ➡ **3** Straighten the tabs at three locations indicated.
 - ➡ **4** Remove the screw and then remove the Tuner Amp Unit.
- B
- C

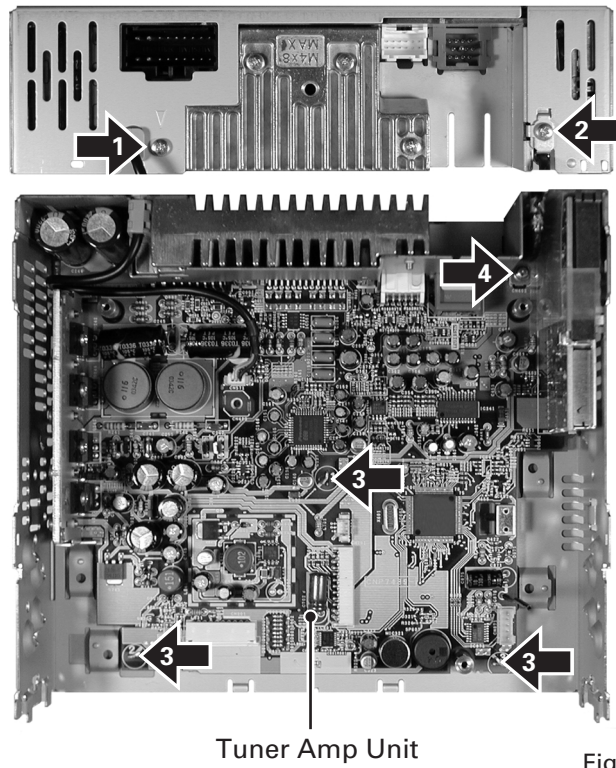


Fig.3

● Removing the D242 and D244 (Fig.4)

- D
- ➡ **1** Remove the seven screws.
 - ➡ **2** Remove the solder and then remove the D242 and D244.
- E

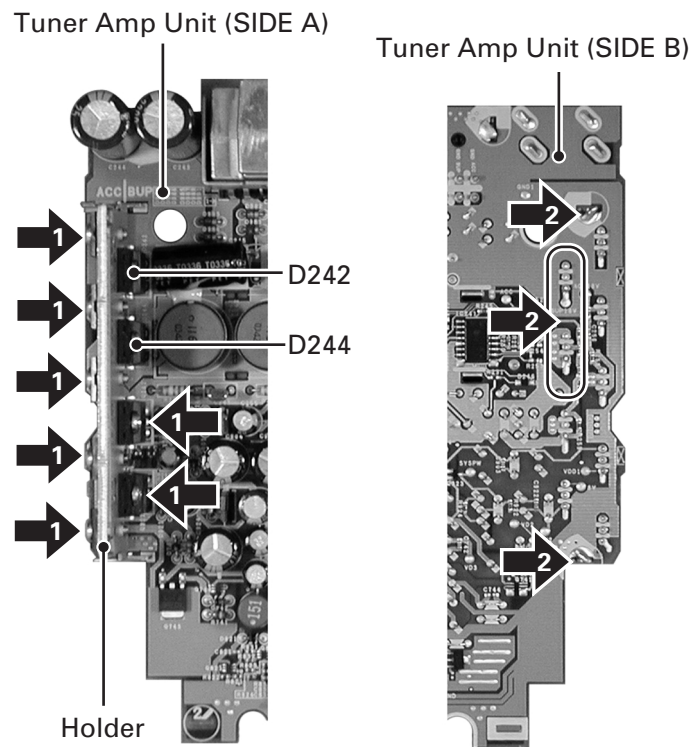


Fig.4

● Disconnecting the Flexible PCB (Fig.5)

- ➡ **1** Release the two latches.

Tweezers are inserted in the hole of Flexible PCB and Flexible PCB is removed from CN801.

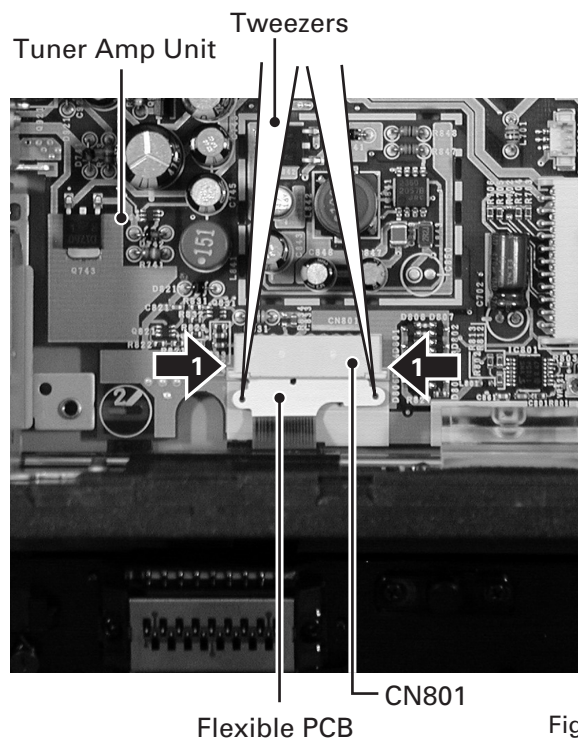


Fig.5

● Service Precaution

On the internal surface of the Holder(CND2028), 2 types of spacers(CNM9141, CNM9142) are affixed for insulation with the OEL unit. When ordering parts to replace the Holder, please order the 2 types of spacers along with the Holder.

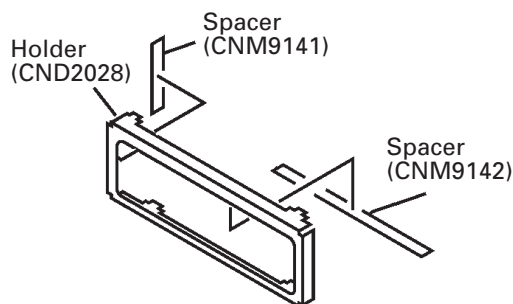


Fig.6

When you attach Case(CNC8138) in Tuner Amp Unit, please attach in Tuner Amp Unit, without also forgetting Insulator(CNM6249). If you forget to attach Insulator in Tuner Amp Unit, there is a possibility that the DC/DC Converter Section may short-circuit.


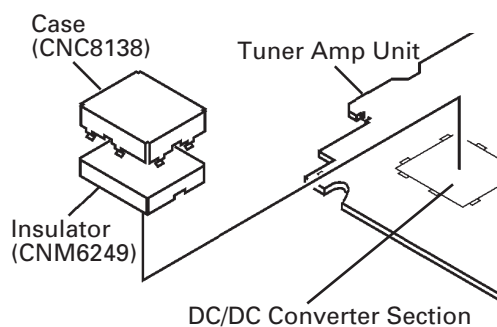


Fig.7

● How to hold the Mechanism Unit

1. Hold the top and bottom frame.
2. Do not squeeze top frame's front portion too tight, because it is fragile.

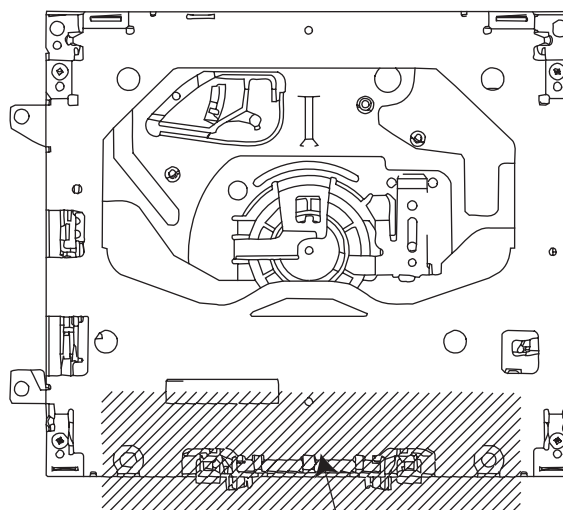


Do not squeeze.

● Removing the Upper and Lower Frames

1. With a disc clamped, remove the four springs (A), the two springs (B), the two springs (C), and the four screws.
2. To remove the upper frame, open it on the fulcrum A.
3. While lifting the carriage mechanism, remove the three dampers.
4. With the frames removed, insert the connectors coming from the main unit and eject the disc.



Caution: Before installing the carriage mechanism in the frames, be sure to apply some alcohol to the dampers and set the mechanism to the clamp mode.

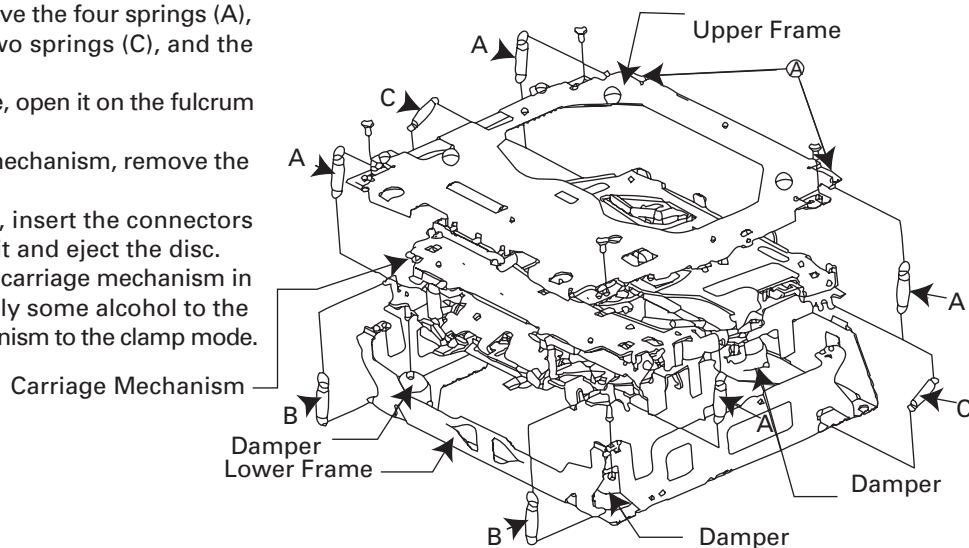


● Removing the Pickup Unit

1. Apply shorting solder to the Pickup flexible cable.
Disconnect the cable.
2. Set the mechanism to the clamp mode.
3. Remove the lead wires from the inner holder.
4. Remove the washer, styling holder, change arm, and pickup lock arm.
5. While releasing from the hook of the inner holder, lift the end of the feed screw.

Caution: In assembling, move the planet gear to the load/eject position before setting the feed screw in the inner holder.

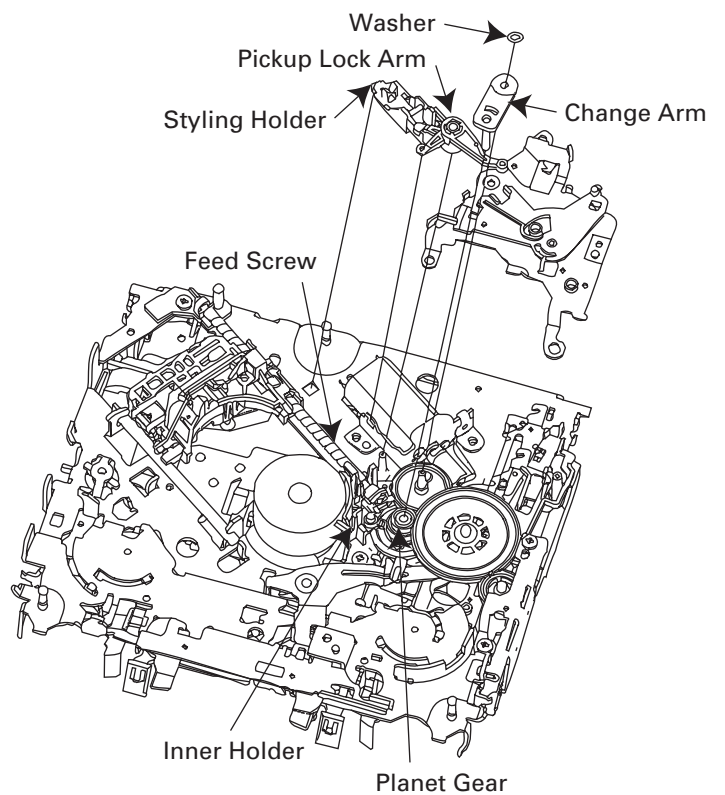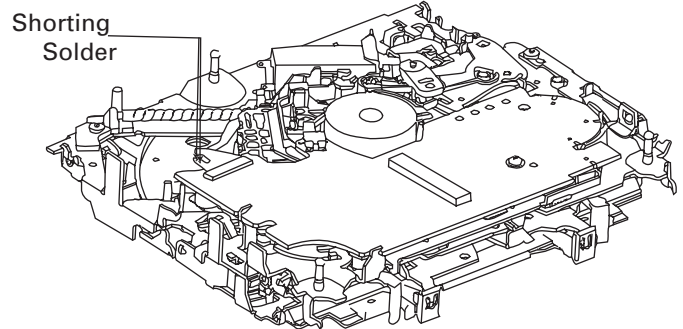

7.1.2 CONNECTOR FUNCTION DESCRIPTION

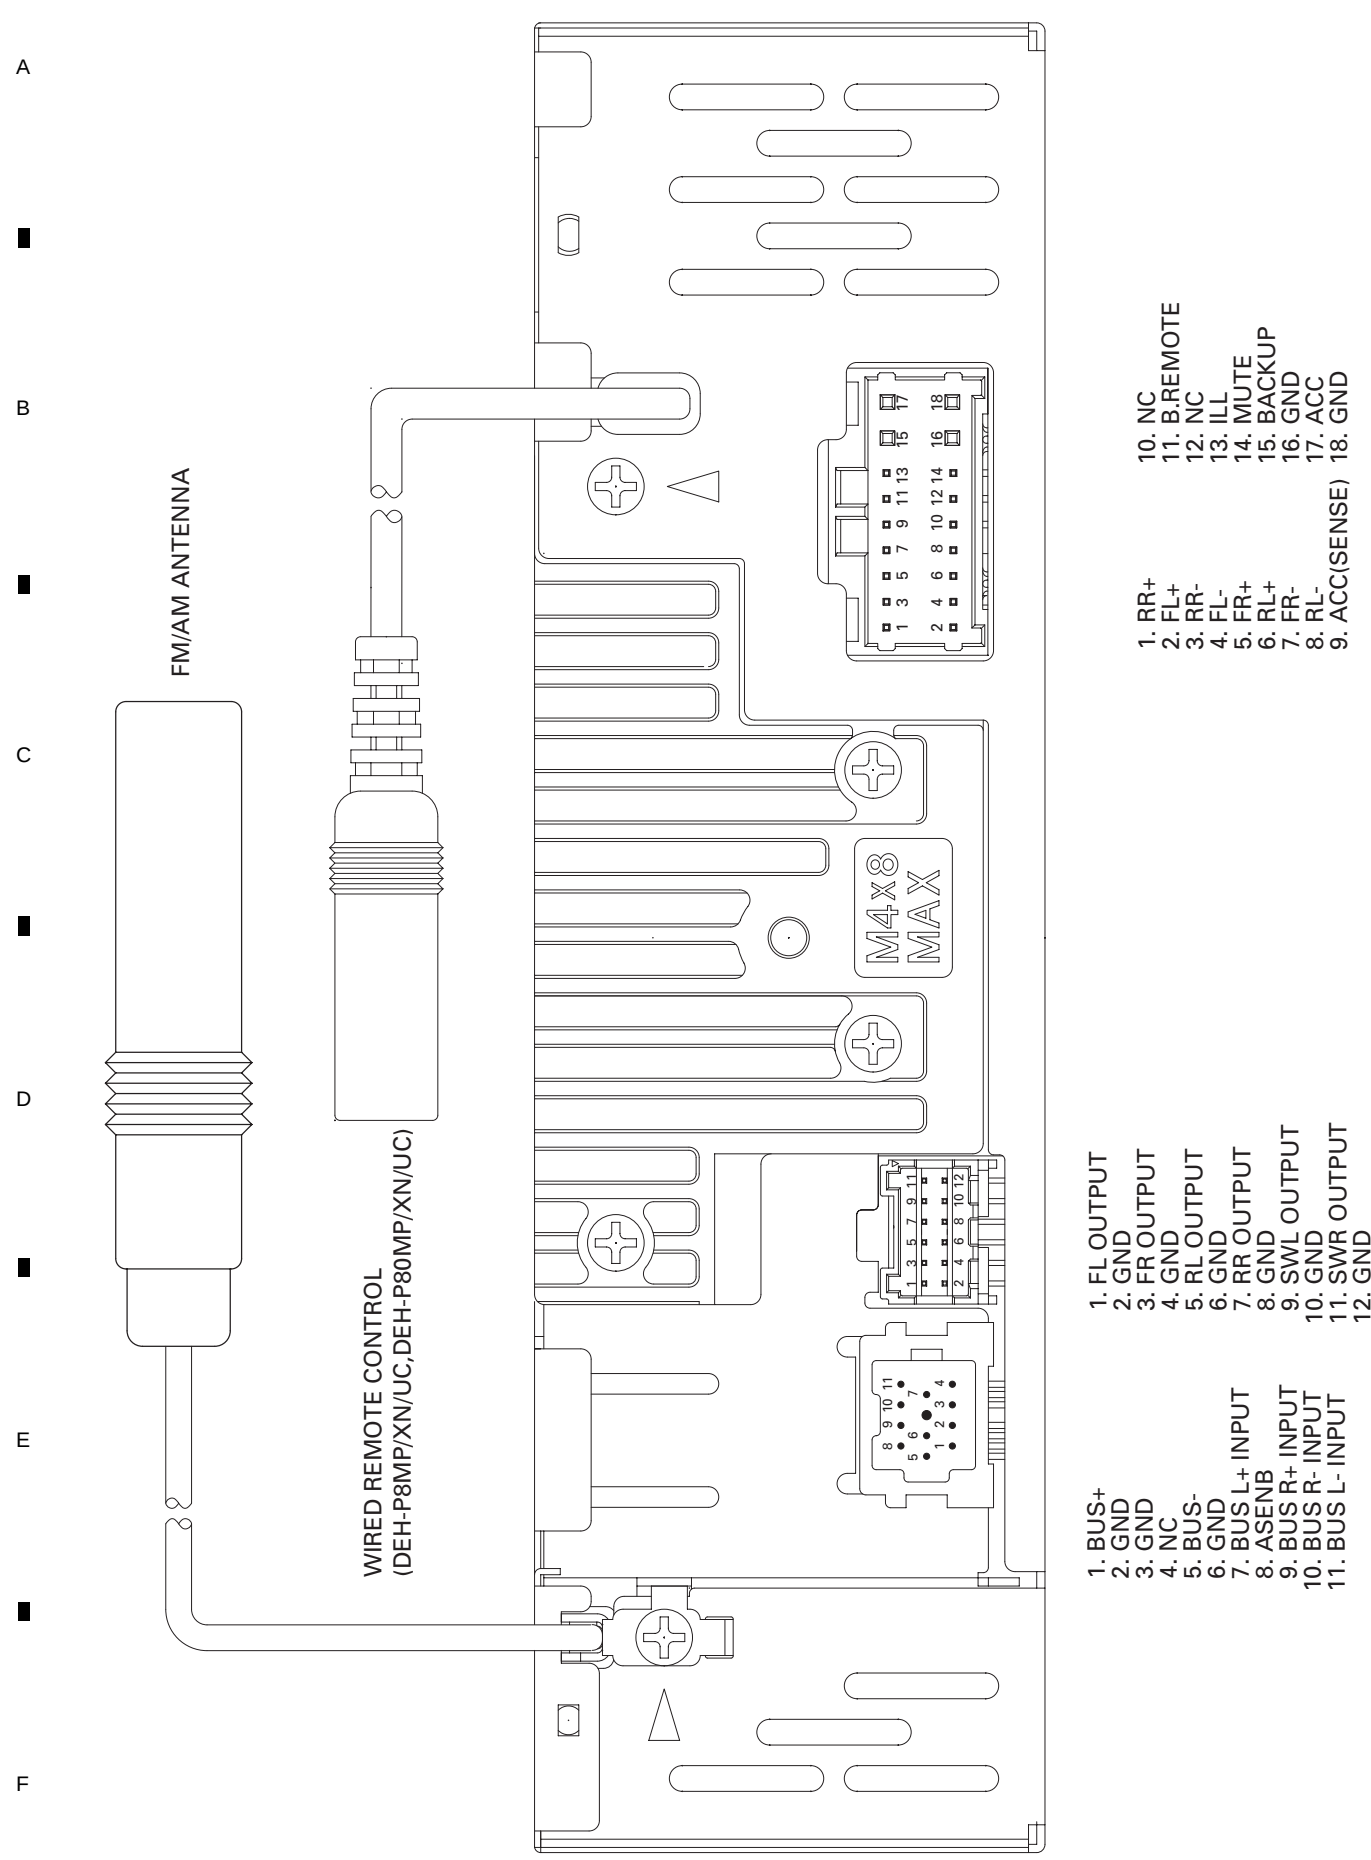

7.2 IC

PD5925A
HA12240FP
UPC494GS
PAL008A

PD5933A
PD6469A
PE5423A
UPD63761GJ

S-812C33AUA-C2N
BA5835FM
S-L2980A15MC-C6A


● Pin Functions(PD5925A)

Pin No.	Pin Name	I/O	Function and Operation
1	SYSPW	O	System power control output
2	ICERROR	I	Power IC error sense input
3	ACCMON	O	ACC monitor output
4	SEL60W	I	Power amp 60W/40W select input
5	NC		Not used
6	BYTE		External data bus width change input
7	CNVSS		Processor mode change input
8	TELIN	I	Telephone mute input
9	NC		Not used
10	RESET	I	Reset input
11	XOUT	O	Clock output
12	VSS		GND
13	XIN	I	Clock input
14	VDD		Power supply input
15	NMI		Not used
16	NC		Not used
17	NC		Not used
18	NC		Not used
19	RX2	I	IP-BUS : Data input 2
20	OELPW	O	OEL power supply output
21	NC		Not used
22	PEE	O	PEE sound output
23	NC		Not used
24	BRST	O	P-BUS : Reset output
25	BRXEN	I/O	P-BUS : Reception enable input / output
26	BSRQ	I	P-BUS : Service request input
27	RX	I	IP-BUS : Data input
28	TX	O	IP-BUS : Data output
29	BSO	O	P-BUS : Data output
30	BSI	I	P-BUS : Data input
31	BSCK	O	P-BUS : Clock output
32	NC		Not used
33	DPDT	O	Display data output
34	KYDT	I	Key data input
35, 36	ROT1, 0	I	Rotary encoder pulse input1, 0
37	PCL	O	Output for clock adjustment
38	SWVDD	O	GRILLE : Chip enable output
39	NC		Not used
40	FLPILM	O	Inside of flap illumination output
41	ILMPW	O	Illumination output
42	EJTIN	I	Eject key input
43	GDTC1	O	Picture rewriting output 1
44	NC		Not used
45	NC		Not used
46	NC		Not used
47	GDTC2	O	Picture rewriting output 2
48, 49	NC		Not used
50	FOPNSW	I	Flap open sense input
51	FCLSSW	I	Flap close sense input
52	FLPCLS	O	Flap motor close output
53	FLPOPEN	O	Flap motor open output
54	FLPPW	O	Flap motor driver power ON/OFF output
55	RECEIVE	O	Not used
56	CSENSOUT	O	Flap open/close output


Pin No.	Pin Name	I/O	Function and Operation
57	EMUTE	O	Electronic volume : Mute output
58,59	NC		Not used
60	VDD		Power supply input
61	NC		Not used
62	VSS		GND
63	NC		Not used
64	KEYD	I	Wired remote control input
65	PADA	I	Power amp : Data input
66	PACK	I/O	Power amp : Clock input / output
67	DALMON	O	For consumption current reduction output
68	NC		Not used
69	TUNPCE2	O	TUNER : Chip enable output(EEPROM)
70	TUNPCE1	O	TUNER : Chip enable output(PLL)
71	ROMCS	O	ROM correction chip select output
72	ASENS	I	ACC sense input
73	BSENS	I	Back up sense input
74	ROMCK	O	ROM correction clock output
75	ROMDATA	I/O	ROM correction data input/output
76	VST	O	Electronic volume : Strobe output
77	VDT	O	Electronic volume : Data output
78	VCK	O	Electronic volume : Clock output
79	IPPW	O	IPBUS : Driver power supply control output
80	ASENBO	O	IPBUS : Slave ACC sense output
81	ISENS	I	Illumination sense input
82,83	MODEL1,0	I	Model select input
84	SYSPW2	O	Power IC power control output
85	MUTE	O	System mute output
86	TESTIN	I	Test program input
87	CROSSKEY	I	Cross key data input
88	DDCHK	I	Temperature sense input for power amp DC/DC converter
89	KEYAD	I	Wired remote control input
90	LVLINR	I	Level indicator R channel input
91	DSSENS	I	Flap close sense input
92	LVLINL	I	Level indicator L channel input
93	ASLIN	I	ASL input
94	AVSS		A/D converter power supply terminal
95	SL	I	TUNER : Signal level input
96	VREF		A/D converter reference voltage
97	AVCC		A/D converter power supply input terminal
98	TUNPDI	I	TUNER : PLL communication data input
99	TUNPDO	O	TUNER : Data output(PLL)
100	TUNPCK	O	TUNER : Clock output(PLL)

* PD5925A


HA12240FP

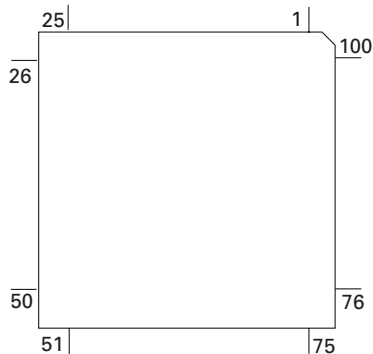


IC's marked by * are MOS type.
Be careful in handling them because they are very liable to be damaged by electrostatic induction.

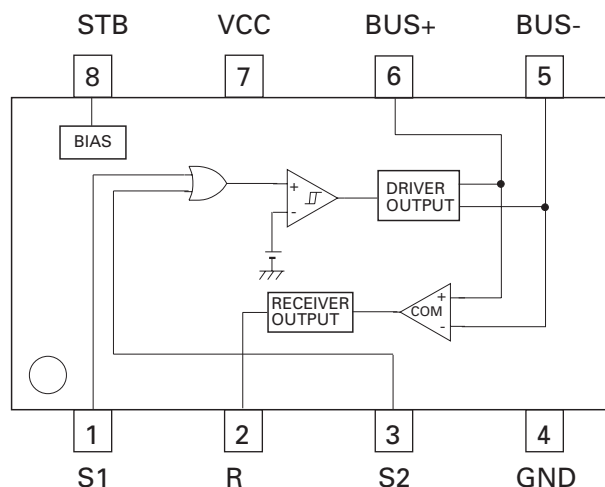

UPC494GS
● Pin Layout

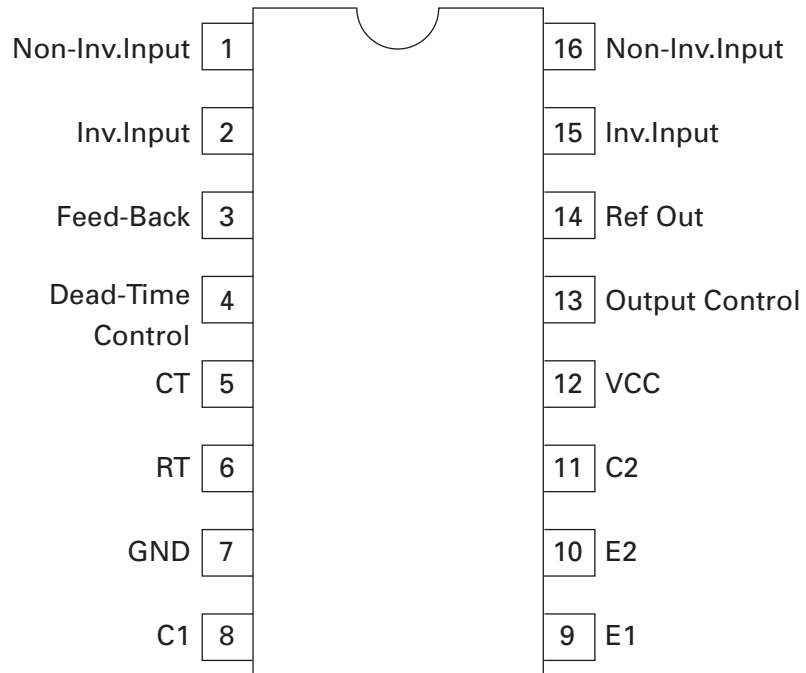

● Block Diagram

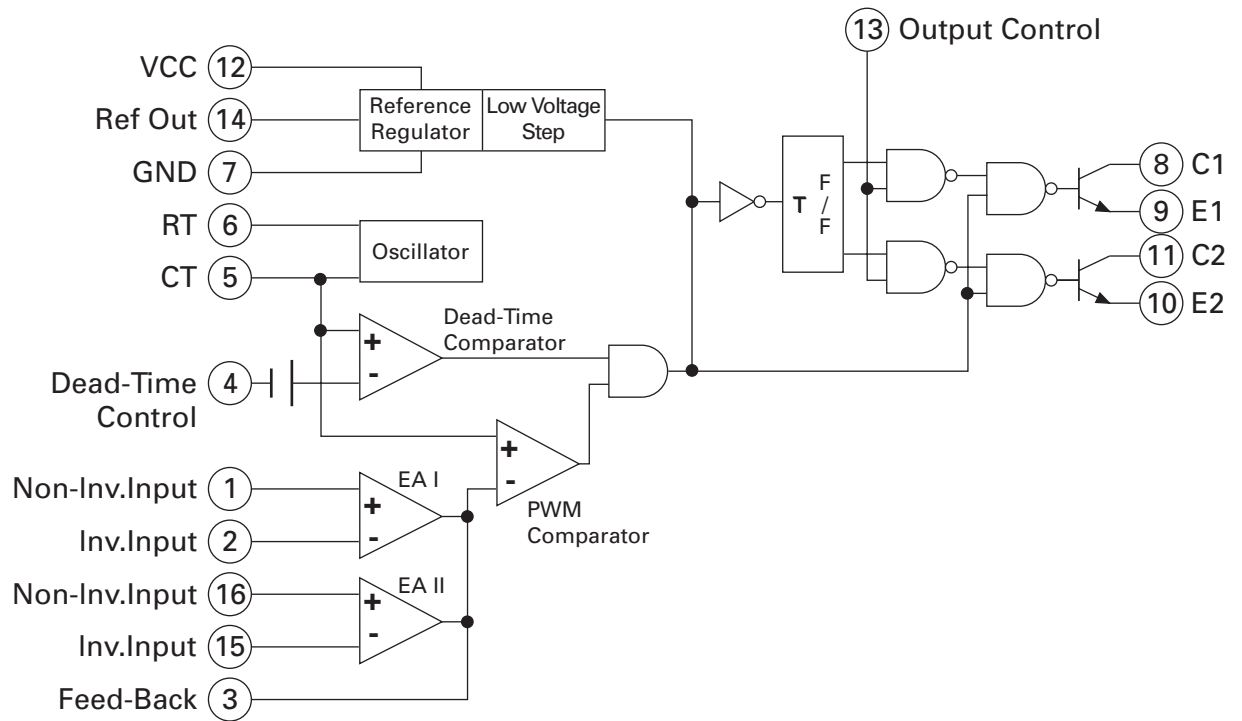

PAL008A

● Pin Layout

A


B

C


D

E

F

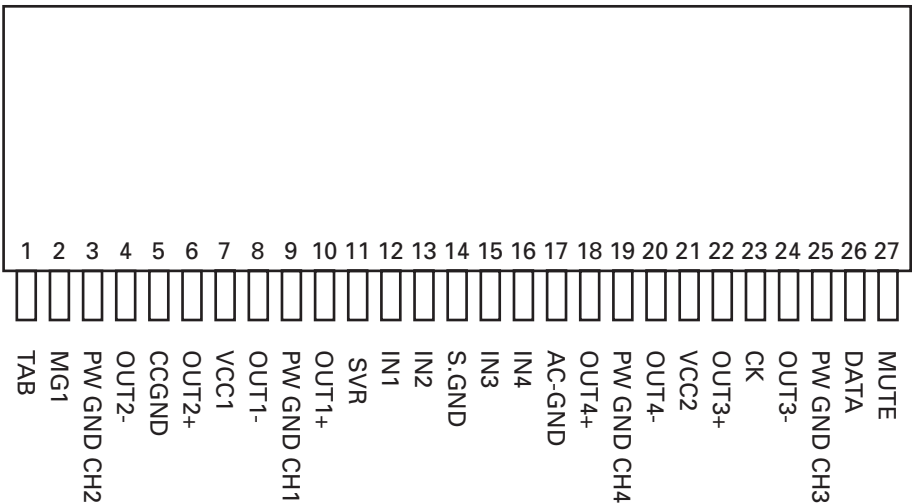


● Block Diagram

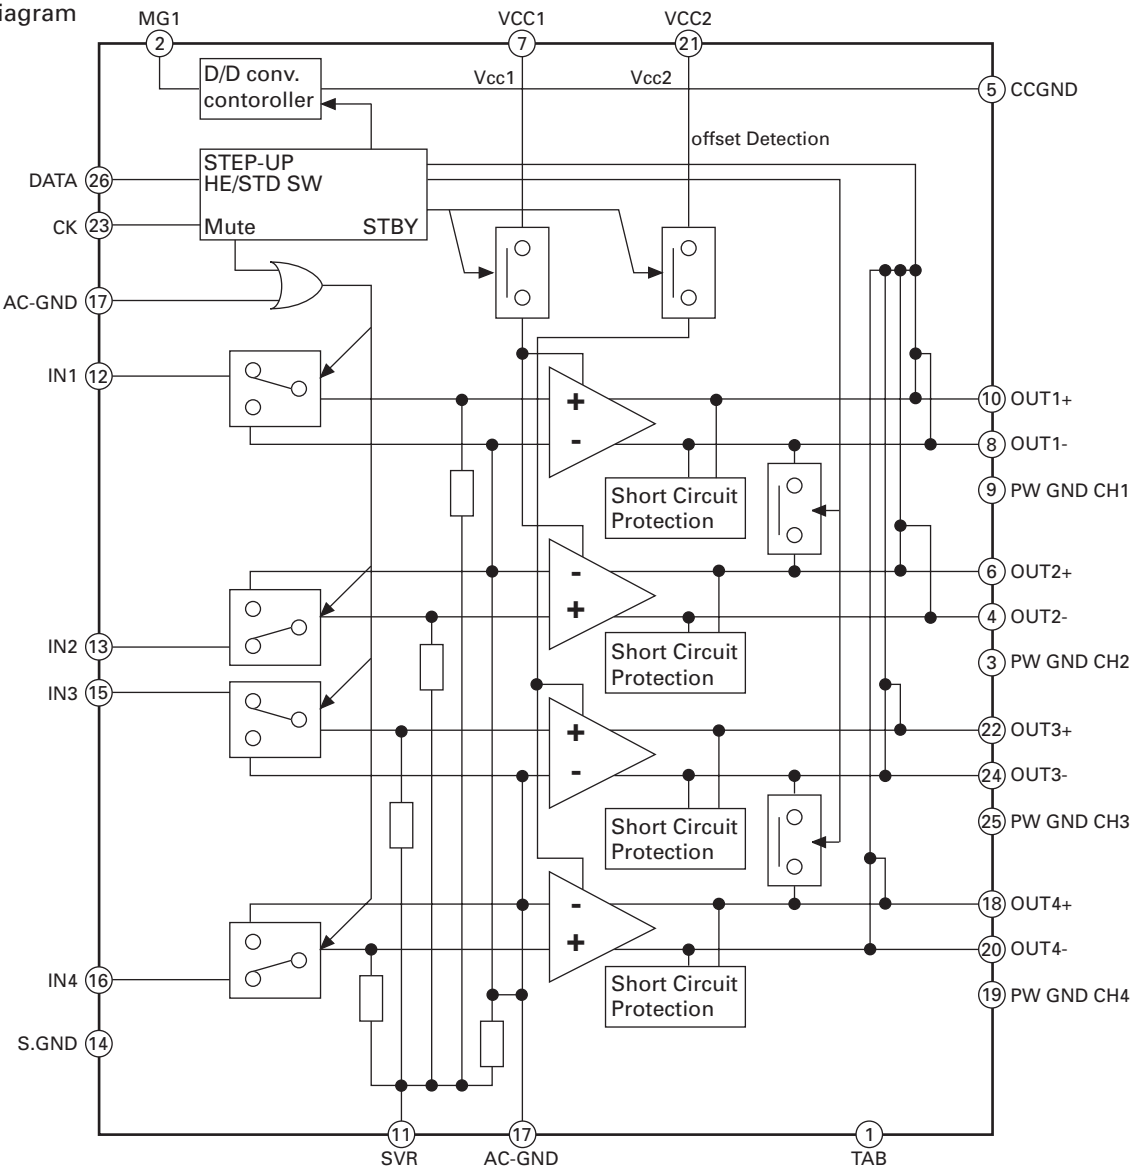


Pin Functions(PD5933A)

Pin No.	Pin Name	I/O	Function and Operation
1-4	NC	O	Not used
5	REM	I	Remote control reception input
6	BYTE	I	GND connection
7	CNVSS	I	Processor select input
8,9	NC		Not used
10	RESET	I	Reset input
11	XOUT	O	Clock output
12	VSS		GND
13	XIN	I	Clock input
14	VDD		Power supply input
15	NMI		Not used
16-18	KD1-KD3	I	Key data input
19	NC		Not used
20	CKC	O	Cathode driver pulse output
21-23	NC		Not used
24	LS	O	Line synchronous signal output
25	NC		Not used
26	CKD	O	Data transfer and driver clock output
27	DPDT	I	Display data input
28	KYDT	O	Key data output
29	D1_L	O	Display data MSB output
30	NC		Not used
31	CLK1	I	UART1 clock input
32	NC		Not used
33	D0_L	O	Display data LSB output
34	NC		Not used
35	CLK0	I	UART0 clock input
36	NC		Not used
37	RDY	O	Not used Pull up
38	NC		Not used
39	HOLD	I	Hold input
40,41	NC		Not used
42	RD	O	Read strobe output
43	NC		Not used
44	WR	O	Not used OPEN
45-48	CS3-CS0	O	External ROM chip select output
49	A19	O	Address bus 19 output
50	NC		Not used
51-59	A17-A9	O	Address bus 17-9 output
60	VDD		Power supply input
61	A8	O	Address bus 8 output
62	VSS		GND connection
63-69	A7-A1	O	Address bus 7-1 output
70	NC		Not used
71-86	D15-D0	I/O	Data bus 15-0 input / output
87-89	KS1-KS3	O	Key strobe output
90-92	NC		Not used
93	FLSTBY	O	Not used
94	AVSS		GND connection
95	FL12ON		Not used OPEN
96	VREF		GND connection
97	AVCC		VCC connection
98	FLSTBY	O	Not used OPEN
99-100	NC		Not used

* PD5933A

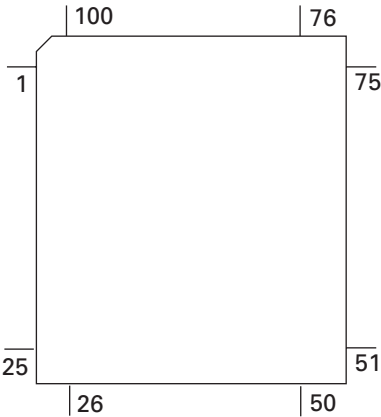

* PD6469A

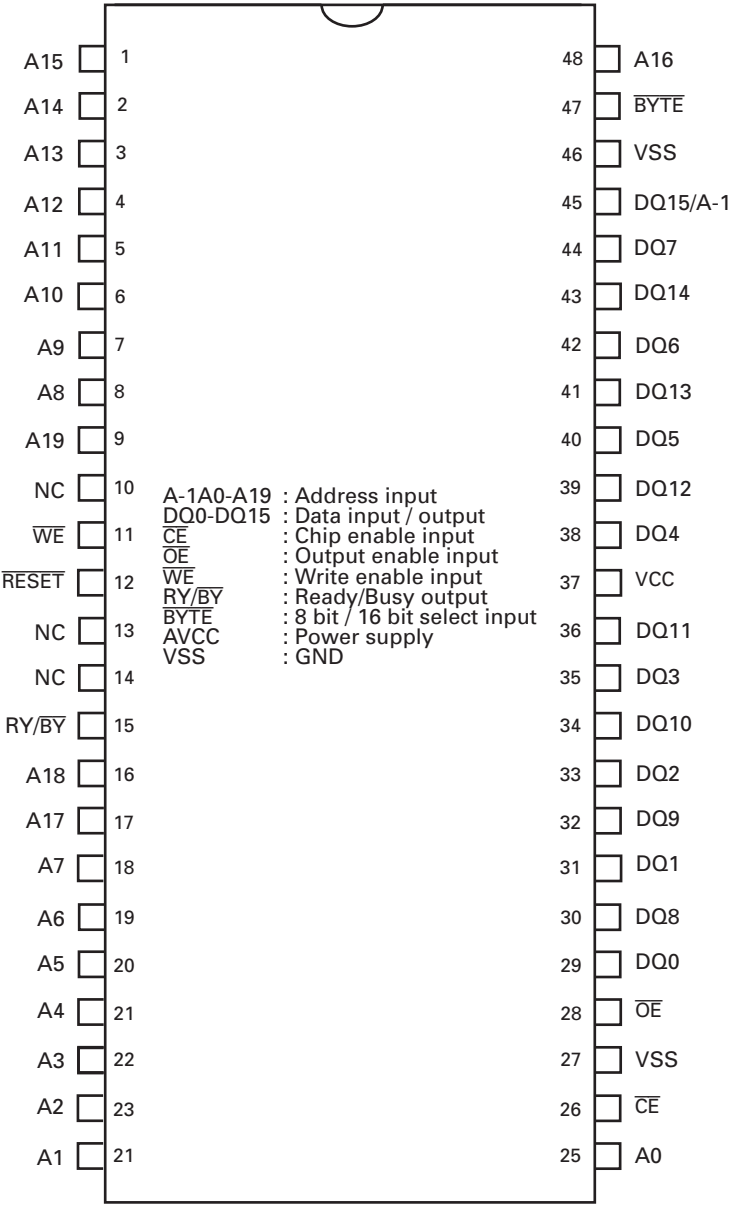

Pin Functions(PE5423A)

Pin No.	Pin Name	I/O	Format	Function and Operation
1	AVREF			A power supply Positive power supply(5V)
2	AVSS			A power supply GND
3	RFOK	O	C	Output of state of RFOK
4	CLAMP	I		CLAMP SW sense input
5	EVDD			E power supply Positive power supply
6	PWM			For changer(PWM)
7	NC			Not used
8	IC/FLMOD0			IC : VSS direct connection/FLMOD0 : Pull-down
9	VDD			Positive power supply(5V)
10	REGC			Connected to the capacity stabilizing output of the regulator
11	VSS			GND
12	X1	I		Oscillator connection for mainclock
13	X2			Oscillator connection for mainclock
14	RESET	I		System reset input
15	XT1	I		Connected to the oscillator for subclock (connected to VSS via the resistor)
16	XT2			Connected to the oscillator for subclock(Open)
17	PULLDOWN	I		Connected to EVDD or EVSS via the resistor
18	EJSW	I		Eject key input
19	XINT	I		CD LSI interruption signal input
20	NC			Not used
21	BRST	I		P-Bus reset input
22	BSI	I		P-Bus serial data input
23	BSO	O	C	P-Bus serial data output
24	BSCK	I/O	/C	P-Bus serial clock input/output
25	FTXD	O	C	For flash rewriting(transmitted signal)
26	FRXD	I		For flash rewriting(received signal)
27	BRXEN	I/O	/C	It is possible to receive P-Bus
28	BSRQ	I/O	/C	P-Bus service request demand
29	DSPOK	I		DSP microcomputer initialization OK input
30	DSCSNS(S903)	I		Disc state sense input
31	8EJ(S905)	I		Input of detection of 8 cm disc ejection
32	12EJ(S904)	I		Input of detection of 12 cm disc ejection
33	EVSS			E power supply GND
34	EVDD			E power supply Positive power supply
35, 36	SRAMLEVEL0, 1	O	C	SRAM level meter output
37	EMPH	O	C	Emphasis information output
38	EMPH	O	C	Emphasis information output
39-42	NC			Not used
43	ADENA	O	C	A/D reference voltage supply control output
44	LRCKOK	O	C	(DOUT mute output)
45	SRAMLEVEL2	O	C	SRAM level meter output
46	CD3VON	O	C	CD +3.3V power supply control output
47	CONT	O	C	Servo driver power supply control output
48	XRST	O	C	CD LSI reset control output
49	VDCONT	O	C	VD power supply control output
50	ROMDATA	I/O	/C	E2PROM data input/output
51	ROMCS	O	C	E2PROM chip selection output
52	ROMCK	O	C	E2PROM clock output
53	LOEJ	O	C	The direction change output of LOAD/EJECT
54	CLCONT	O	C	Driver input change output
55	CDMUTE	O	C	CD mute control output
56-58	INT			For changer(Interruption at the edge)
59	XCS	O	C	CD LSI chip selection output
60	NC			Not used
61	XWAIT	I		CD LSI write control signal output
62	CLKOUT	O	C	Internal system clock output(Open)
63	LOCK	I		Spindle lock input
64	NC			Not used
65	XWRITE	O		CD LSI write control signal output


A

Pin No.	Pin Name	I/O	Format	Function and Operation
66	NC			Not used
67	XREAD	O		CD LSI read control signal output
68	XASTB	O		CD LSI address strobe output
69	BVSS			B power supply GND
70	BVDD			B power supply Positive power supply
71-86	AD0-15	I/O	/C	Address/data Bus 0-15
87-90	NC			Not used
91-93	A/D			For changer(A/D)
94	CSENS	I		Flap closing sense input
95	TYPE_A/D	I		CD-DA analog/digital output change setup
96	TESTIN	I		Chip check test program starting input
97	HOME	I		Home SW sense input
98	TEMP			Temperature information sense input
99	VDSSENS			VD power supply short sense input
100	NC			Not used

B

* PE5423A

C

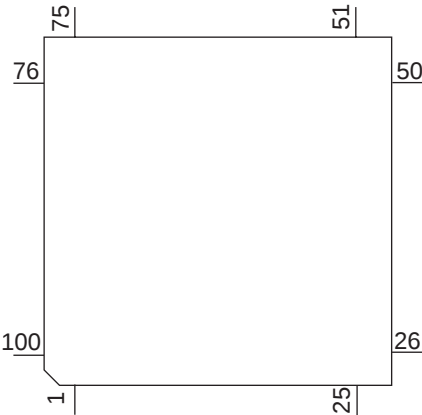

Format	Meaning
C	CMOS

D

E

F



Pin Functions(UPD63761GJ)

Pin No.	Pin Name	I/O	Function and Operation
1	D.VDD		Power supply for digital circuits
2	D1.GND		GND for 1.6V digital circuits
3	RESET	I	Input of reset
4-8	AB12-8	I	Address bus 12-8 from the microcomputer
9-16	AD7-0	I/O	Address/data bus 7-0 to the microcomputer
17	$\overline{CS}$	I	Chip selection
18	ASTB	I	Address strobe
19	$\overline{READ}$	I	Control signals(read)
20	$\overline{WRITE}$	I	Control signals(write)
21	WAIT	O	Control signals(wait)
22	INTQ	O	Interruption signals to the external microcomputer
23, 24	IFMODE0, 1	I	Switching the microcomputer I/F 0, 1
25	D1.VDD		Power supply for 1.6V digital circuits
26	DA.VDD		Power supply for DAC
27	ROUT	O	Output of audio for the right channel
28	DA.GND		GND for DAC
29	REGC		Connected to the capacitor for band gap
30	DA.GND		GND for DAC
31	LOUT	O	Output of audio for the left channel
32	DA.VDD		Power supply for DAC
33	X.VDD		Power supply for the crystal oscillator
34	XTAL	I	Connected to the crystal oscillator(16.9344MHz)
35	$\overline{XTAL}$	O	Connected to the crystal oscillator(16.9344MHz)
36	X.GND		Ground for the crystal oscillator
37	VDDREG15		Control of 1.6V regulator
38	PWMSW0	I	Setup 0 for PWM output(SD, MD)
39-41	TEST3-1	I	Connected to GND
42	PWMSW1	I	Setup 1 for PWM output(FD, TD)
43	TESTEN	I	Connected to GND
44	D1.GND		GND for 1.6V digital circuits
45	DIN	I	Input of audio data
46	DOUT	O	Output of audio data
47	SCKIN	I	Clock input for audio data
48	SCKO	O	Clock output for audio data
49	LRCKIN	I	Input of LRCK for audio data
50	LRCK	O	Output LRCK for audio data
51	$\overline{XTALEN}$	I	Permission to oscillate 16.9344MHz
52	D1.VDD		Power supply for 1.6V digital circuits
53	RFCK/HOLD	O	Output of RFCK/HOLD signal
54	WFCK/MIRR	O	Output of WFCK/MIRR signal
55	PLCK	O	Output of PLCK
56	LOCK/RFOK	O	Output of LRCK/Output of RFOK
57	C1D1/C8M	O	Information on error correction/C8M : 8MHz
58	C1D2/C16M	O	Information on error correction/C16M : 16MHz
59	C2D1/RMUTE	O	Information on error correction/Mute for Rch
60	C2D2/LMUTE	O	Information on error correction/Mute for Lch
61	C2D3/SHOCK	O	Information on error correction/Detection of vibration
62	D1.GND		GND for 1.6V digital circuits
63	C33M	O	Output of 33.8688MHz(CLK for SDRAM)
64	(RCS)	O	DRAM $\overline{CS}$
65	RA11	O	Output of DRAM address 11
66	(CKE)	O	Output of DRAM CKE
67	$\overline{RAS}$	O	Output of DRAM $\overline{RAS}$
68	$\overline{CAS0}$ (LDQM)	O	Output of DRAM lower $\overline{CAS}$ (LDQM)
69	$\overline{CAS1}$ (UDQM)	O	Output of DRAM upper $\overline{CAS}$ (UDQM)
70	$\overline{WE}$	O	Output of DRAM $\overline{WE}$
71	OE(CAS)	O	Output of DRAM OE(CAS)
72	D.GND		Ground for digital circuits
73-88	RDB0-15	I/O	Input/output of DRAM data0-15
89-99	RA0-10	O	Output of DRAM address0-10

Pin No.	Pin Name	I/O	Function and Operation
100	D.VDD		Power supply for digital circuits
101	FD+	O	Output of focus drive PWM +
102	FD-	O	Output of focus drive PWM -
103	TD+	O	Output of tracking drive PWM +
104	TD-	O	Output of tracking drive PWM -
105	SD+	O	Output of thread drive PWM +
106	SD-	O	Output of thread drive PWM -
107	MD+	O	Output of spindle drive PWM +
108	MD-	O	Output of spindle drive PWM -
109	REFOUTSV	O	REFOUT for servo
110	AD.VDD		Power supply for ADC
111	EFM	O	Output of EFM signals
112	ASY	I	Input of asymmetry
113	ATEST	O	Analog tests
114	RFI	I	Input of RF
115	AD.GND		Ground for the analog system
116	AGCO	O	Output of RF
117	C3T	O	Connection to the capacitor for detecting 3T
118	AGCI	I	Input of AGC
119	RFO	O	Output of RF(AGC)
120, 121	EQ2, 1	I	Equalizer 2, 1
122	RF2-	I	Reversal input of RF2
123	RF-	I	Reversal input of RF
124	A.GND		Ground for the analog system
125	A	I	Input of A
126	C	I	Input of C
127	B	I	Input of B
128	D	I	Input of D
129	F	I	Input of F
130	E	I	Input of E
131	VREFIN	I	Input of reference voltage
132	A.VDD		Power supply for the analog system
133	REFOUT	O	Output of reference voltage
134	REFC	I	Connected to the capacitor for output of REFOUT
135	FE-	I	Reversal input of FE
136	FEO	O	Output of FE
137	ADIN	I	Input of FE, TE A/D converter
138	TE-	I	Reversal input of TE
139	TEO	O	Output of TE
140	TE2	O	TE2
141	TEC	I	TEC
142	LD	O	Output of LD
143	PD	I	Input of PD
144	D.GND		Ground for digital circuits

* UPD63761GJ


* S-812C33AUA-C2N

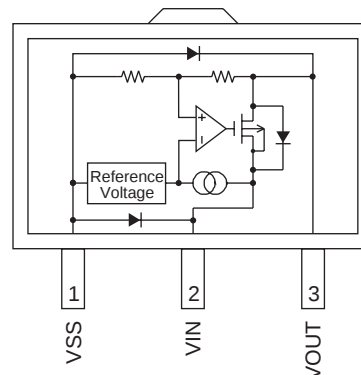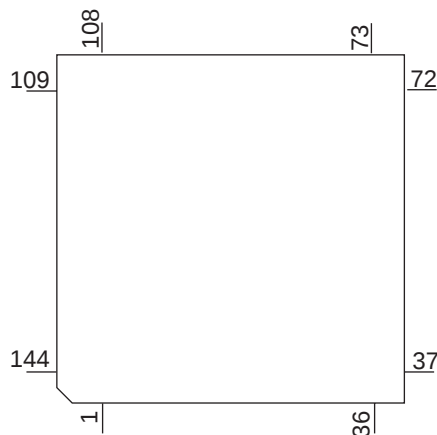


● Pin Functions(BA5835FM)

Pin No.	Pin Name	Function and Operation
1	VR	Input pin for reference voltage
2	OPIN2(+)	Input pin for non-inverting input for CH2 preamplifier
3	OPIN2(-)	Input pin for inverting input for CH2 preamplifier
4	OPOUT2	Output pin for CH2 preamplifier
5	OPIN1(+)	Input pin for non-inverting input for CH1 preamplifier
6	OPIN1(-)	Input pin for inverting input from CH1 preamplifier
7	OPOUT1	Output pin for CH1 preamplifier
8	GND	Ground pin
9	MUTE	Mute control pin
10	POWVCC1	Power supply pin for CH1, CH2, and CH3 at "Power" stage
11	VO1(-)	Driver CH1 - Negative output
12	VO1(+)	Driver CH2 - Positive output
13	VO2(-)	Driver CH2 - Negative output
14	VO2(+)	Driver CH2 - Positive output
15	VO3(+)	Driver CH2 - Positive output
16	VO3(-)	Driver CH2 - Negative output
17	VO4(+)	Driver CH4 - Positive output
18	VO4(-)	Driver CH4 - Negative output
19	POWVCC2	Power supply pin for CH4 at "Power" stage
20	GND	Ground pin
21	CNT	Control pin
22	LDIN	Loading input
23	OPOUTSL	Output pin for preamplifier for thread
24	OPINLSL	Input pin for preamplifier for thread
25	OPOUT3	CH3 preamplifier output pin
26	OPIN3(-)	Input pin for inverting input for CH3 preamplifier
27	OPIN3(+)	Input pin for non-inverting input for CH3 preamplifier
28	PREVCC	PreVcc


BA5835FM

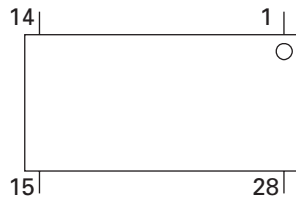

* S-L2980A15MC-C6A

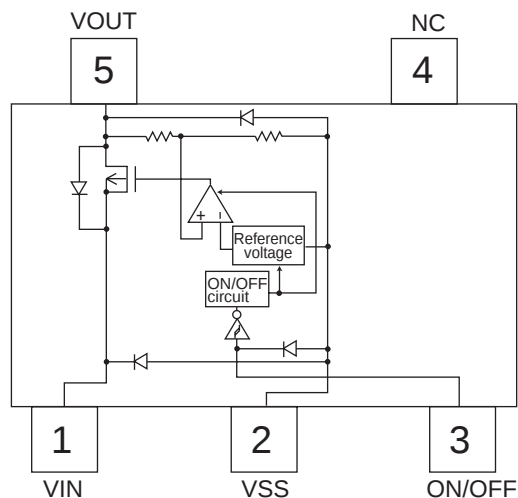


FM/AM Tuner Unit

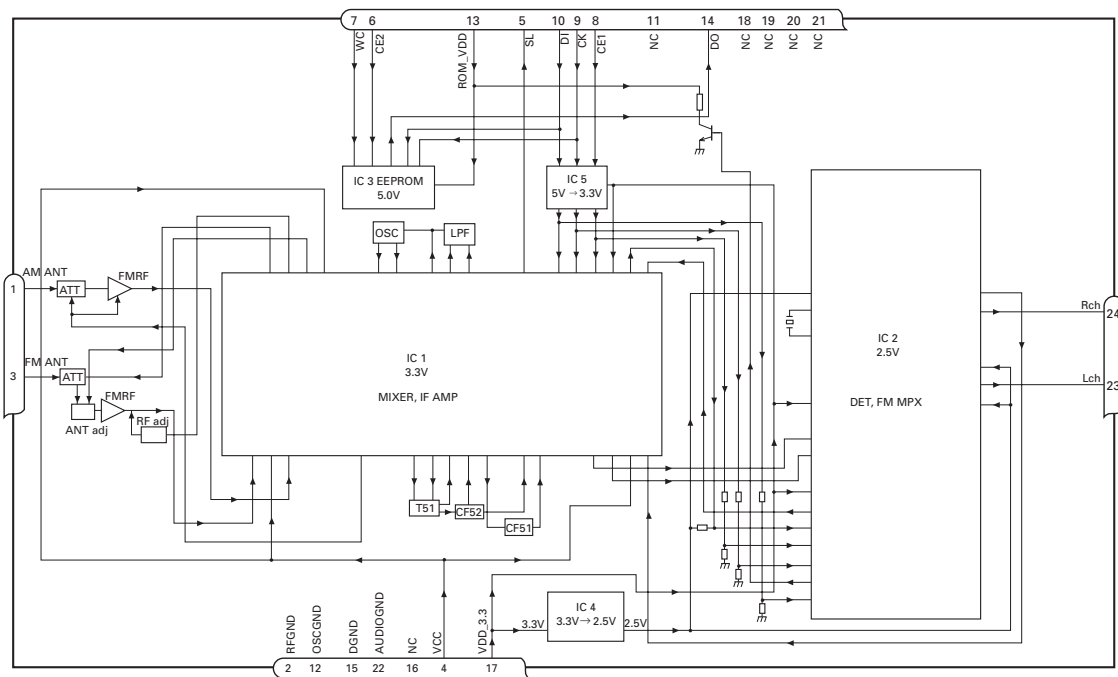

No.	Symbol	I/O	Explain	
1	AMANT	I	AM antenna input	AM antenna input high impedance AMANT pin is connected with an all antenna by way of 4.7μH. (LAU type inductor) A series circuit including an inductor and a resistor is connected with RF ground for the countermeasure against the hum of power transmission line.
2	RFGND		RF ground	Ground of antenna block
3	FMANT	I	FM antenna input	Input of FM antenna 75Ω Surge absorber(DSP-201M-S00B) is necessary.
4	VCC		power supply	The power supply for analog block. D.C 8.4V ± 0.3V
5	SL	O	signal level	Output of FM/AM signals level
6	CE2	I	chip enable-2	Chip enable for EEPROM "Low" active
7	WC	I	write control	You can write EEPROM, when EEPROM write control is "Low". Ordinary non connection
8	CE1	I	chip enable-1	Chip enable for AF•RF "High" active
9	CK	I	clock	Clock
10	DI	I	data in	Data input
11	NC		non connection	Not used
12	OSCGND		osc ground	Ground of oscillator block
13	ROM_VDD		power supply	Power supply for EEPROM pin 13 is connected with a power supply of micro computer.
14	DO	O	data out	Data output
15	DGND		digital ground	Ground of digital block
16	NC		non connection	Not used
17	VDD_3.3		power supply	The power supply for digital block. 3.3V ± 0.2V
18	NC		non connection	Not used
19	NC		non connection	Not used
20	NC		non connection	Not used
21	NC		non connection	Not used
22	AUDIOGND		audio ground	Ground of audio block
23	L ch	O	L channel output	FM stereo "L-ch" signal output or AM audio output
24	R ch	O	R channel output	FM stereo "R-ch" signal output or AM audio output

7.3 EXPLANATION


7.3.1 OPERATIONAL FLOW CHART

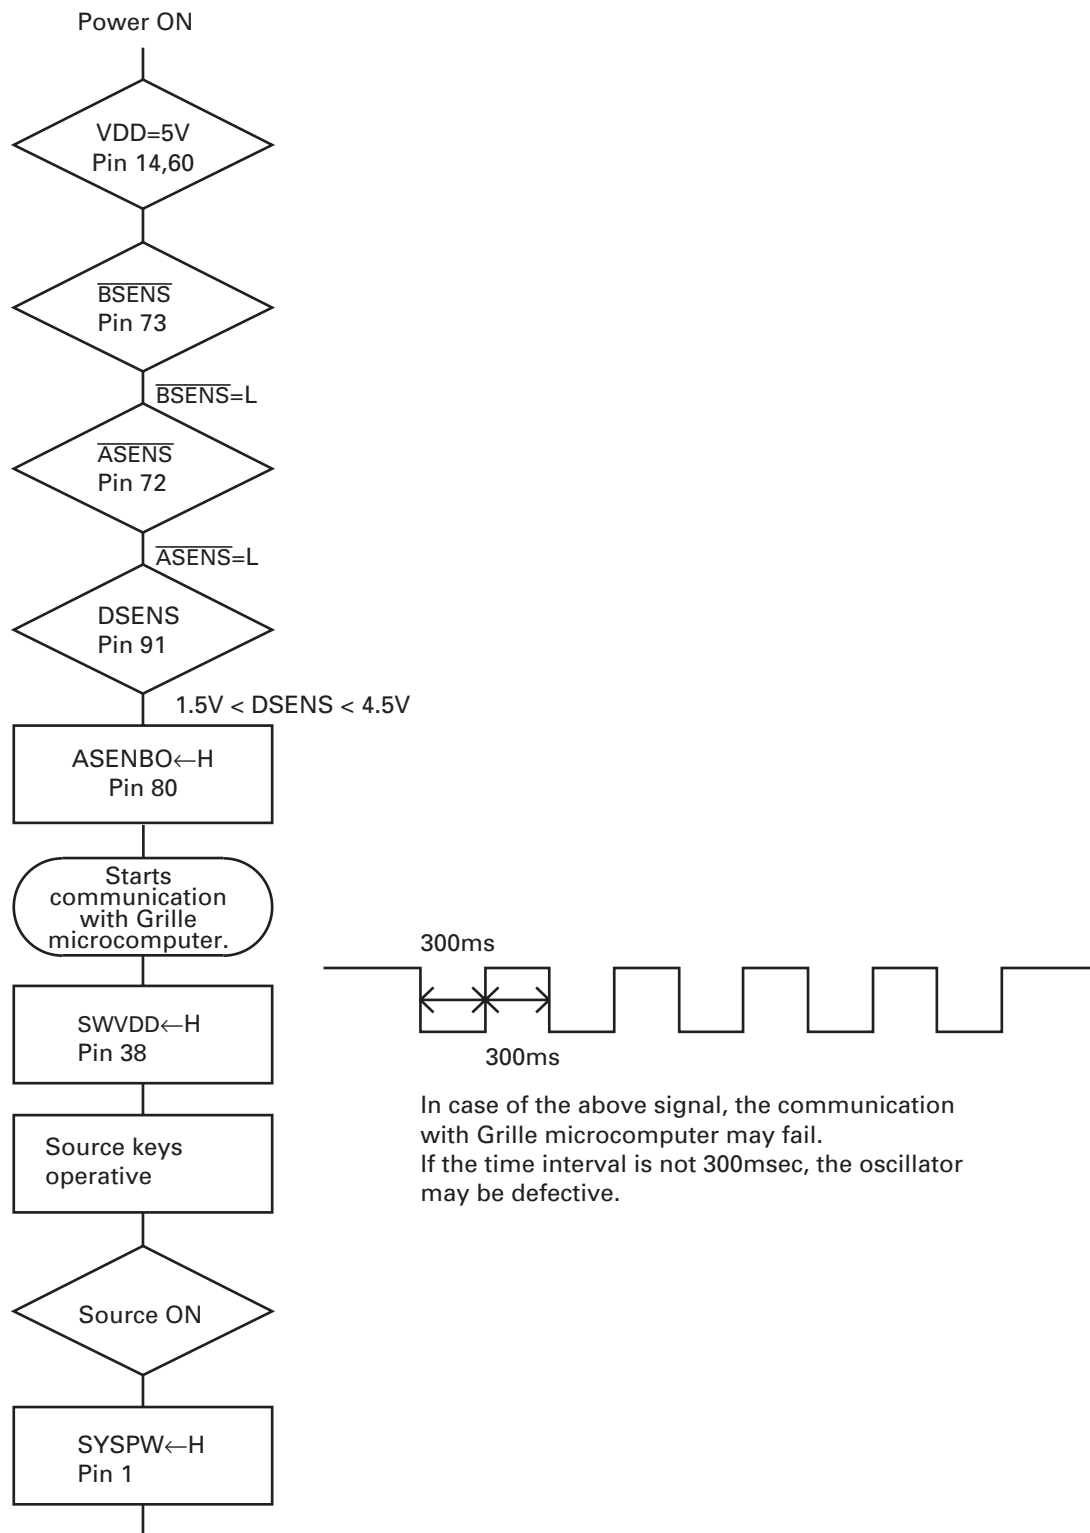

Completes power-on operation.
(After that, proceed to each source operation)


7.3.2 CIRCUIT DESCRIPTIONS

● Power Amp Section

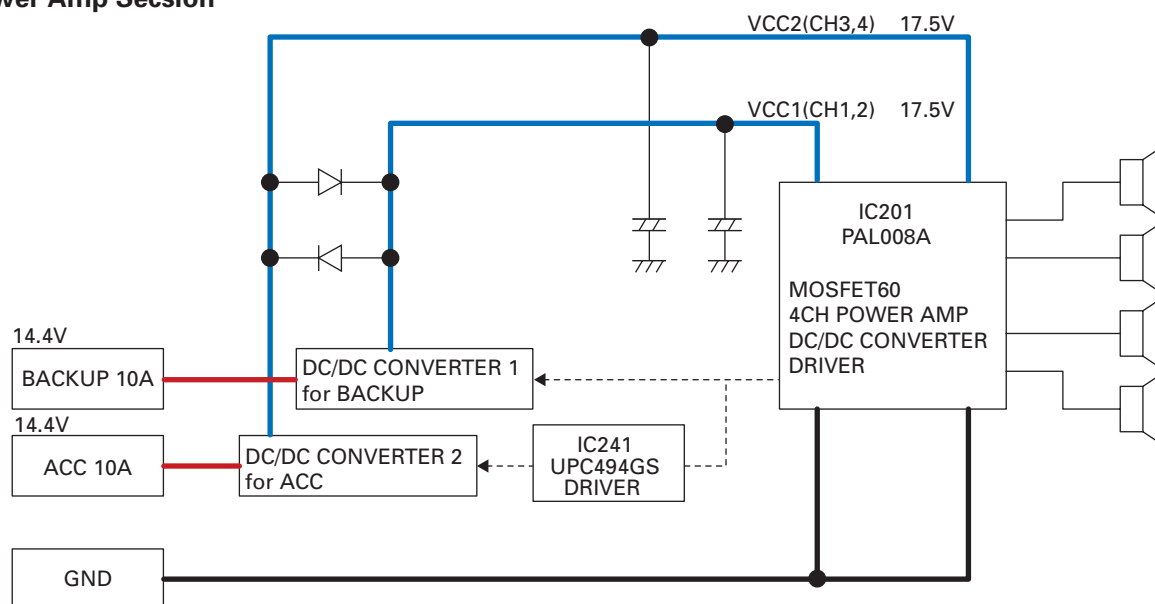


IC201 incorporates a 4channel power amplifier and a DC/DC converter driver. Current for channels 1 and 2 is supplied from the BACKUP power supply and current for channels 3 and 4 from the ACC power supply. This is because when current is supplied with voltage increase in the BACKUP power supply as it is done conventionally, 10A which is the limit to the vehicle fuse is exceeded. Thus ACC power supply was enabled to supply current so that there are two power supplies of BACUP and ACC and output of 60W x 4channel is expressed. Increased voltage (VCC1, VCC2) is controlled individually by separate DC/DC converters. Therefore, different voltages occur when there is difference between the outputs from L channel and R channel. A diode was hence connected between VCC1 and VCC2 so that voltage difference will not occur.

● DC/DC converter 1

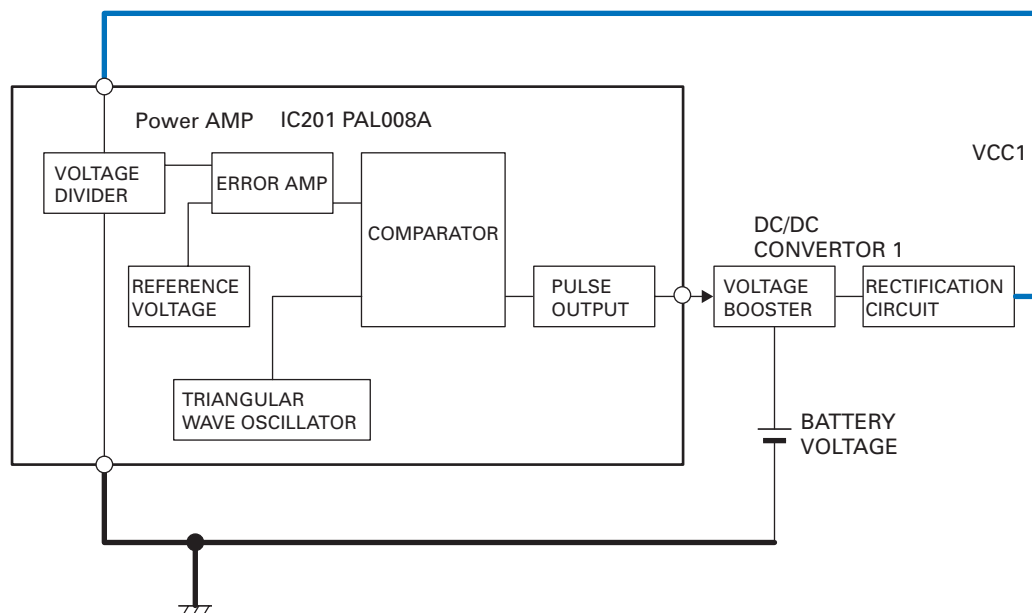

Only one DC/DC converter driver is incorporated in IC201. Therefore, another DC/DC converter driver was prepared externally to be synchronized with the DC/DC converter driver for IC201 and eliminate noise.

● DC/DC Converter 2

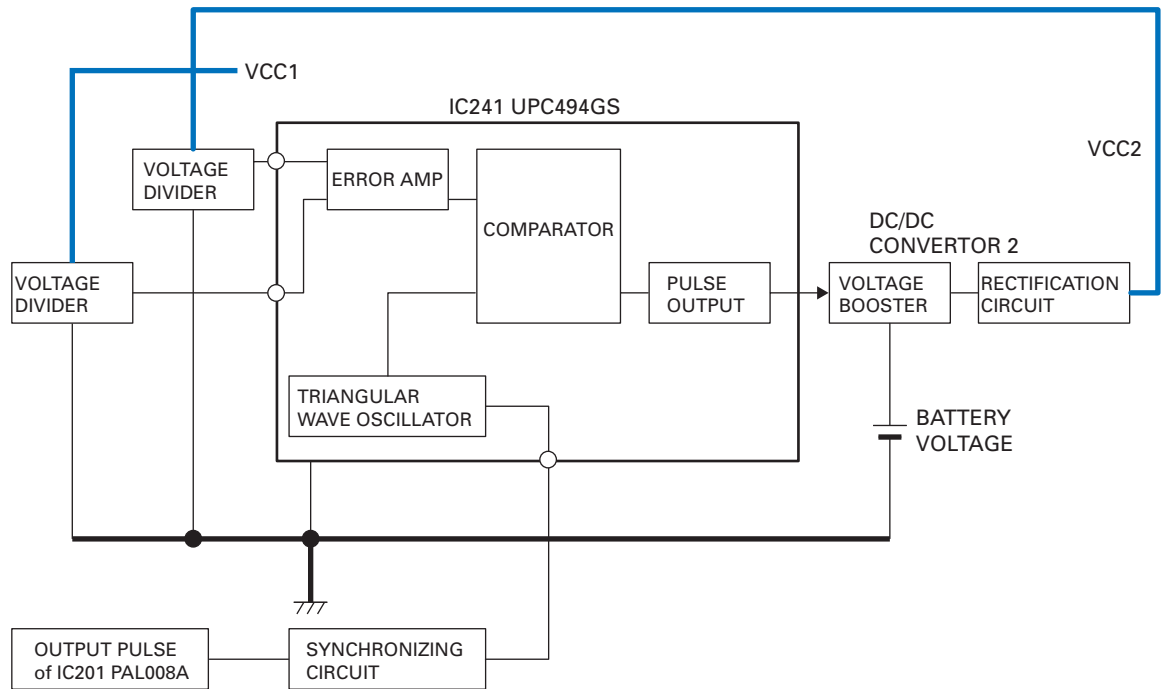

Difference between VCC1 and VCC2 is detected with IC241 error amplifier to adjust the pulse output so that VCC1 and VCC2 are identical.

7.4 CLEANING

A



Before shipping out the product, be sure to clean the following portions by using the prescribed cleaning tools:

Portions to be cleaned	Cleaning tools
CD pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

B


C

D

E

F

8. OPERATIONS

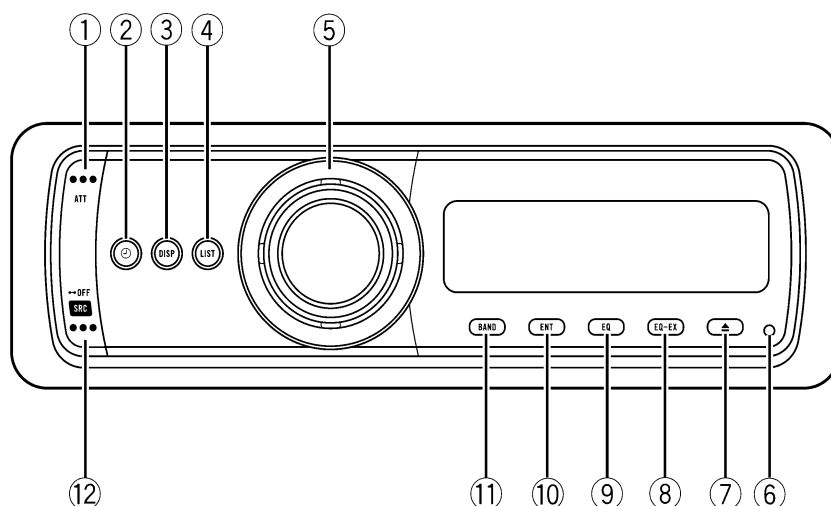

Head unit

① ATT button

Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.

② CLOCK button

Press to change to the clock display.

③ DISPLAY button

Press to select different displays.

④ LIST button

Press to display the disc title list, track title list, folder list, file list or preset channel list according to the source.

⑤ Multi-Control

Move to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions. Turn it to increase or decrease the volume.

⑥ RESET button

Press to reset the microprocessor.

⑦ EJECT button

Press to eject a CD from your built-in CD player.

⑧ EQ-EX button

Press and hold to switch between EQ-EX and SFEQ functions. Press to operate each function.

⑨ EQ button

Press to select various equalizer curves.

⑩ ENTERTAINMENT button


Press to change to the entertainment display.

⑪ BAND button

Press to select among three FM bands and one AM band and to cancel the control mode of functions.

⑫ SOURCE button

This unit is turned on by selecting a source. Press to cycle through all the available sources. 

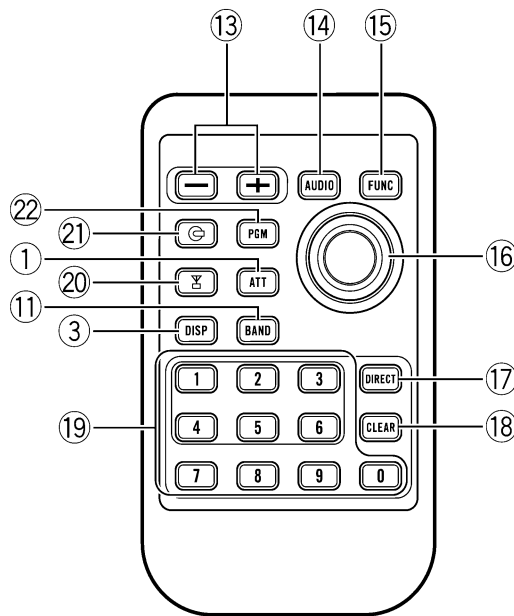

Remote control

Operation is the same as when using the buttons on the head unit.

⑬ VOLUME buttons

Press to increase or decrease the volume.

⑭ AUDIO button

Press to select various sound quality controls.

⑮ FUNCTION button

Press to select functions.

⑯ Joystick

Move to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions. Functions are the same as **Multi-Control** except for volume control.

⑰ DIRECT button

Press to directly select the desired track.

⑱ CLEAR button

Press to cancel the input number when **NUMBER** are used.

⑲ NUMBER buttons

Press to directly select the desired track, preset tuning or disc. Buttons **1–6** can operate the preset tuning for the tuner or disc number search for the multi-CD player.

⑳ TUNER button

Press to select the tuner as the source.

㉑ CD button

Press to select the built-in or multi-CD player as the source.


㉒ PGM button

Press to operate the preprogrammed functions for each source. 


● CONNECTION DIAGRAM

Power cable connection


- When using this unit at $40\text{W} \times 4\text{ch}$.
- When using this unit at $60\text{W} \times 4\text{ch}$ and the accessory fuse for the vehicle is 10A or more.

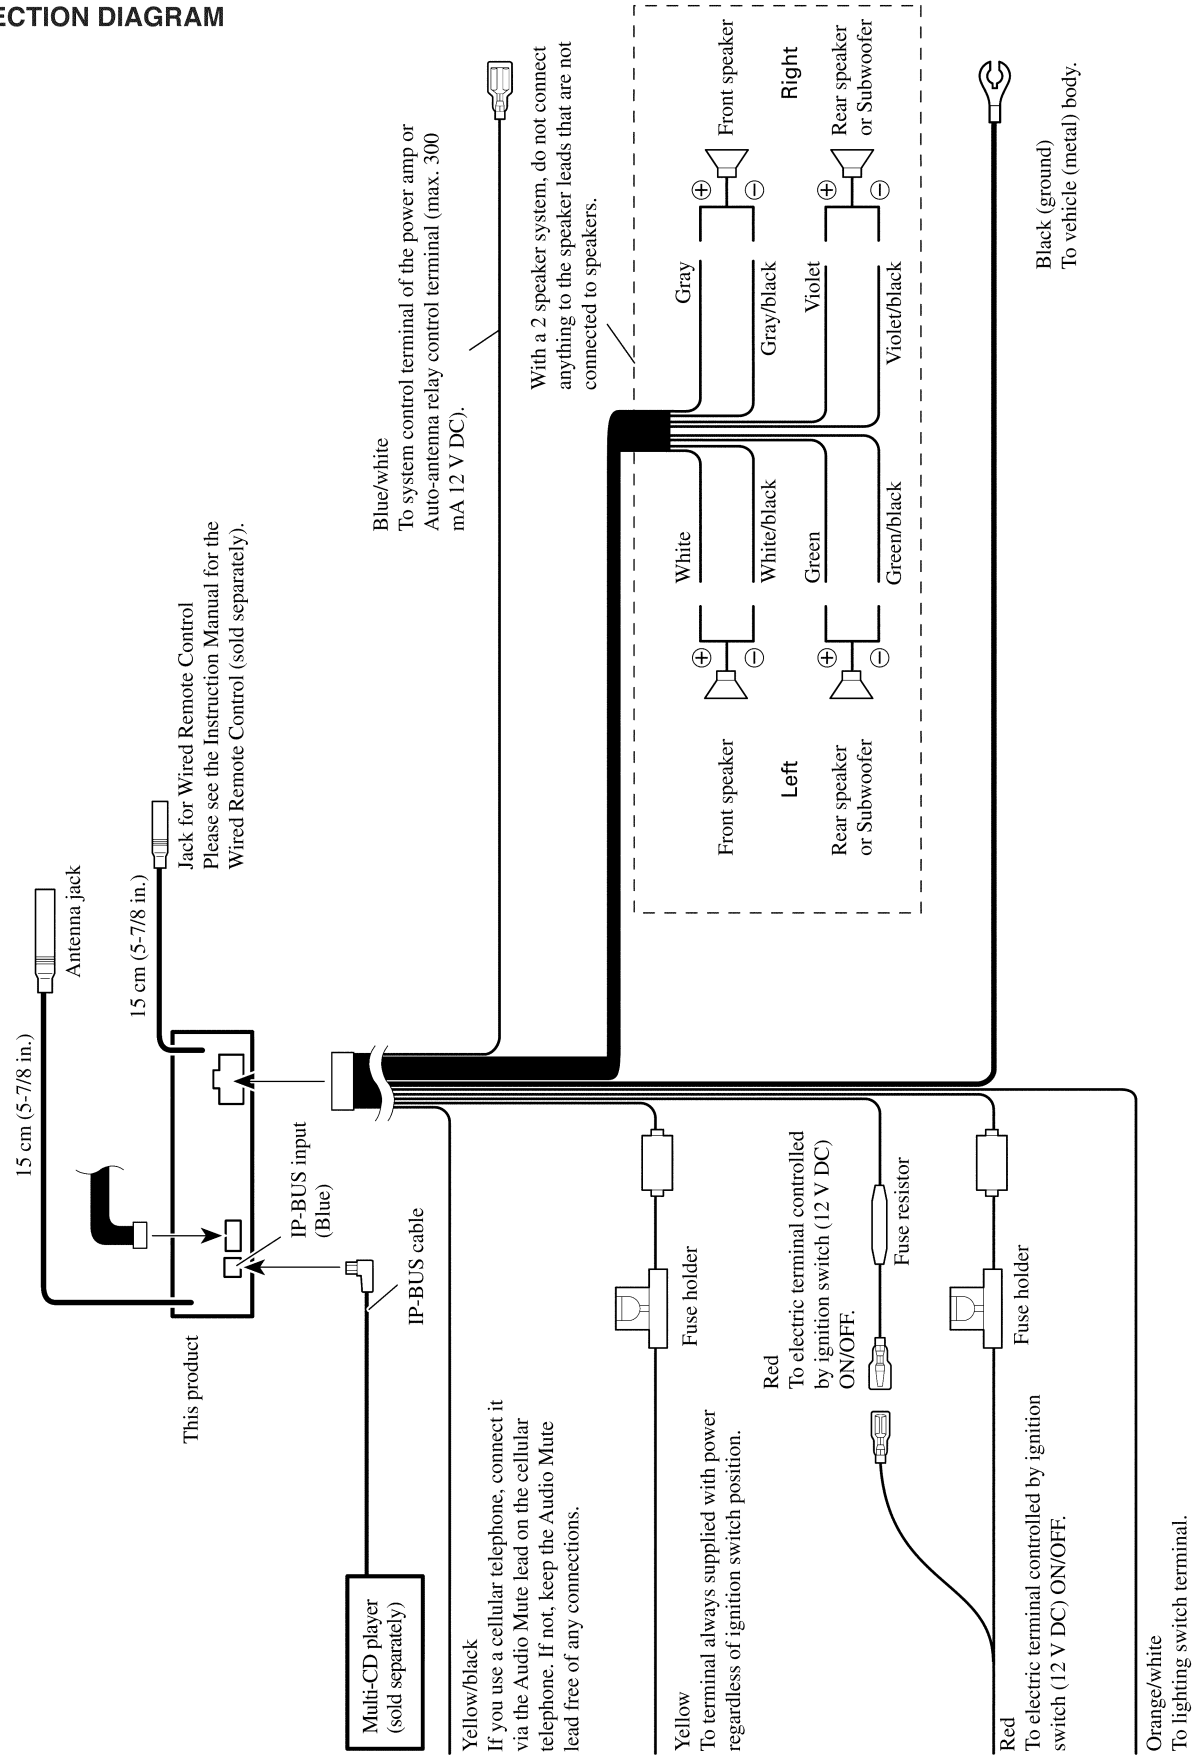

Connecting to separately sold power amp

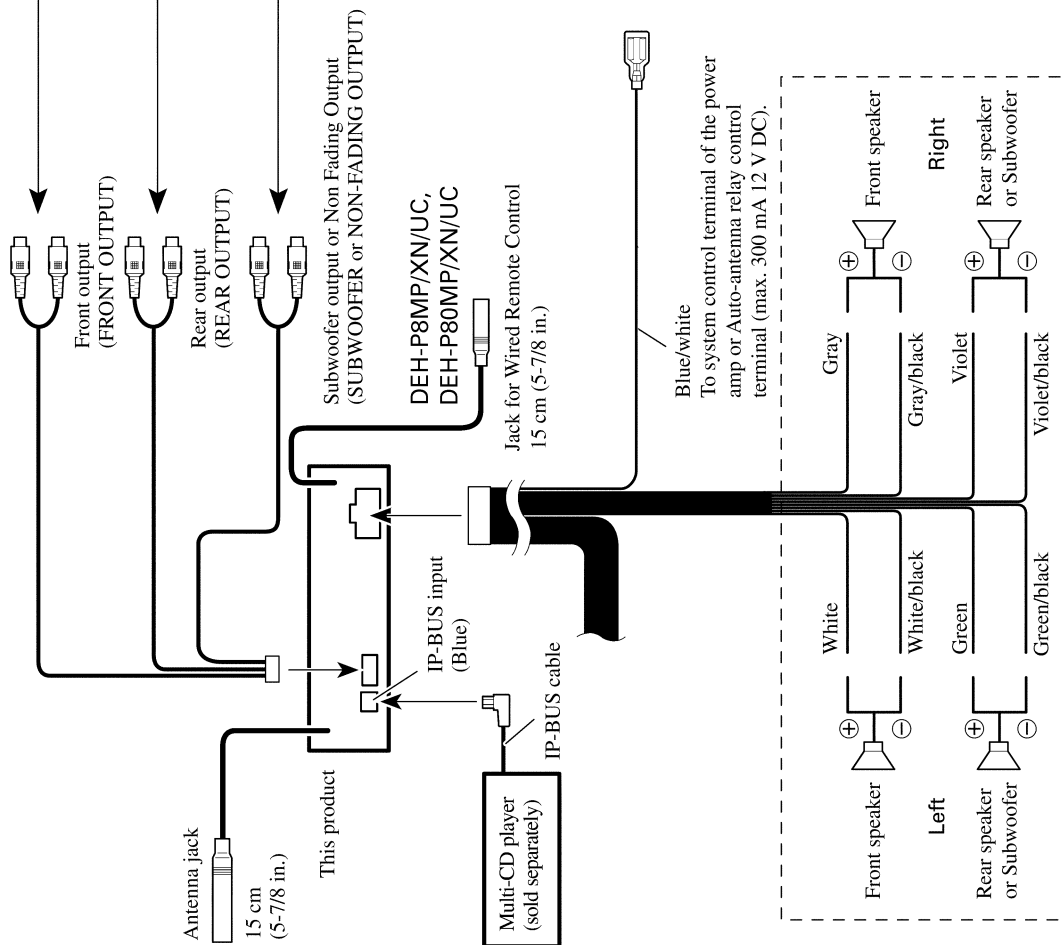

With a 2 speaker system, do not connect anything to the speaker leads that are not connected to speakers.

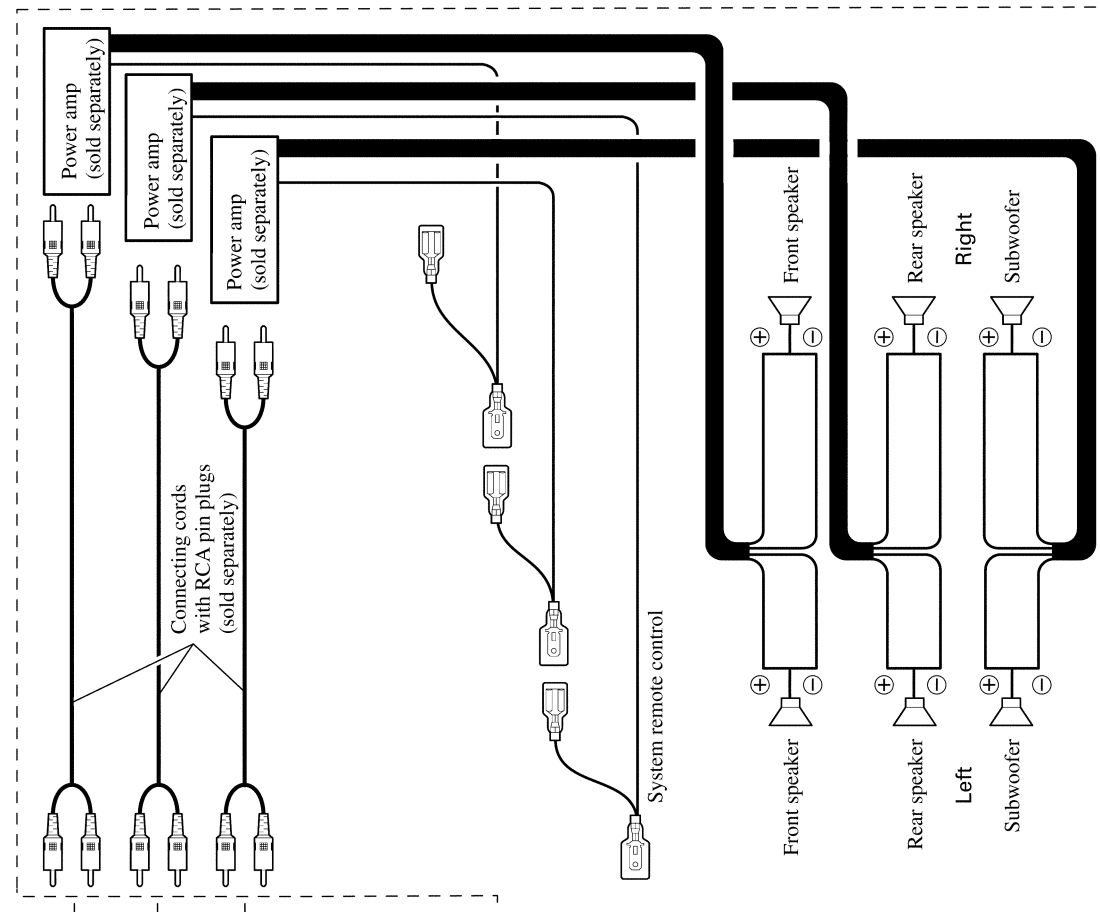

Note:
Change the initial setting of this unit (refer to the Operation Manual). The subwoofer output of this unit is monaural.

Perform these connections when using the optional amplifier.

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

DEH-P8MP/XN/UC

■

7

■

8

■

● Jigs List

Name	Jig No.	Remarks	S/M Location
Test Disc	TCD-782	Checking the grating	P.59
L.P.F.		Checking the grating (Two pieces)	P.59
Extension Cable	GGD1160	Checking the keyboard unit	P.55
Extension PCB	GGD1378	Checking the keyboard unit	P.55
CD-ROM	GGV1169	OEL screensaver studio lka to lkd application	P.62
Cleaning liquid	GEM1004	Cleaning CD pickup lenses	P.84
Cleaning paper	GED-008	Cleaning CD pickup lenses	P.84

A

B

C

D

E

F