 


Explanation of Symbols


PAGE 5
D200/UEM




- connection goes to
(more components between)





- End of connection
(No more components between)


Table of Contents	Page
DCT4 Common Baseband	1
System Connector & IRDA	2
Audio	3
Camera/LCD Connector	4
UEMK	5
UPP & Memory	6
FM Radio	7
Baseband Connections	8
RF Part	9
Signal Overview	10
Component Finder	11


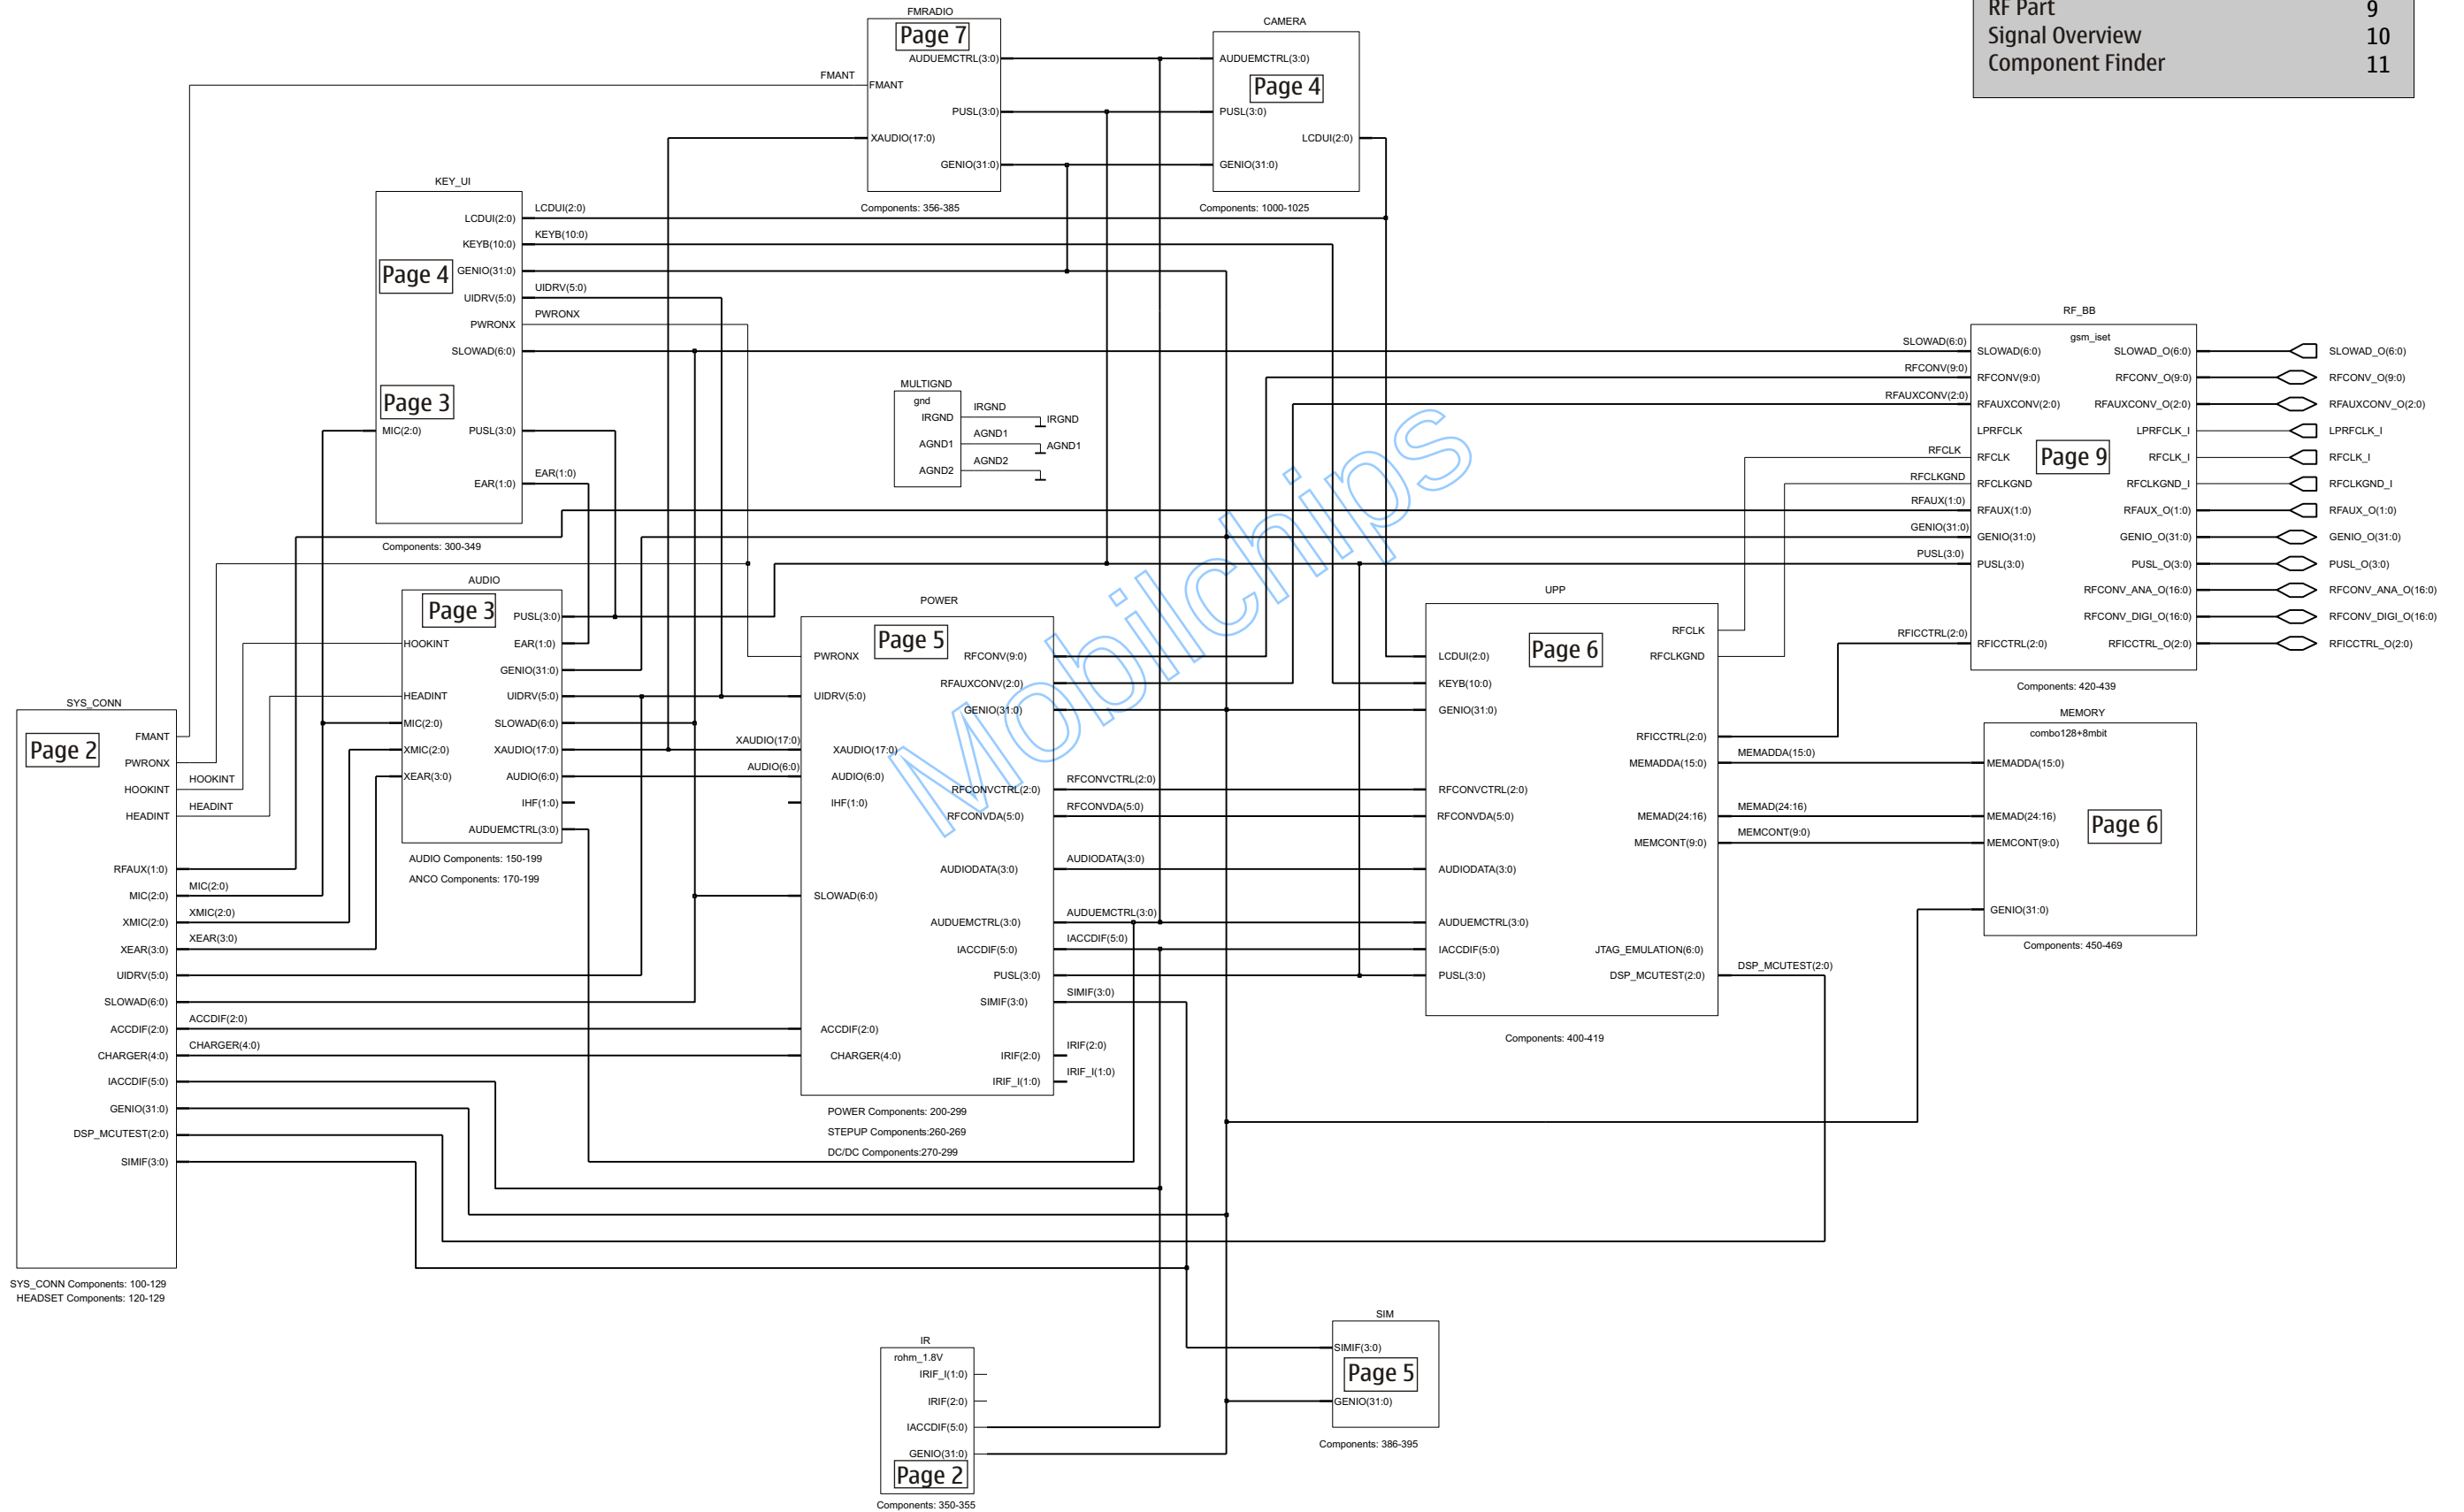


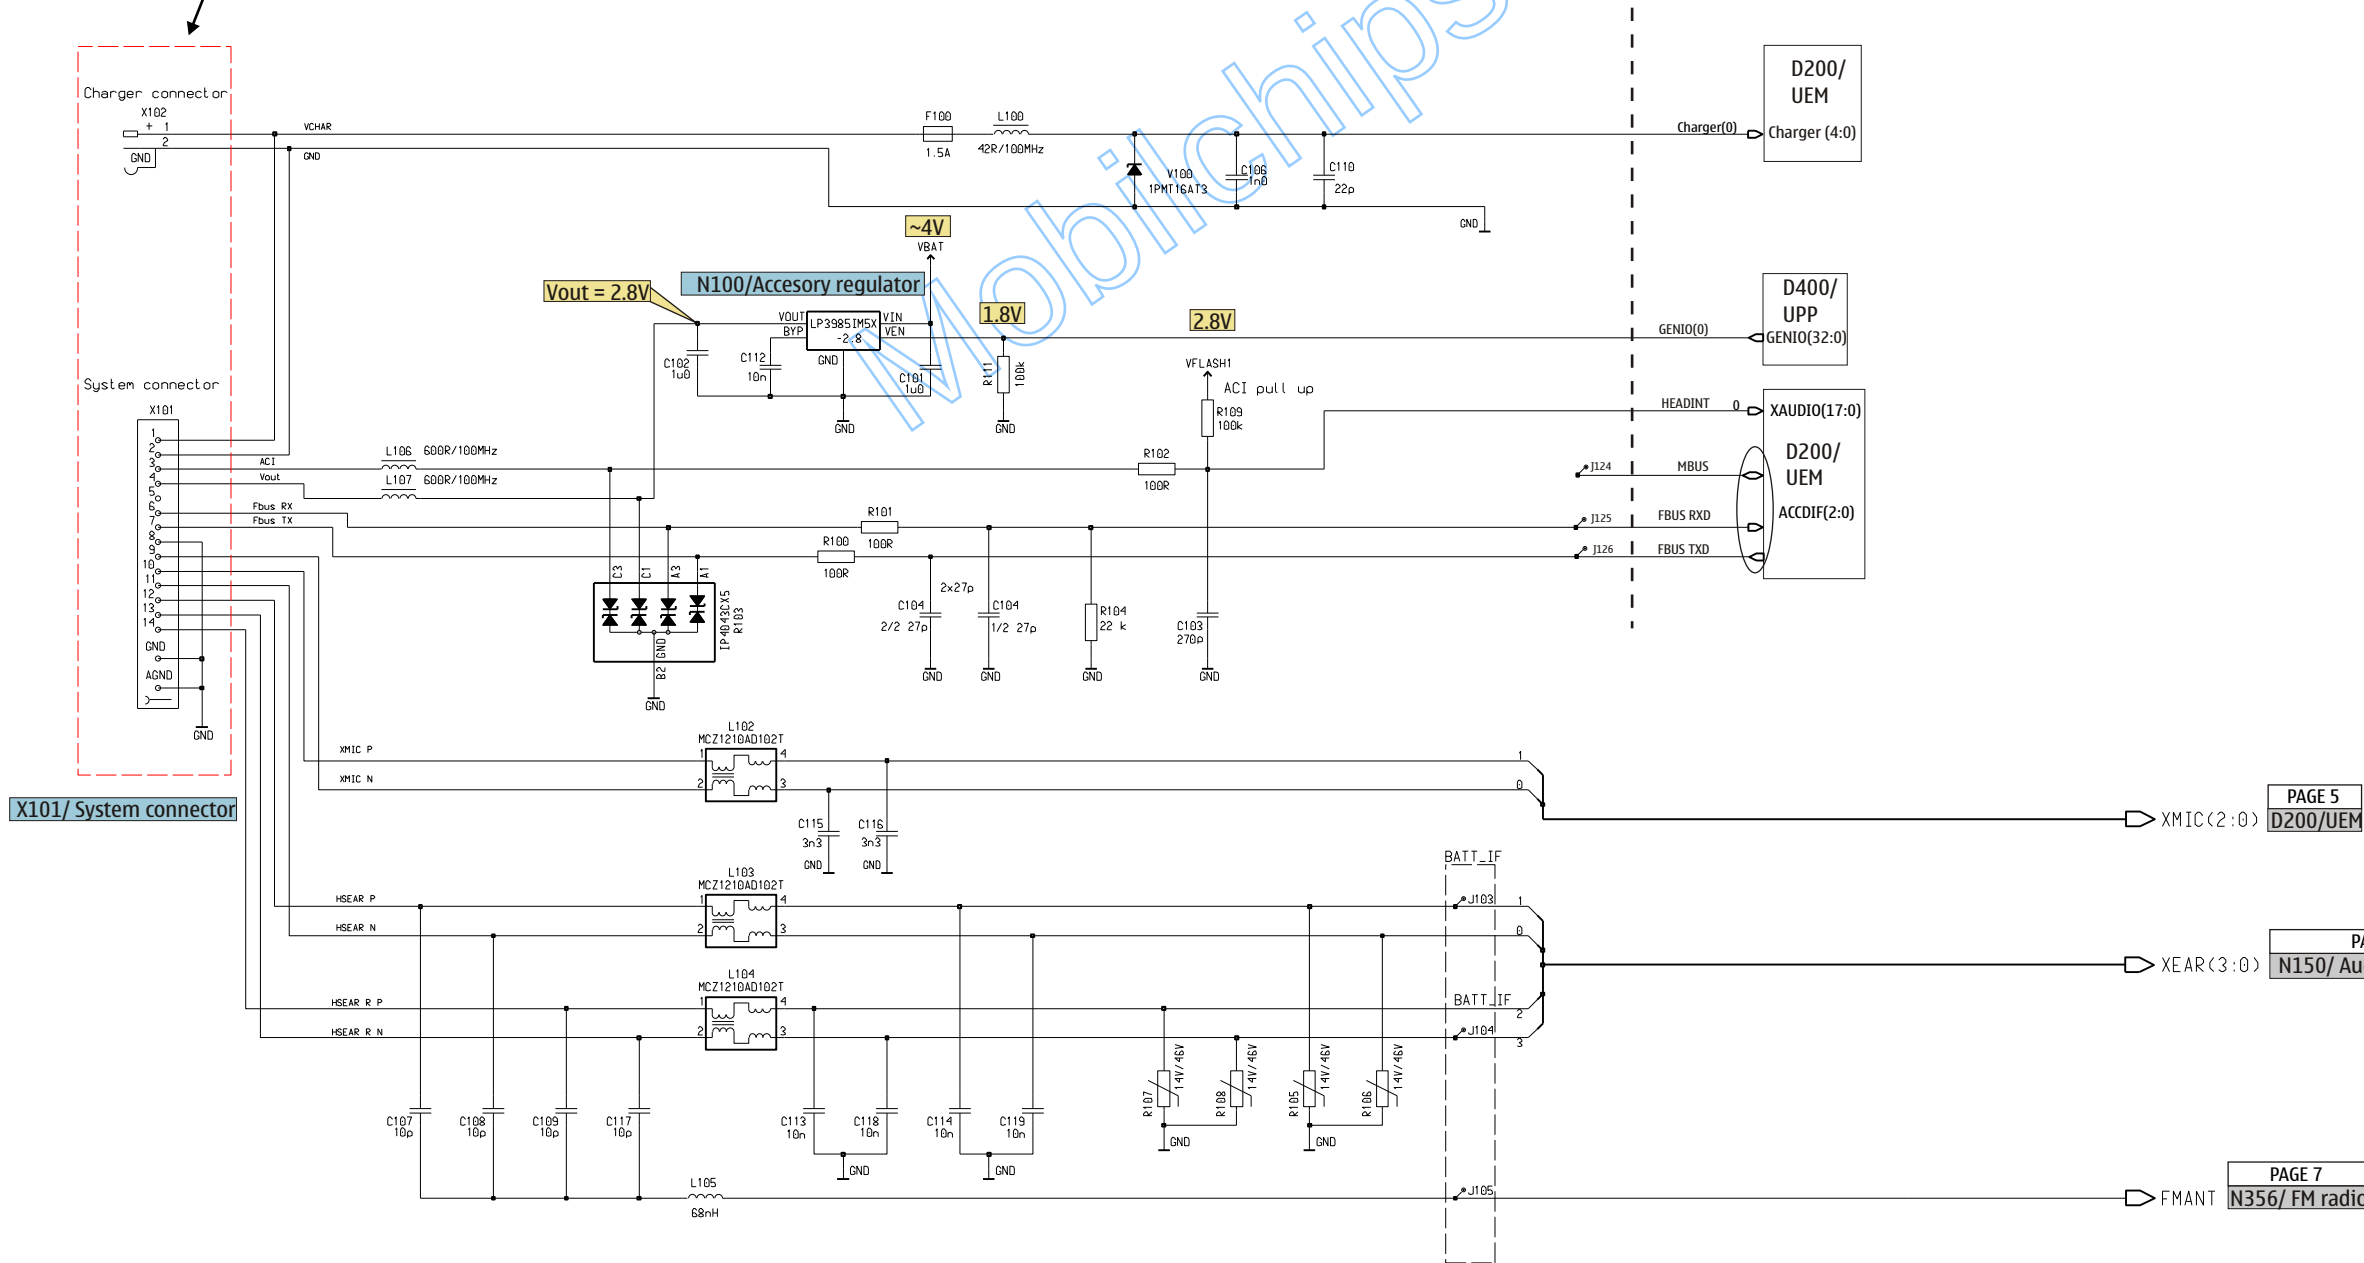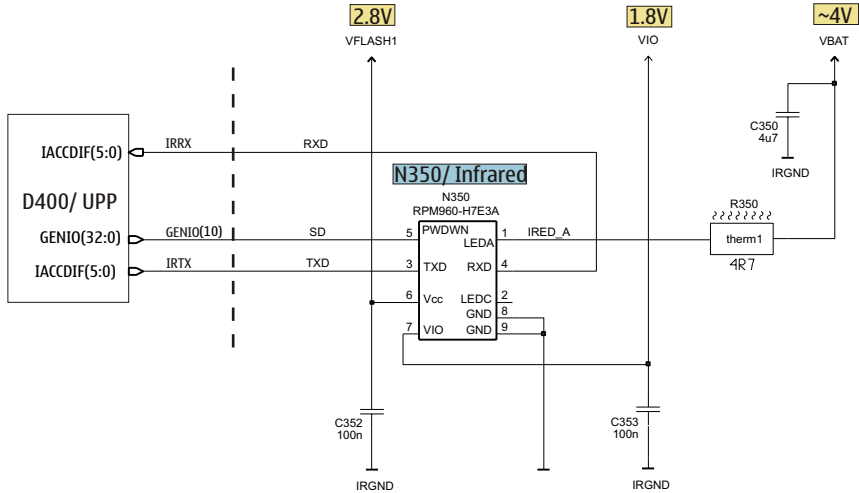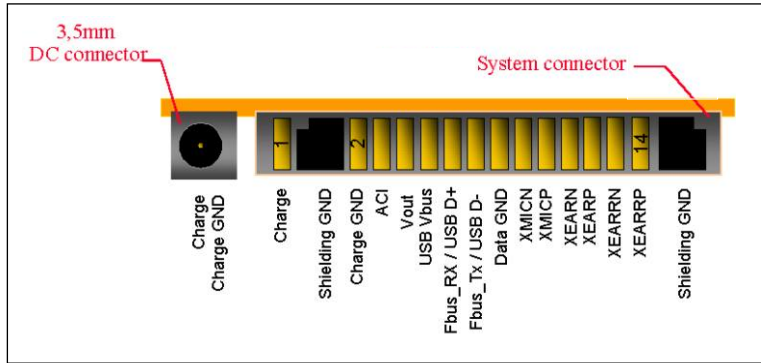

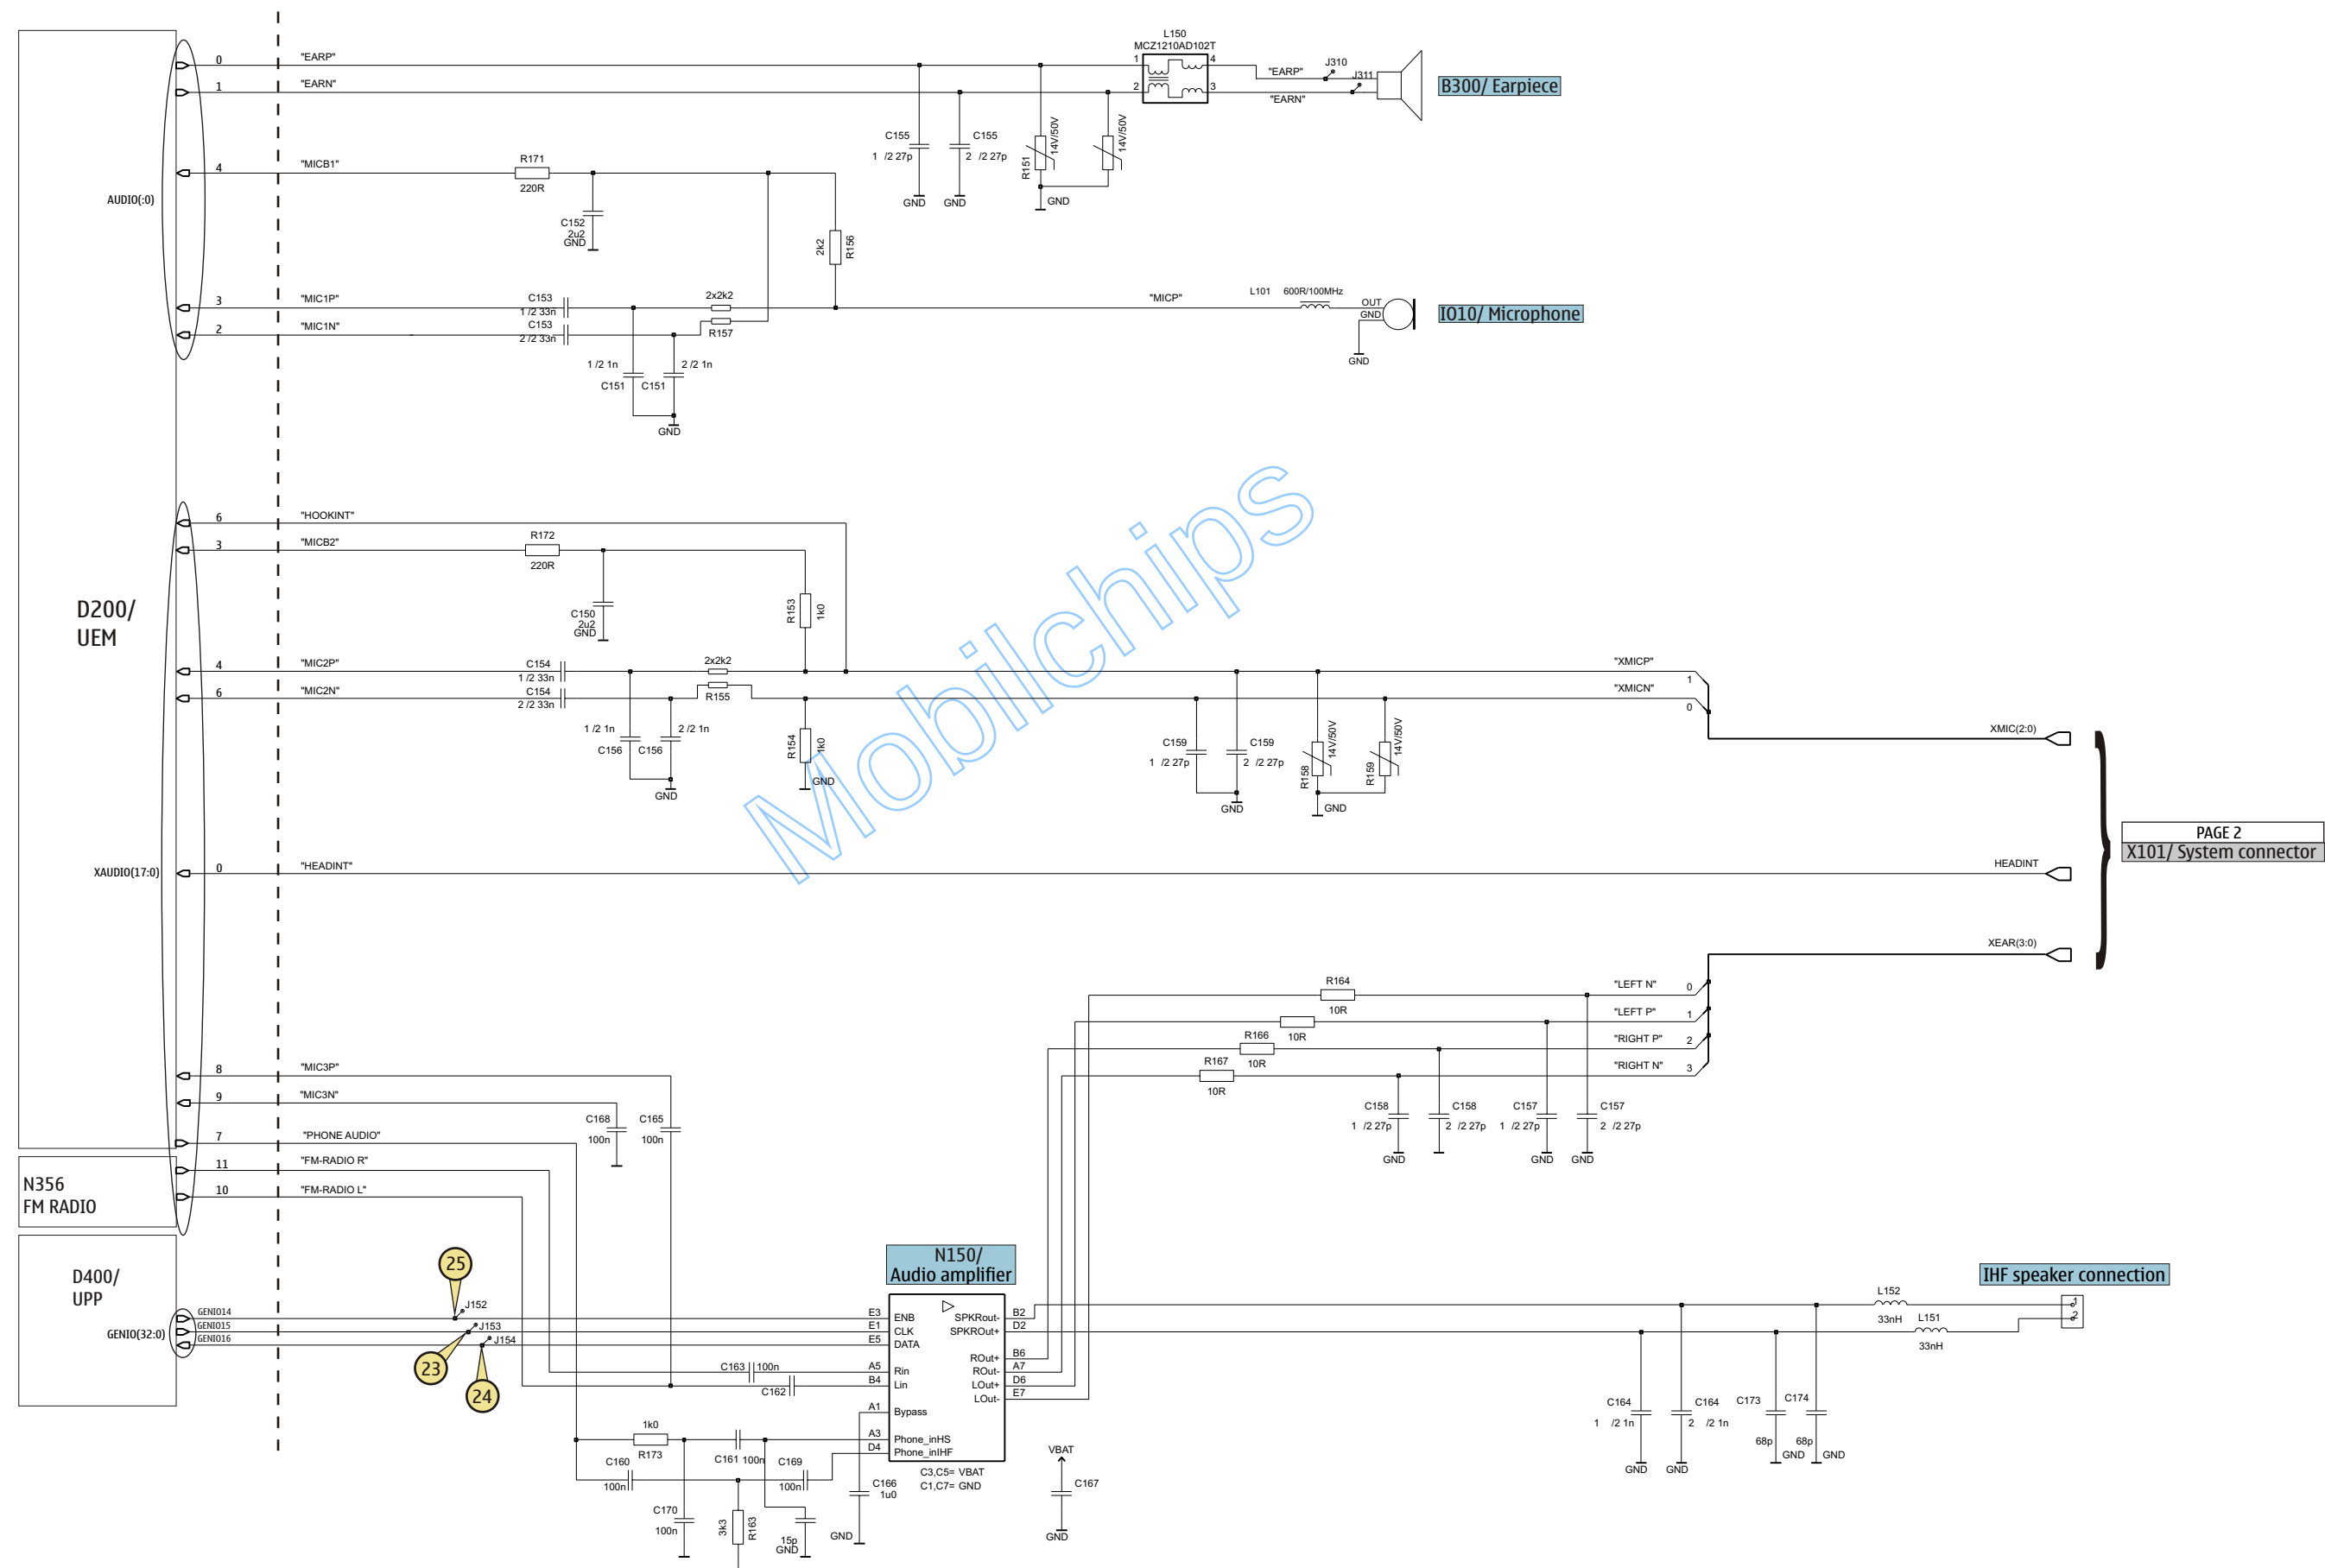

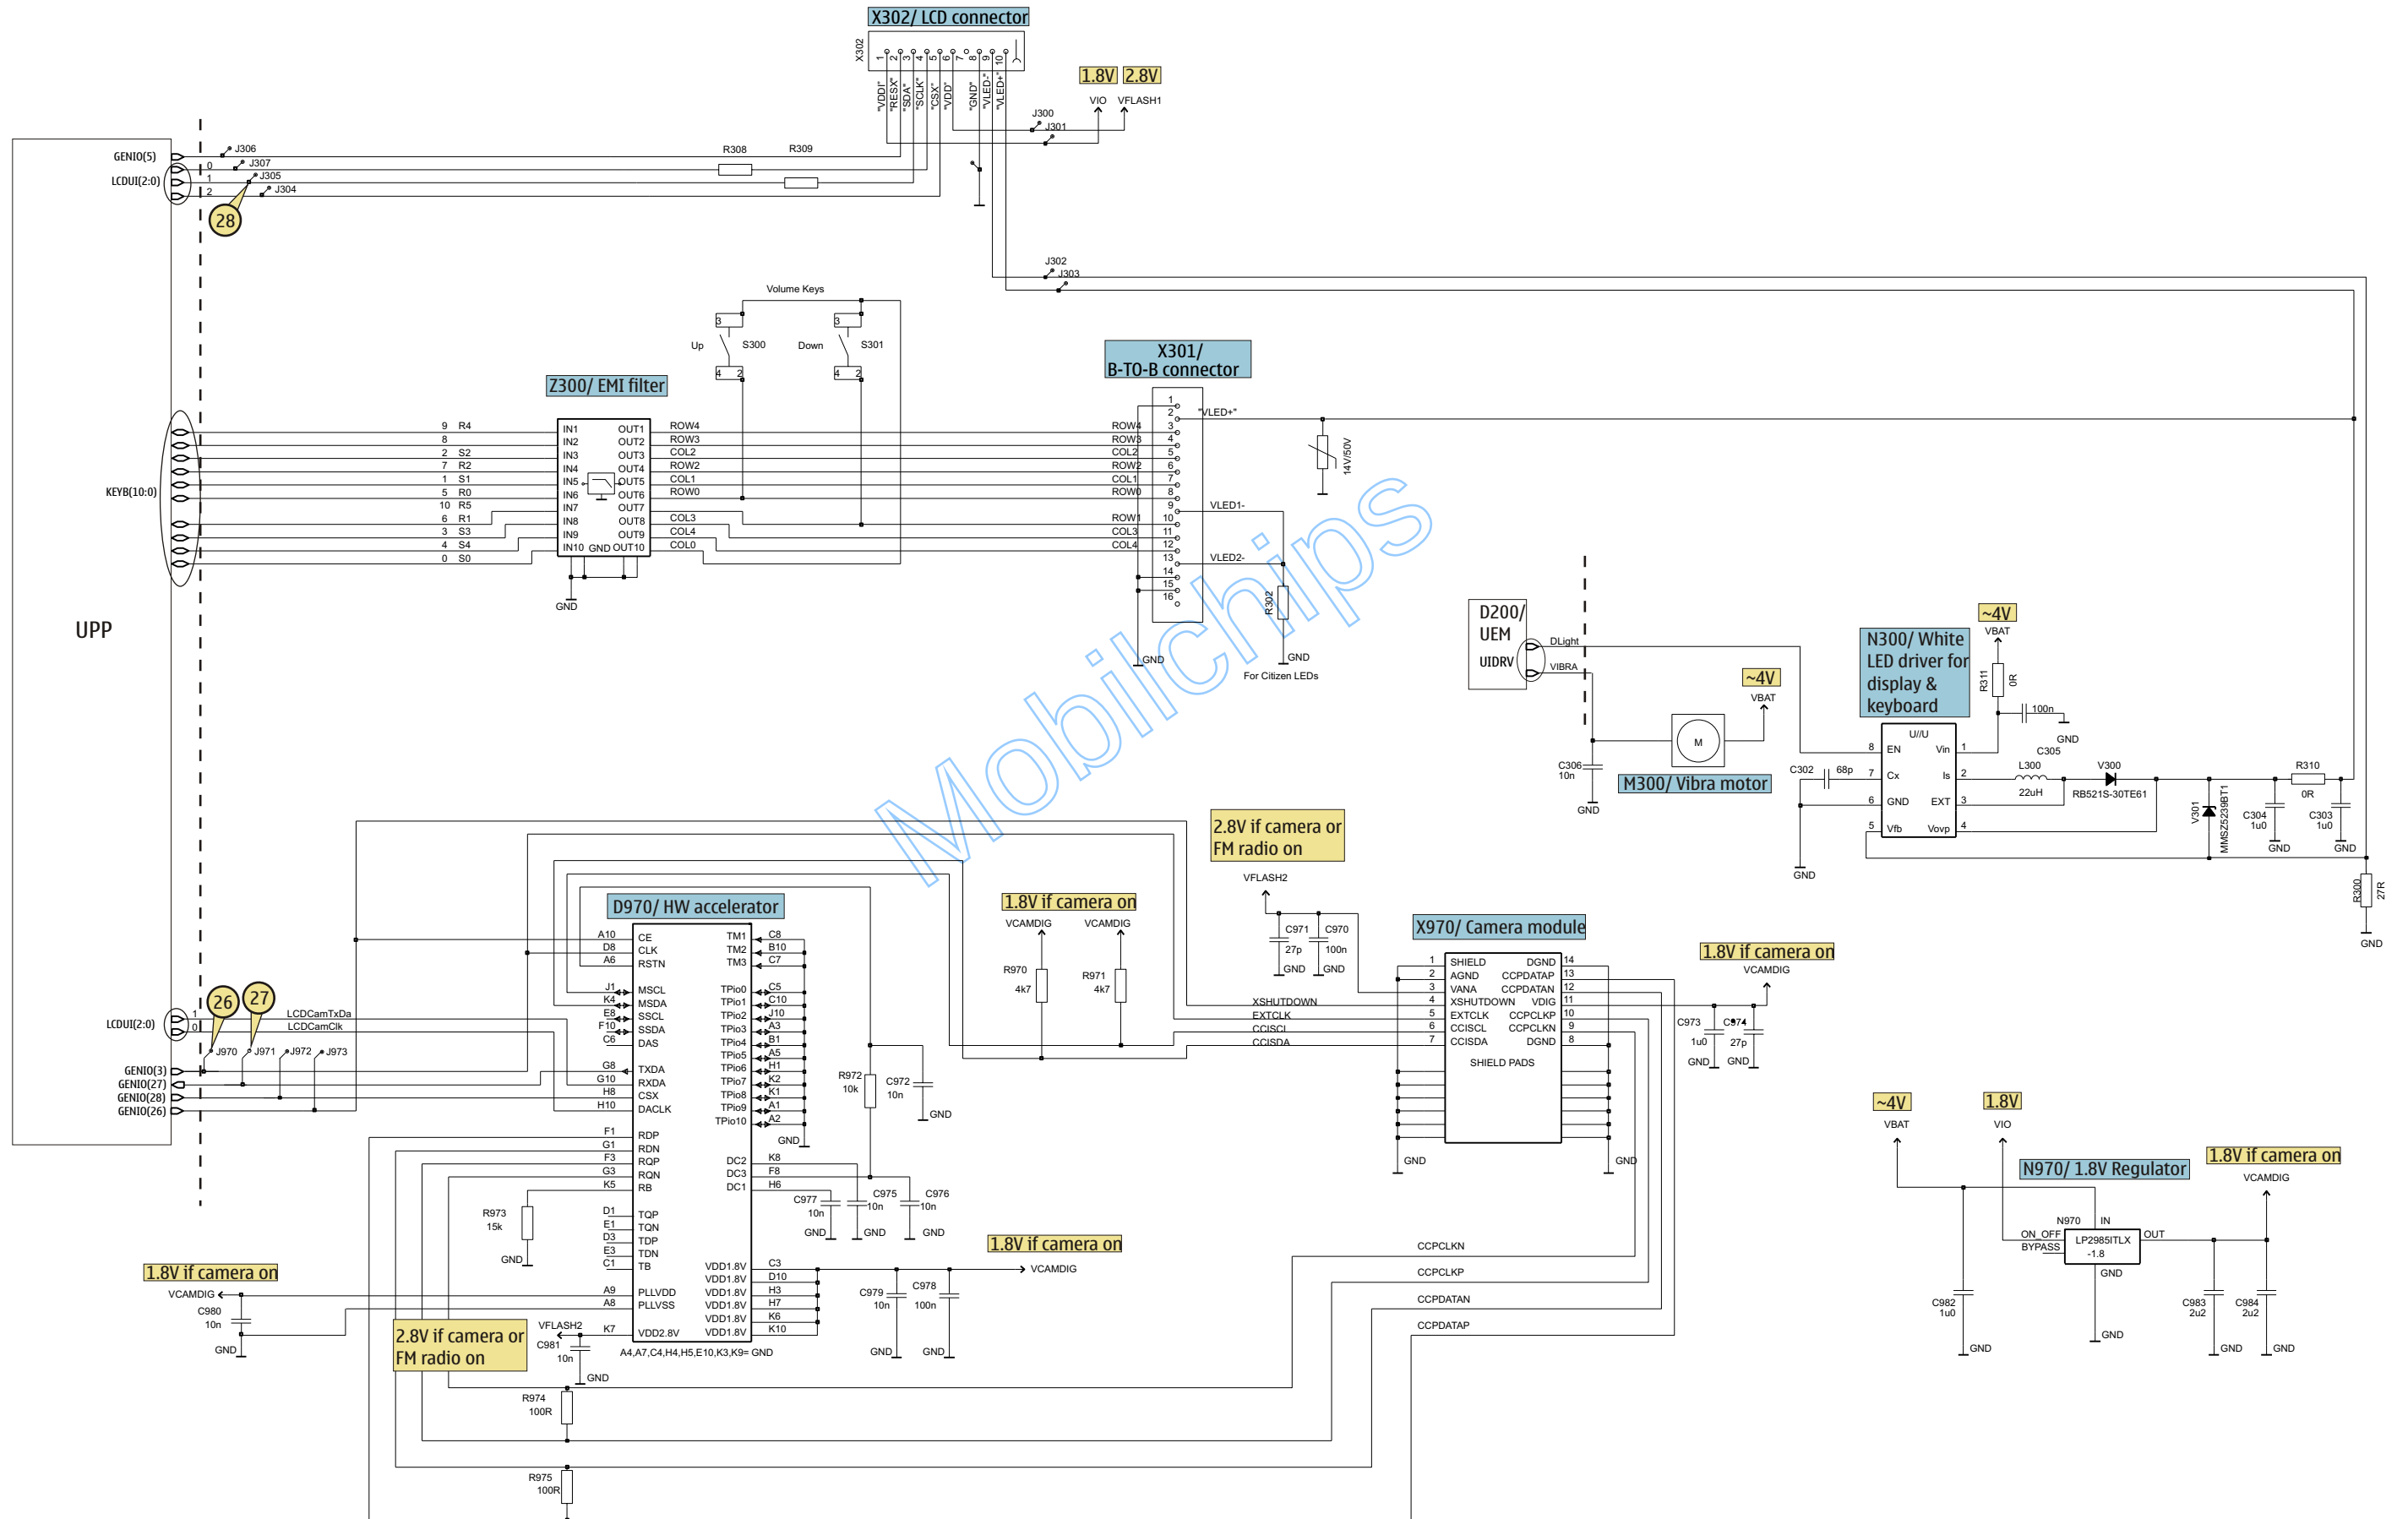

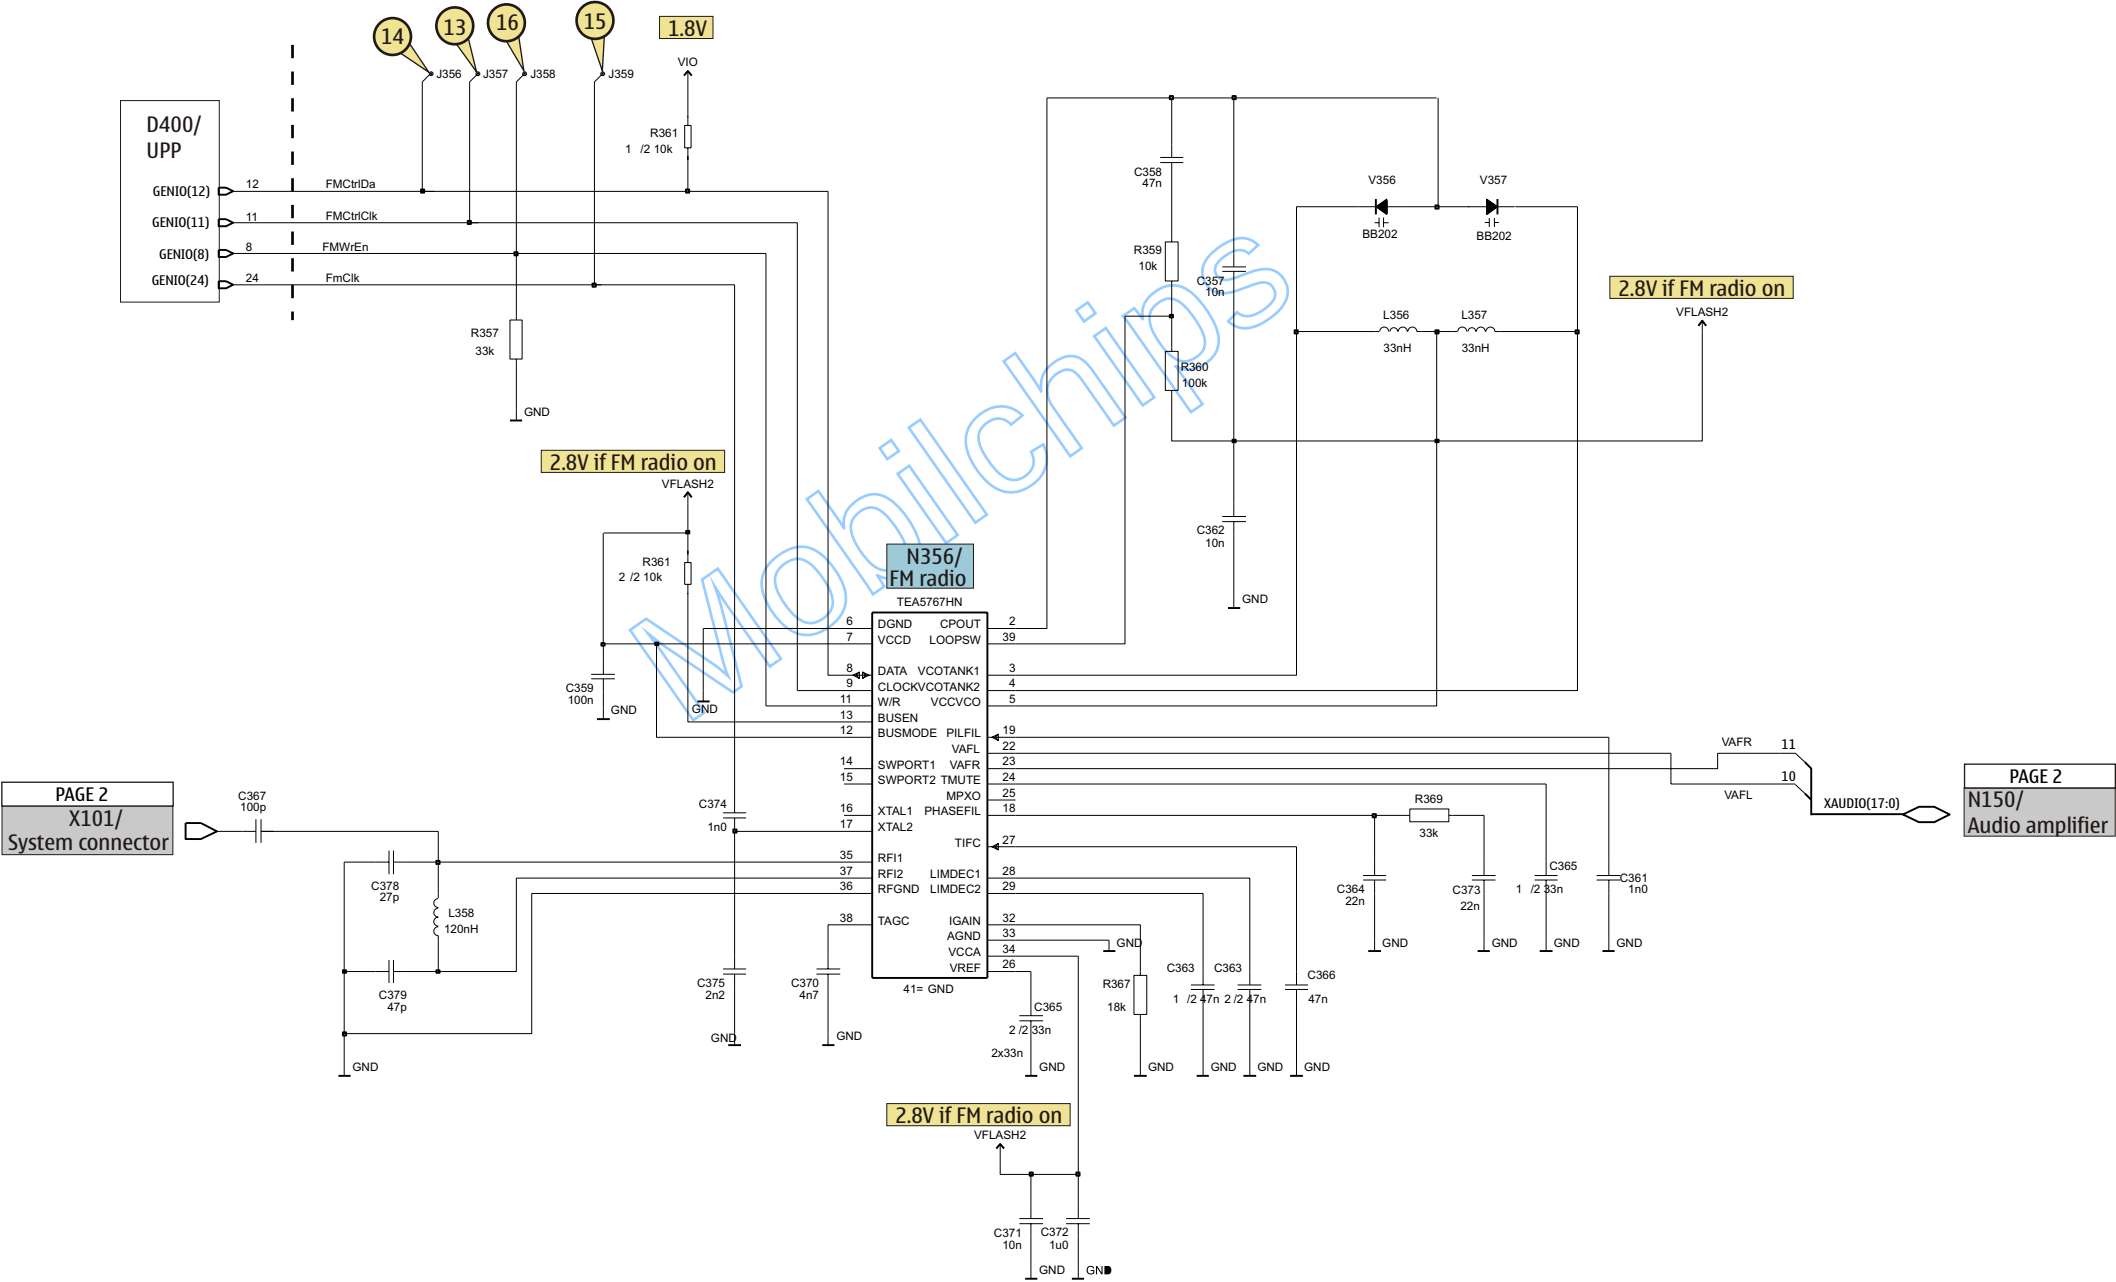

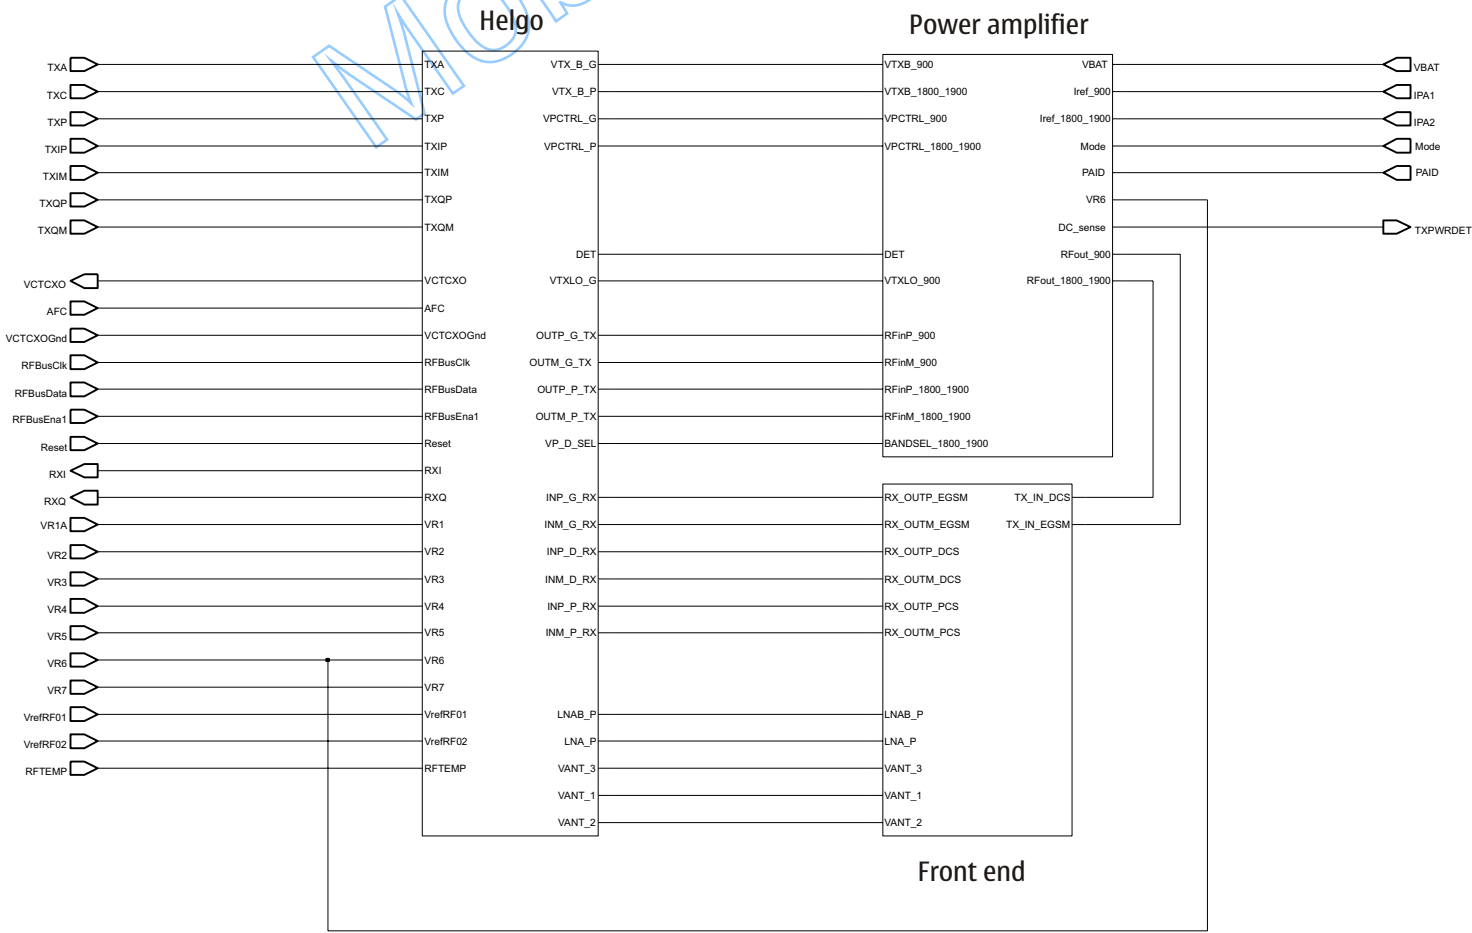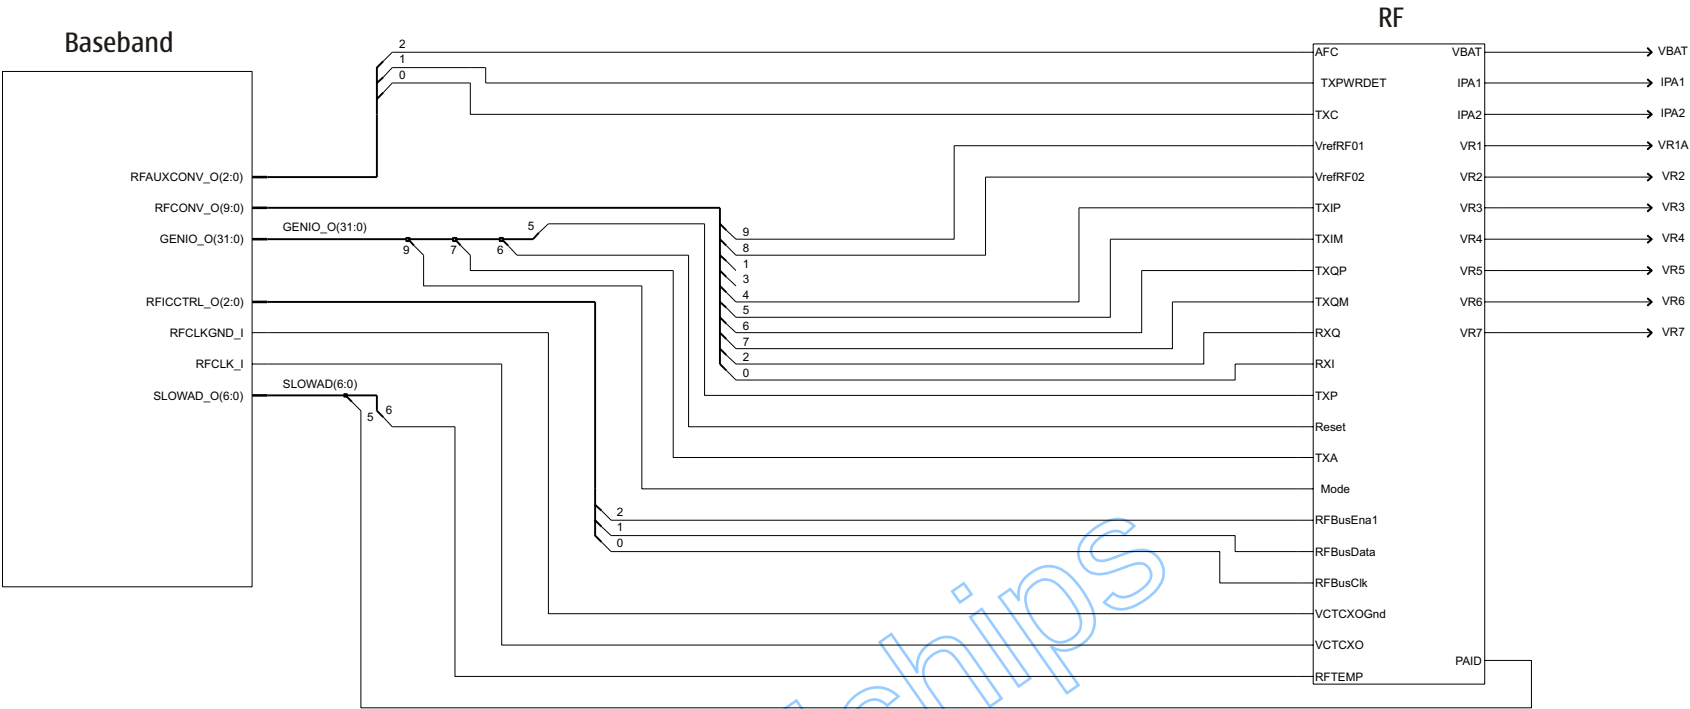

Band	Channel	RX	VCO/RX	VC/RX	TX	VCO/TX	VC/TX
GSM 900	37	942,4MHz	3769,6MHz	~ 2.72V	897,4MHz	3589,6MHz	~ 1.98V
GSM 1800	700	1842,8MHz	3685,6MHz	~ 2.37V	1747.8MHz	3495,6MHz	~ 1.59V
GSM 1900	661	1960MHz	3920MHz	~ 3.31V	1880MHz	3760MHz	~ 2.68V

	Vcont1	Vcont2	Vcont3
GSM850/900 RX	-	-	-
GSM850/900 TX	-	2.8V	-
GSM1800 RX	-	-	-
GSM1800 TX	2.8V	-	-
GSM1900 RX	-	-	2.8V
GSM1900 TX	2.8V	-	-

PAGE 5
D200/ UEM

PAGE 5
D200/ UEM

N700/ Power
amplifier

VTXB_900

VTXB_1800/1900

VPCtrl_1800/1900

Hi/ low-mode

N500/ HELGO

G501/ 26MHz osc

TXC 18

TXP 19

TX IQ 20

TXIP 22

PAGE 5
D200/ UEM

