

Service schematics

Nokia Lumia 930

RM-1045, RM-1087

v2.0



IMPORTANT

This document is intended for use by authorized Nokia service centers only. Please use the document together with other documents such as the Service Manual and Service Bulletins.

Version information

While every effort has been made to ensure that the document is accurate, some errors may exist. Please always check for the latest published version for this document.

v1.0 - 13.06.2014

- First approved version.

v2.0 - 25.08.2014

- Added RM-1087 information


Contents


- 1 Front page
- 2 PM8941, Battery, Sidekeys, NFC
- 3 PM8941, MSM8974, USB
- 4 PM8841, MSM8974
- 5 MSM8974, Memory, Display/Touch, IHF, Camera, Camera, flash, 2nd camera, flex, Sensors
- 6 Audio, Mics, Daughter PWB, Jumper flex, AV flex, BT/WLAN/FM
- 7 RF Transceiver, GPS
- 8 Component finder top
- 9 Component finder bottom
- 10 Component finder flex boards





Send feedback

- Recommend Change in KICS
- Rate this page in KICS
- e-mail careacademy@nokia.com

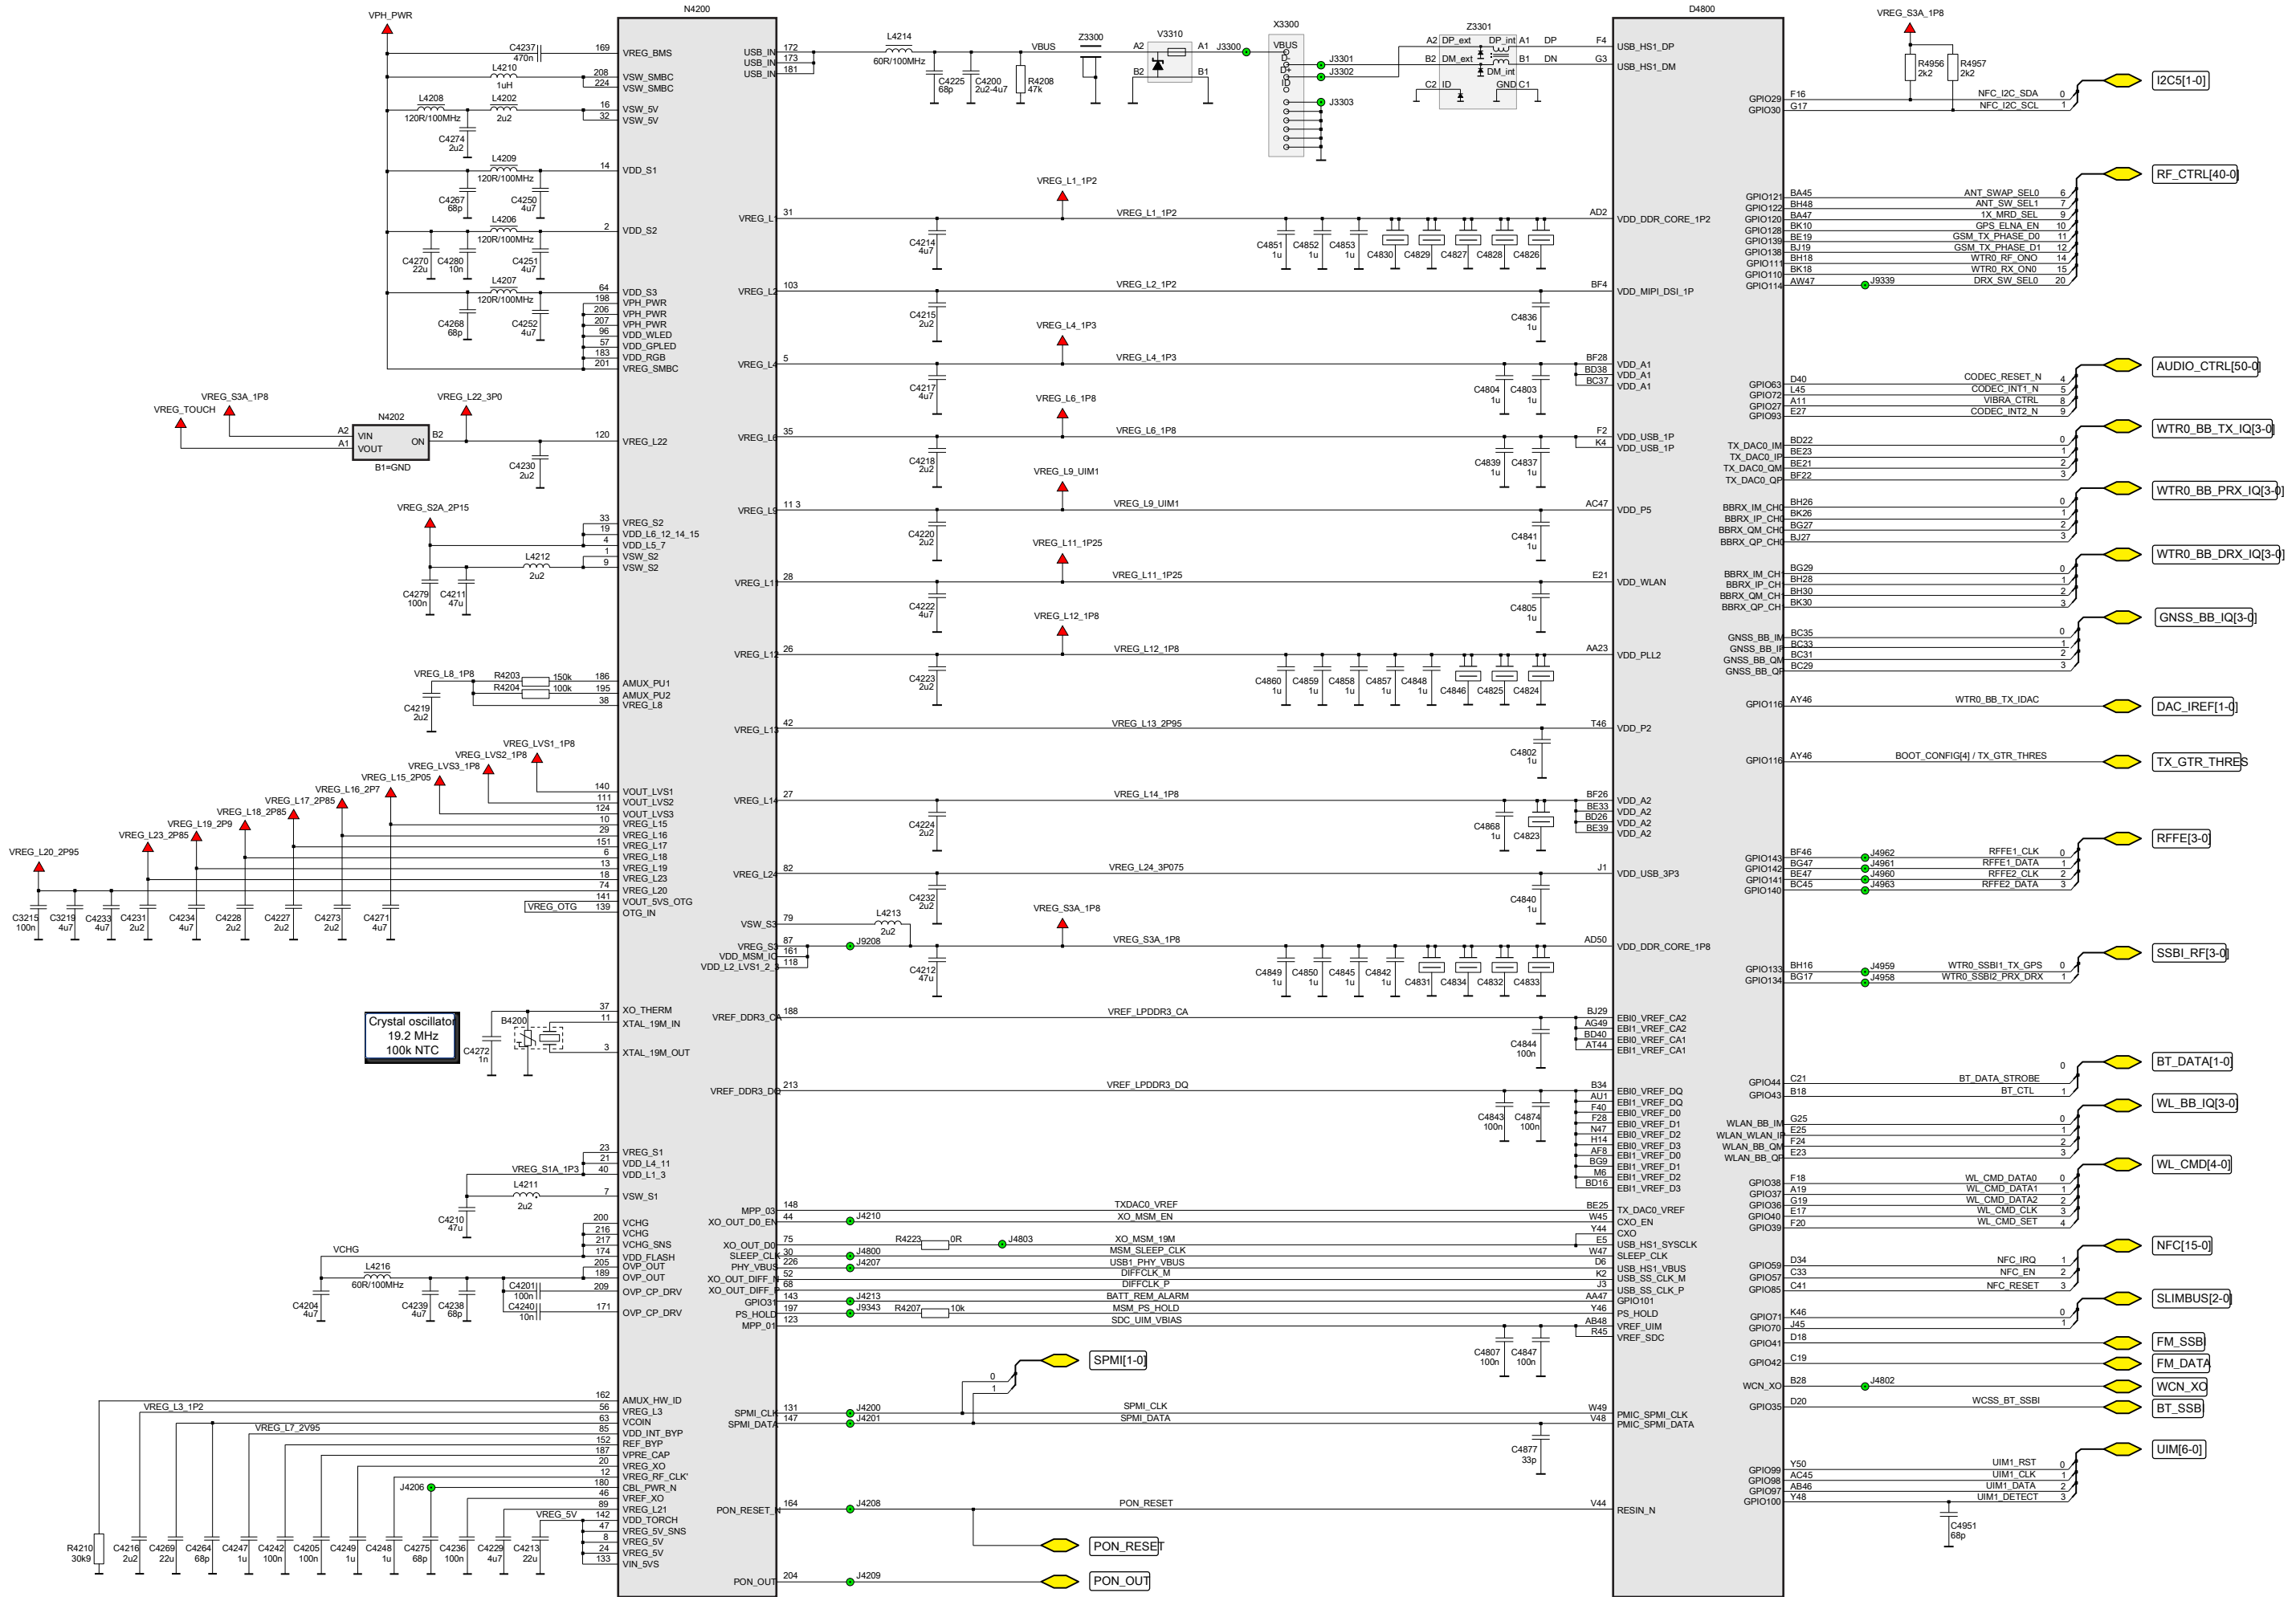

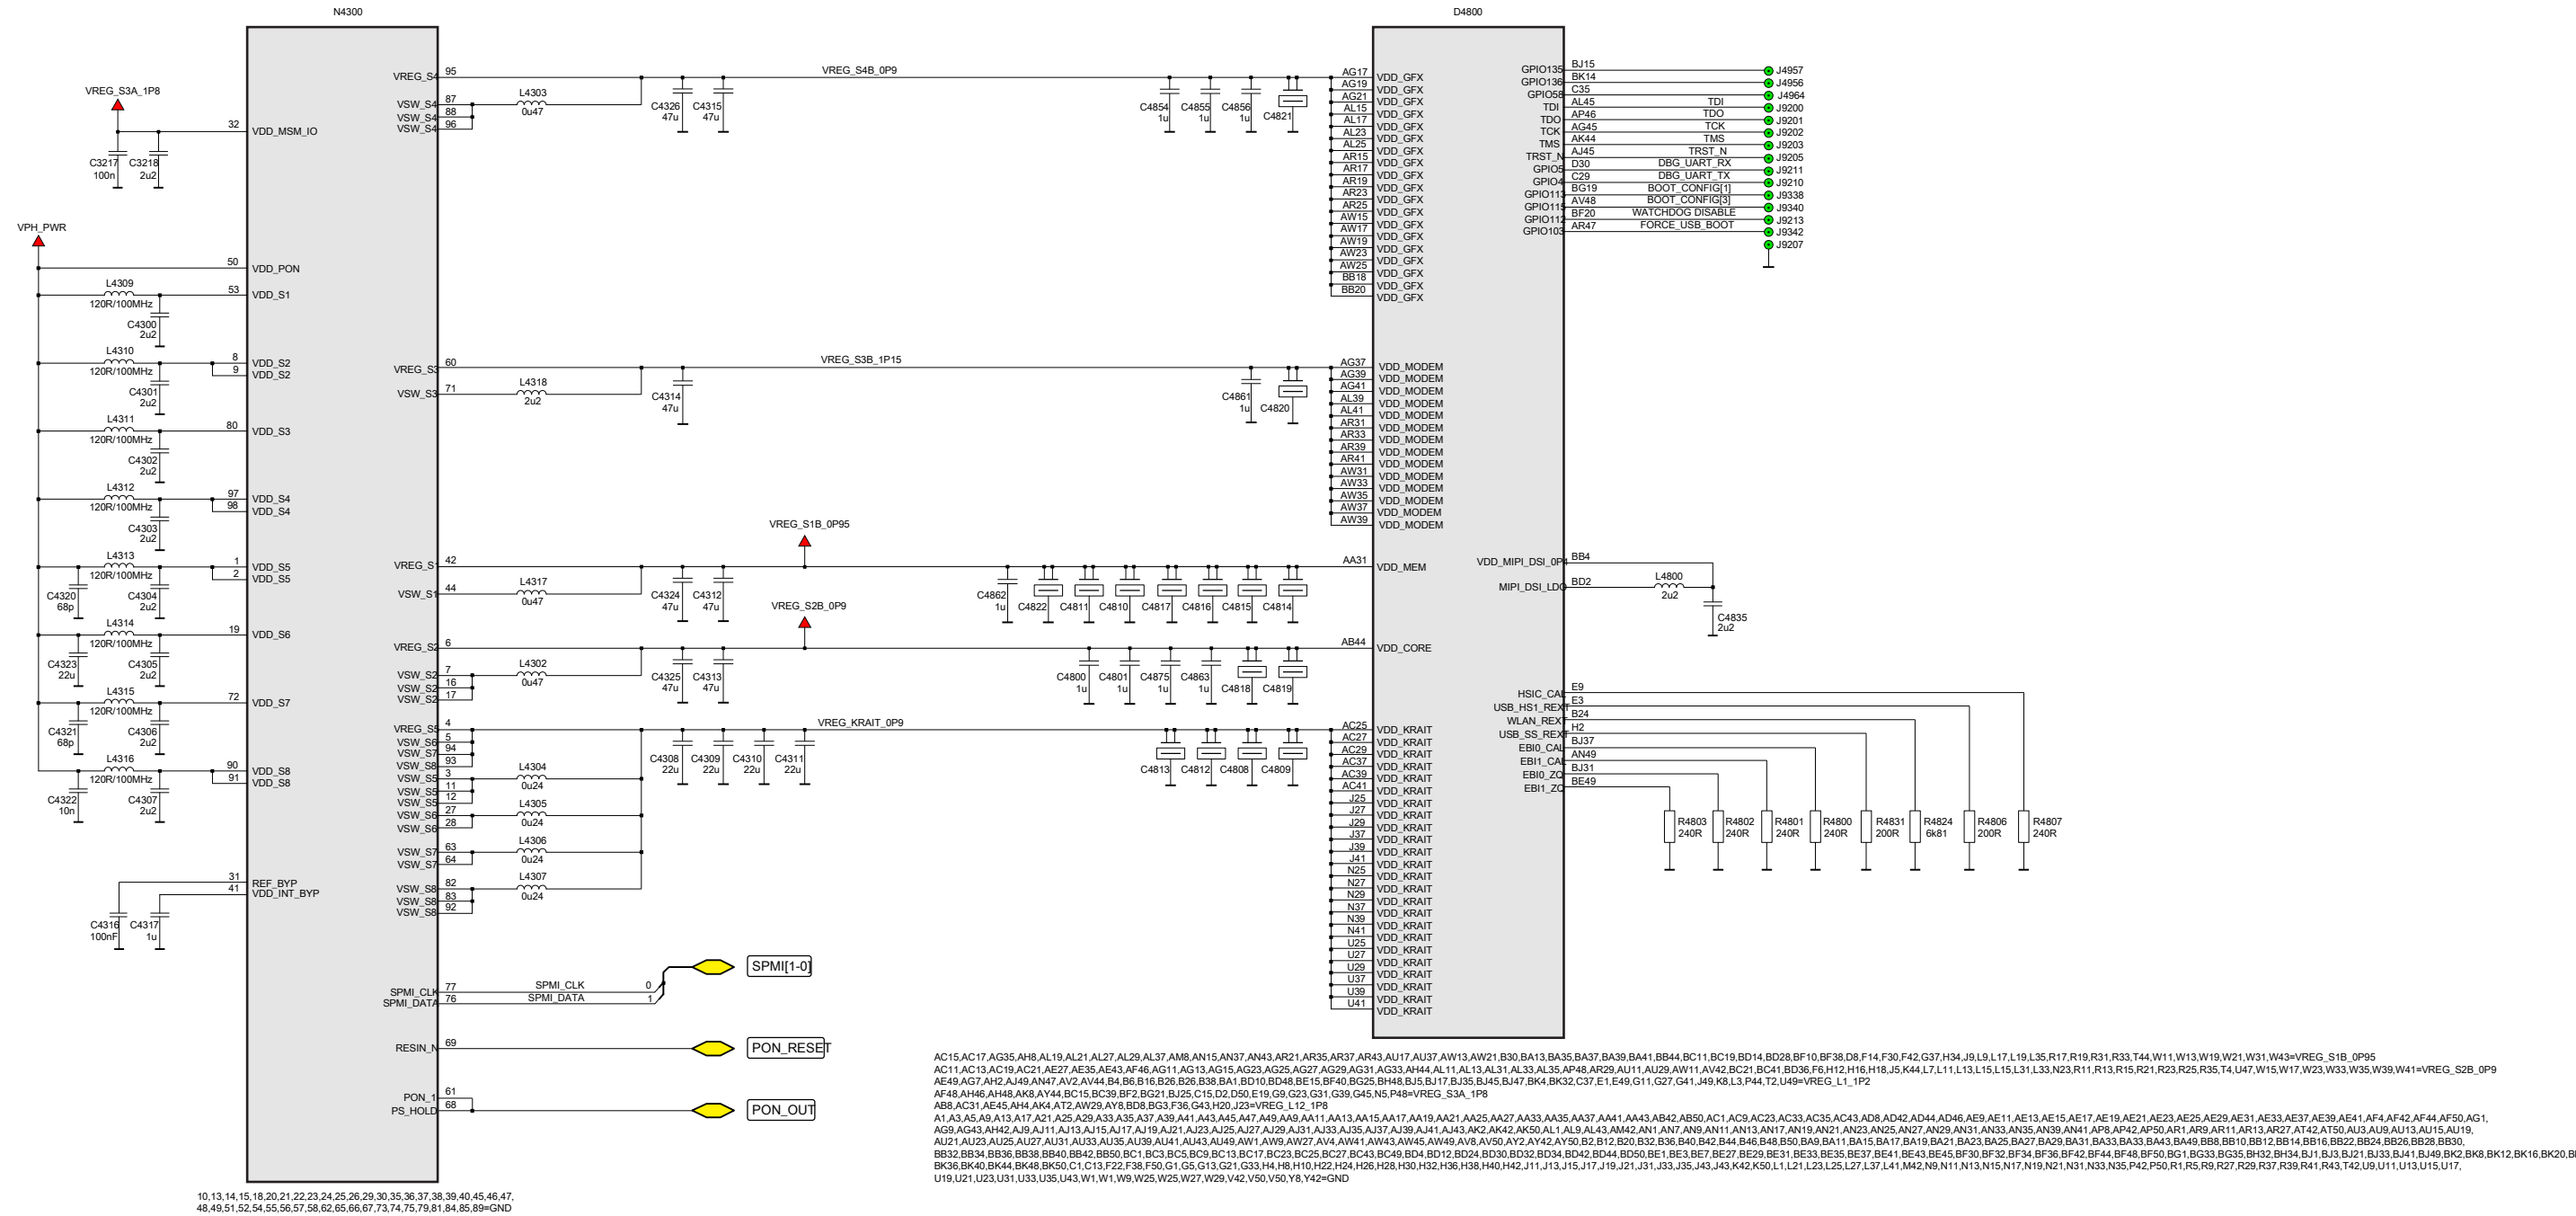


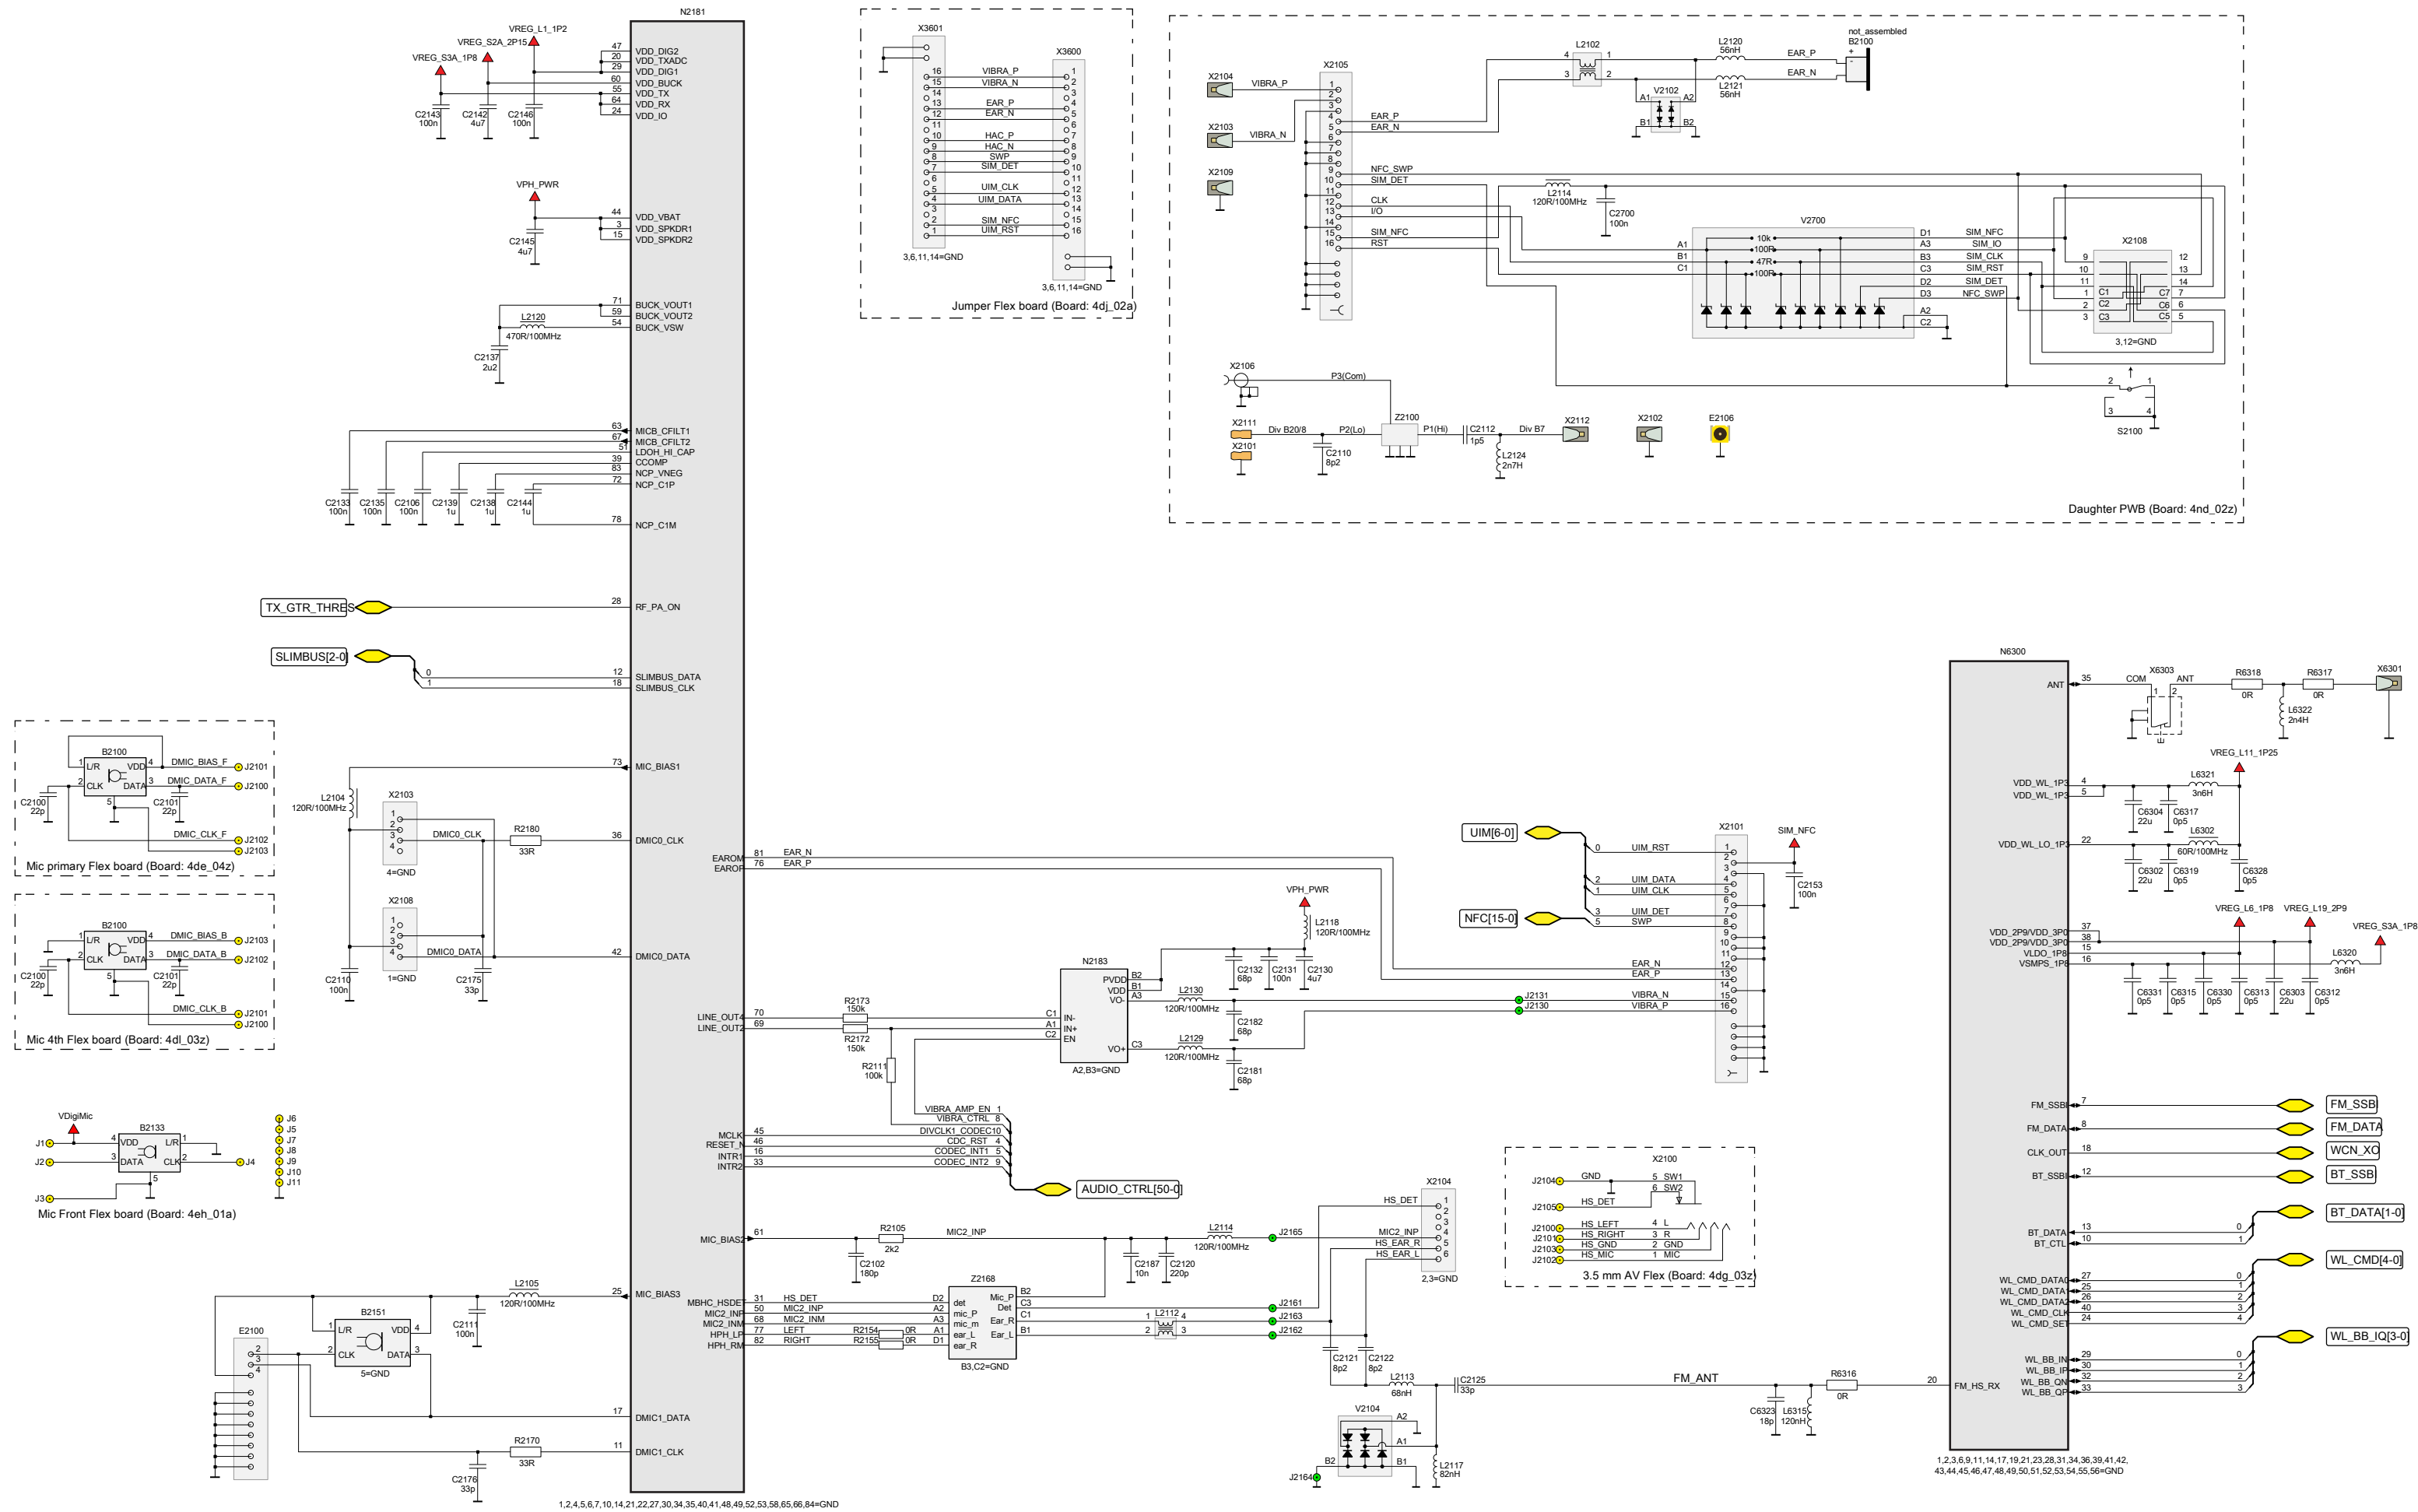

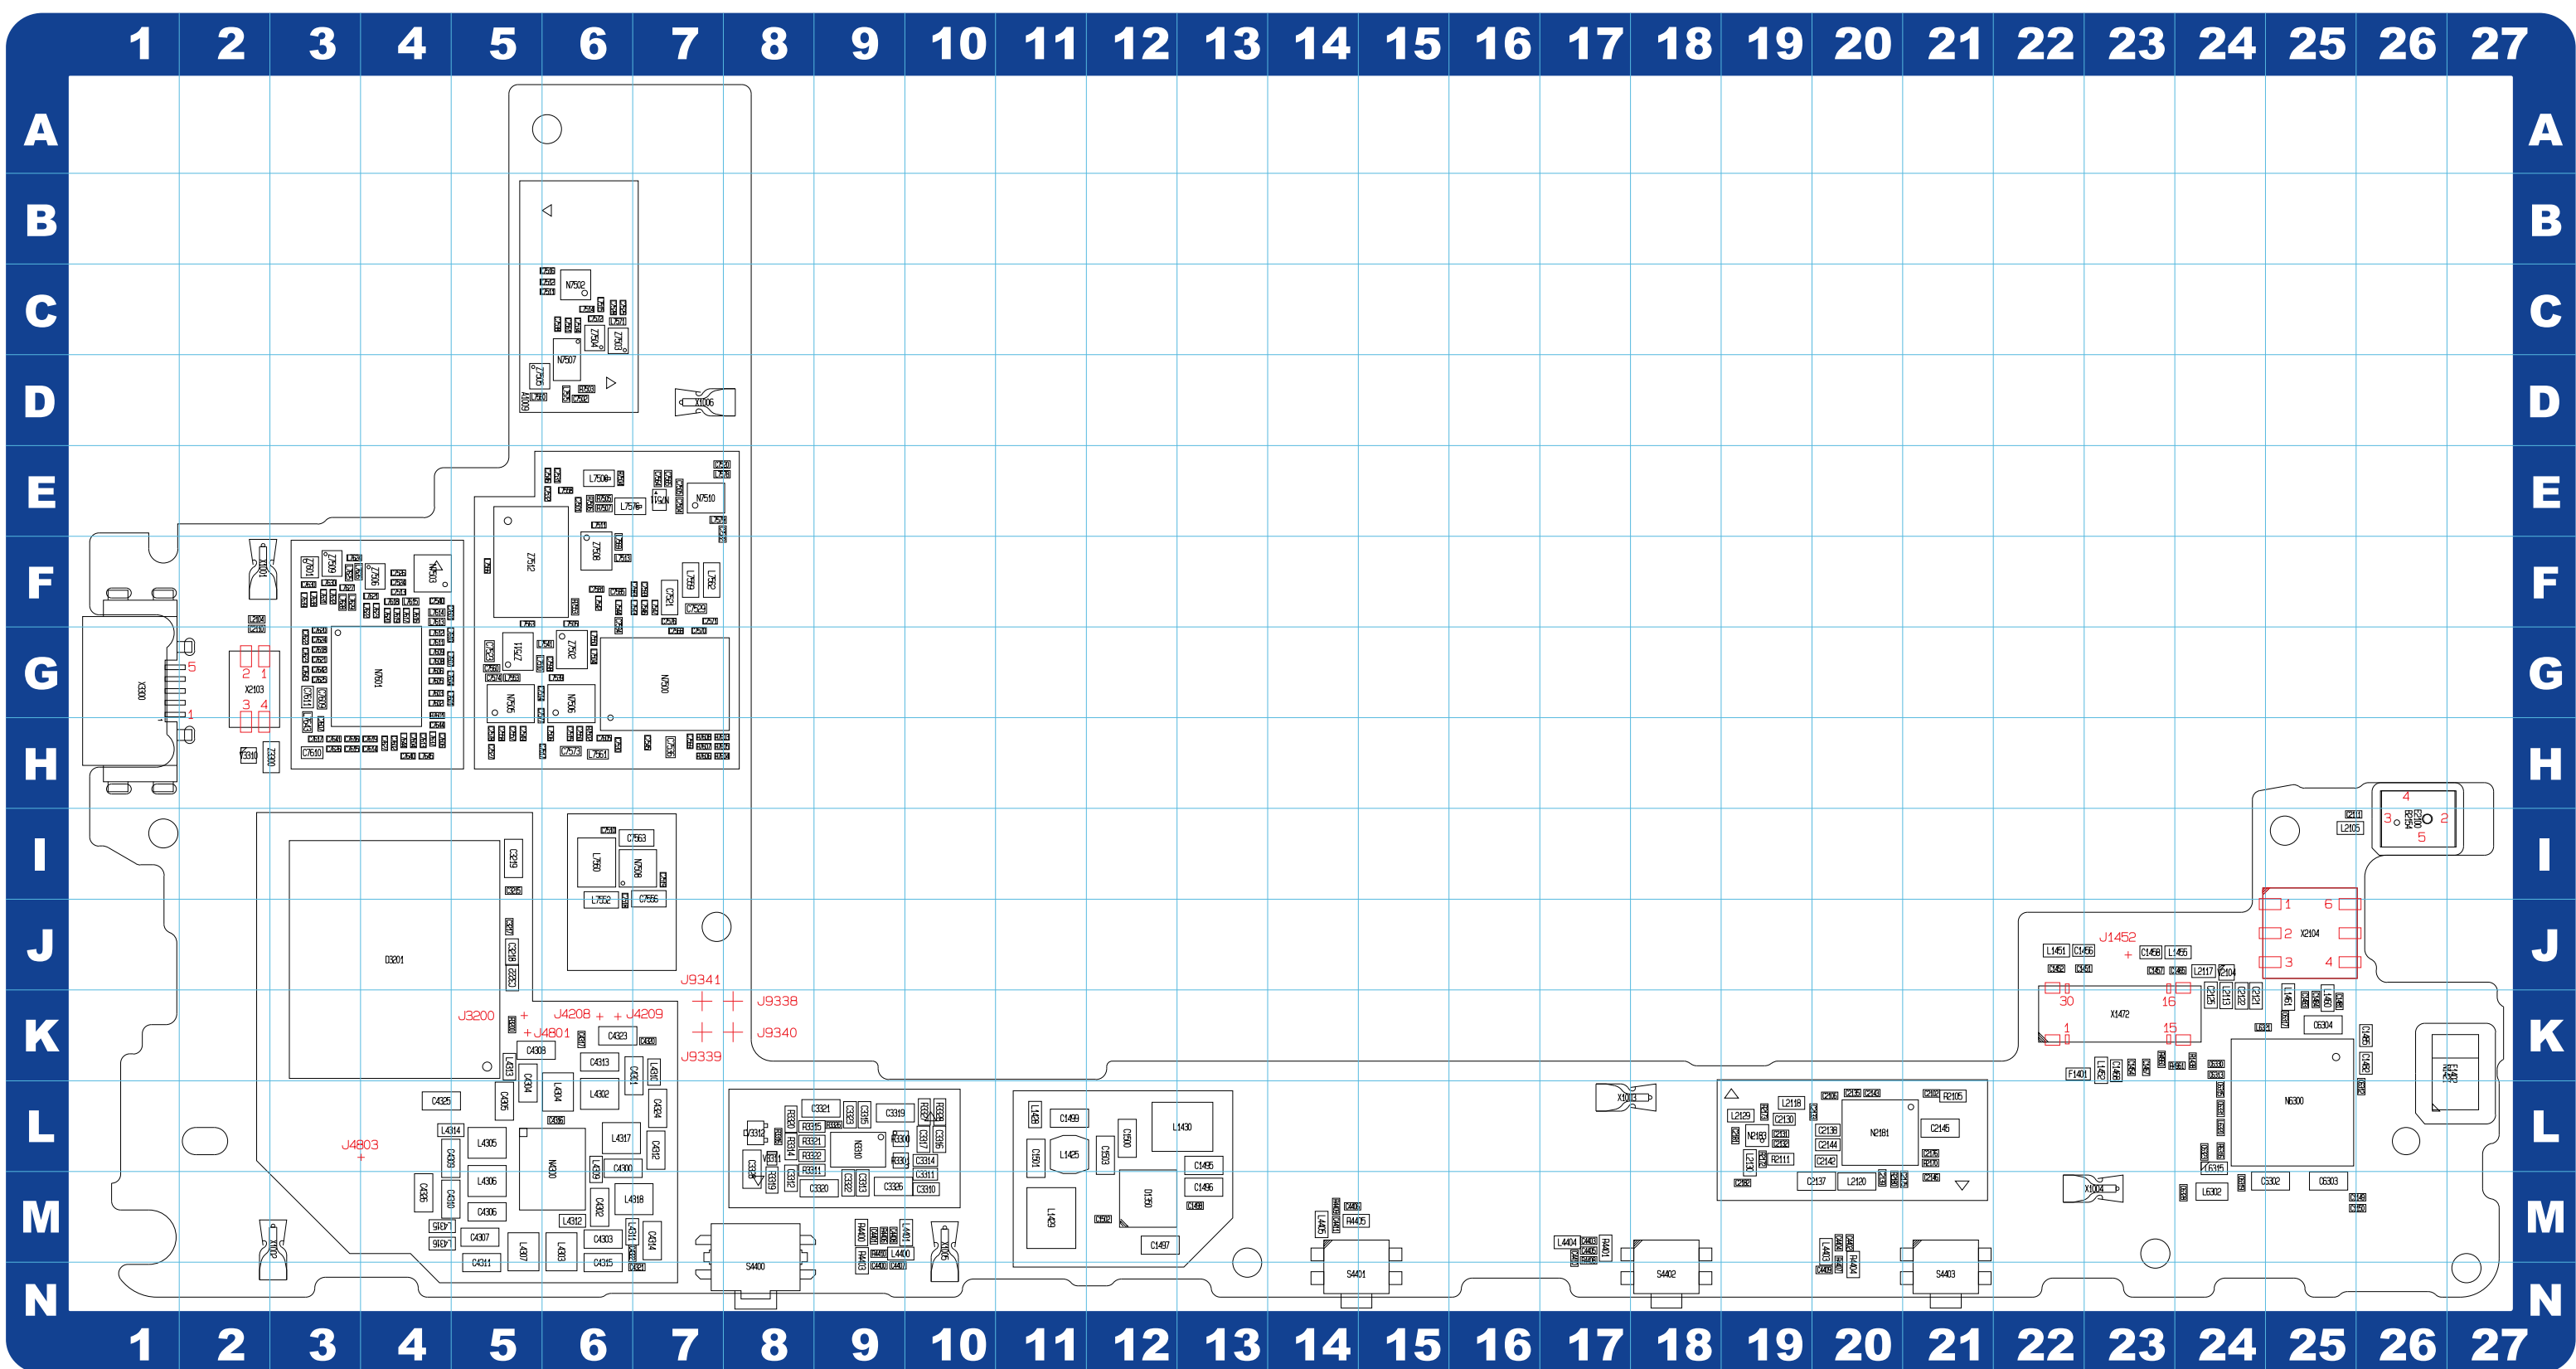


B	C1482	K26	C2110	G2	C2144	L20	C3313	M9	C4303	M6	C4320	K7	C4408	M9	C6331	L24	C7520	E7	C7538	C6	C7569	H7	C7601	F4	C7619	H4	D	L1455	J24	L4306	M5	L4404	M17	L7539	G6	L7563	F5	L7607	G4	L7622	F4	L7644	H4	N7508	I7	R3311	L8	R4405	M14	R7553	F6	V3310	H2	Z2161	L20	Z7509	F3		
B2154	I26	C1483	K25	C2111	I25	C2145	L21	C3314	L10	C4304	L5	C4321	N7	C4409	N20	C7501	E6	C7521	F7	C7540	F4	C7570	G7	C7602	H4	C7620	G3	D1350	M12	L1460	K25	L4307	M5	L4405	M14	L7541	G6	L7566	F5	L7608	G4	L7623	F4	L7645	H4	N7510	E7	R3314	L8	R4406	M9	R7601	G4	V3311	L8	Z2162	L20	Z7511	G5
C	C1484	K25	C2121	K24	C2146	M21	C3315	L9	C4305	L5	C4322	M6	C4410	M17	C7502	D6	C7522	E7	C7545	H7	C7571	F7	C7604	H4	C7621	G3	D3201	J4	L1461	K25	L4309	L6	L6302	M24	L7542	F6	L7569	F6	L7609	G4	L7624	F3	N	N7511	E7	R3315	L8	R4407	N20	R7603	H7	V3312	L8	Z2165	M20	Z7512	F5		
C1149	M26	C1485	K26	C2122	K24	C2175	M21	C3316	L10	C4306	M5	C4323	K6	C4411	M14	C7504	D7	C7523	G5	C7546	E6	C7572	C6	C7605	H6	C7622	G3	E	L2104	F2	L4310	K7	L6302	M24	L7542	F6	L7571	C6	L7610	G4	L7625	F3	N1421	K27	N7601	G4	R3316	L8	R4408	M17	R7604	H7	X	Z2169	L20	Z7601	F3		
C1150	M26	C1495	L13	C2125	K24	C2176	L21	C3317	L10	C4307	M5	C4324	L7	C6302	M25	C7505	E7	C7524	F4	C7549	H5	C7573	H6	C7606	H4	C7623	G3	E1402	K27	L2105	I25	L4311	M6	L6320	L24	L7544	F6	L7575	D6	L7611	G4	L7626	F3	N2181	L20	R	R3319	M8	R4409	M14	R7605	H7	X1001	F2	Z2170	L21	TST point		
C1451	J22	C1496	M13	C2130	L19	C2181	L19	C3319	L9	C4308	K5	C4325	L4	C6303	M25	C7510	I6	C7525	C6	C7550	H6	C7574	G5	C7607	H3	C7624	G3	E2100	I26	L2113	K24	L4312	M6	L6321	K24	L7546	F7	L7576	E6	L7612	G4	L7627	F3	N2183	L19	R1438	K24	R3320	L8	R4410	M9	R7606	H7	X1002	M3	Z2172	J24	J1452	J23
C1452	J22	C1497	M12	C2131	L19	C2182	M19	C3320	M9	C4309	L4	C4326	M4	C6304	K25	C7511	C6	C7526	F4	C7556	I7	C7576	F7	C7609	G3	C7625	G3	F	L2117	J24	L4313	K5	L7500	E6	L7547	F7	L7578	E7	L7613	F4	L7628	F3	N3310	L9	R2105	L21	R3321	L8	R4960	K23	R7607	H7	X1003	L17	Z3300	H3	J3200	K5	
C1454	K23	C1498	M13	C2132	L19	C3215	I5	C3321	L9	C4310	M4	C4400	N9	C6312	L26	C7512	C6	C7527	H5	C7557	H5	C7577	G5	C7610	H3	C7626	H3	F1401	K22	L2118	L19	L4314	L4	L7504	G6	L7550	G6	L7579	E7	L7614	F4	L7629	F3	N4300	L6	R2111	L19	R3322	L8	R4961	K24	R7608	H7	X1004	M23	Z4285	G5	J4208	K6
C1456	J22	C1499	L11	C2133	L20	C3217	J5	C3322	M9	C4311	N5	C4401	M9	C6313	K24	C7513	F4	C7528	C6	C7558	H5	C7578	H5	C7611	G3	C7627	H4	L	L2120	M20	L4315	M4	L7505	F6	L7552	J6	L7580	D5	L7615	F4	L7630	F3	N6300	L25	R2170	L21	R3326	L9	R6316	L24	S	X1005	M10	Z4301	L6	J4209	K6		
C1457	J23	C1500	L12	C2135	L20	C3218	J5	C3323	L9	C4312	L7	C4402	M20	C6315	L24	C7514	G5	C7529	F7	C7560	G5	C7581	F6	C7613	H4	C7630	F3	L1425	L11	L2129	L19	L4316	M4	L7506	H6	L7553	G5	L7601	G4	L7616	F4	L7631	F3	N7500	G7	R2172	L19	R3327	L10	R7502	H6	S4400	M8	X1006	D7	Z7502	G6	J4801	K5
C1458	J23	C1501	L11	C2137	M20	C3219	I5	C3326	M9	C4313	K6	C4403	M17	C6317	K25	C7515	H6	C7530	H6	C7561	C6	C7583	F7	C7614	H4	C7640	H4	L2130	L19	L4317	L6	L7510	G5	L7558	E6	L7602	G4	L7617	F4	L7632	F3	N7502	C6	R2173	L19	R3328	L10	R7503	D6	S4401	N14	X1472	K23	Z7503	C6	J4803	L4		
C1465	J24	C1502	M12	C2138	L20	C3222	J5	C3328	L8	C4314	M7	C4404	M20	C6319	M24	C7516	C6	C7531	E6	C7563	I7	C7584	F6	C7615	H3	C7641	H3	L1429	M11	L4302	L6	L4318	M7	L7511	E6	L7559	F7	L7603	G4	L7618	F4	L7637	H4	N7503	F4	R2180	M20	R4400	M9	R7504	E6	S4402	N18	X2103	G2	Z7504	C6	J9338	K8
C1467	K23	C1503	L12	C2139	M20	C3310	M10	C4300	L6	C4315	N6	C4405	M17	C6323	L24	C7517	H6	C7532	E6	C7564	E7	C7585	F6	C7616	H3	C7642	G3	L1430	L13	L4303	M6	L4400	M9	L7513	F6	L7560	I6	L7604	G4	L7619	F4	L7638	F3	N7505	G5	R3200	K5	R4401	M17	R7505	E6	S4403	N21	X2104	J25	Z7505	D5	J9339	K7
C1468	K23	C2102	L21	C2142	L20	C3311	M10	C4301	K7	C4316	L6	C4406	M14	C6328	M24	C7518	J6	C7534	C6	C7565	E7	C7593	F7	C7617	H3	C7643	G3	L1451	J22	L4304	L6	L4401	M10	L7514	C6	L7561	H6	L7605	G4	L7620	F4	L7639	F3	N7506	G6	R3300	L9	R4403	M9	R7506	E6	V	X3300	G1	Z7506	F4	J9340	K8	
C1481	K25	C2106	L20	C2143	L20	C3312	M8	C4302	M6	C4317	K6	C4407	N9	C6330	K24	C7519	I7	C7536	H7	C7568	G7	C7598	G6	C7618	G3	C7644	H4	L1452	K23	L4305	L5	L4403	M20	L7515	C6	L7562	F7	L7606	G4	L7621	F4	L7643	H3	N7507	D6	R3301	L9	R4404	N20	R7507	E6	V2104	J24	Z	Z7508	F6	J9341	K7	


Daughter PWB board (Board: 4nd_02z)

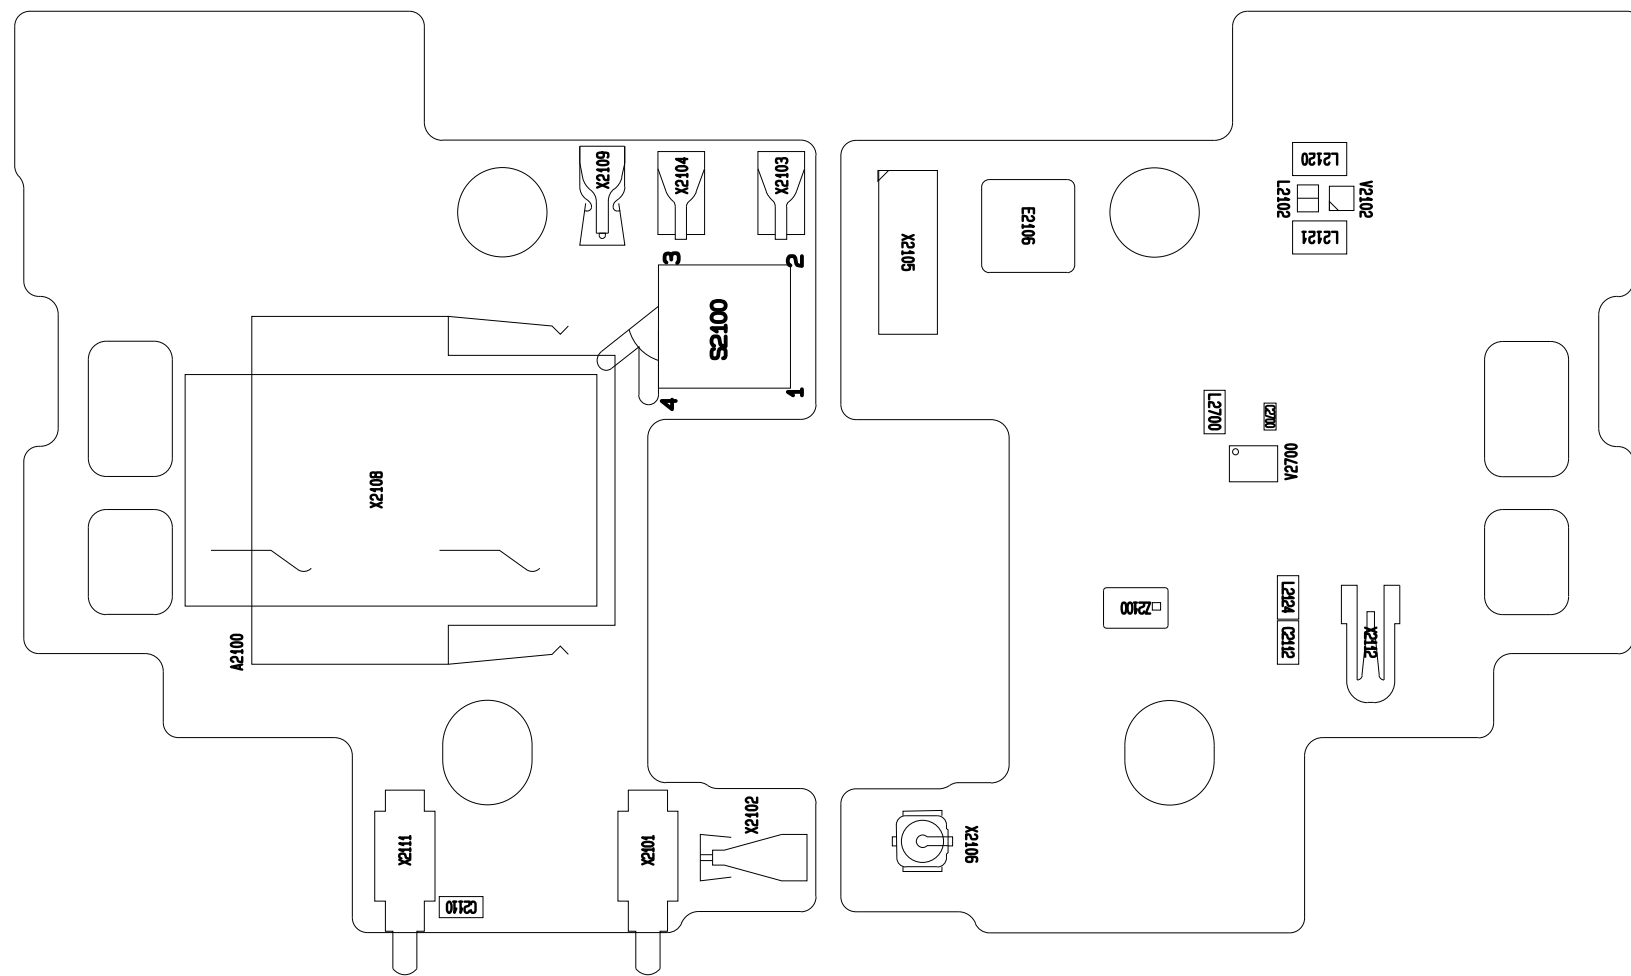


Ant flex board (Board: 4nt_03a)

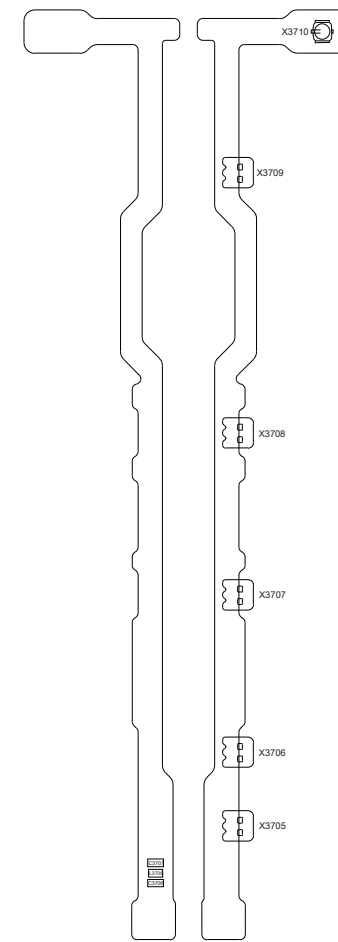


Ant flex board (Board: 4ns_01z)

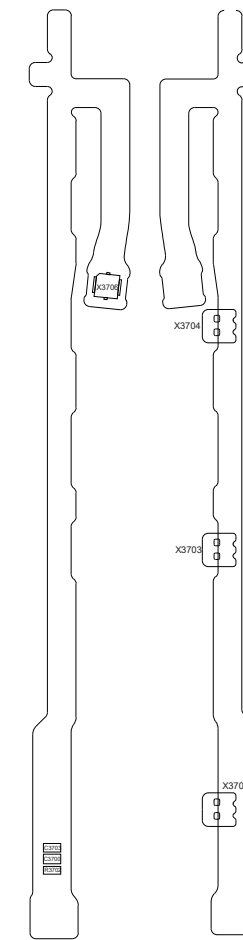


Antenna MIMO flex board (Board: 4dv_01a)

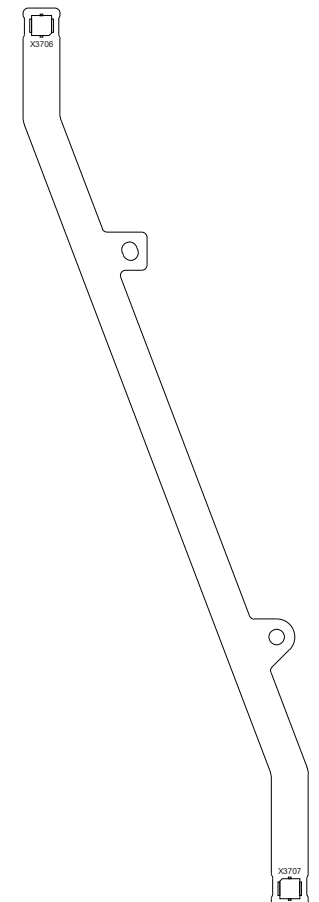


Skype Camera flex board (Board: 4dk_02a)

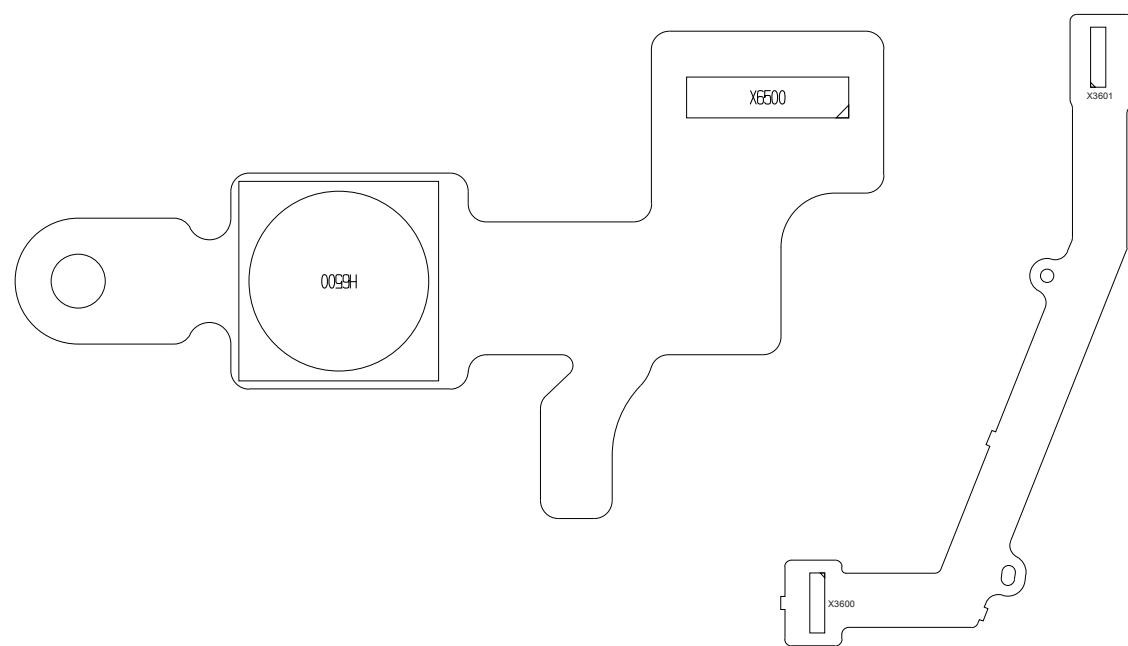


Jumper flex board (Board: 4dj_02a)

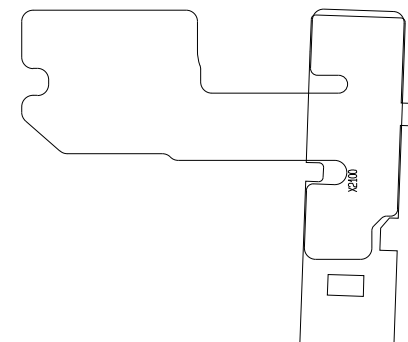


HSJ flex board (Board: 4dg_03a)

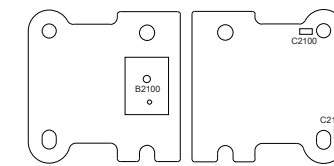

Primary Mic flex board (Board: 4de_04z)

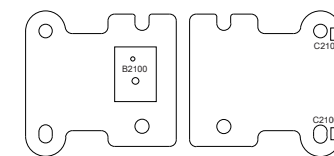

Vibra flex board (Board: 4df_02z)

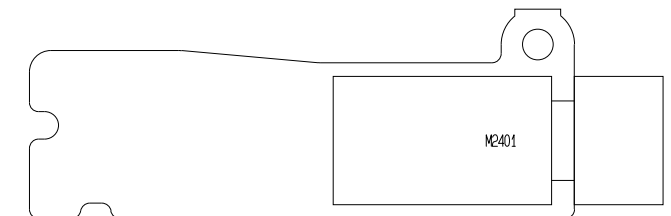

4th Mic flex board (Board: 4dl_03z)