



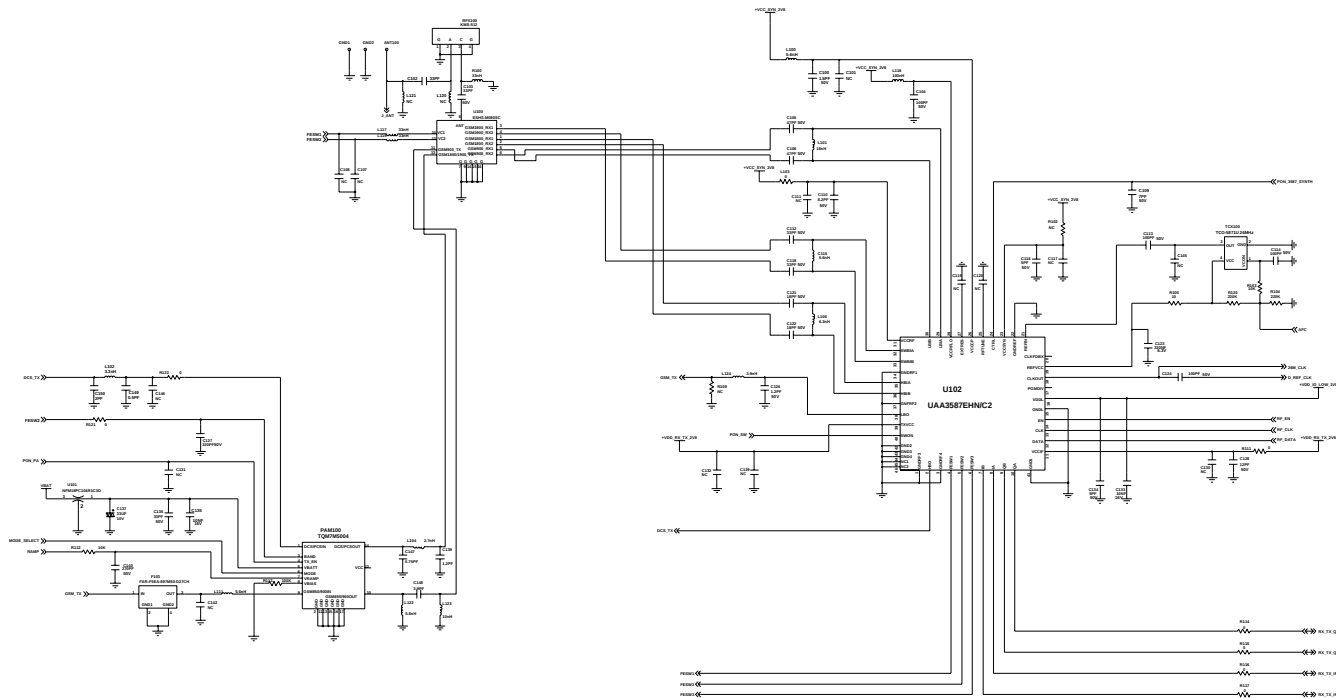



	FE80L	FE80H
Tp(C000000)	L	L
Tp(C000000000)	L	L
Rp(C000000)	L	L
Rp(C000000)	L	L
Rp(C000000)	L	L

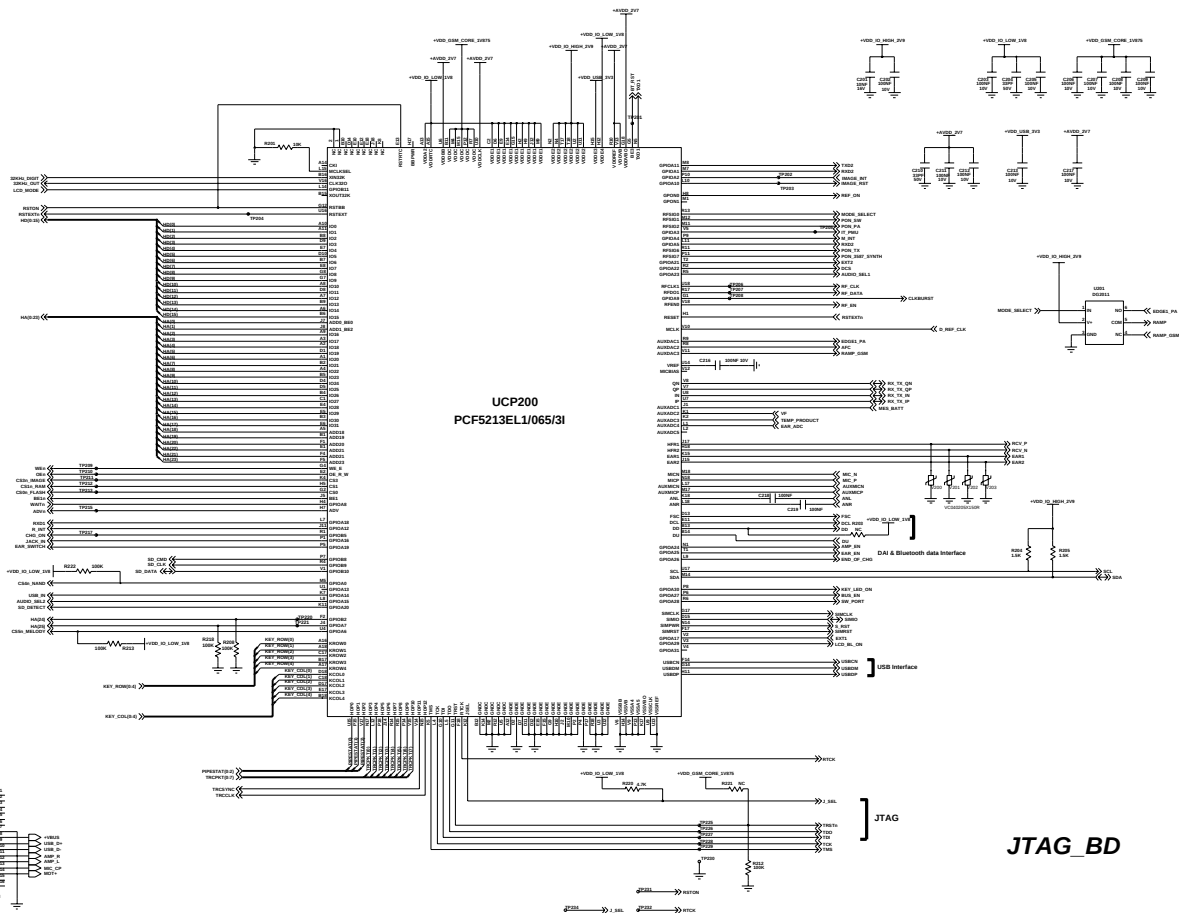

J-TAG 32 PINS


JTAG BD

Baseband IC(PCF5213) Schematic		
Rev1.1		
Date: 2005.10.26		
Sheet: 2 of 7		

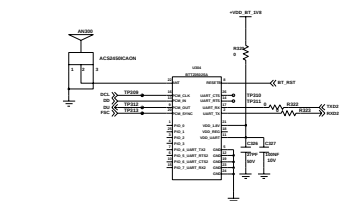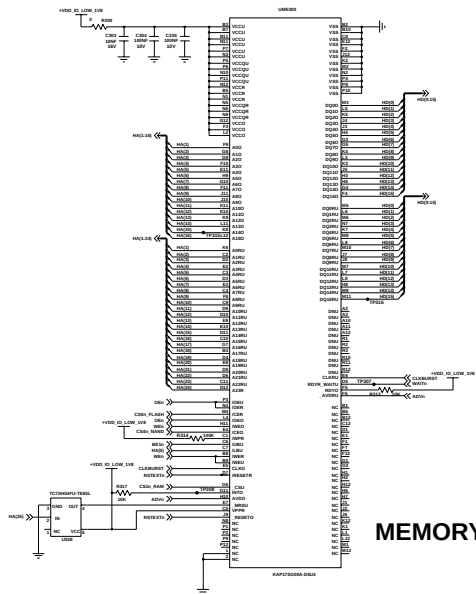


BLUE TOOTH


MEMORY

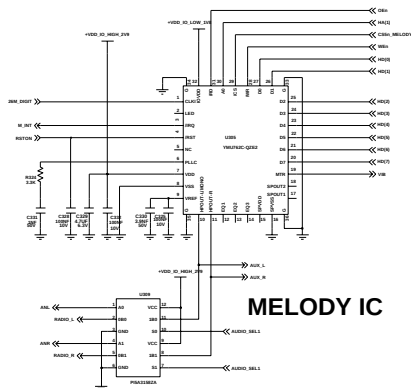


MELODY IC




D_Class_AMP

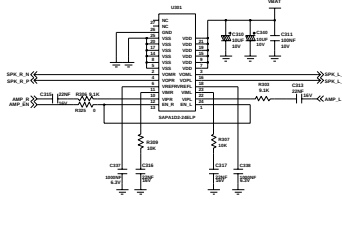

FM RADIO




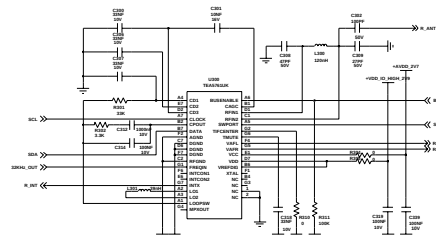


IMAGE_DSP

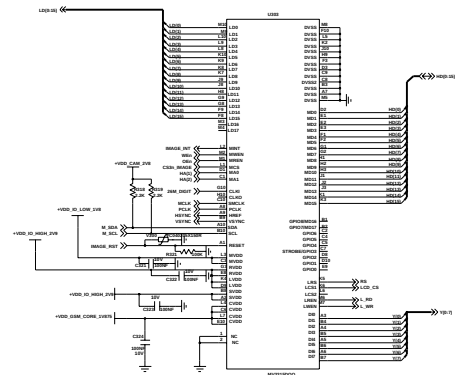

Memory & Melody Schematic


DC/DC Down Conveter(1.8Volt)

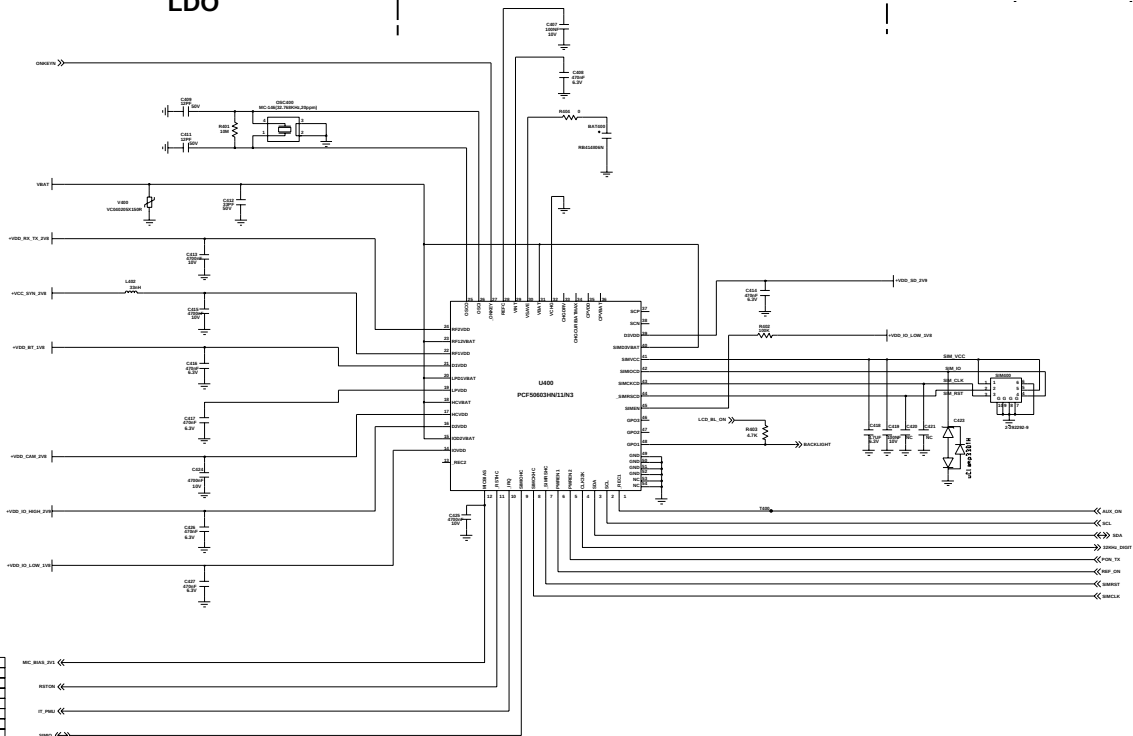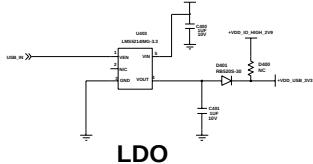

VDD_IO_HIGH	2.8V
VDD_IO_LOW	1.8V
VDD_WT	1.8V
VDD_CAM_FVB	1.8V
AVDD_2V7	2.7V
VDD_3D	2.8V
VCC_RX_TX	2.8V
VCC_3V3	2.8V
VDD_GSM_CORE	1.8V/0V
VDD_USB	3.2V
VDD_SLEEP	2.8V


```
MC_BIAS_ZVS <=>
RISTON <=>
IT_PSW <=>
SMBD <=>
```

Digital External Interface

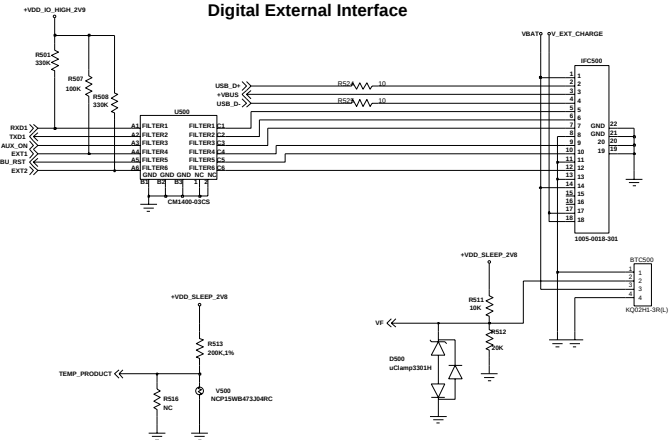



THERMISTER

T-FLASH

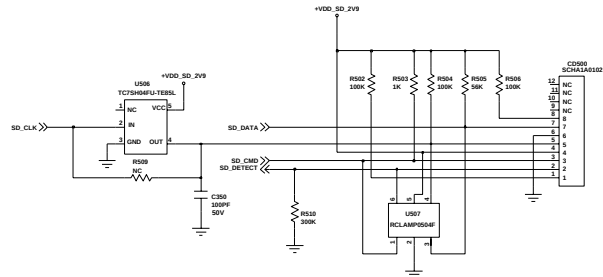


USB Interface



PCB_HOLE

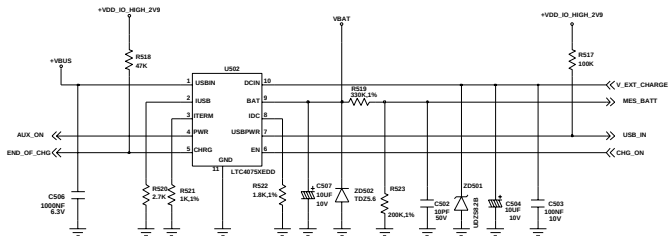


BATTERY CHARGING

Title			
IF Connector & Charging Schematic			
Size A3	Document Number SAMSUNG/SGH-X7000/B.B/IF & CHARGING		Rev Rev 1.1
Date:	2005.10.26.	Sheet	5 of 7

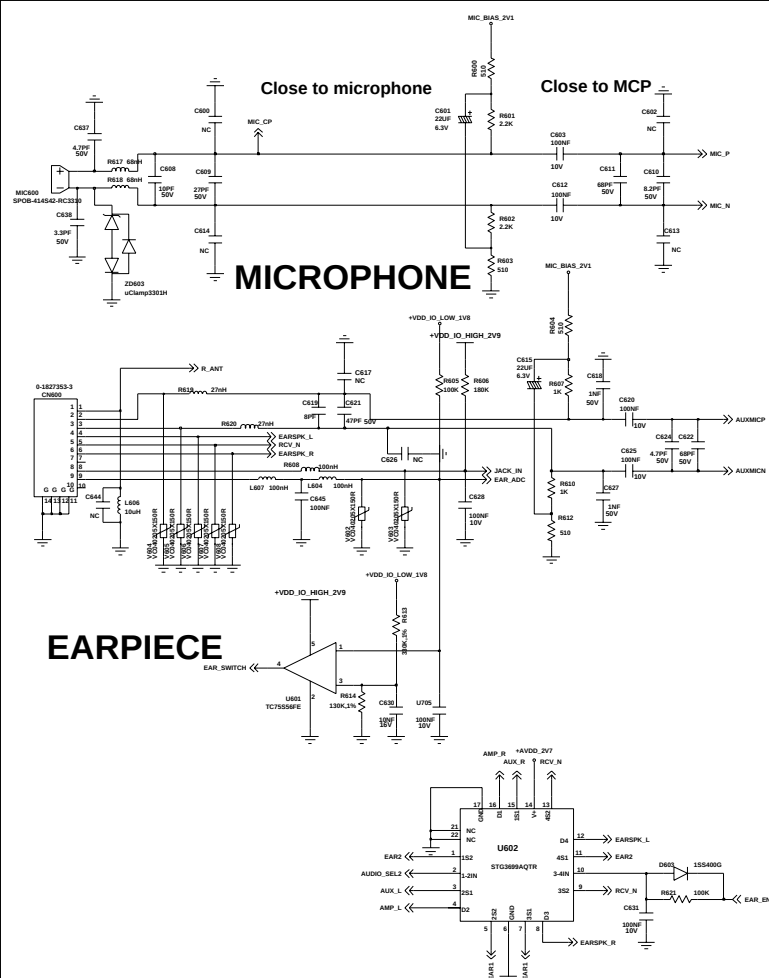


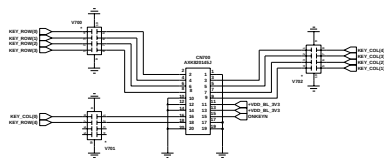



KEY BACKLIGHT

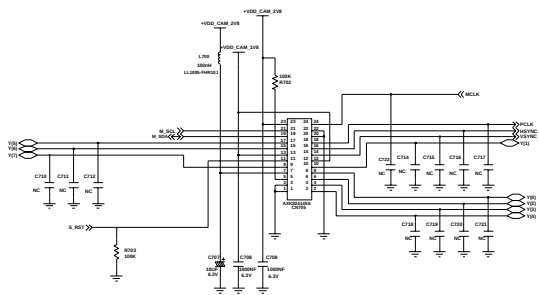


CAMERA

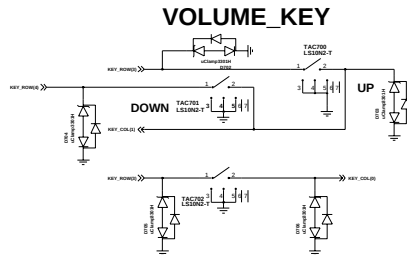

CAMERA_KEY

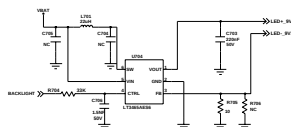

LCD BACKLIGHT

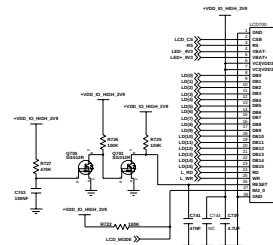

LCD CONNECTOR

