




RF/BB Connections v. 0.0 ed.7

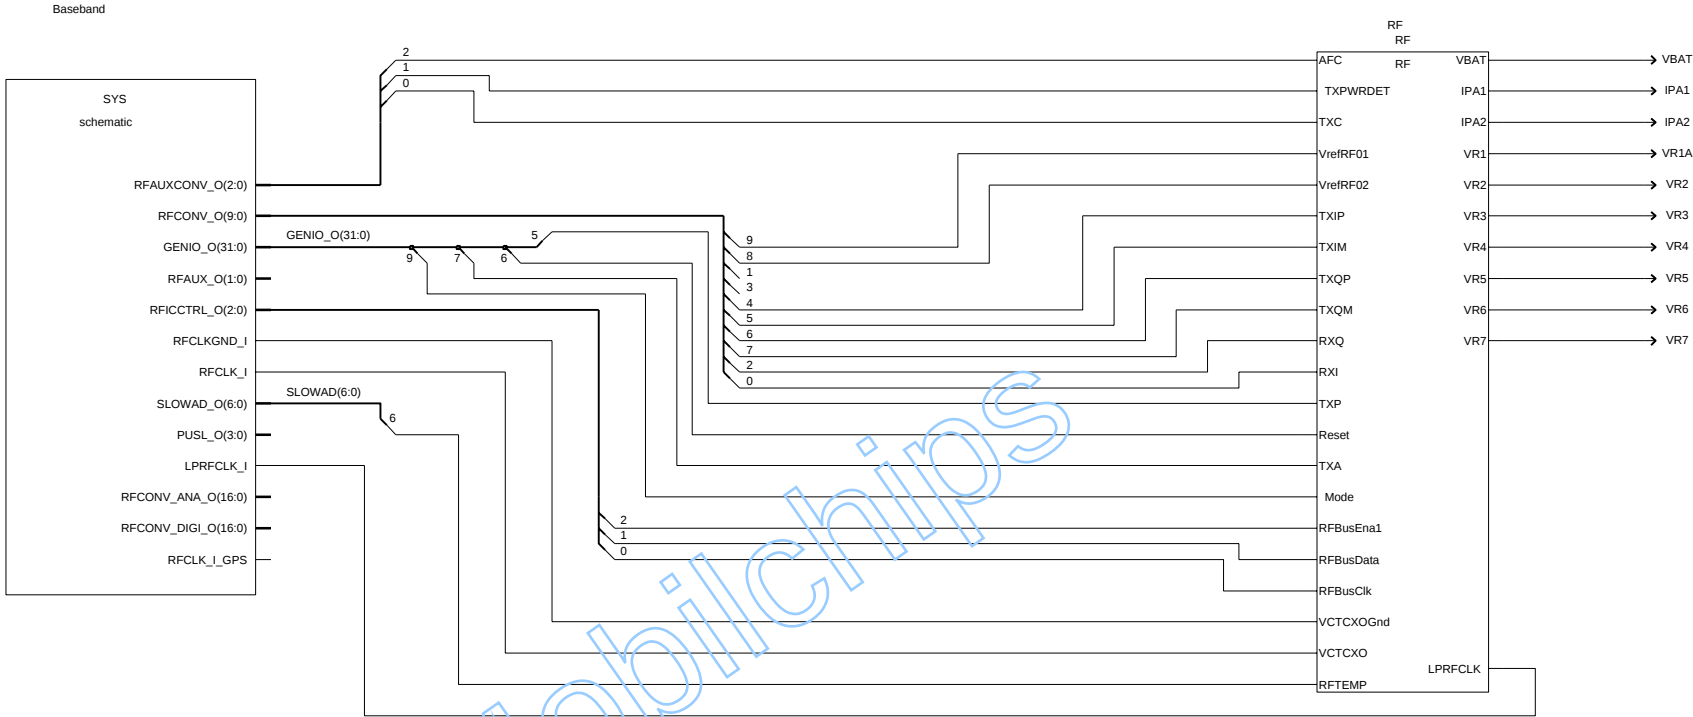


RF Block Diagram v.0.0 ed.13

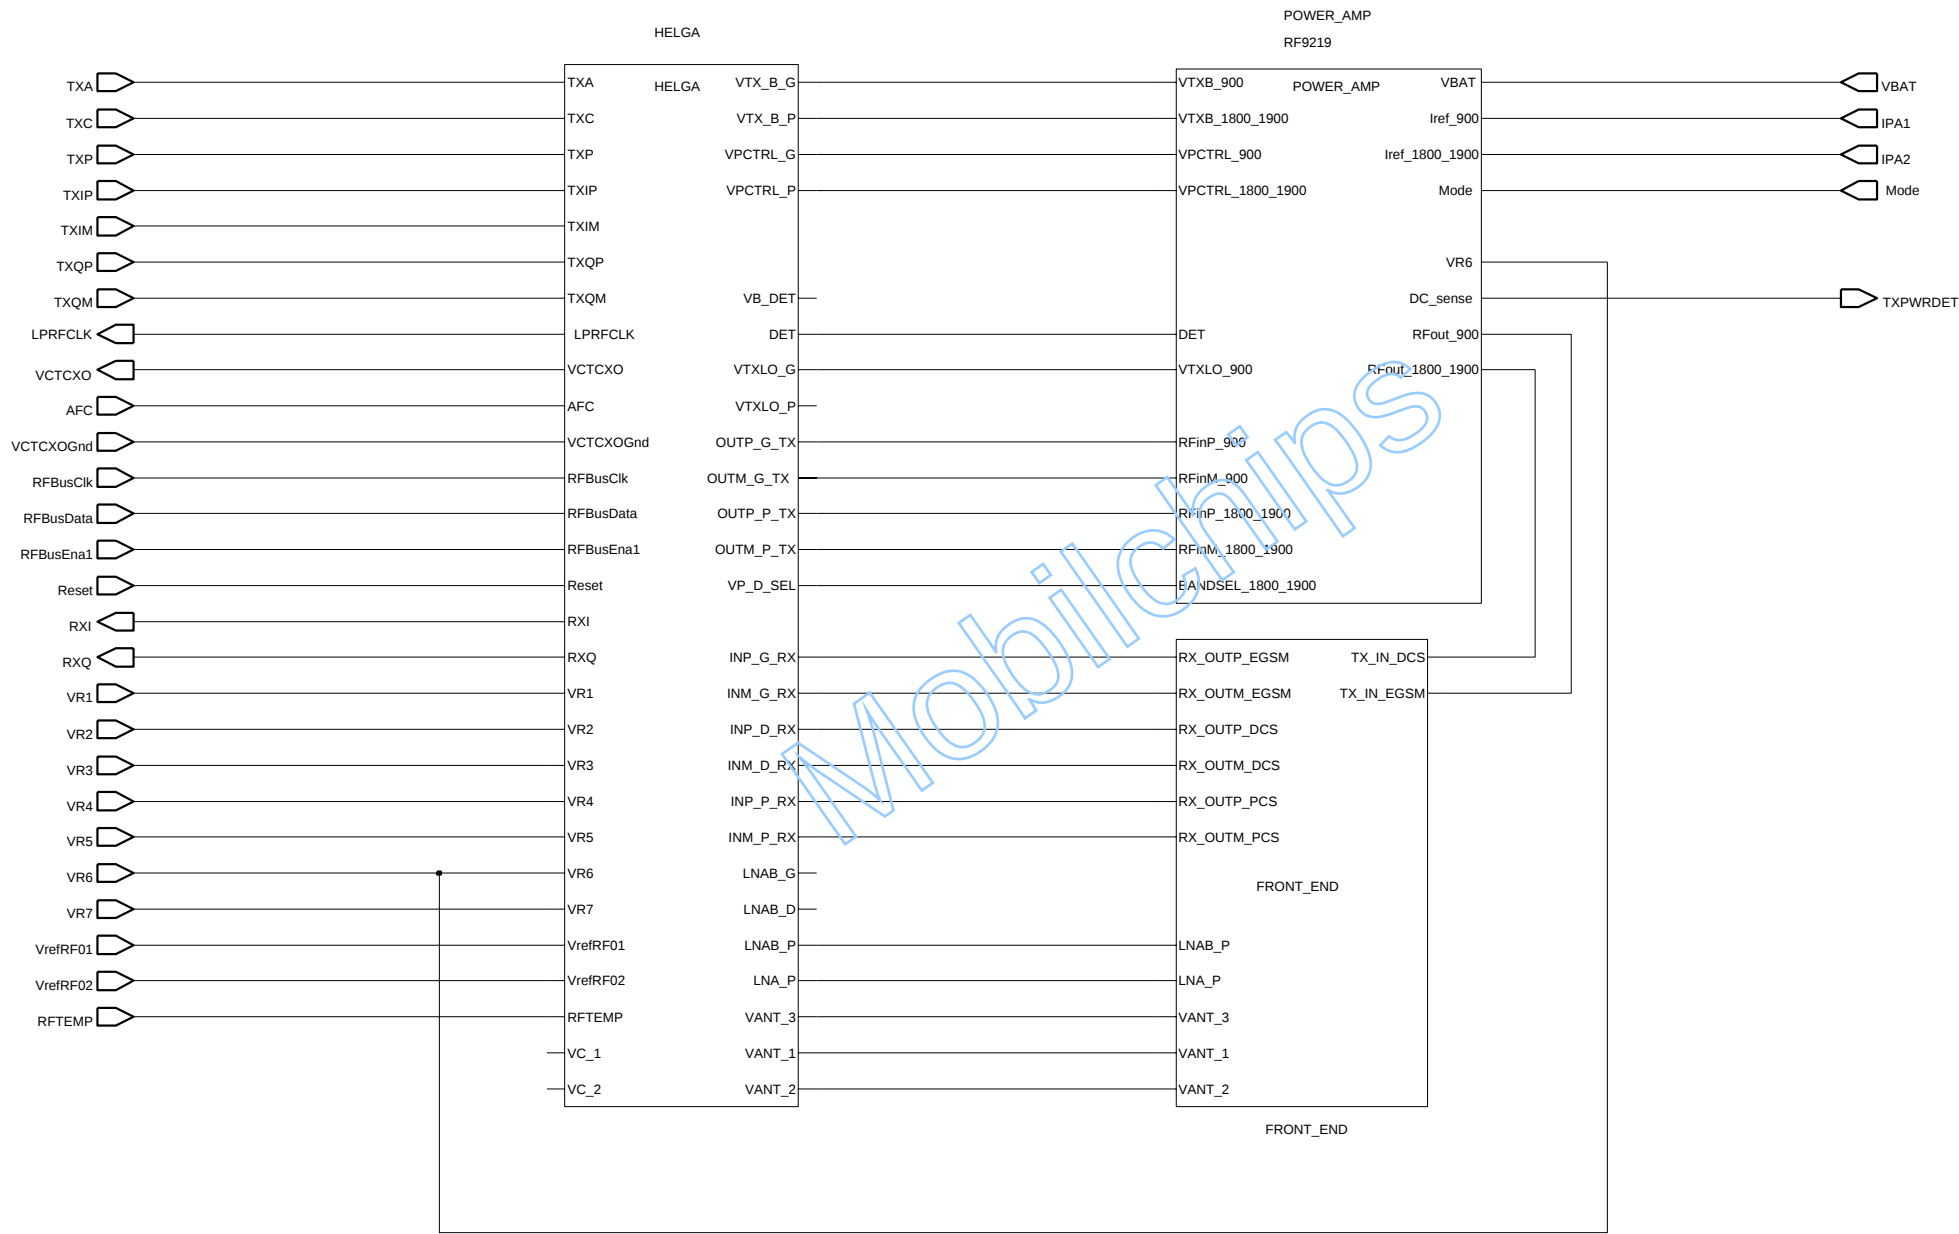


Helga RF Schematic Diagram v. 0.0 ed.42

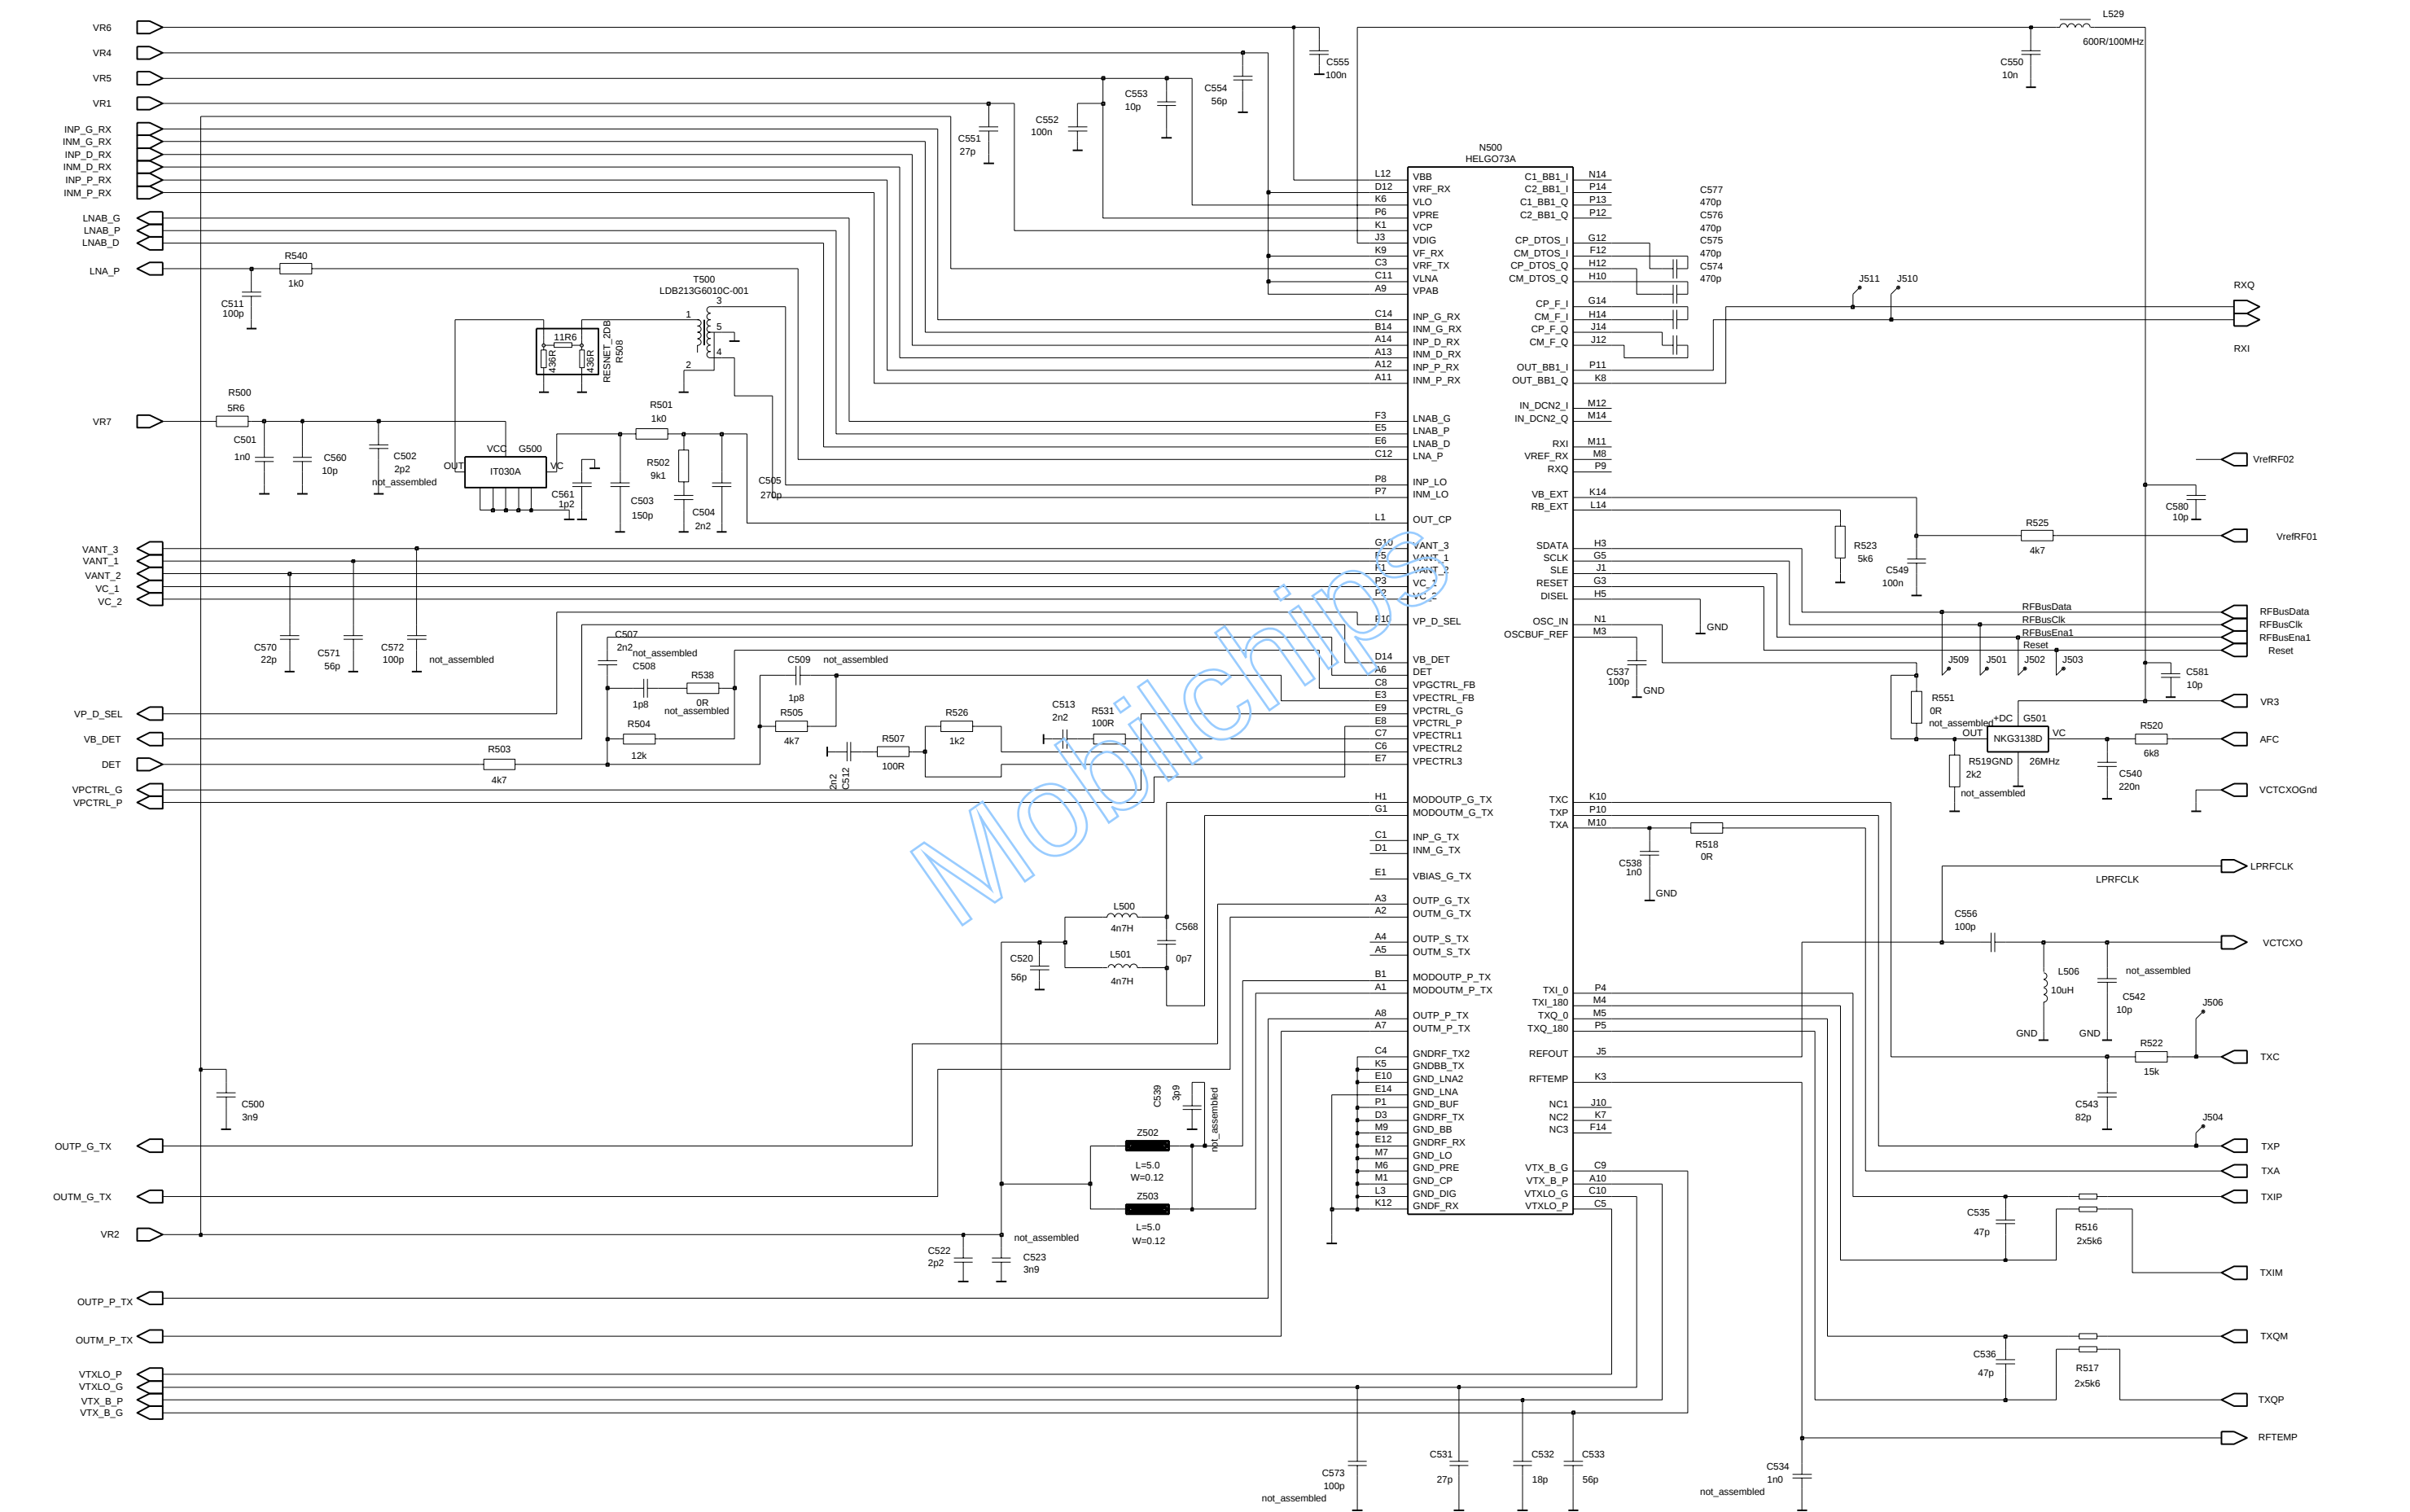


Receiver Front End and Antenna Switch v. 0.0 ed.20

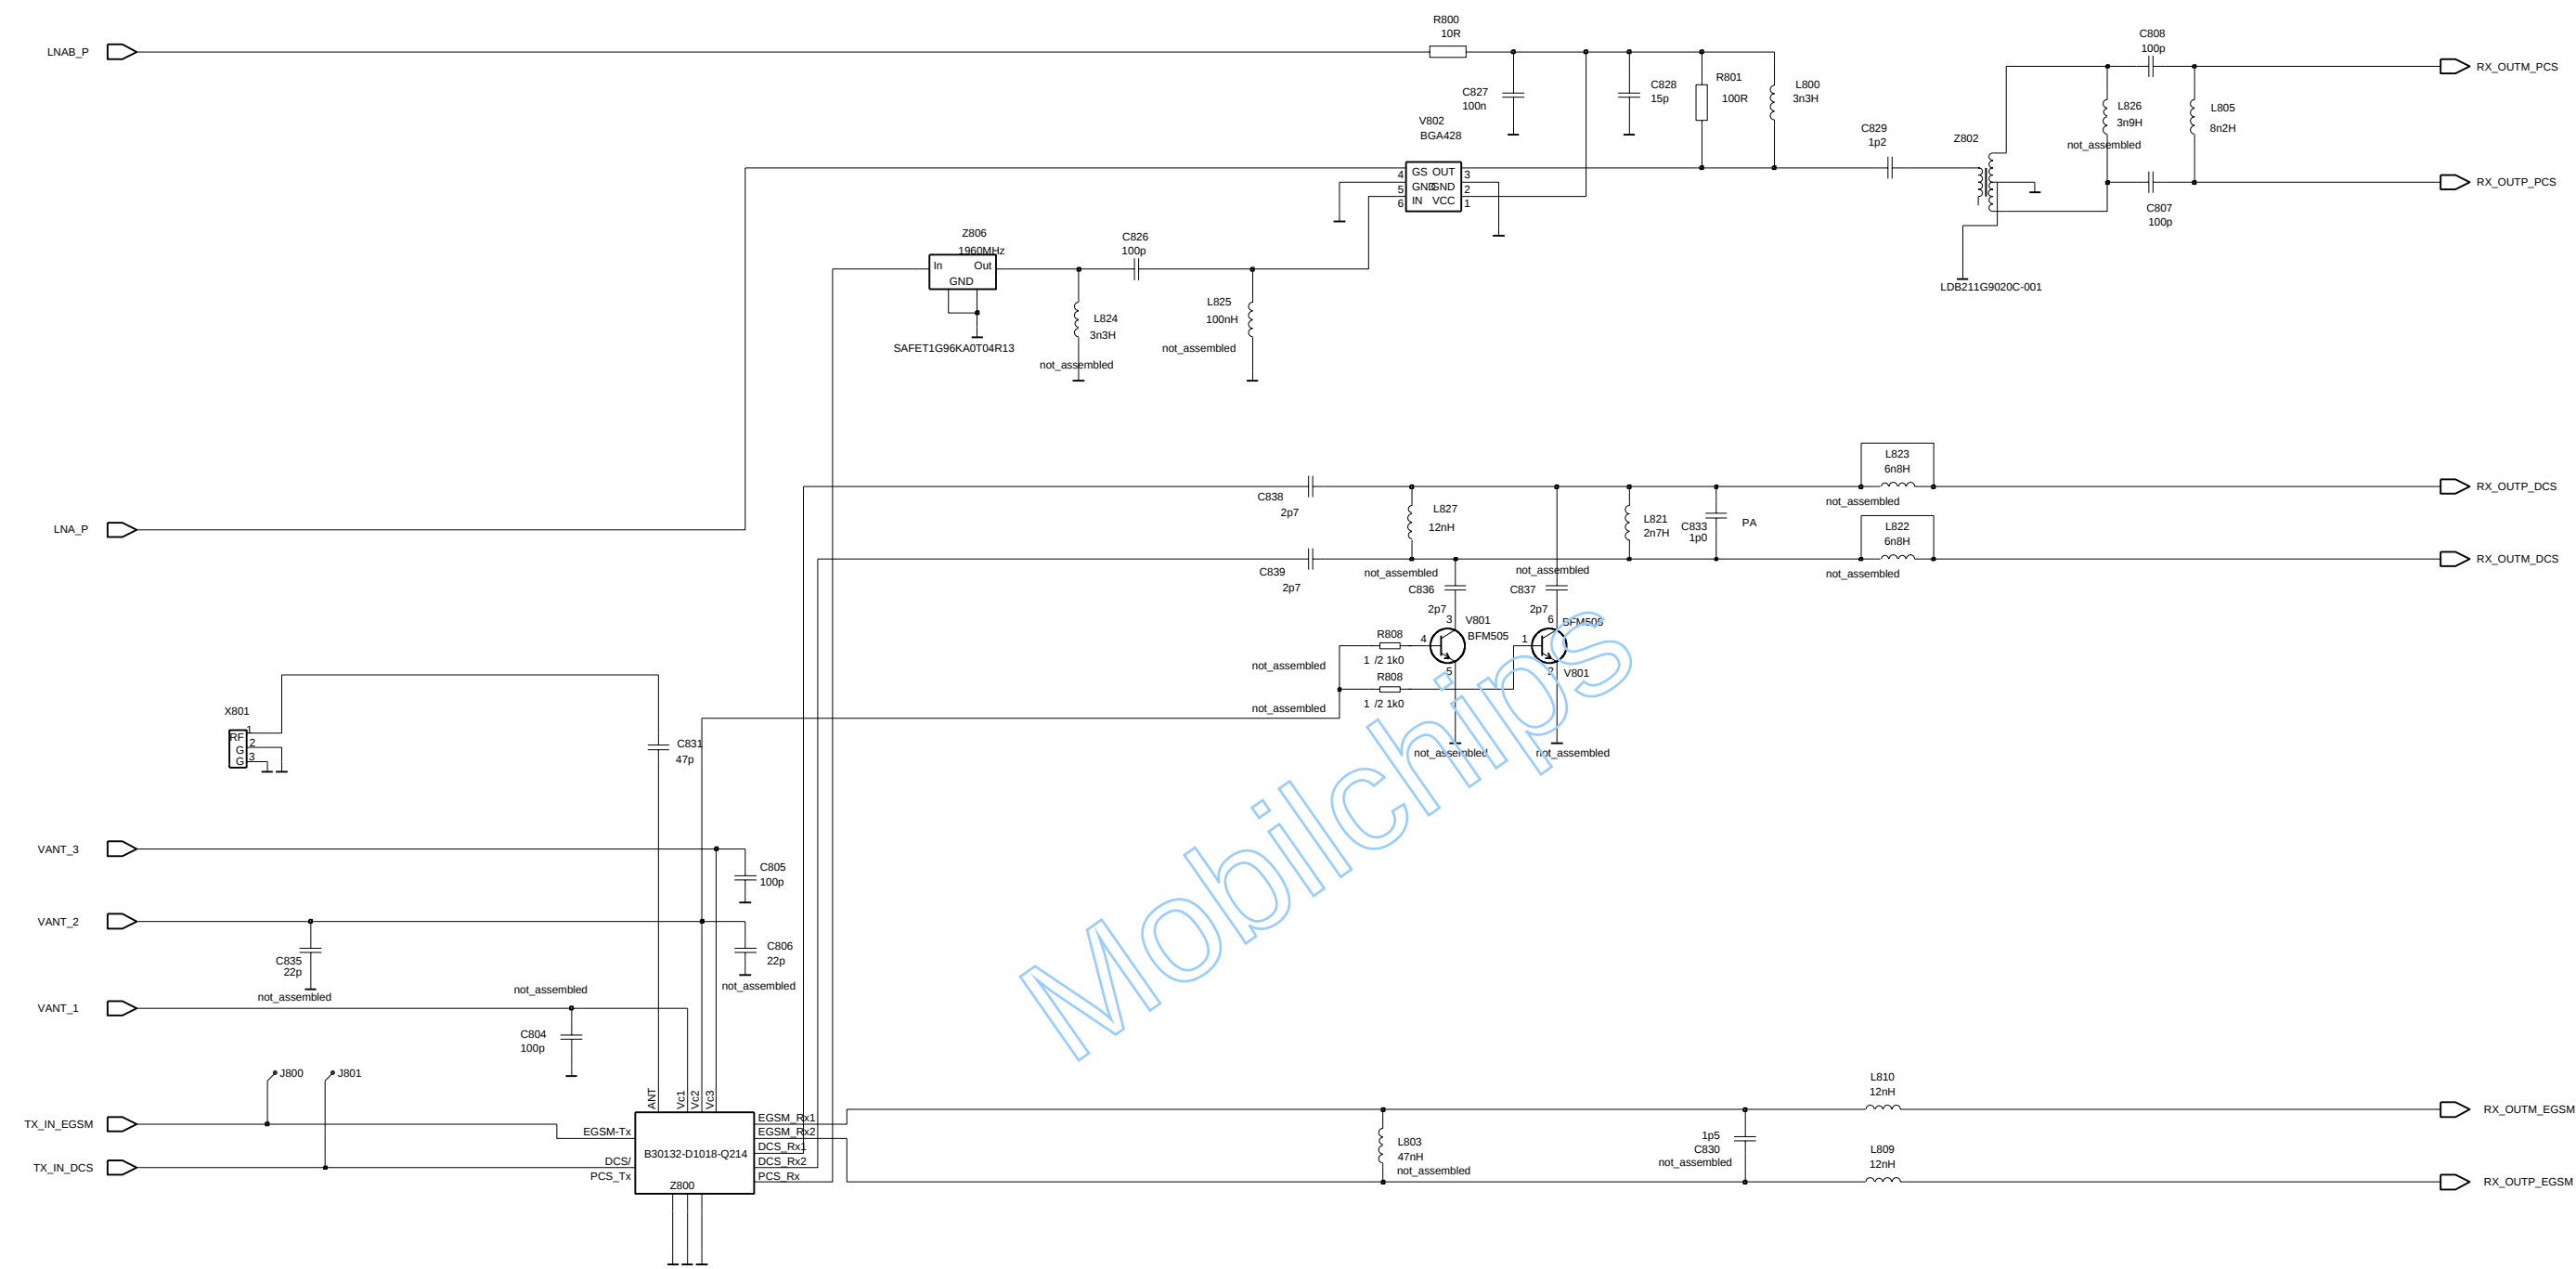


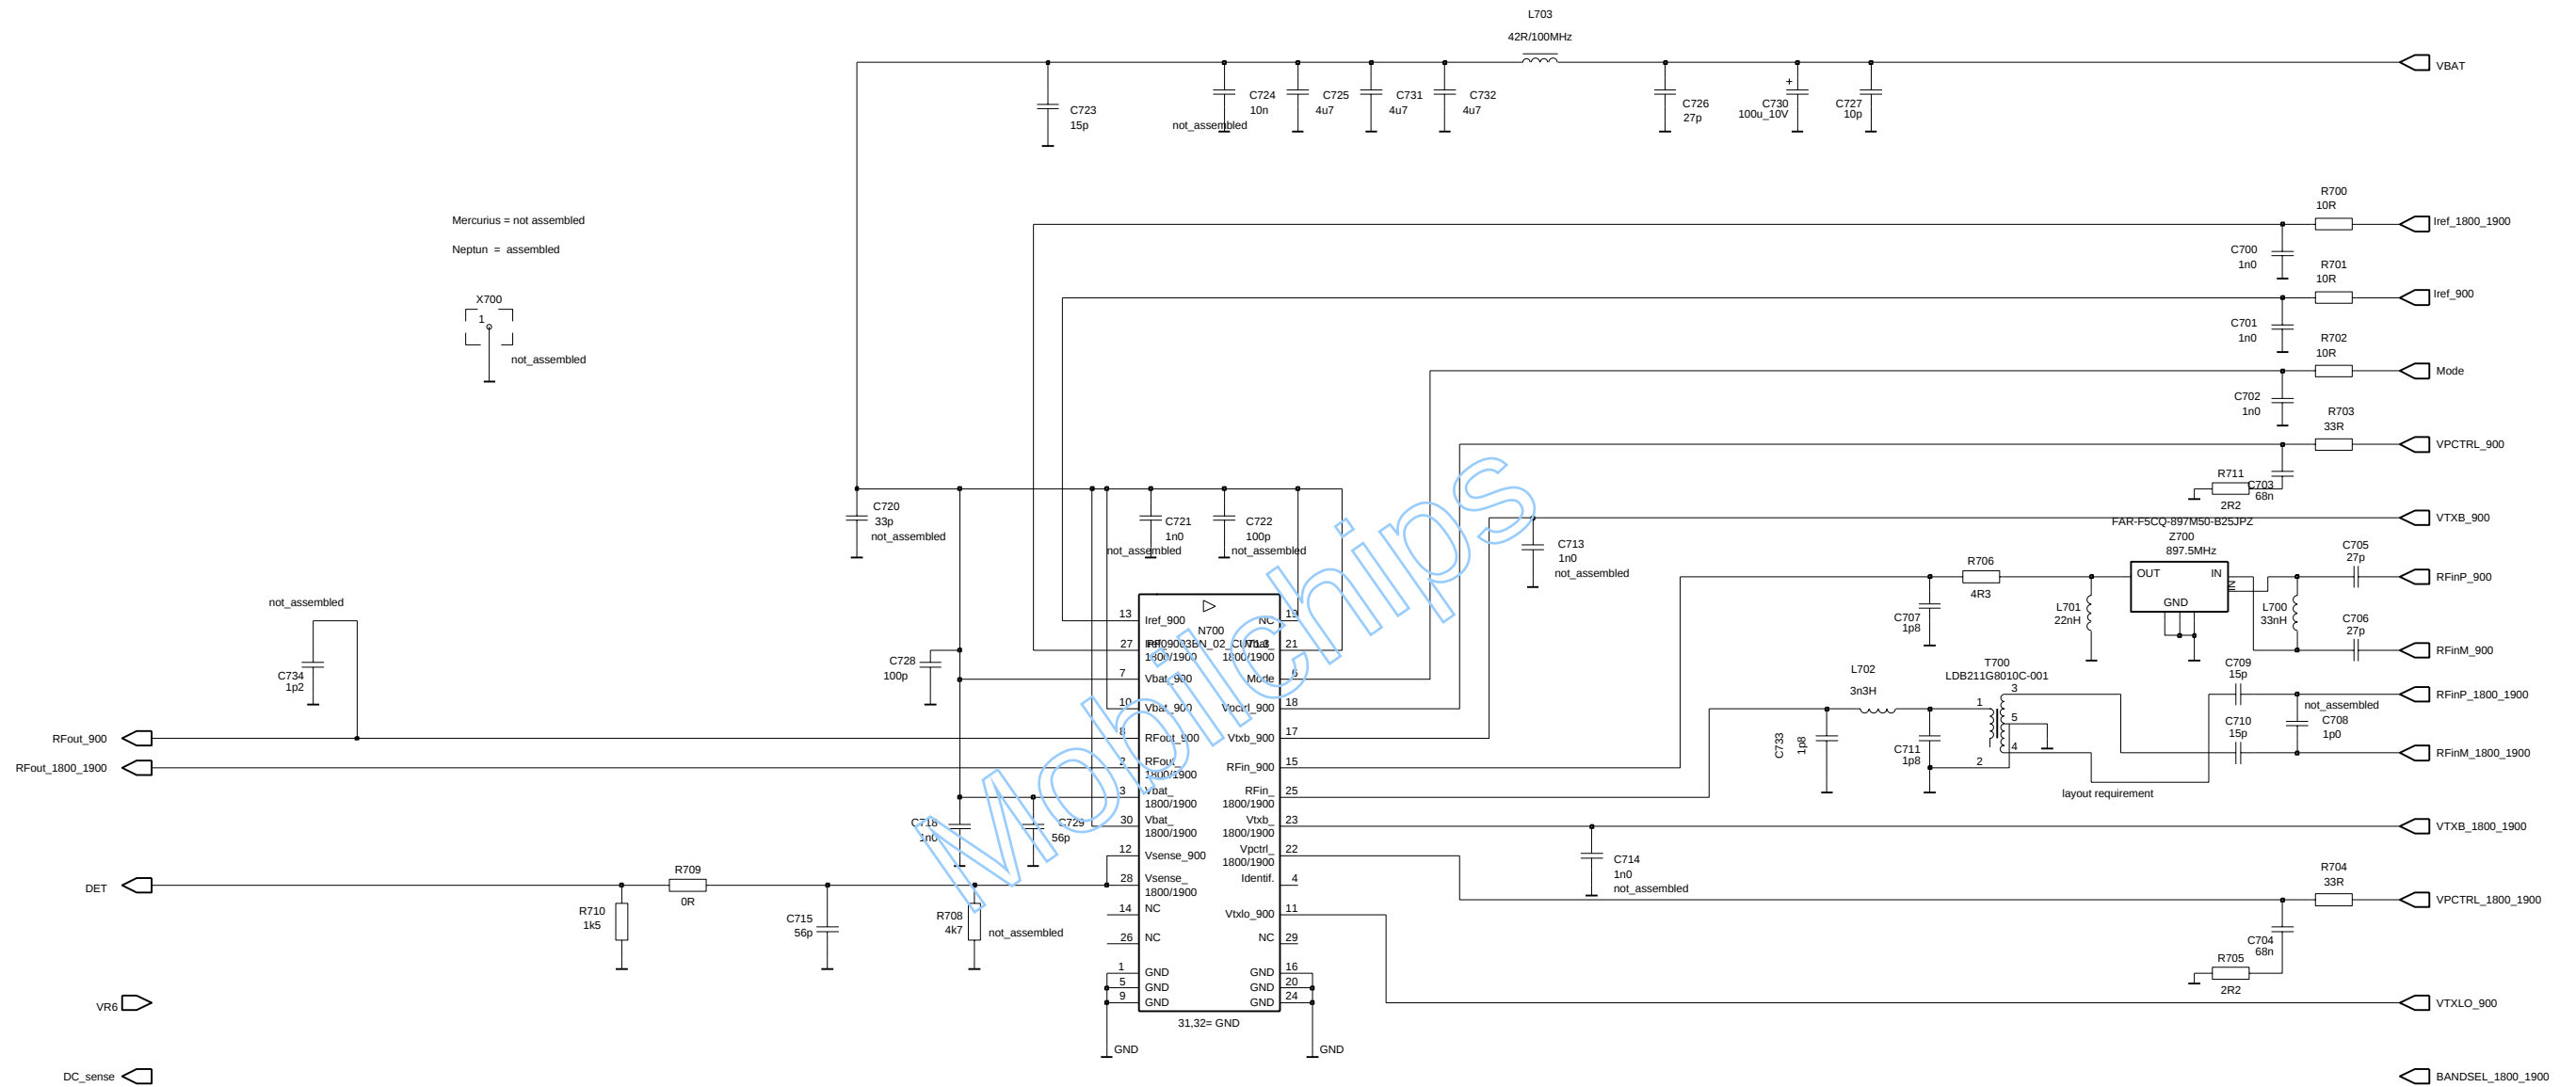


Camera Diagram v. 0.0 ed. 58

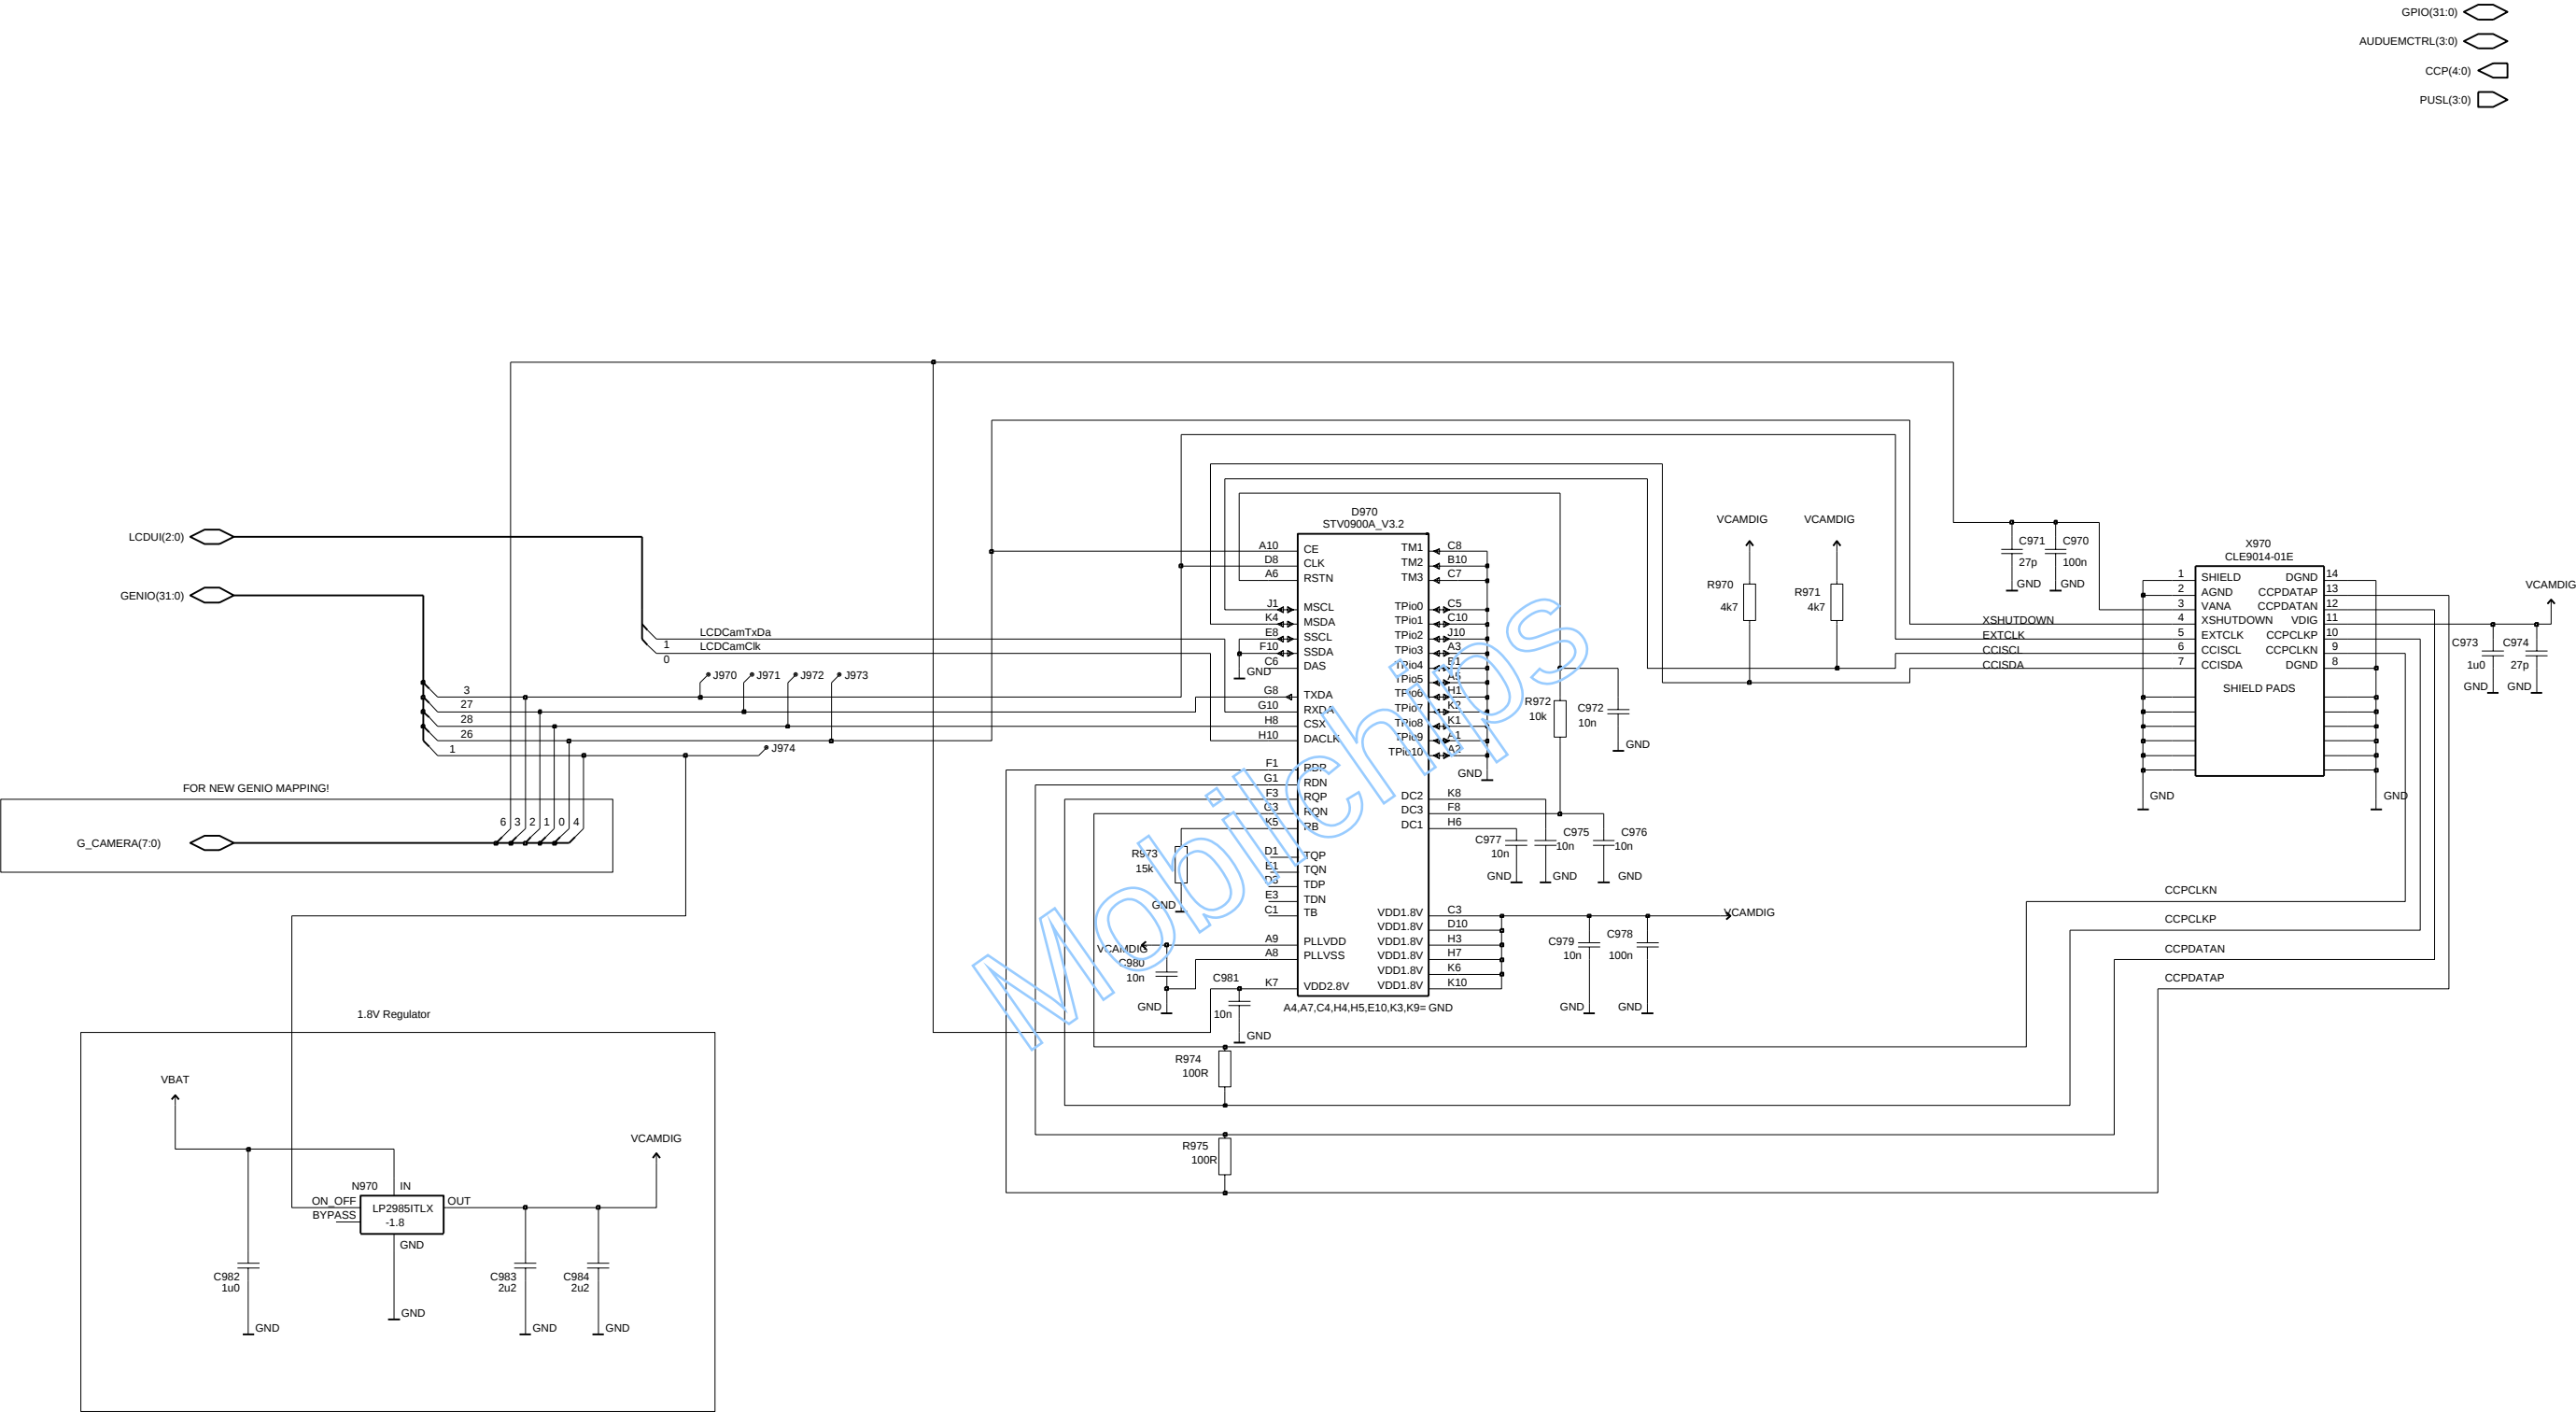


Combo Memory 128+8Mbit v. 2.0 ed.76

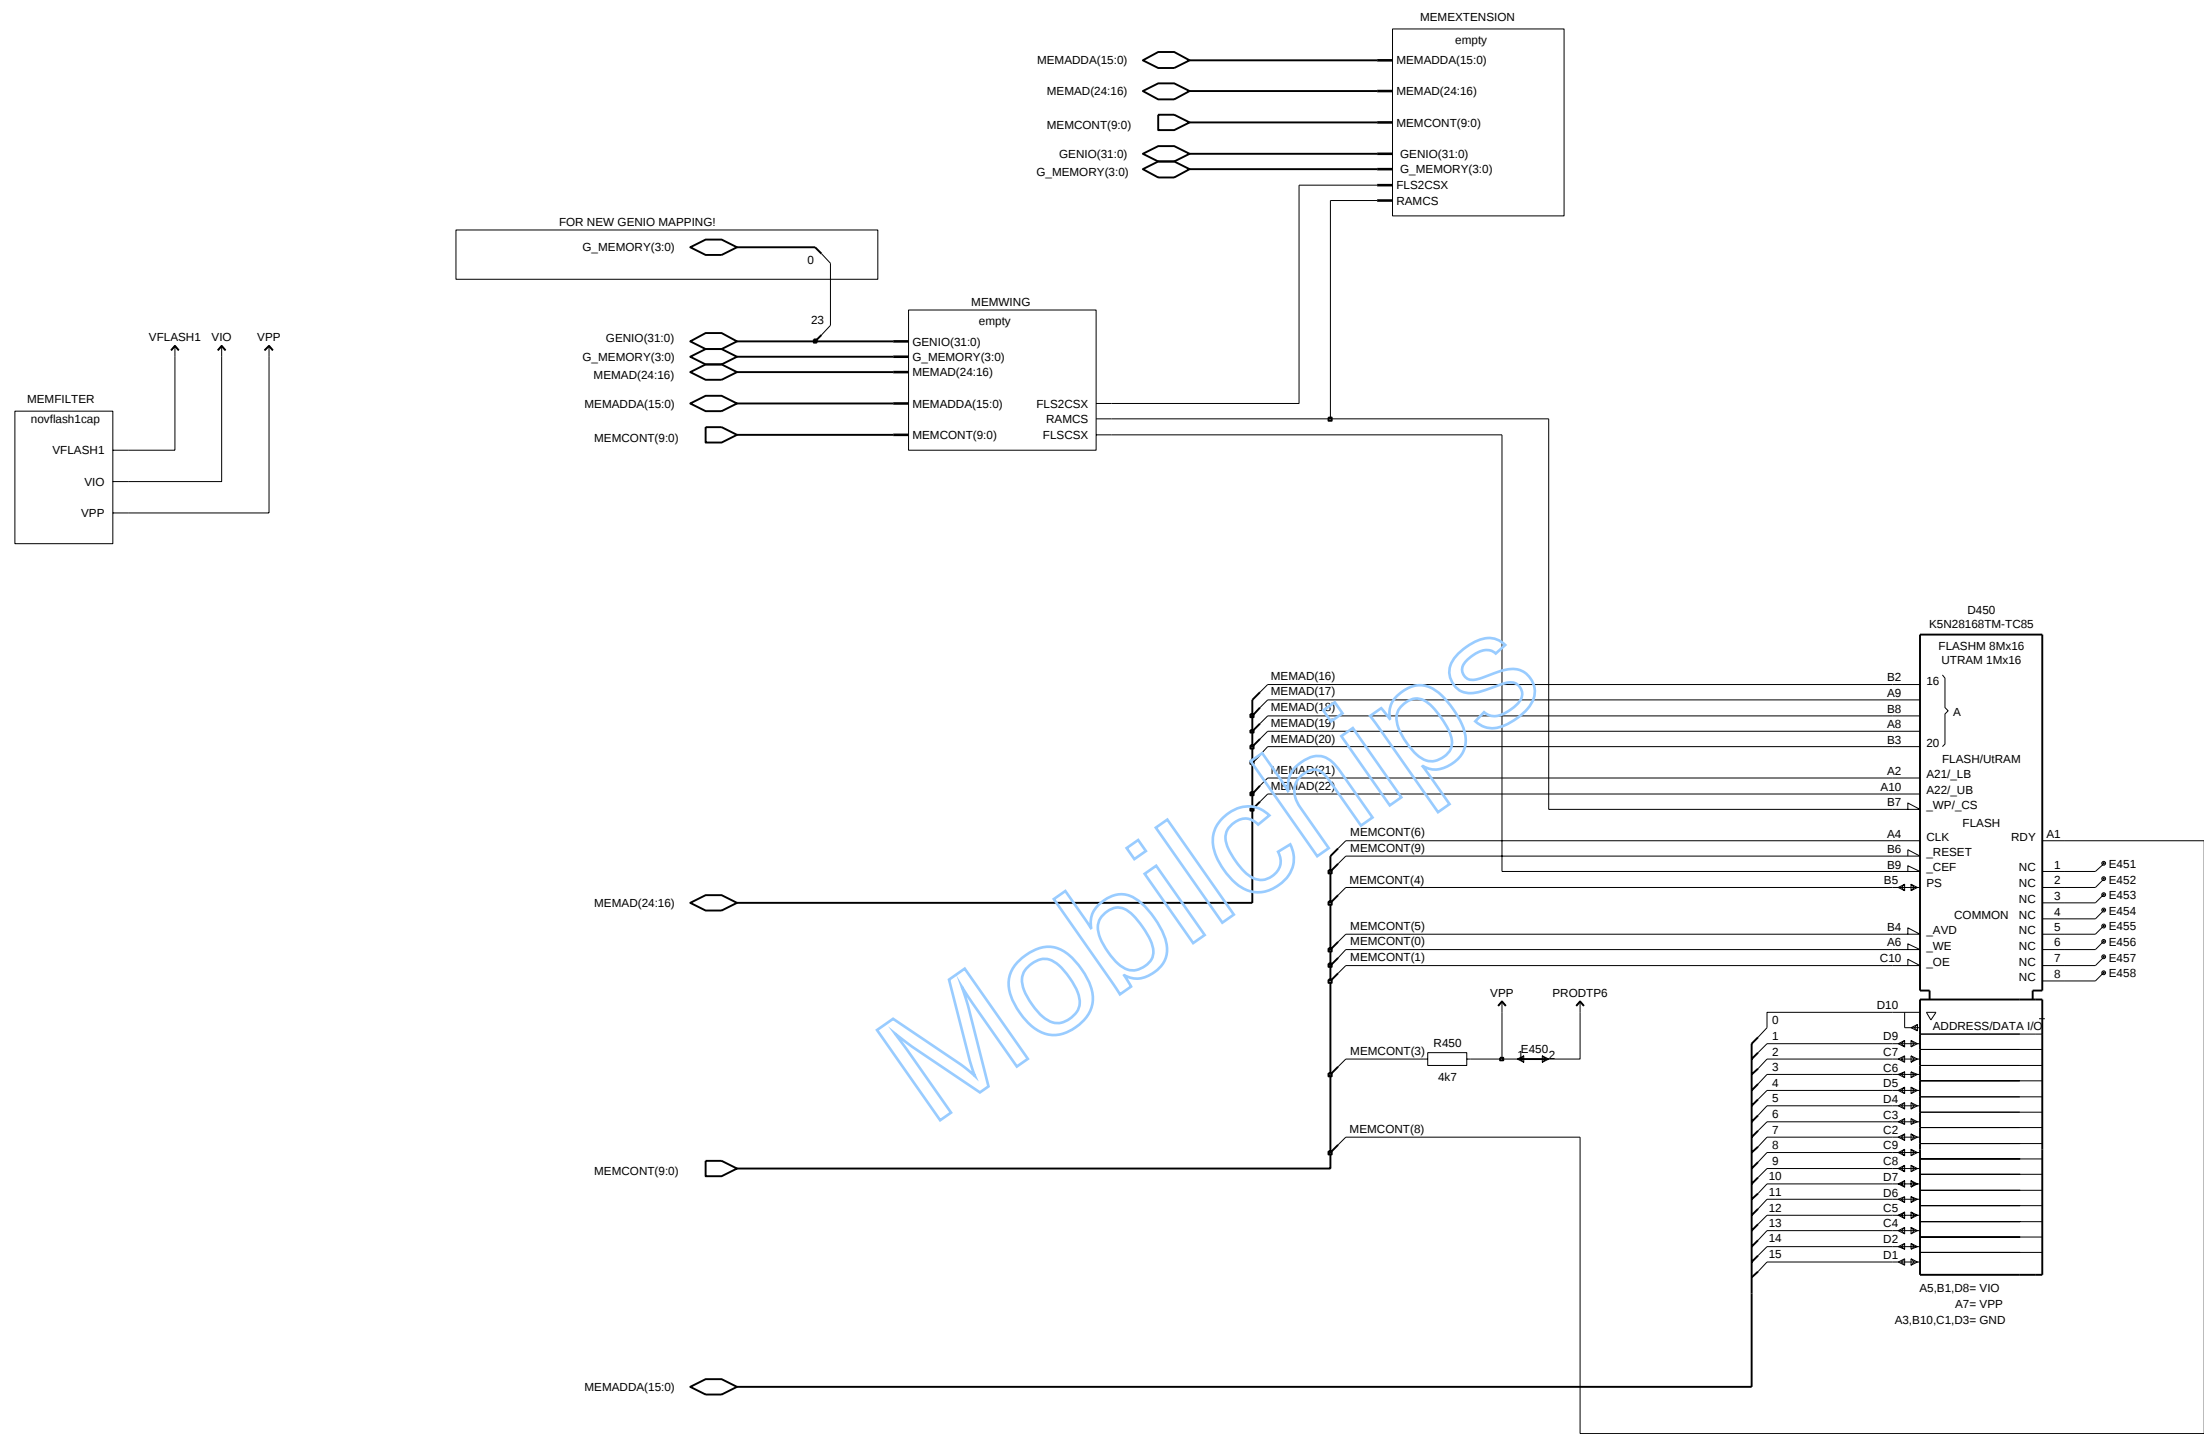


ROM v. 0.0 ed.79

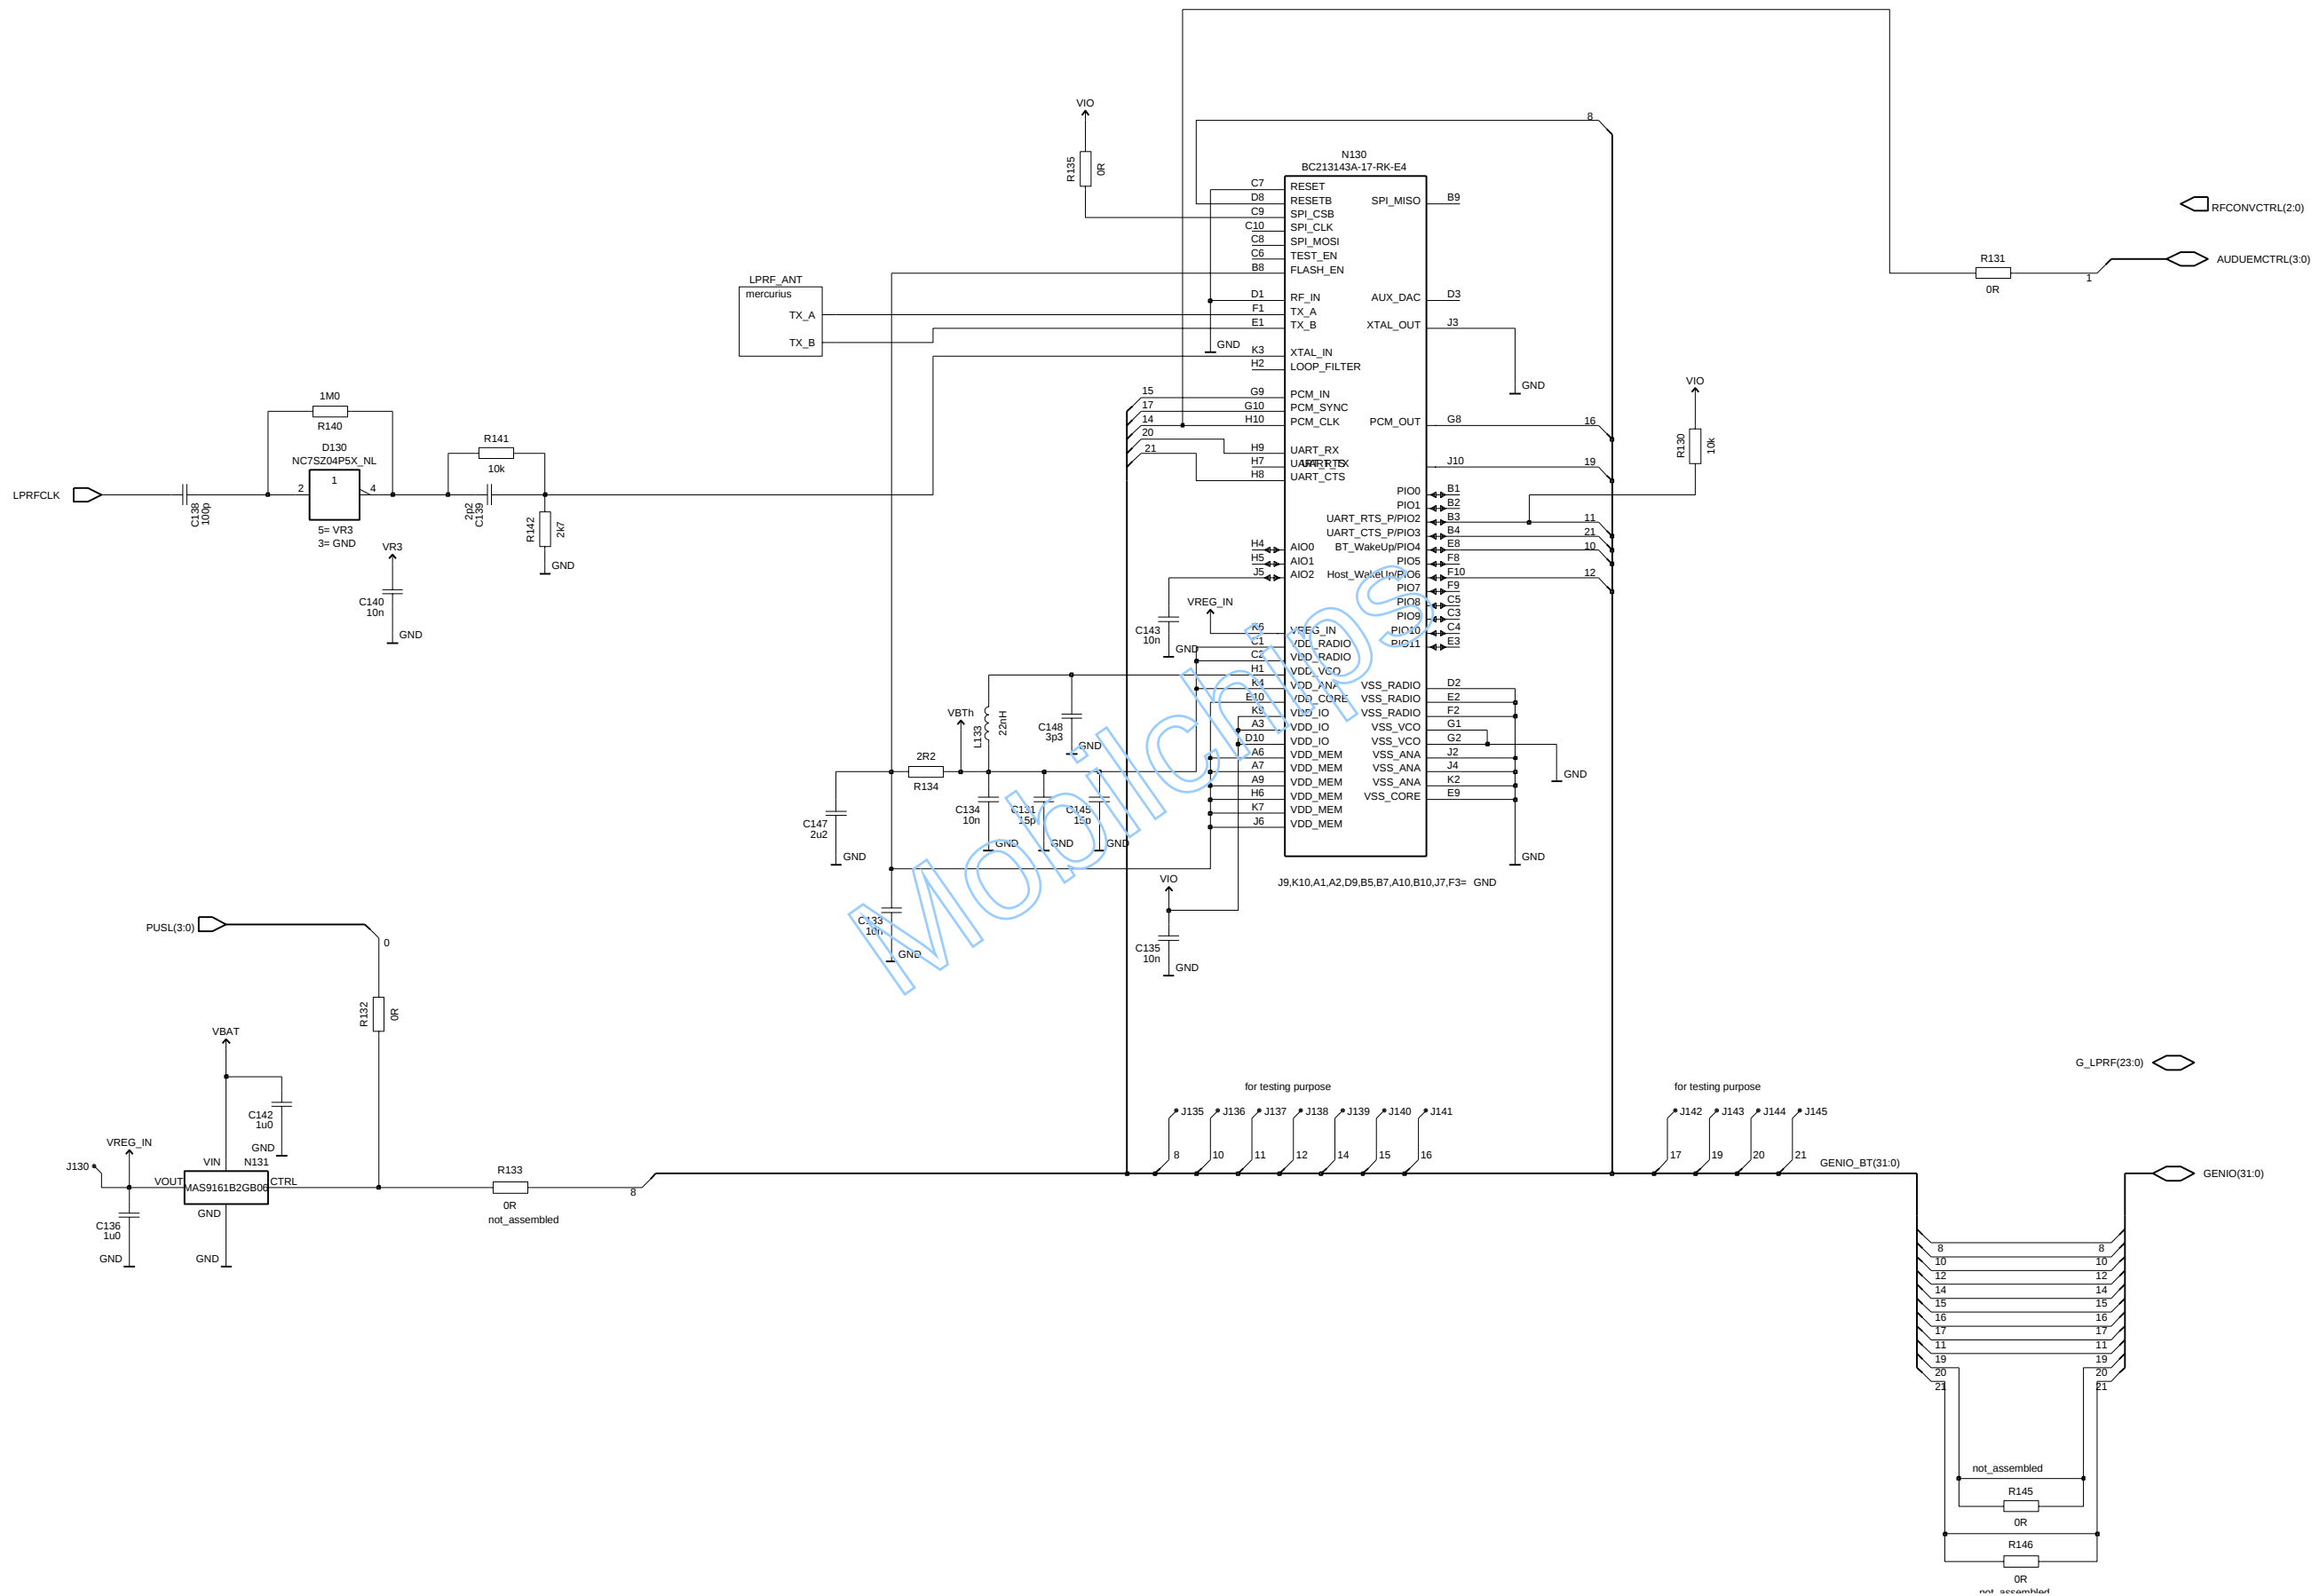


Back Light Filtering v. 2.0 ed.28

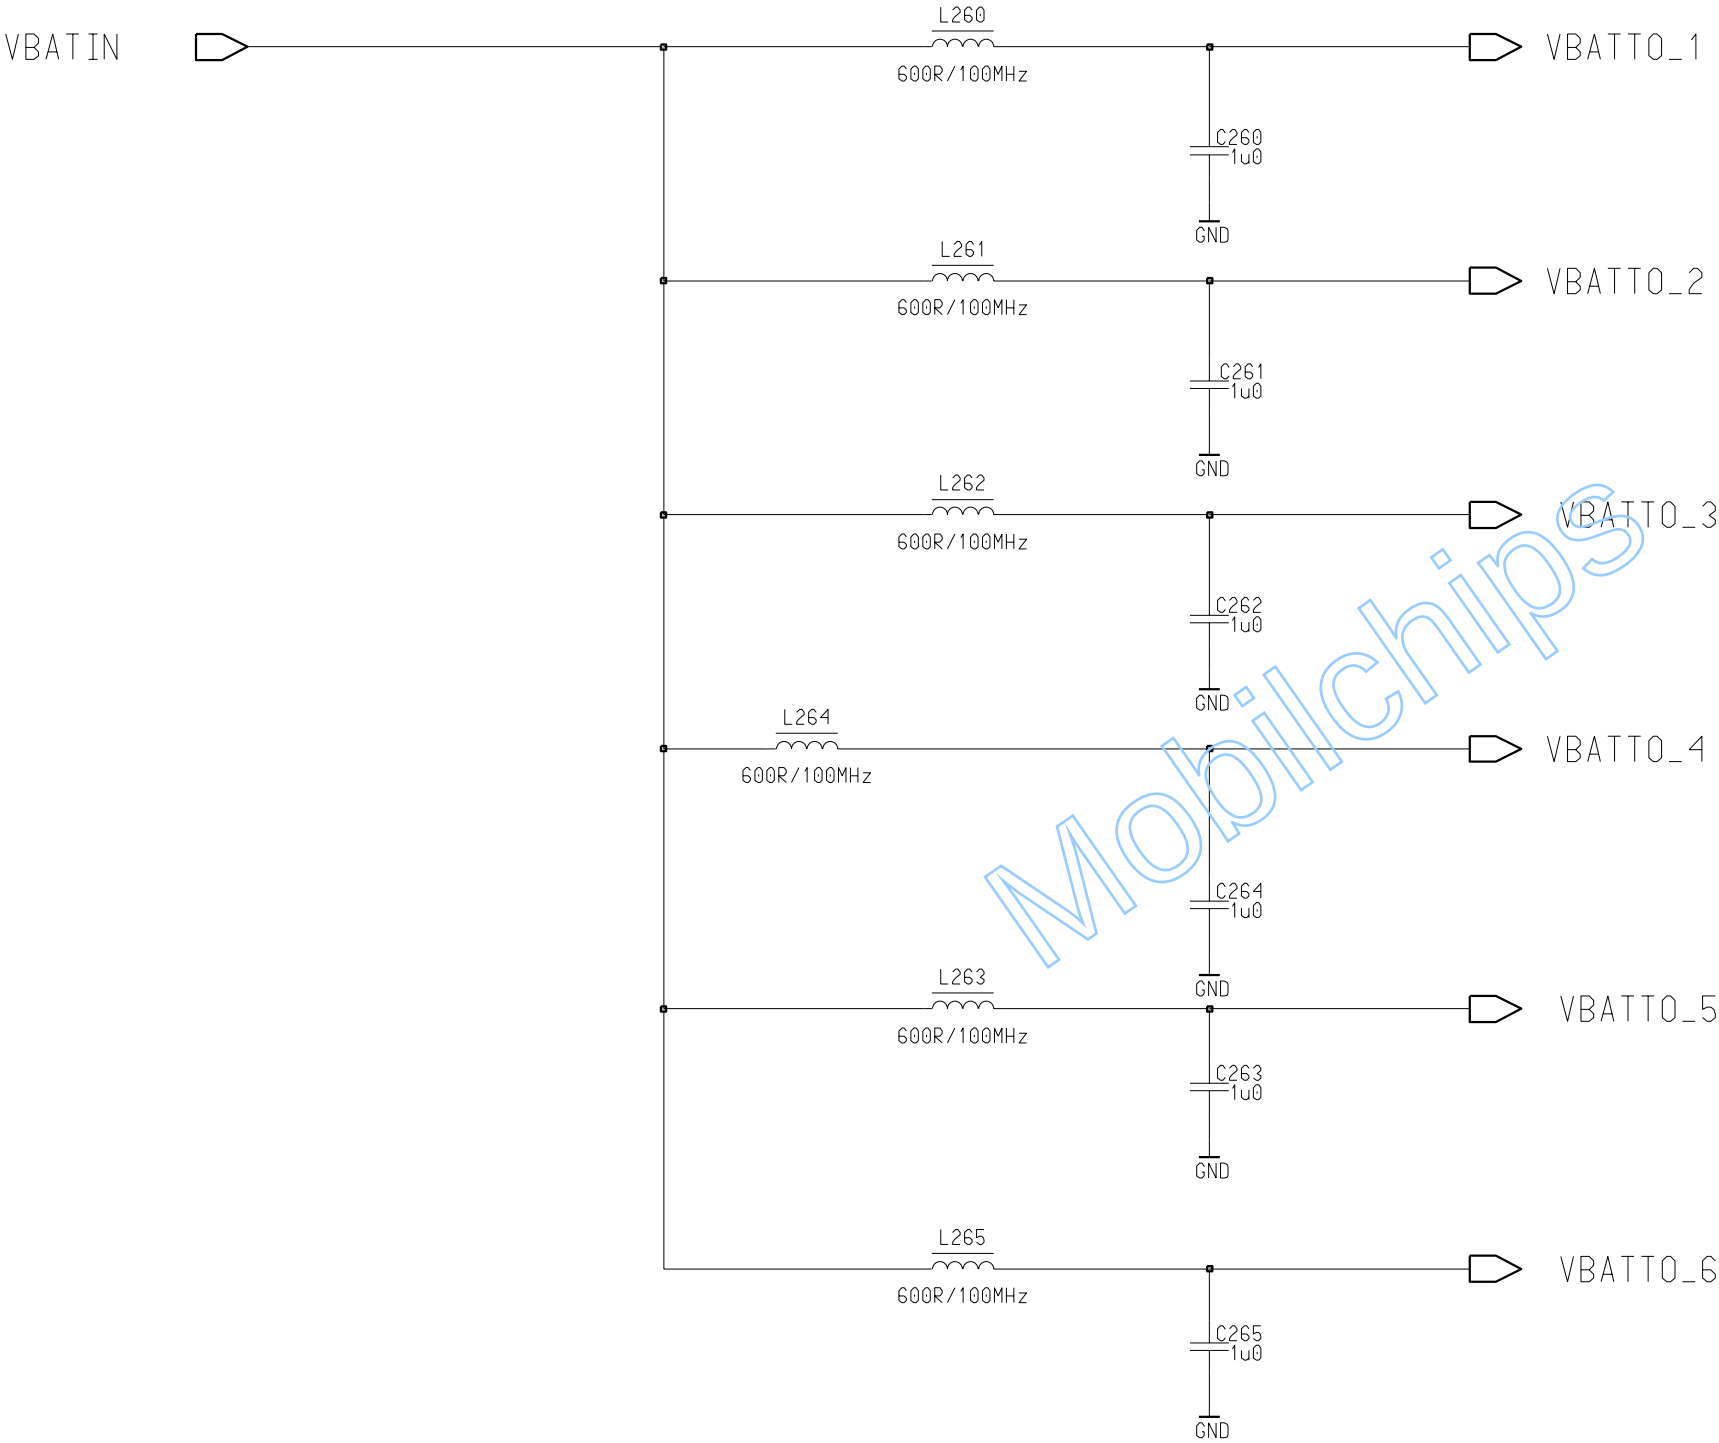


UPP 8M Diagram v. 2.0 ed.104

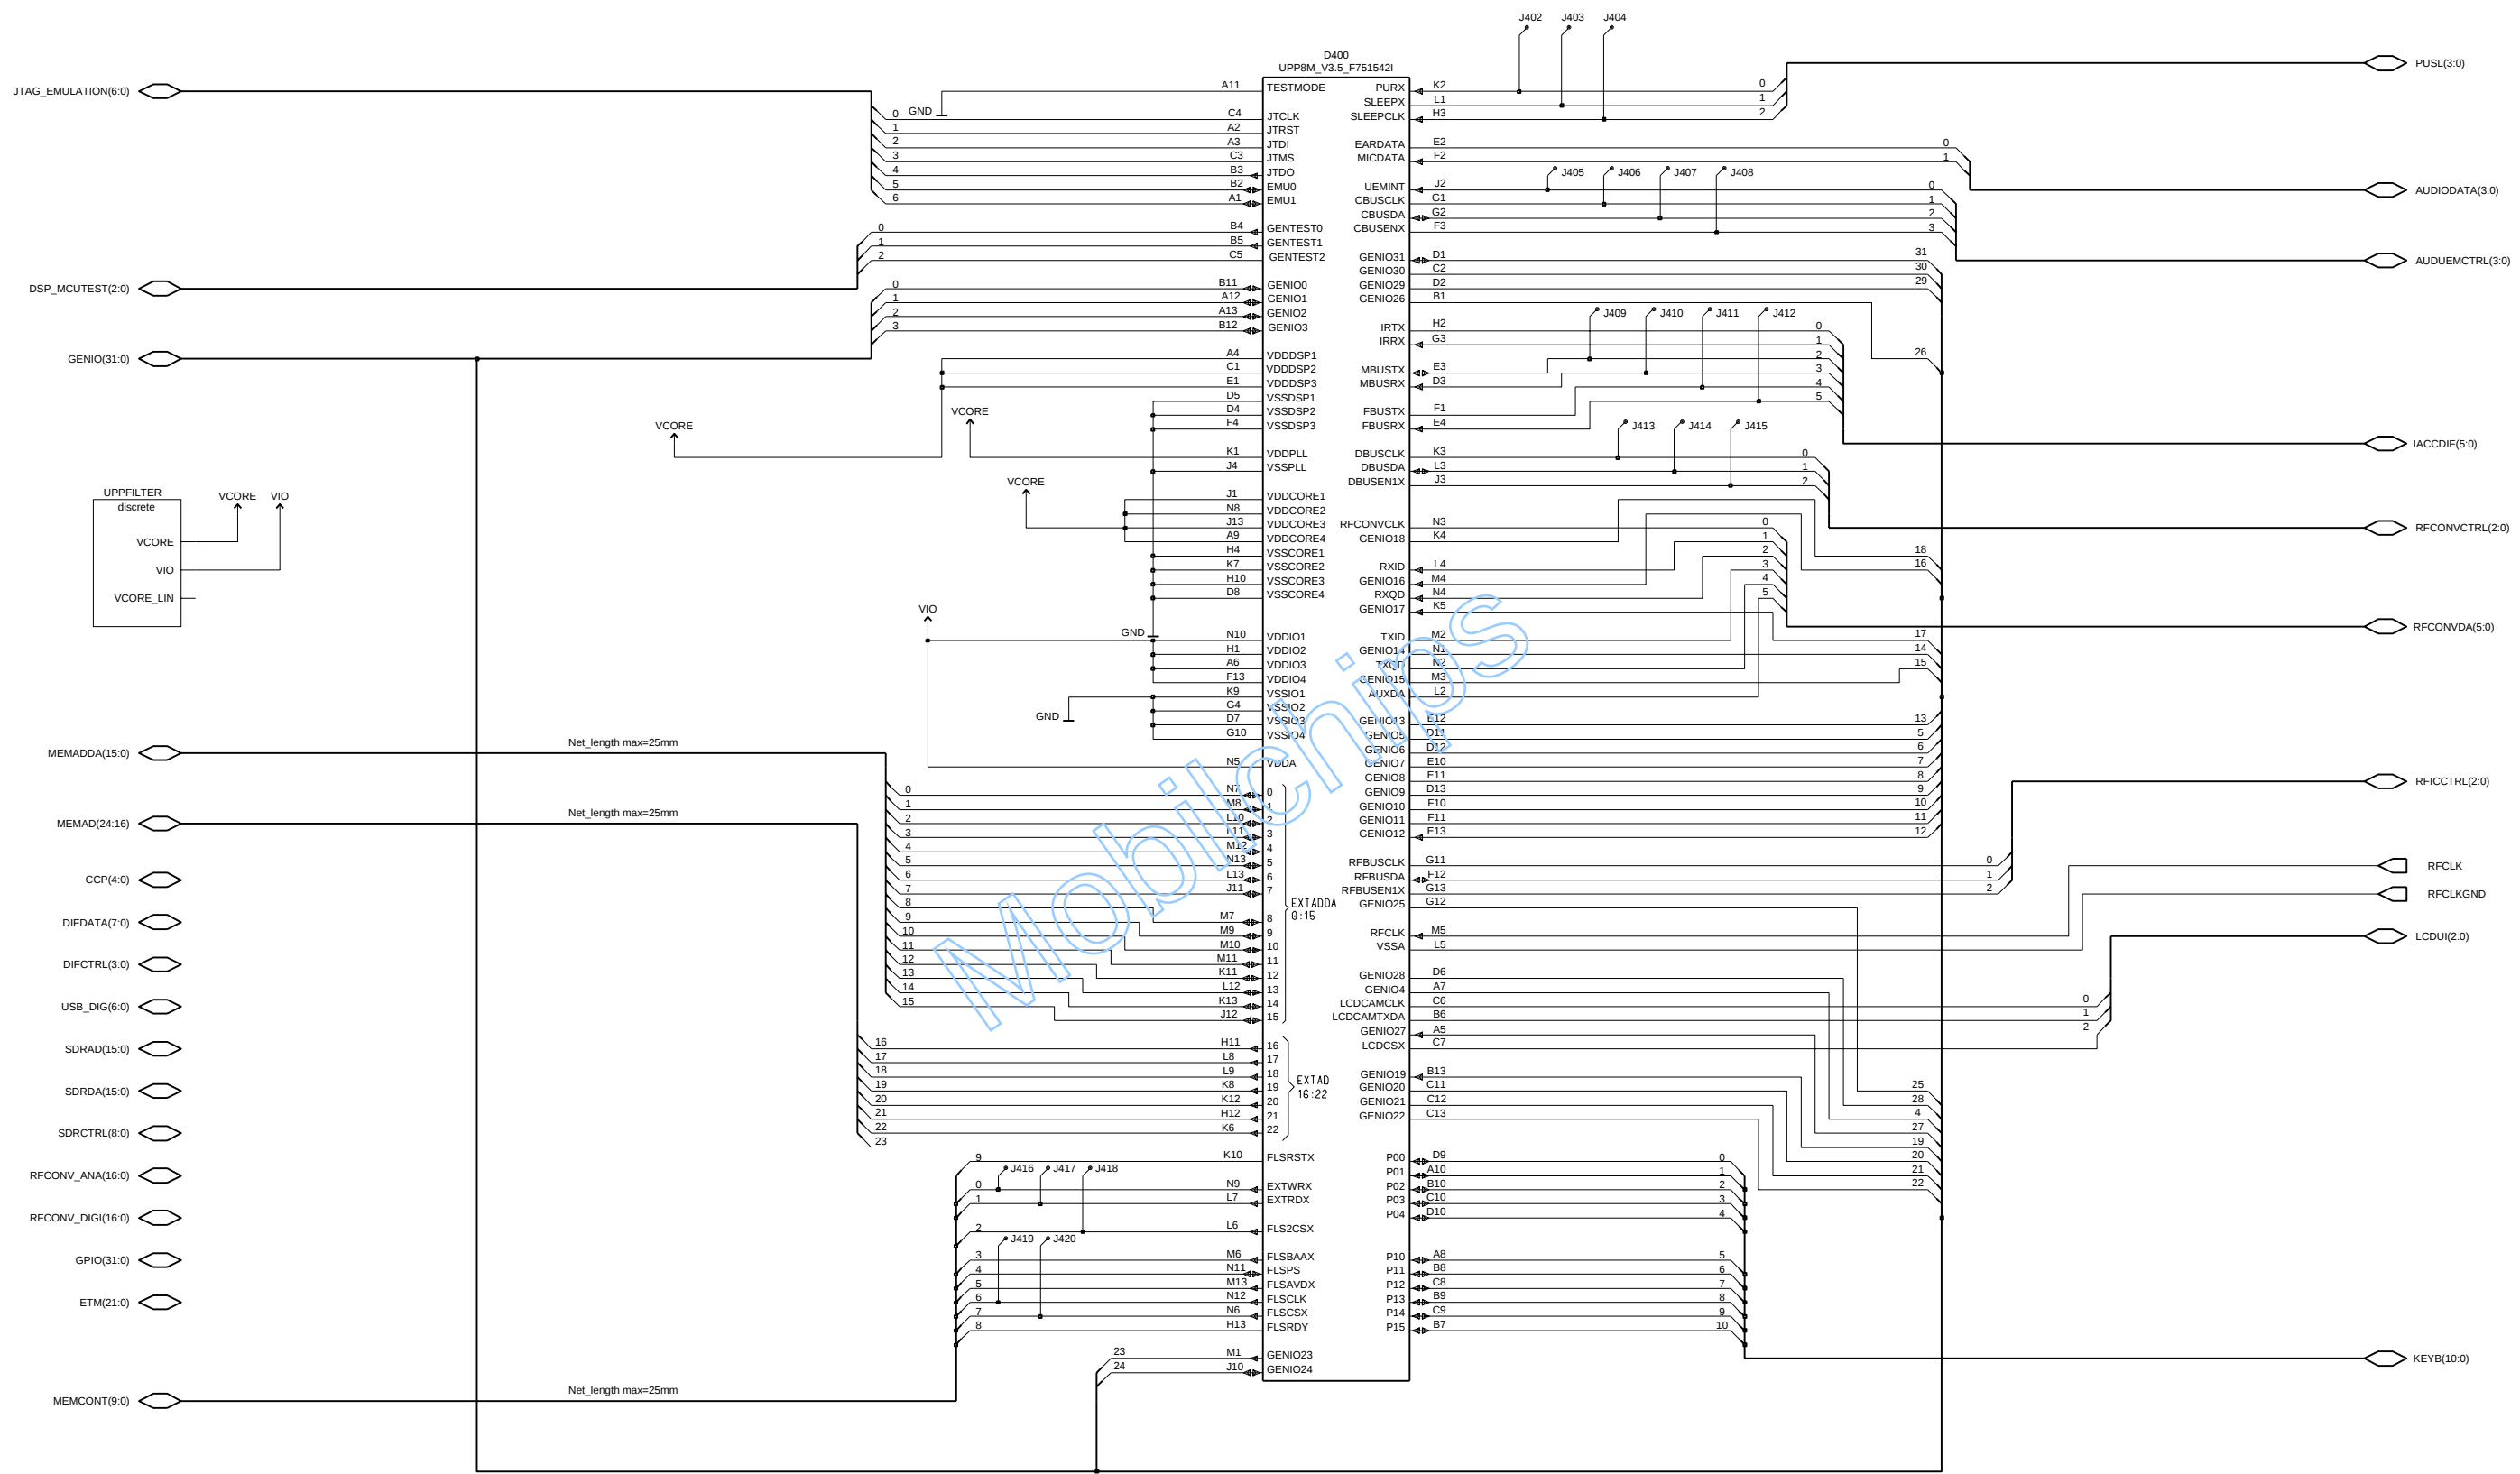

UPP Decoupling Capacitors Diagram v. 1.3 ed. 10

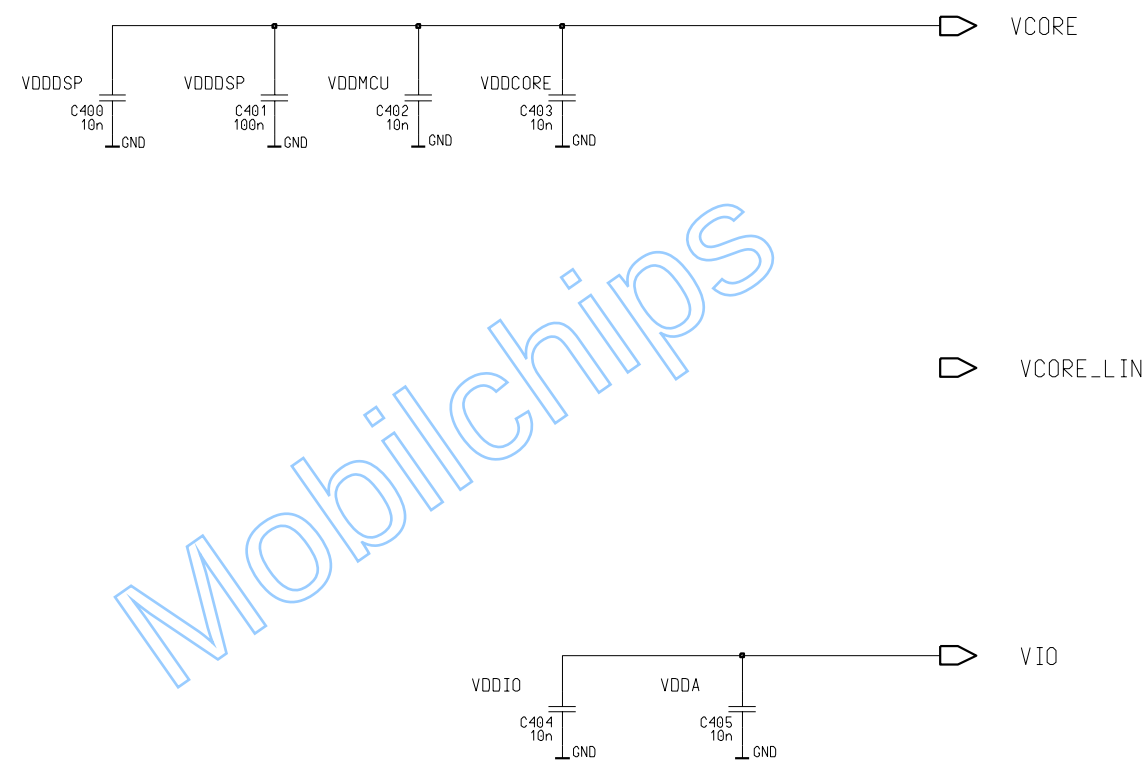


GSM RF-BB Connections v. 1.3 ed.44

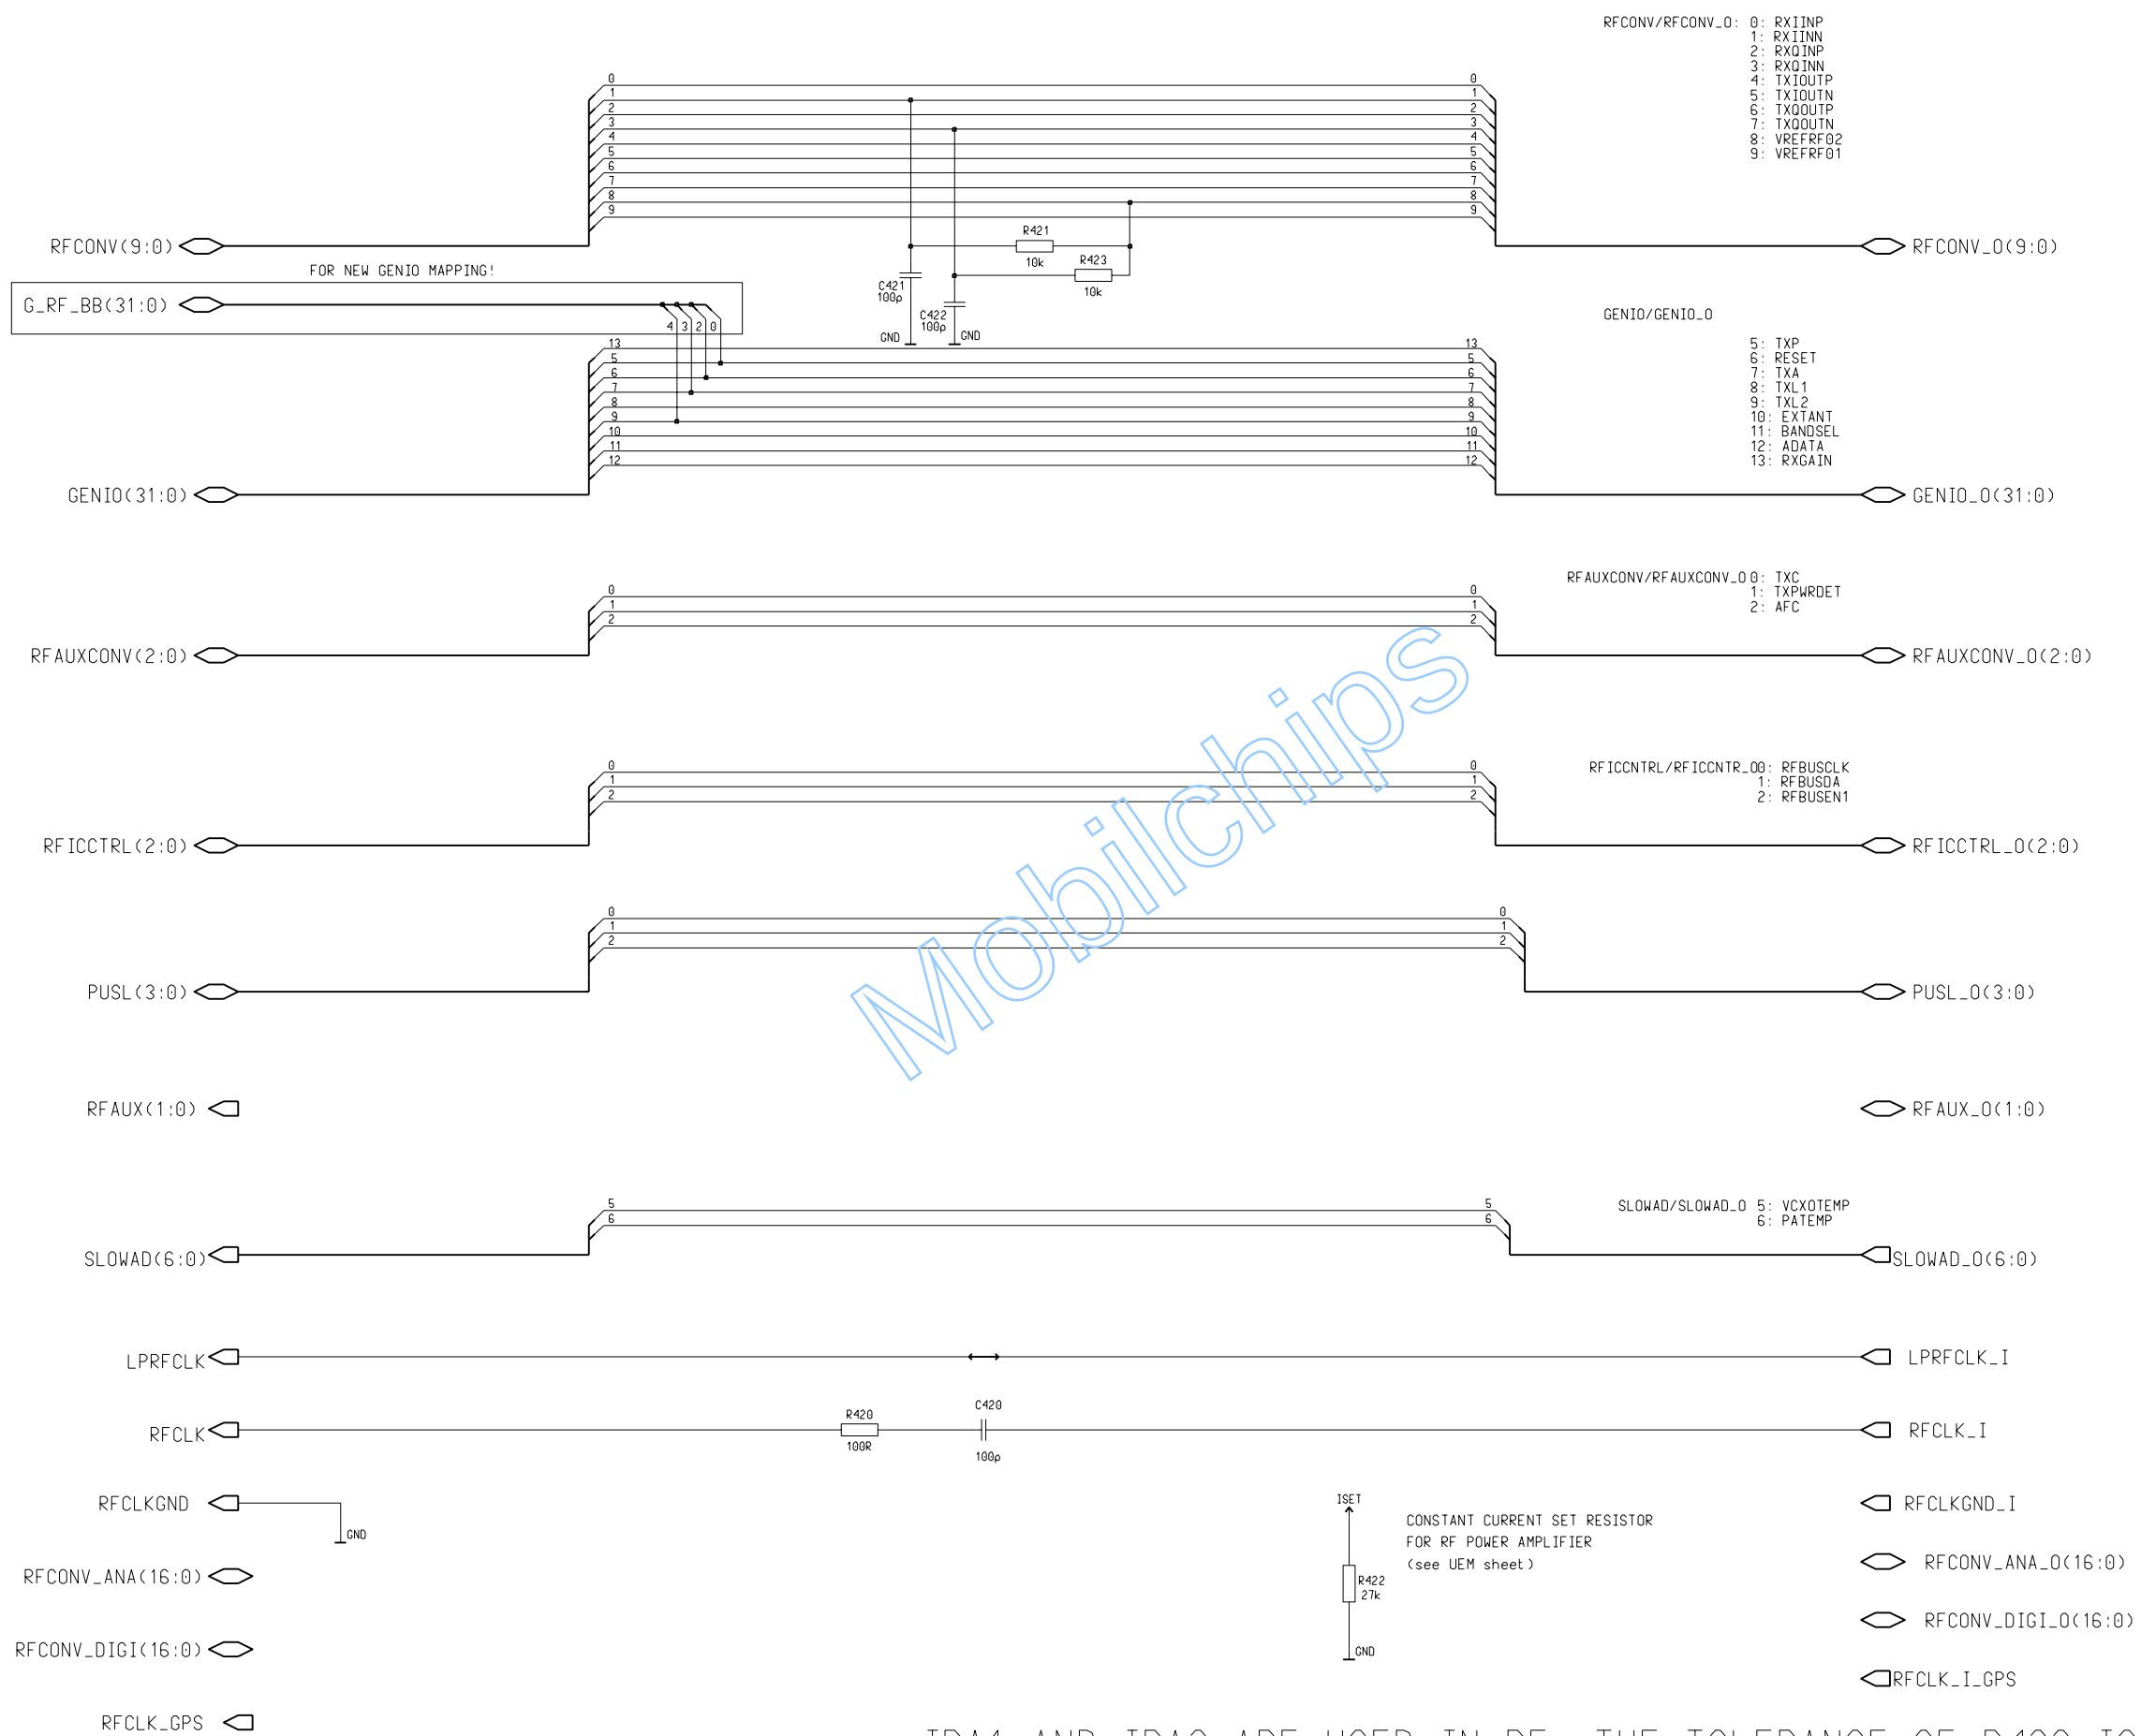


IPA1 AND IPA2 ARE USED IN RF, THE TOLERANCE OF R422 IS 1% (0402, 1430873)


System Connector Diagram v. 0.0 ed. 2

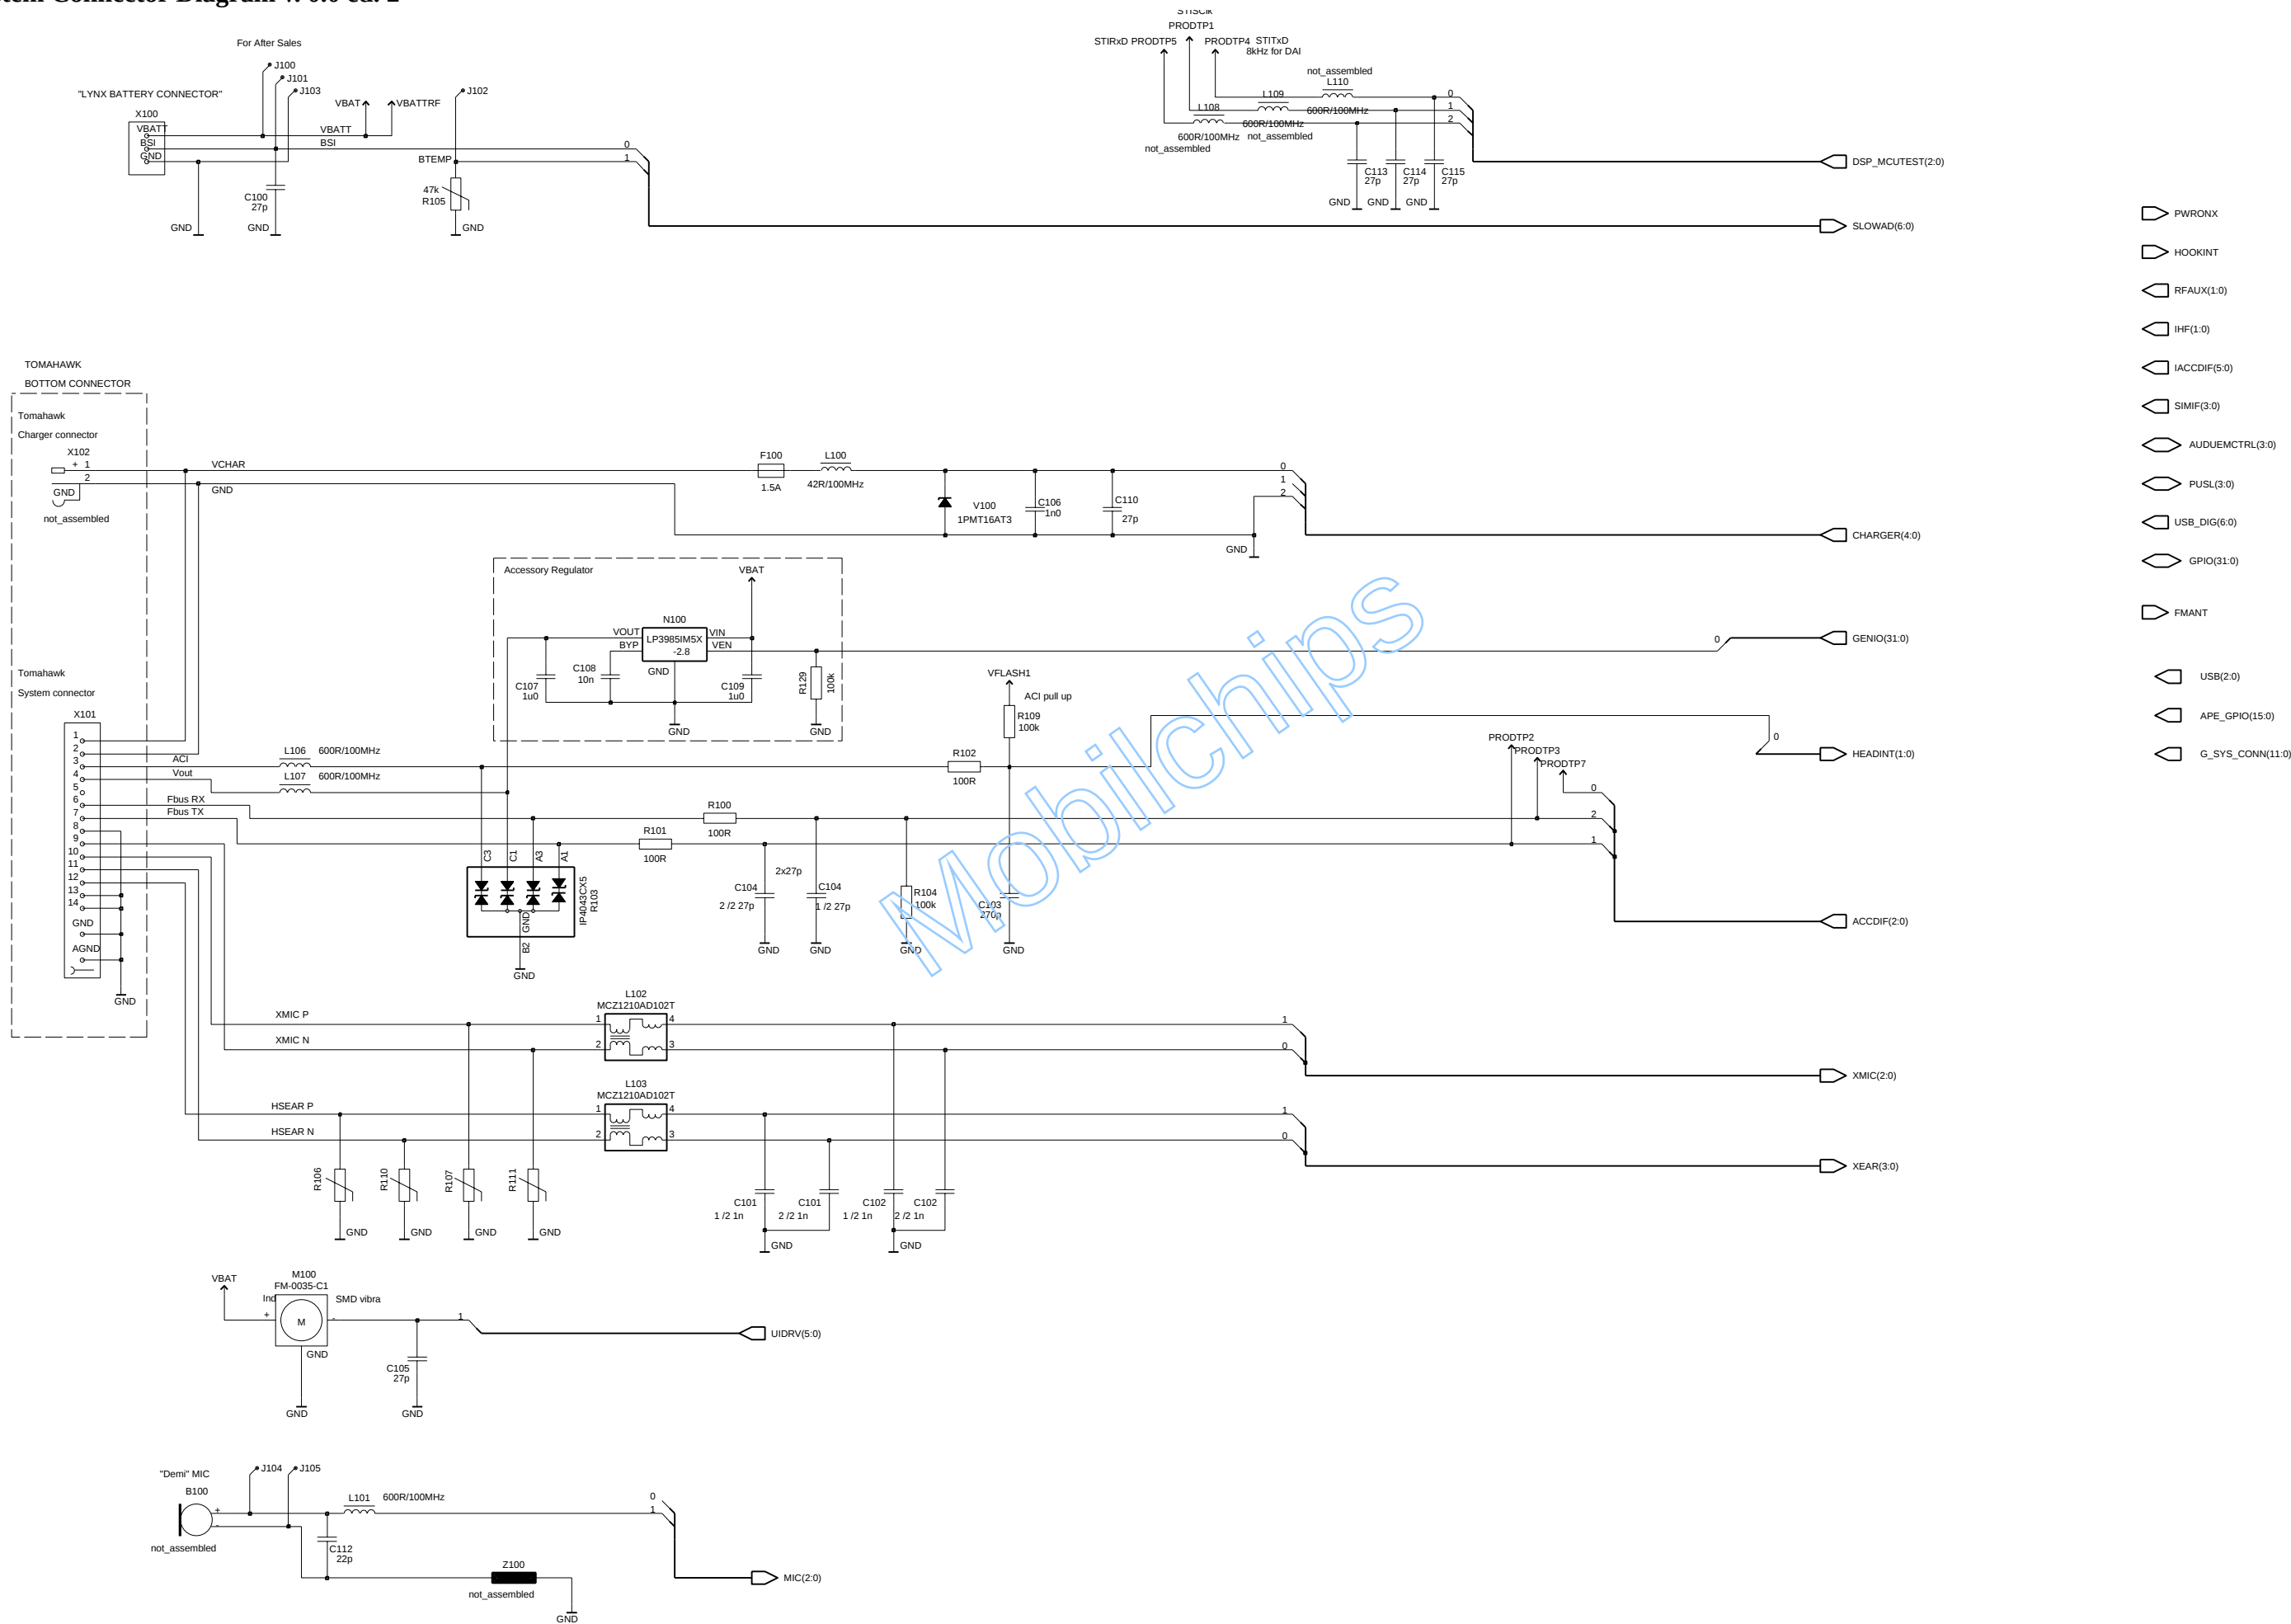


Audio Diagram v.0.0 ed. 51

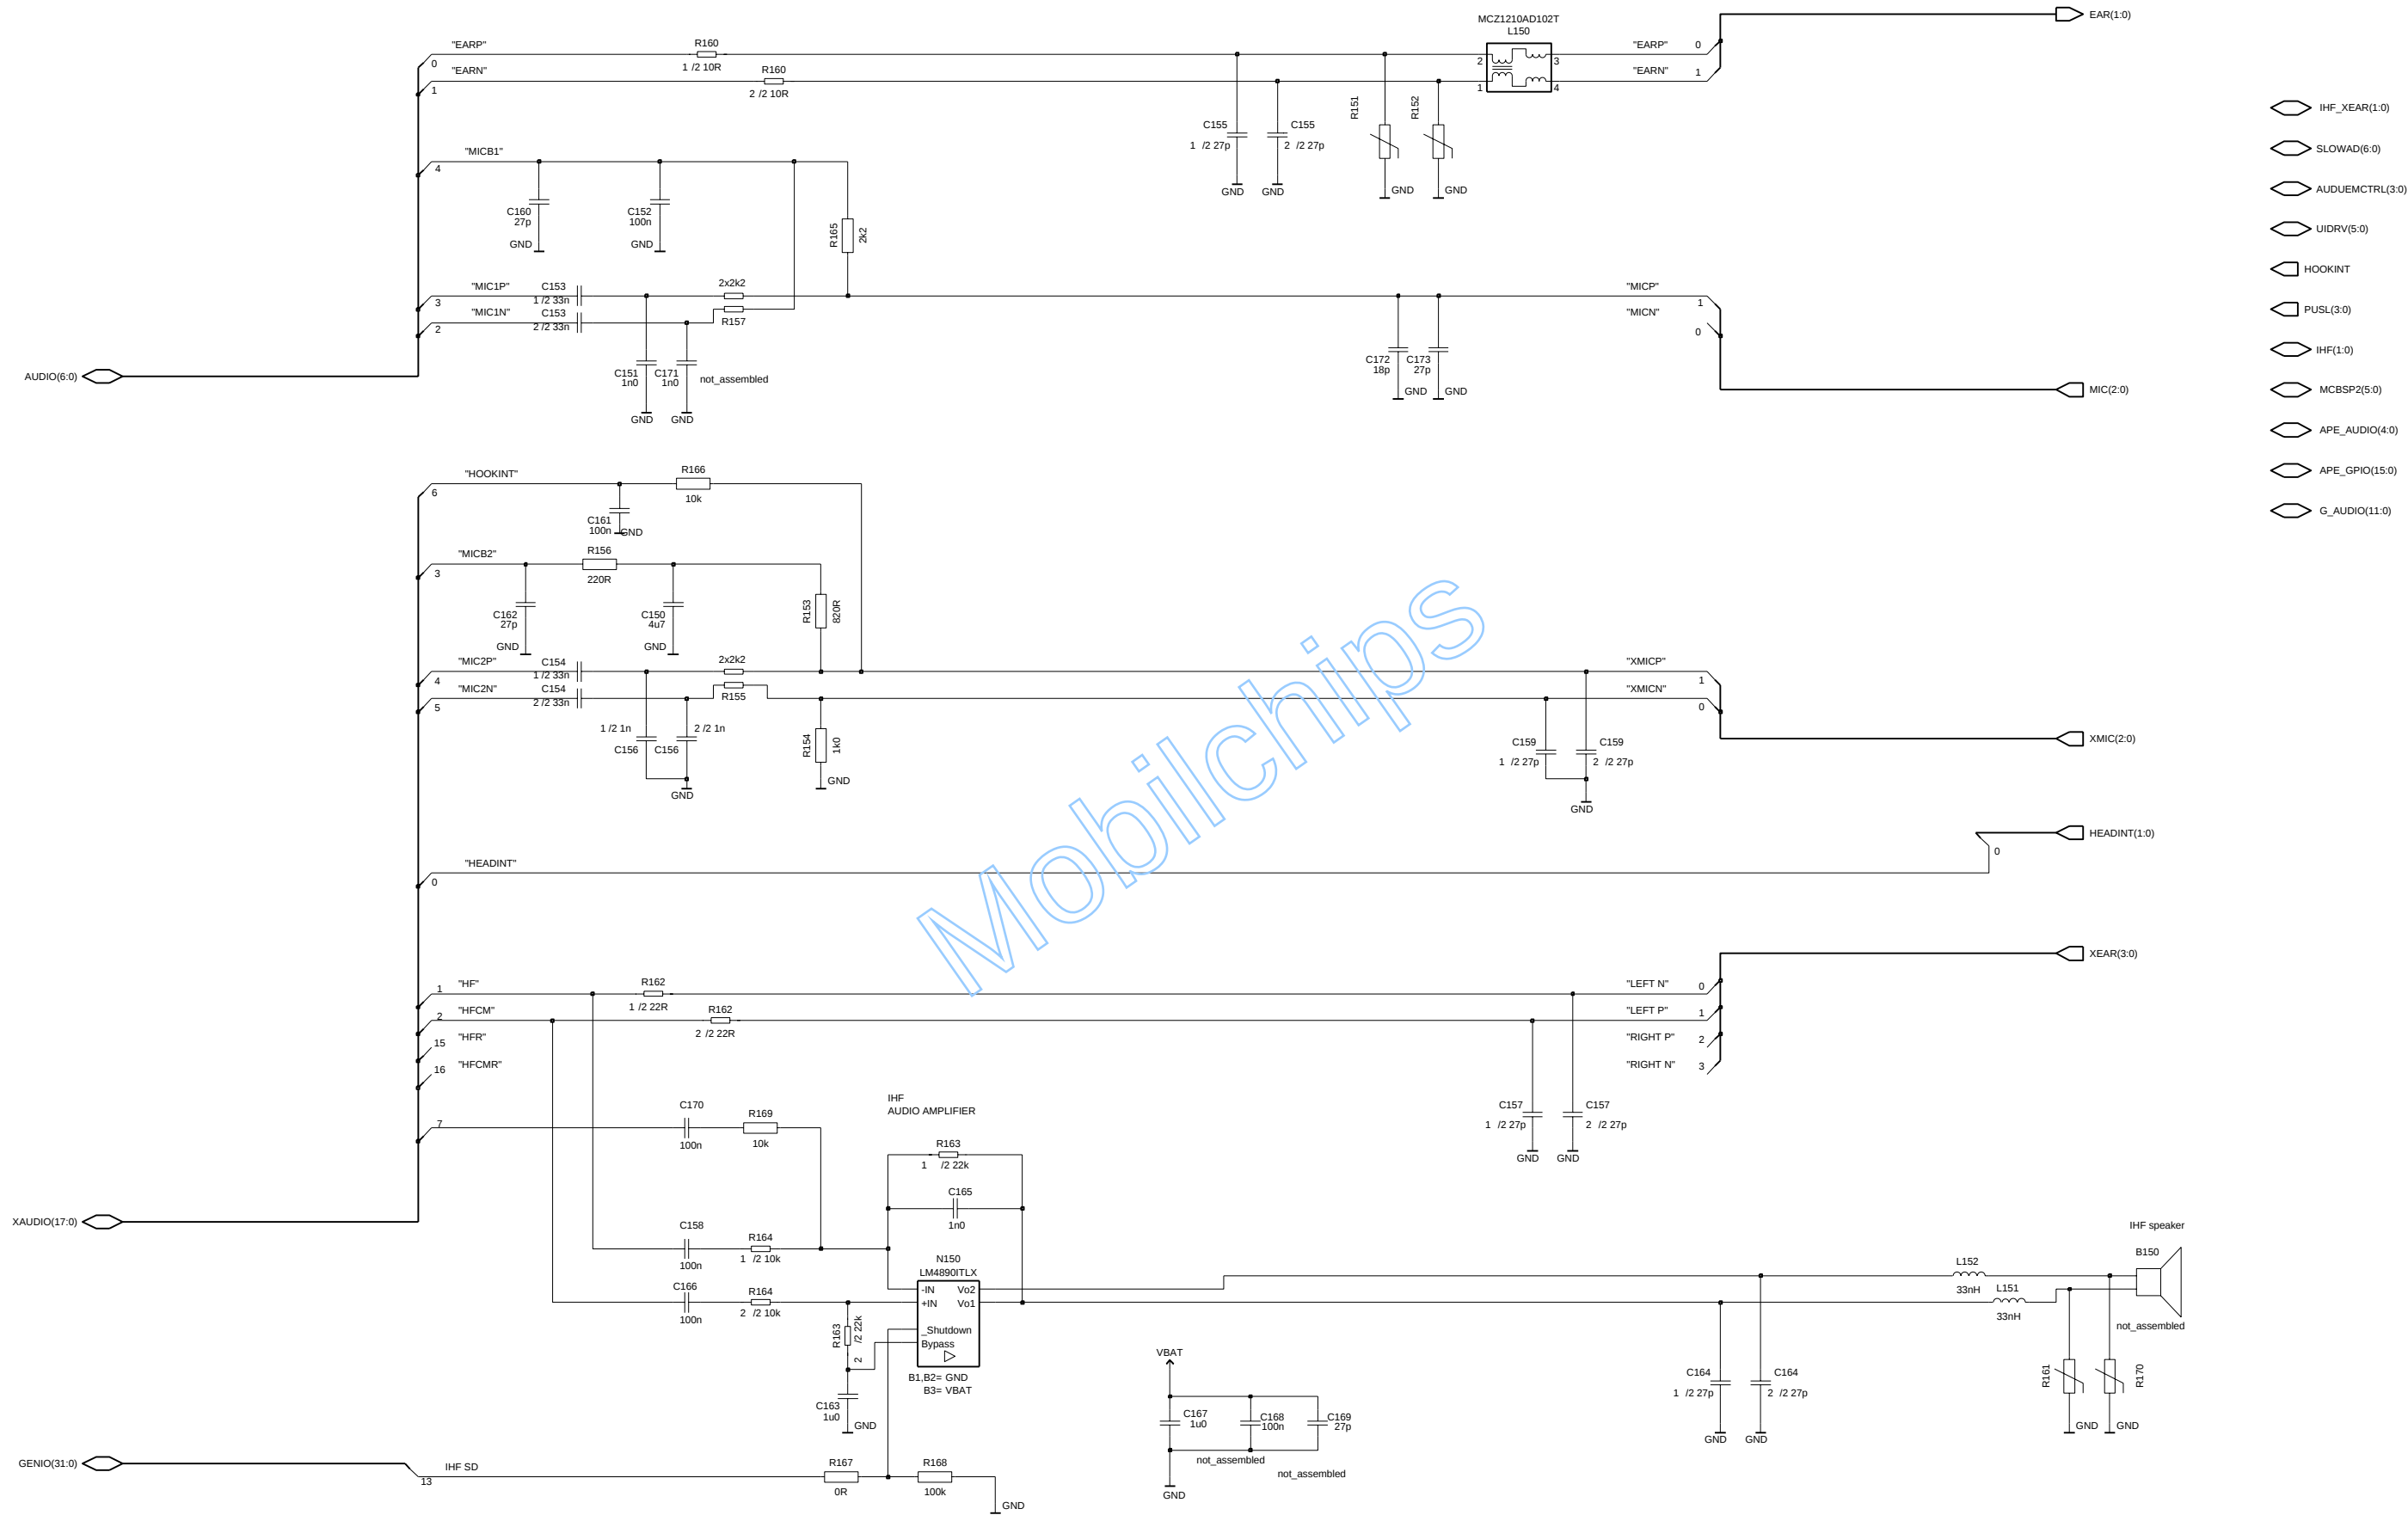

White LED driver for display/keyboard

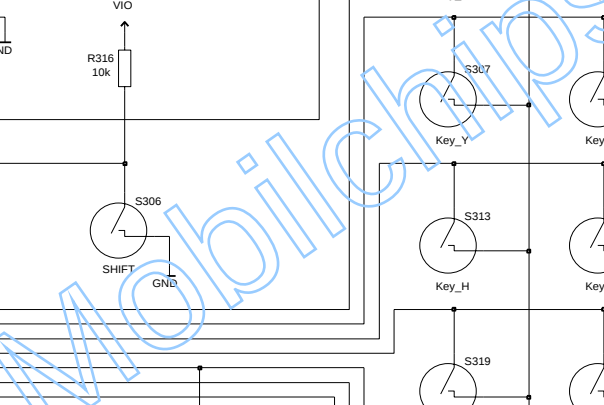

LPRF Antenna Diagram v. 0.0 ed.21

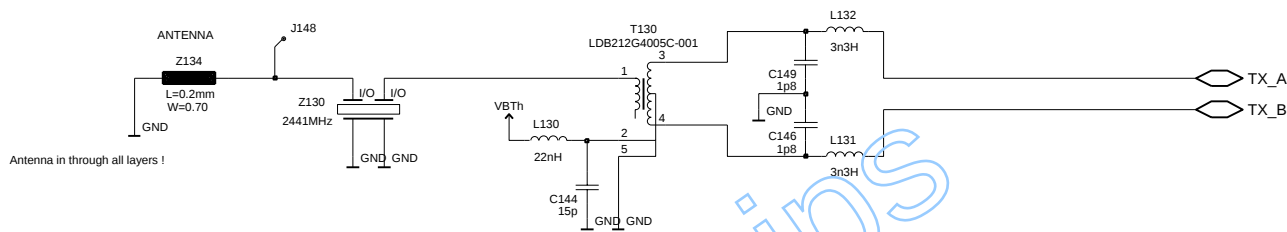

Parts Placement Diagram TB6_17a top

