


Service Manual

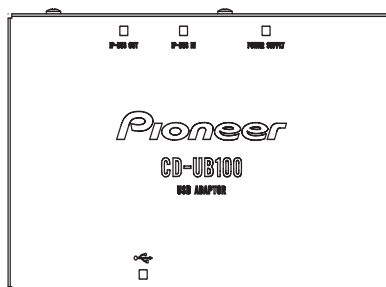

CD-UB100/XN/UC

ORDER NO.
CRT3844

USB ADAPTER

CD-UB100 /XN/UC

CD-UB100 /XN/E5



For details, refer to "Important Check Points for Good Servicing".

SAFETY INFORMATION

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

● **Service Precaution**



1. You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.
2. Be careful in handling ICs. Some ICs such as MOS type are so fragile that they can be damaged by electrostatic induction.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

A

SAFETY INFORMATION.....2

1. SPECIFICATIONS5

2. EXPLODED VIEWS AND PARTS LIST6

 2.1 PACKING6

 2.2 EXTERIOR.....8

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM10

 3.1 BLOCK DIAGRAM10

 3.2 OVERALL CONNECTION DIAGRAM(GUIDE PAGE).....12

4. PCB CONNECTION DIAGRAM18

 4.1 MOTHER UNIT18

5. ELECTRICAL PARTS LIST22

6. ADJUSTMENT25

 6.1 TEST MODE25

7. GENERAL INFORMATION26

 7.1 DIAGNOSIS26

 7.1.1 DISASSEMBLY26

 7.1.2 CONNECTOR FUNCTION DESCRIPTION27

 7.2 IC28

 7.3 OPERATIONAL FLOW CHART35

8. OPERATIONS36

C

D

E

F

1. SPECIFICATIONS

General

Power source 14.4 V DC (10.8 V to 15.1 V allowable)

Grounding system Negative type

Max. current consumption

..... 2.0 A

Dimensions (W × H × D) ... 146 × 24 × 90 mm
(5-3/4 × 1 × 3-1/2 in.)

Weight 0.32 kg (0.7 lbs)

Backup current 2 mA or less

USB

Specification USB 2.0 full speed

Supply current 500 mA

Maximum amount of memory

..... 250 GB

File system FAT12, FAT16, FAT32

Maximum number of files ... 15 000

Maximum number of folders

..... 500

MP3 decoding format MPEG-1, 2 & 2.5 Audio Layer
3

WMA decoding format Ver. 7, 7.1, 8, 9, 10 (2ch
audio)

(Windows Media Player)

AAC decoding format MPEG-4 AAC (iTunes® en-
coded only)

Audio

Signal-to-noise ratio 95 dB (1 kHz) (IHF-A net-
work)

Dynamic range 95 dB (1 kHz)

Channel separation 90 dB (1 kHz)

Number of channels 2 (stereo)



Note


Specifications and the design are subject to possible modifications without notice due to improvements. □

2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to ▽ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

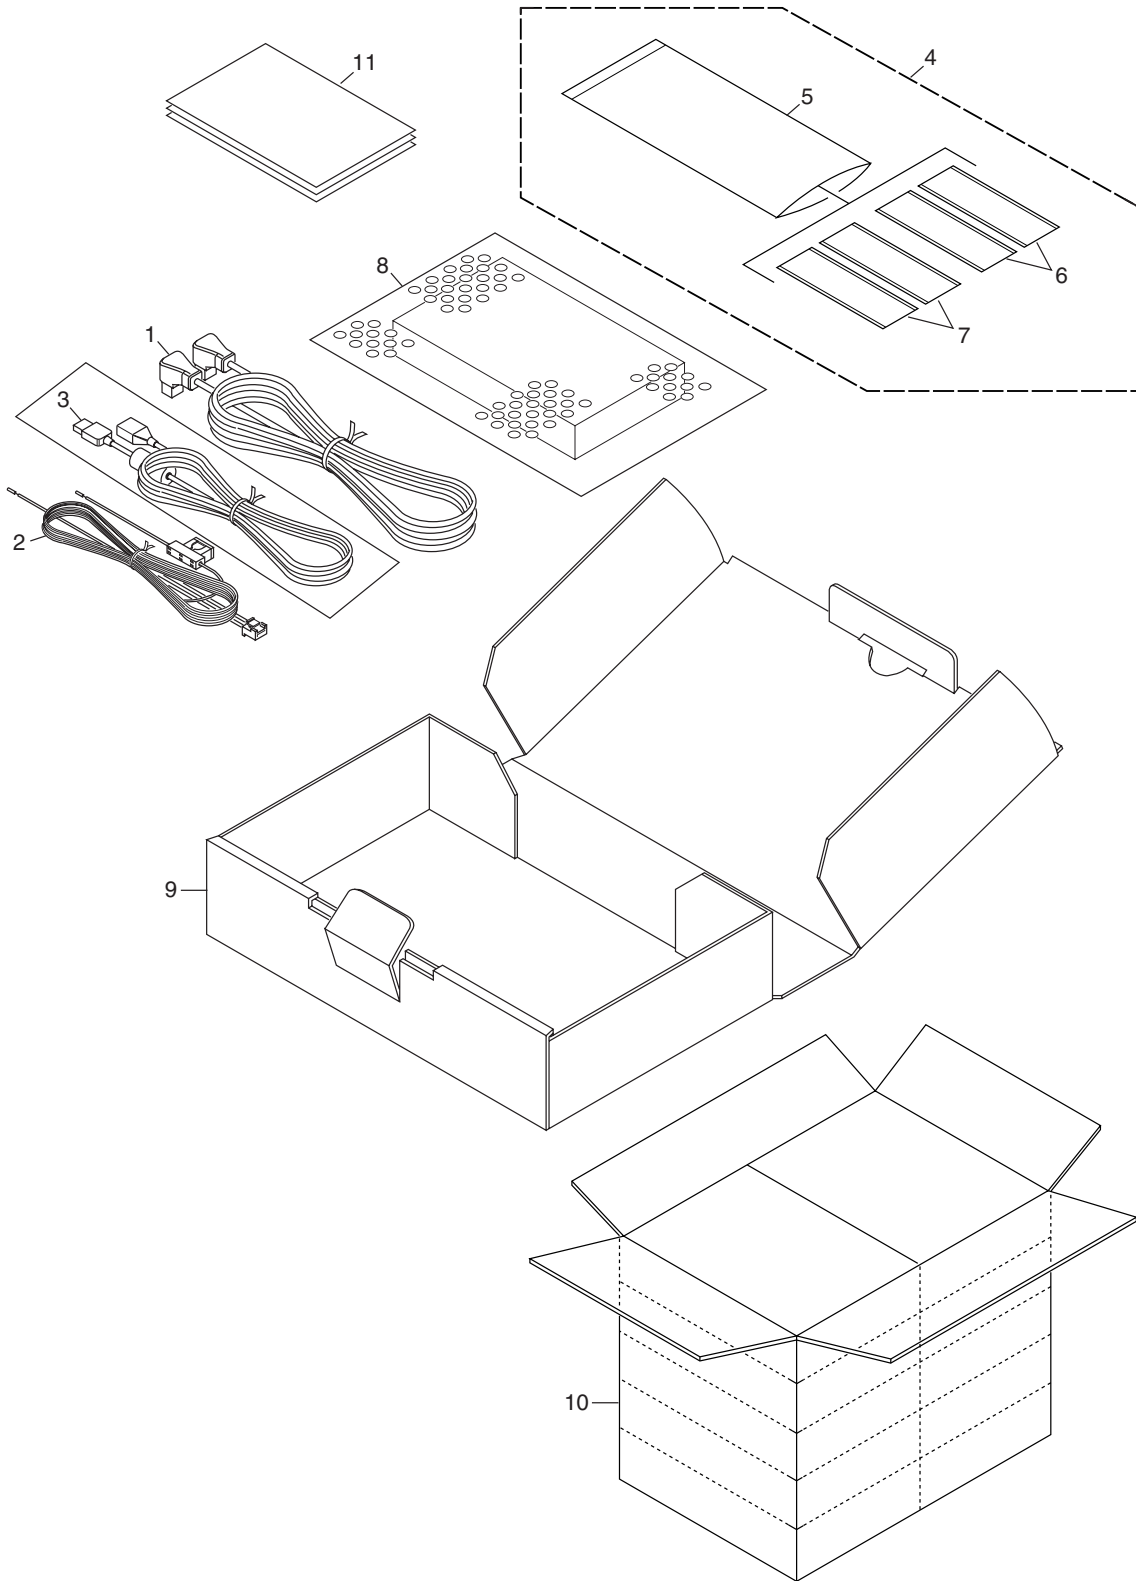

PACKING SECTION PARTS LIST





<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	CDE5880		Carton(E5)	CHG6067
2	Cord Assy	CDE8158			
3	Cord Assy	CDP1026	10	Contain Box(UC)	CHL6068
* 4	Accessory Assy	CEA7408		Contain Box(E5)	CHL6067
5	Polyethylene Bag	CEG1160	11-1	Owner's Manual(UC)	CRD4151
				Owner's Manual(E5)	CRD4149
6	Fastener	CNM6888	11-2	Owner's Manual(E5)	CRD4150
7	Fastener	CNM6889			
8	Air Cushioned Bag	CEG1007	* 11-3	Warranty Card(UC)	CRY1246
9	Carton(UC)	CHG6068	*	Warranty Card(E5)	CRY1157

Owner's Manual

Part No.	Language
CRD4151	English, French, Spanish
CRD4149	English, Spanish, German, French, Italian
CRD4150	Dutch, Russian, Portuguese(B), Traditional Chinese, Arabic

1 2 3 4

2.2 EXTERIOR

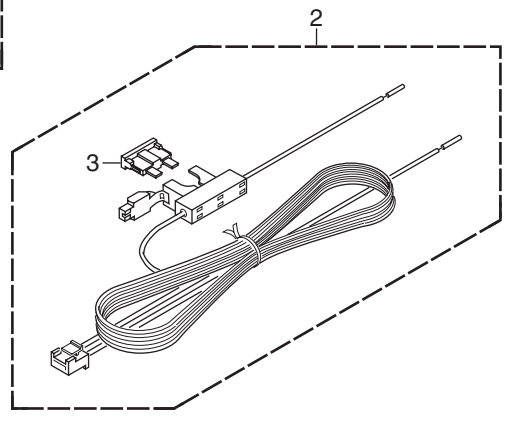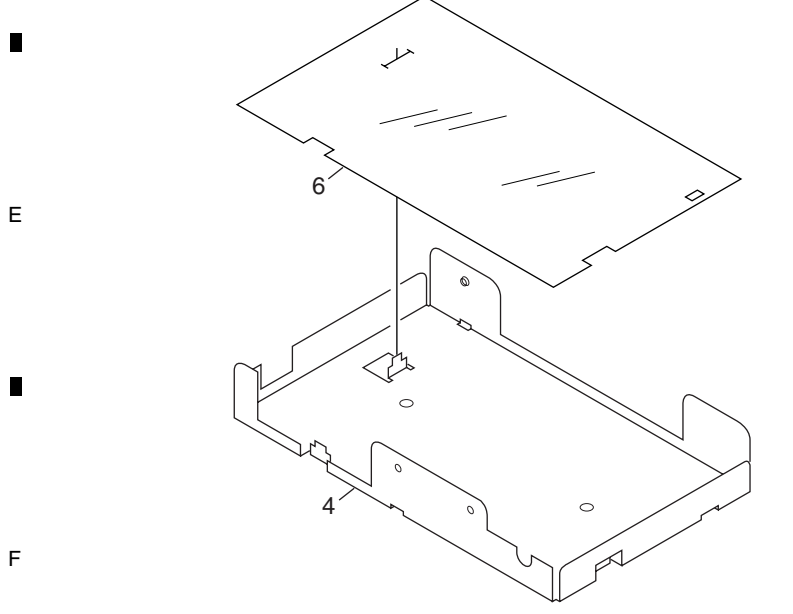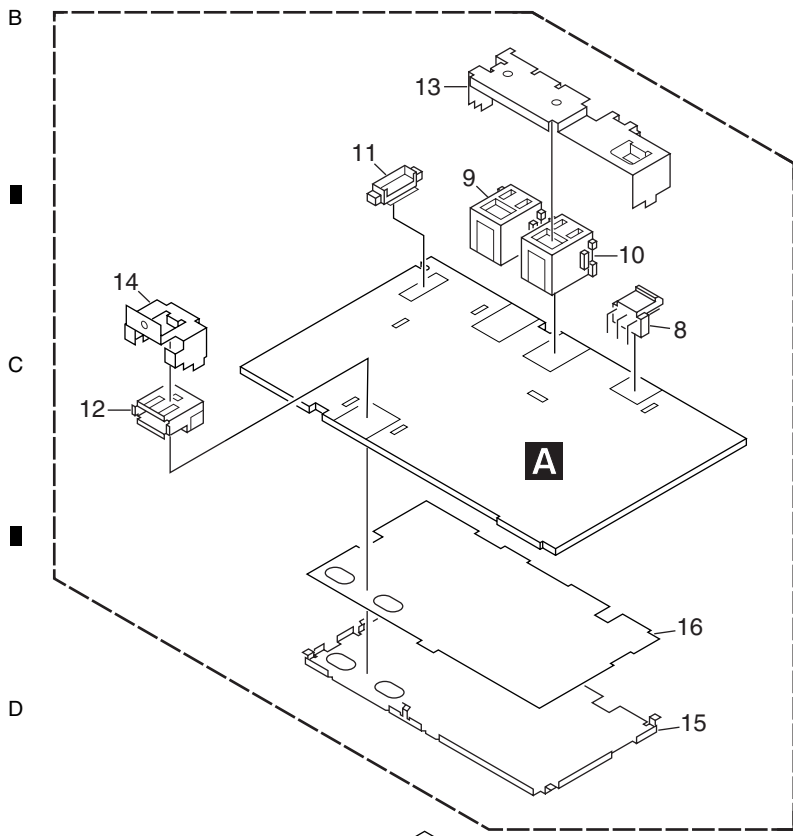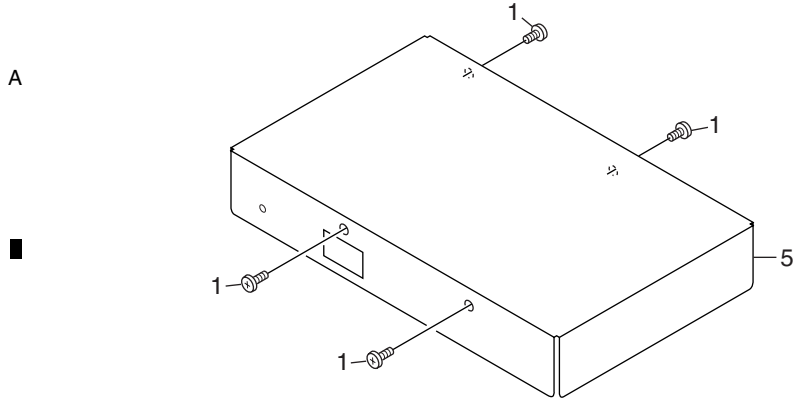

EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	BSZ26P050FTB	10	Connector(CN101)	CKS3414
2	Cord Assy	CDE8158			
⚠ 3	Fuse(3 A)	CEK1134	11	Connector(CN501)	CKS4830
4	Chassis	CNA2909	12	Connector(CN601)	CKS5669
5	Case	CNB3369	13	Holder	CND3443
			14	Holder	CND3780
6	Insulator	CNN1104	15	Shield	CND4090
7	Mother Unit	CWN2102			
8	Plug(CN801)	CKS-460	16	Insulator	CNM1710
9	Connector(CN102)	CKS3409			

A

B

C

D


E


F

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

A MOTHER UNIT

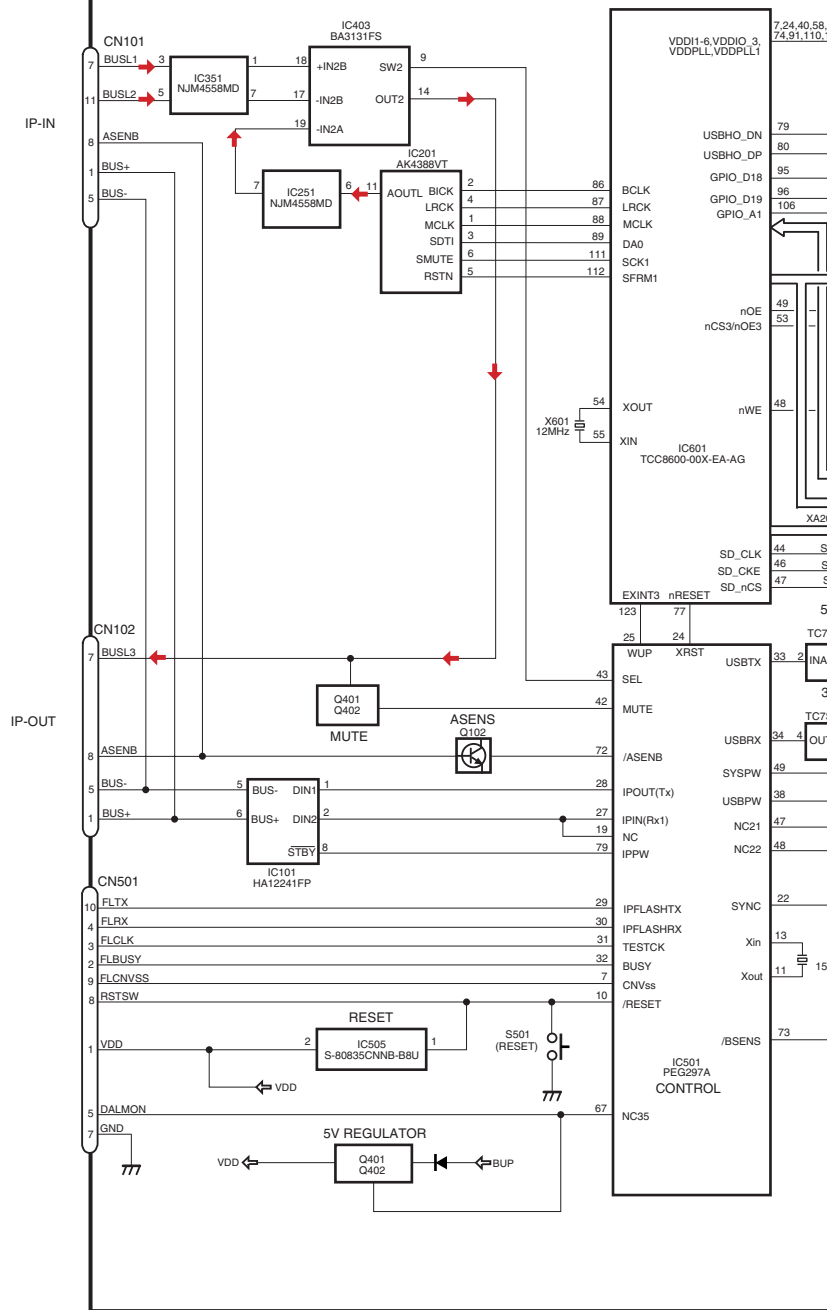

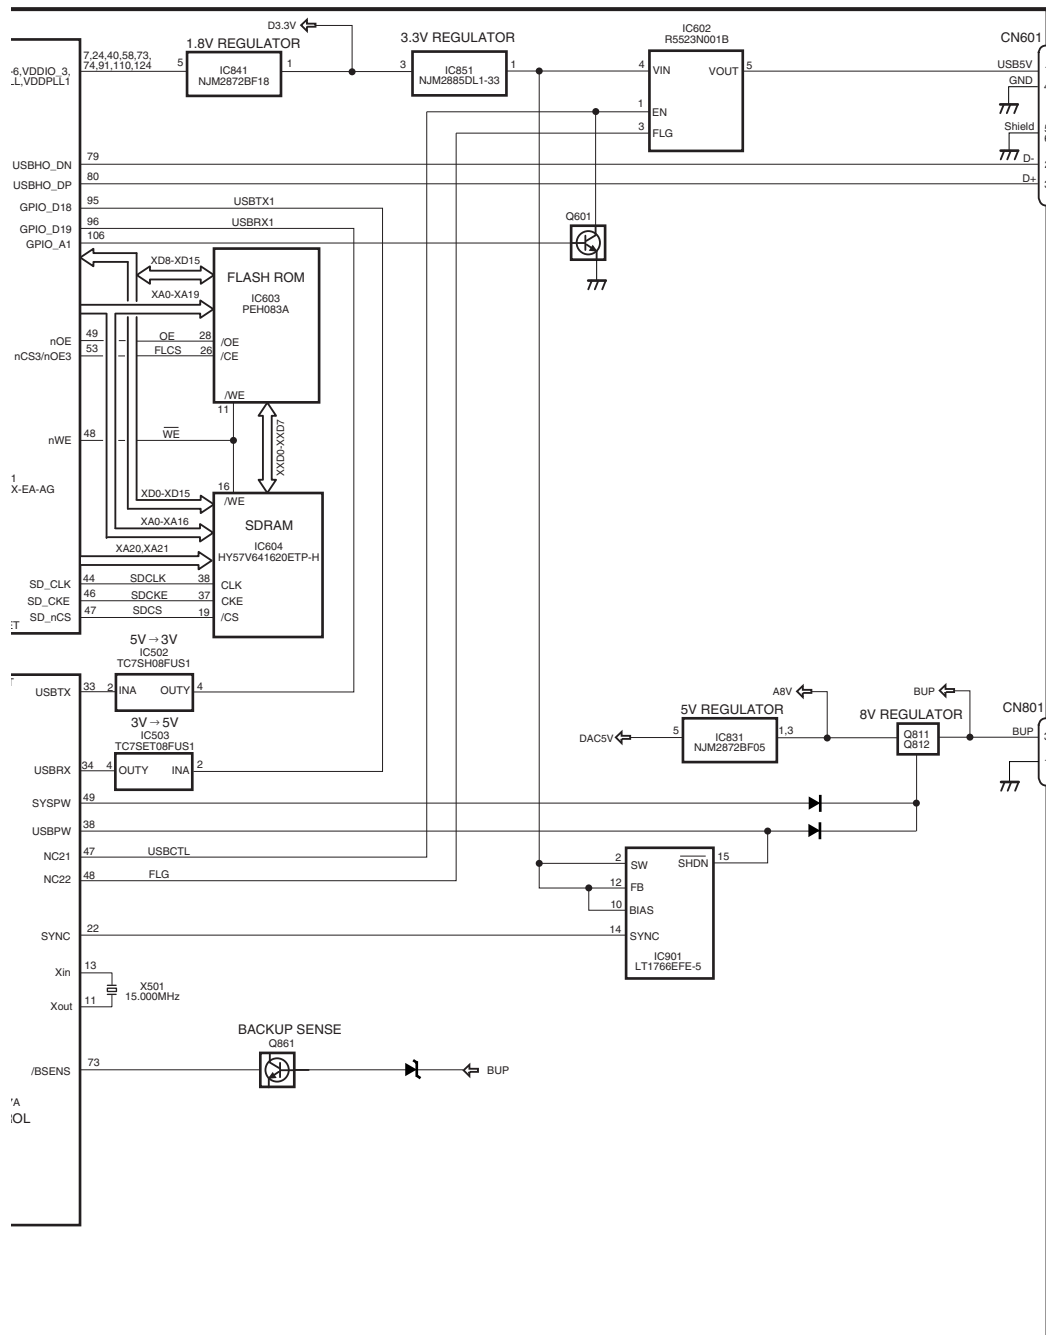

4

A



A-b

A


B

C


D

E

F

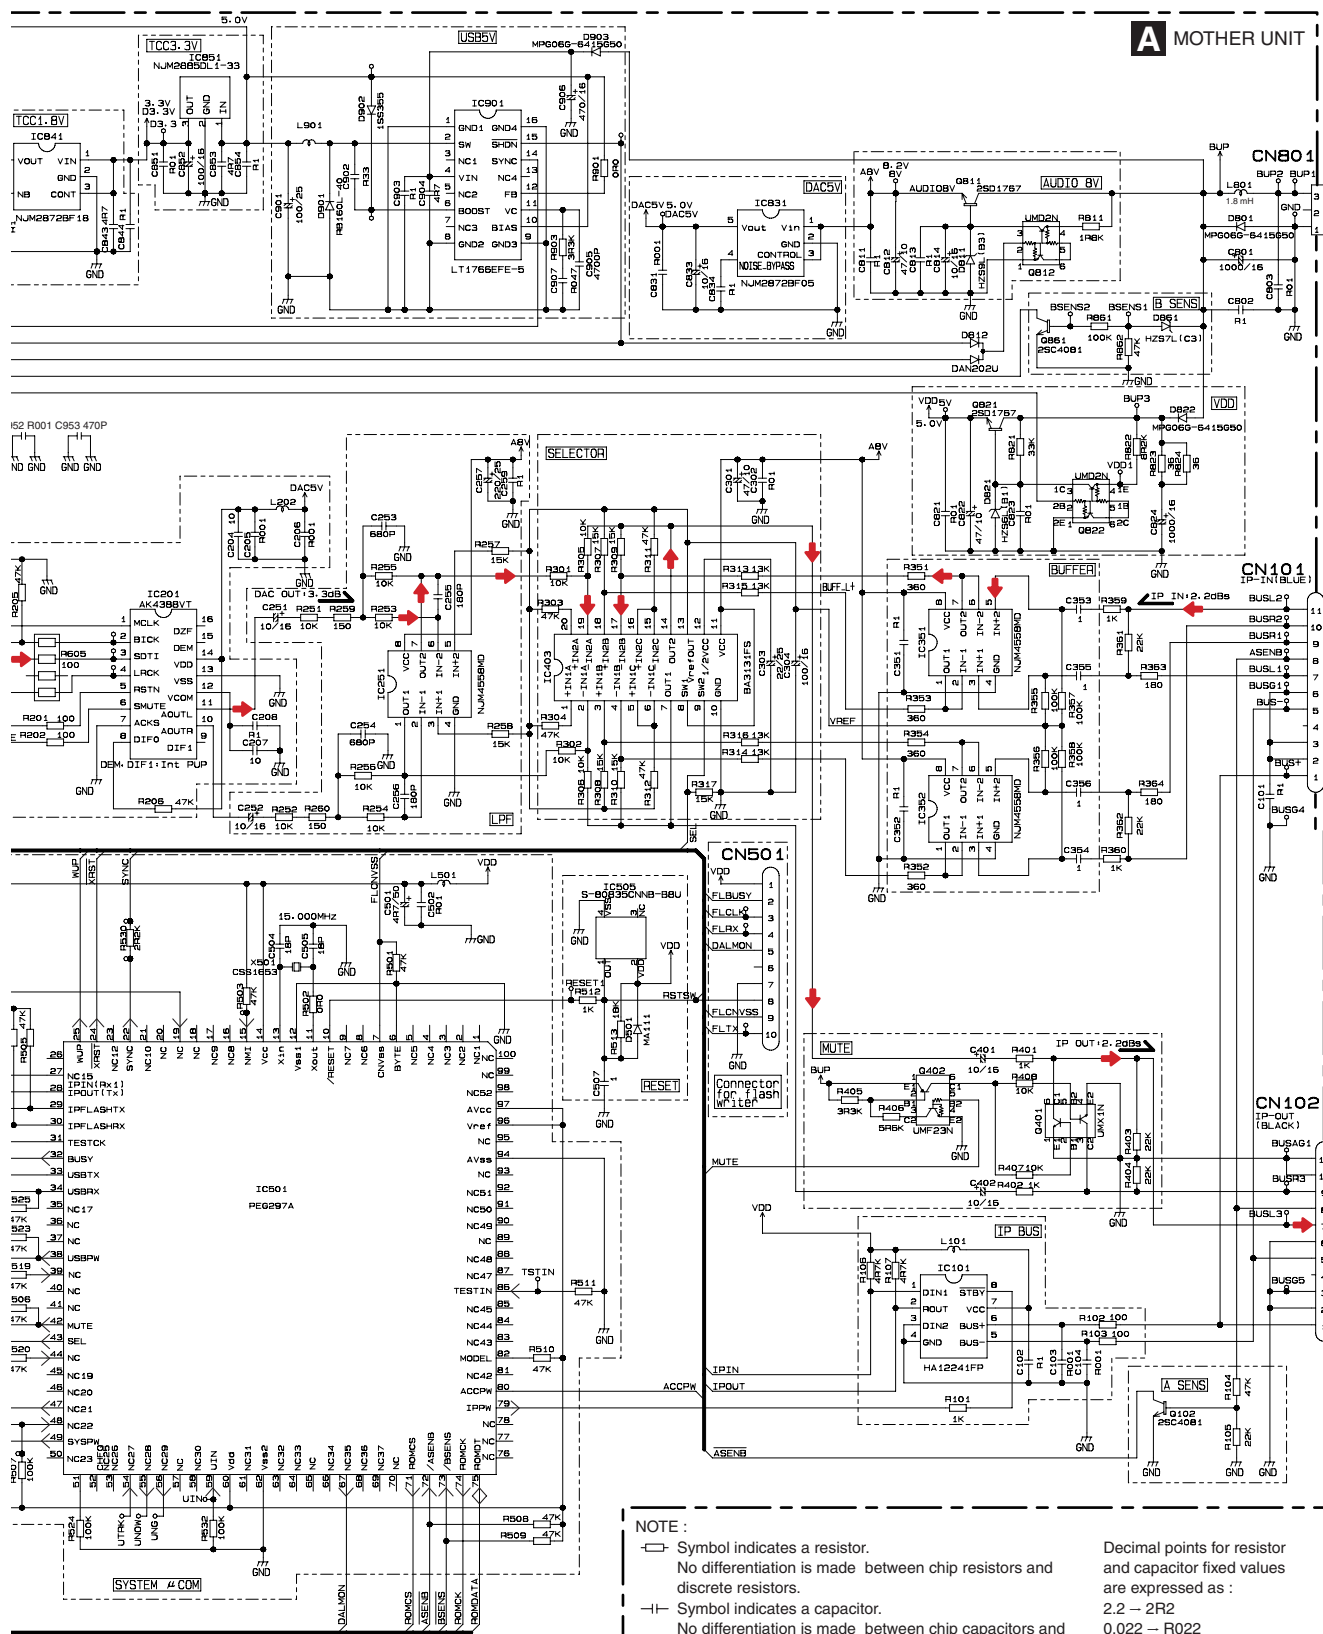

A MOTHER UNIT

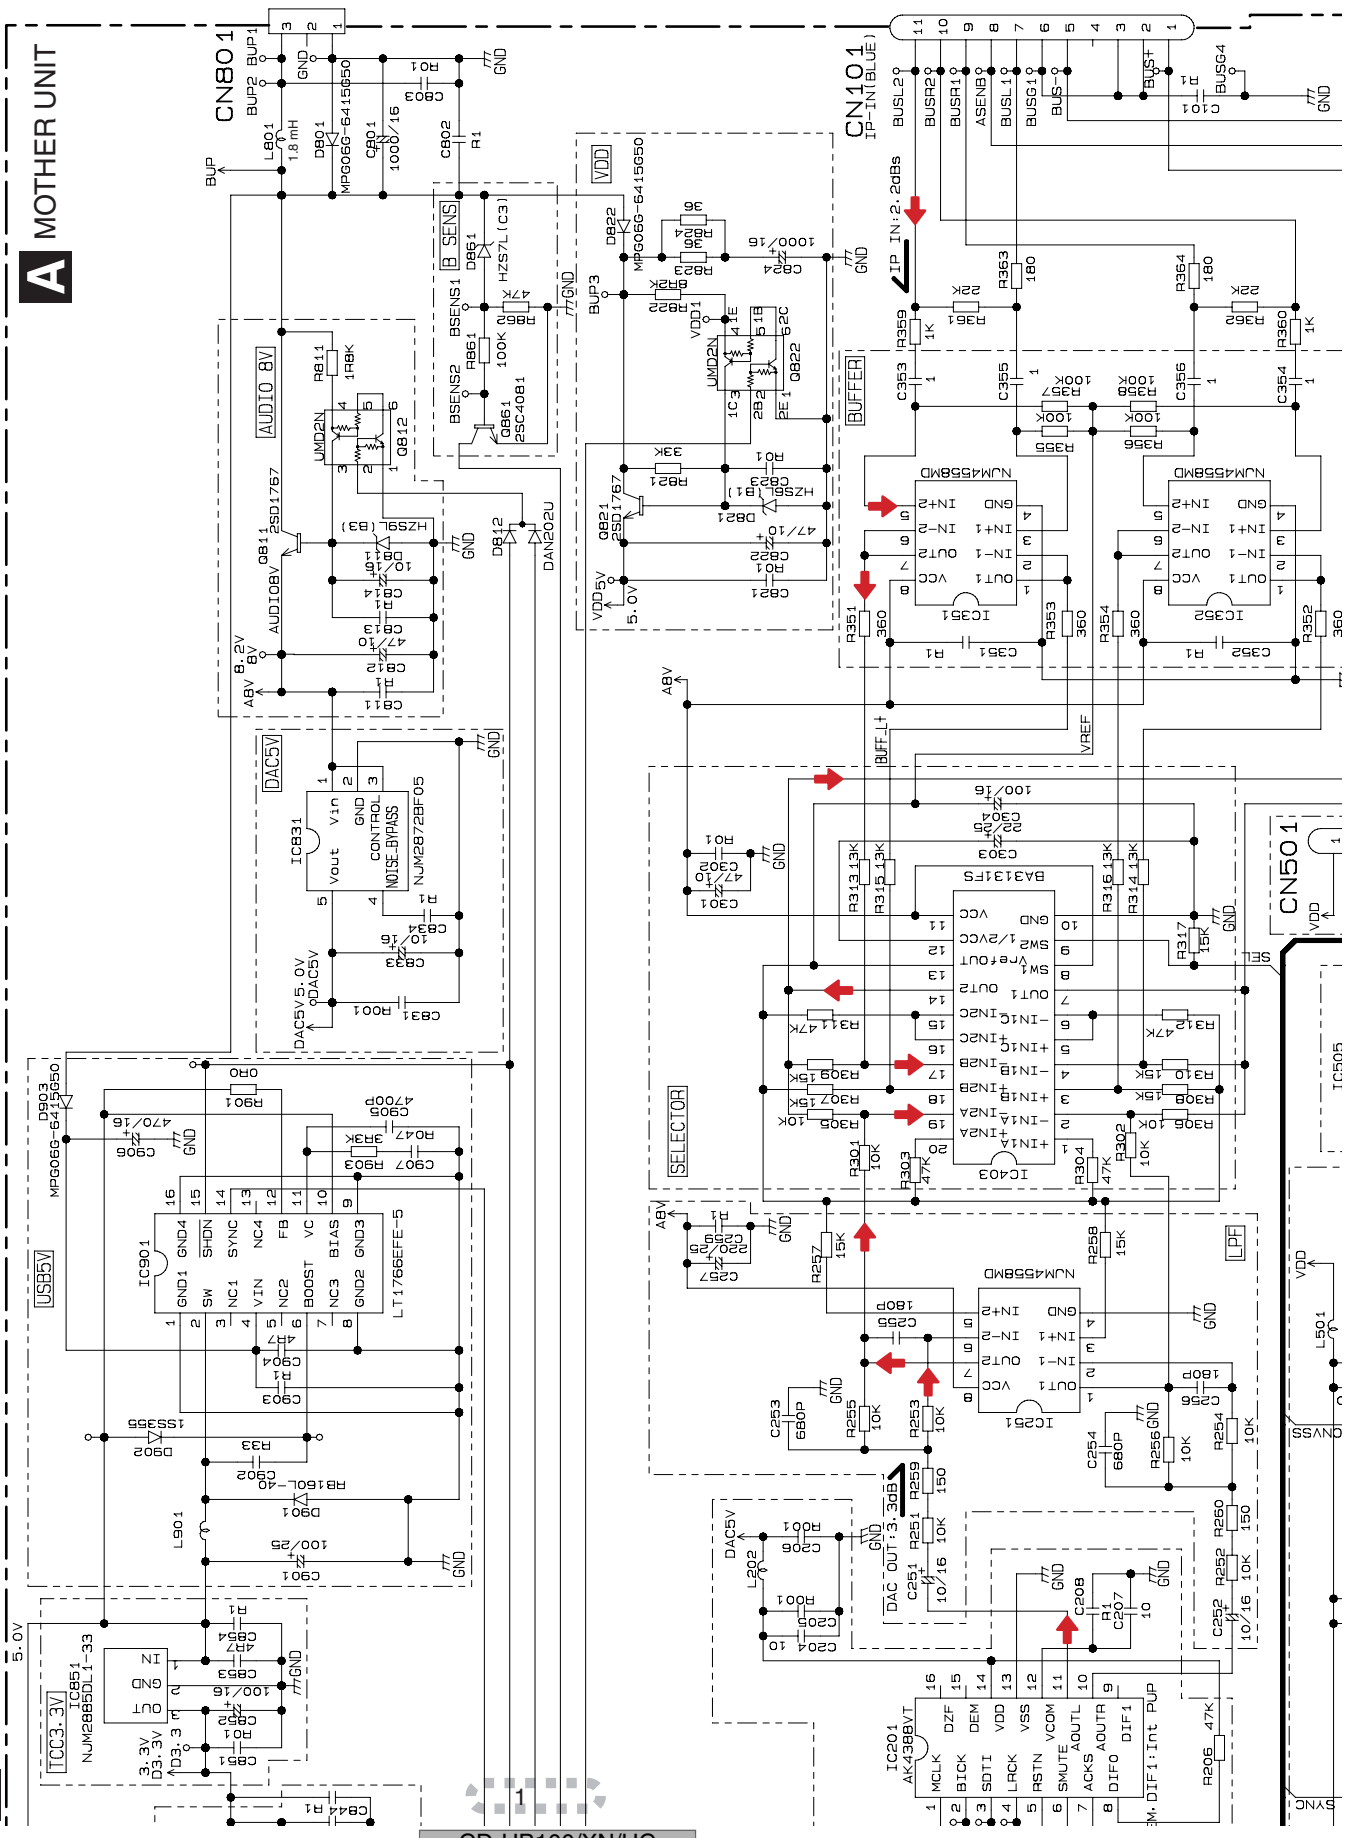




No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as :

$2.2 - 2R2$
 $0.022 - R022$

A-a





E


4. PCB CONNECTION DIAGRAM

4.1 MOTHER UNIT


NOTE FOR PCB DIAGRAMS

1.The parts mounted on this PCB include all necessary parts for several destination.
For further information for respective destinations, be sure to check with the schematic diagram.


2.Viewpoint of PCB diagrams

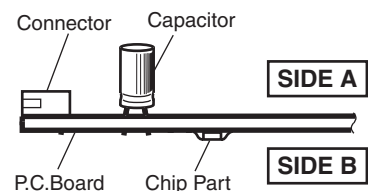

A MOTHER UNIT

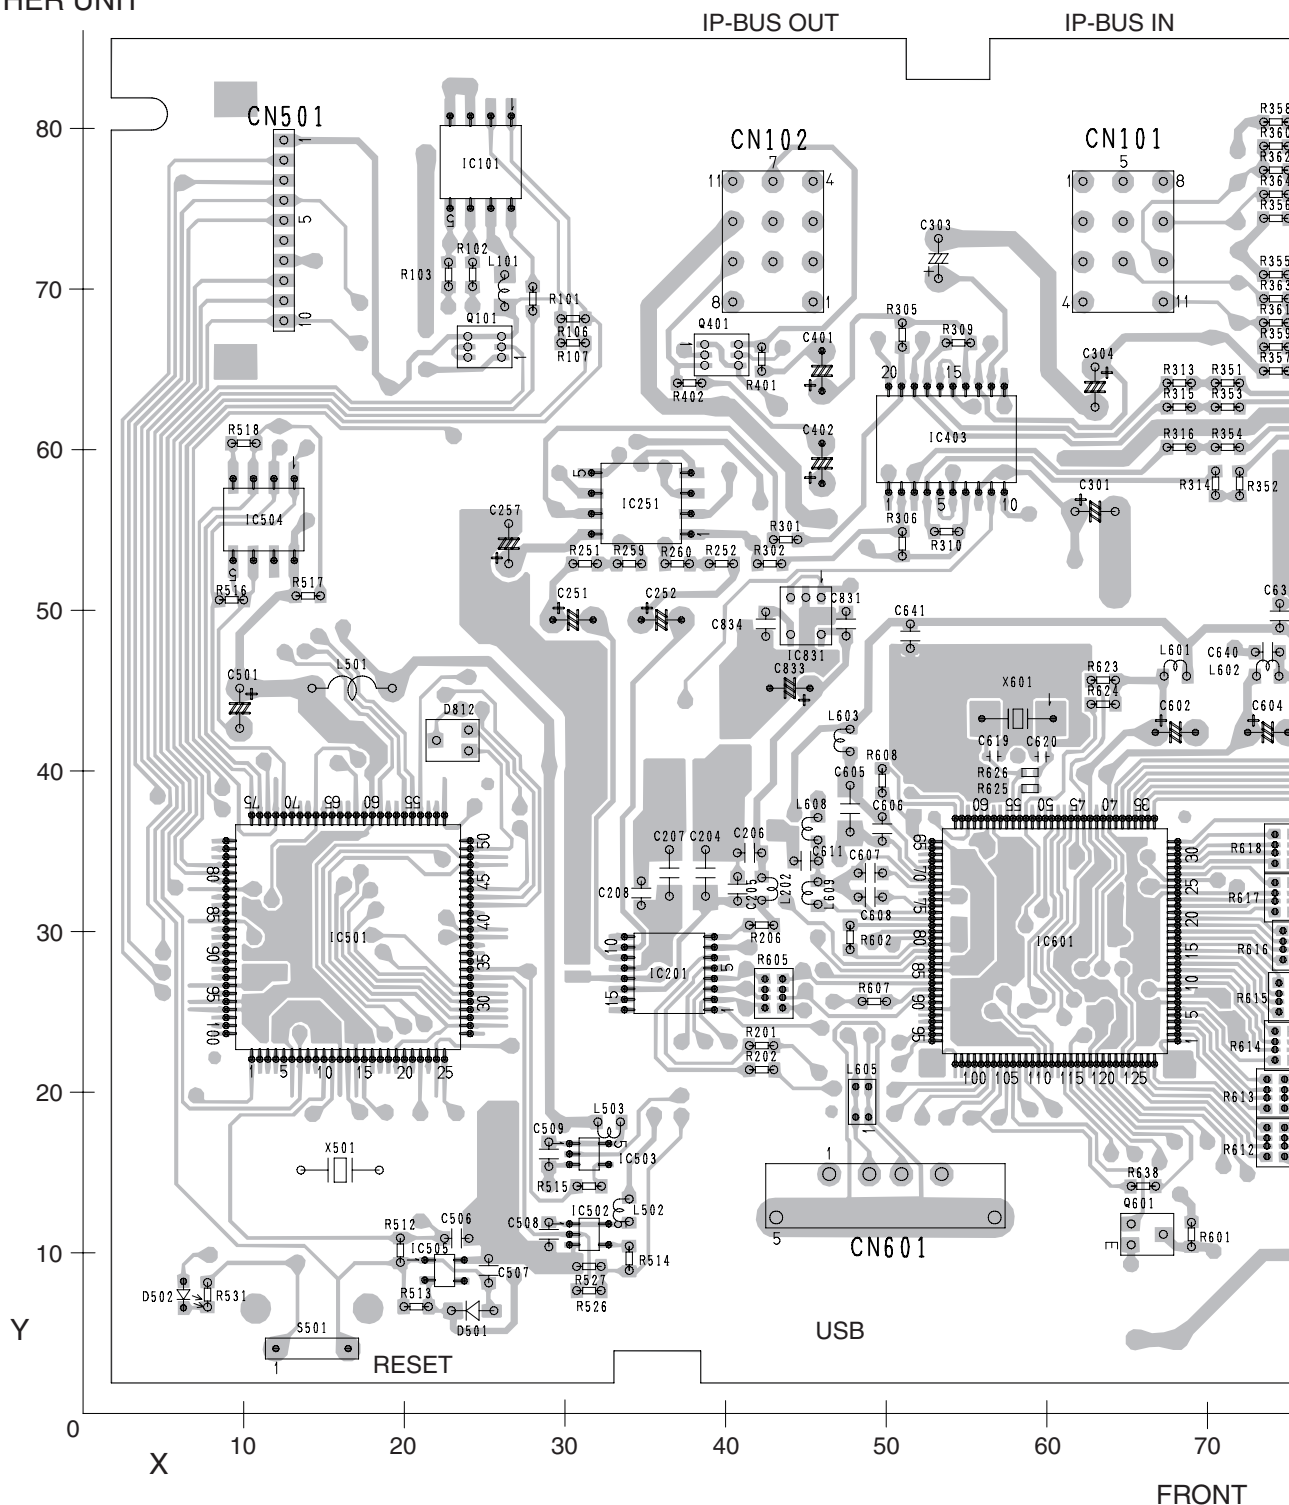

SIDE A

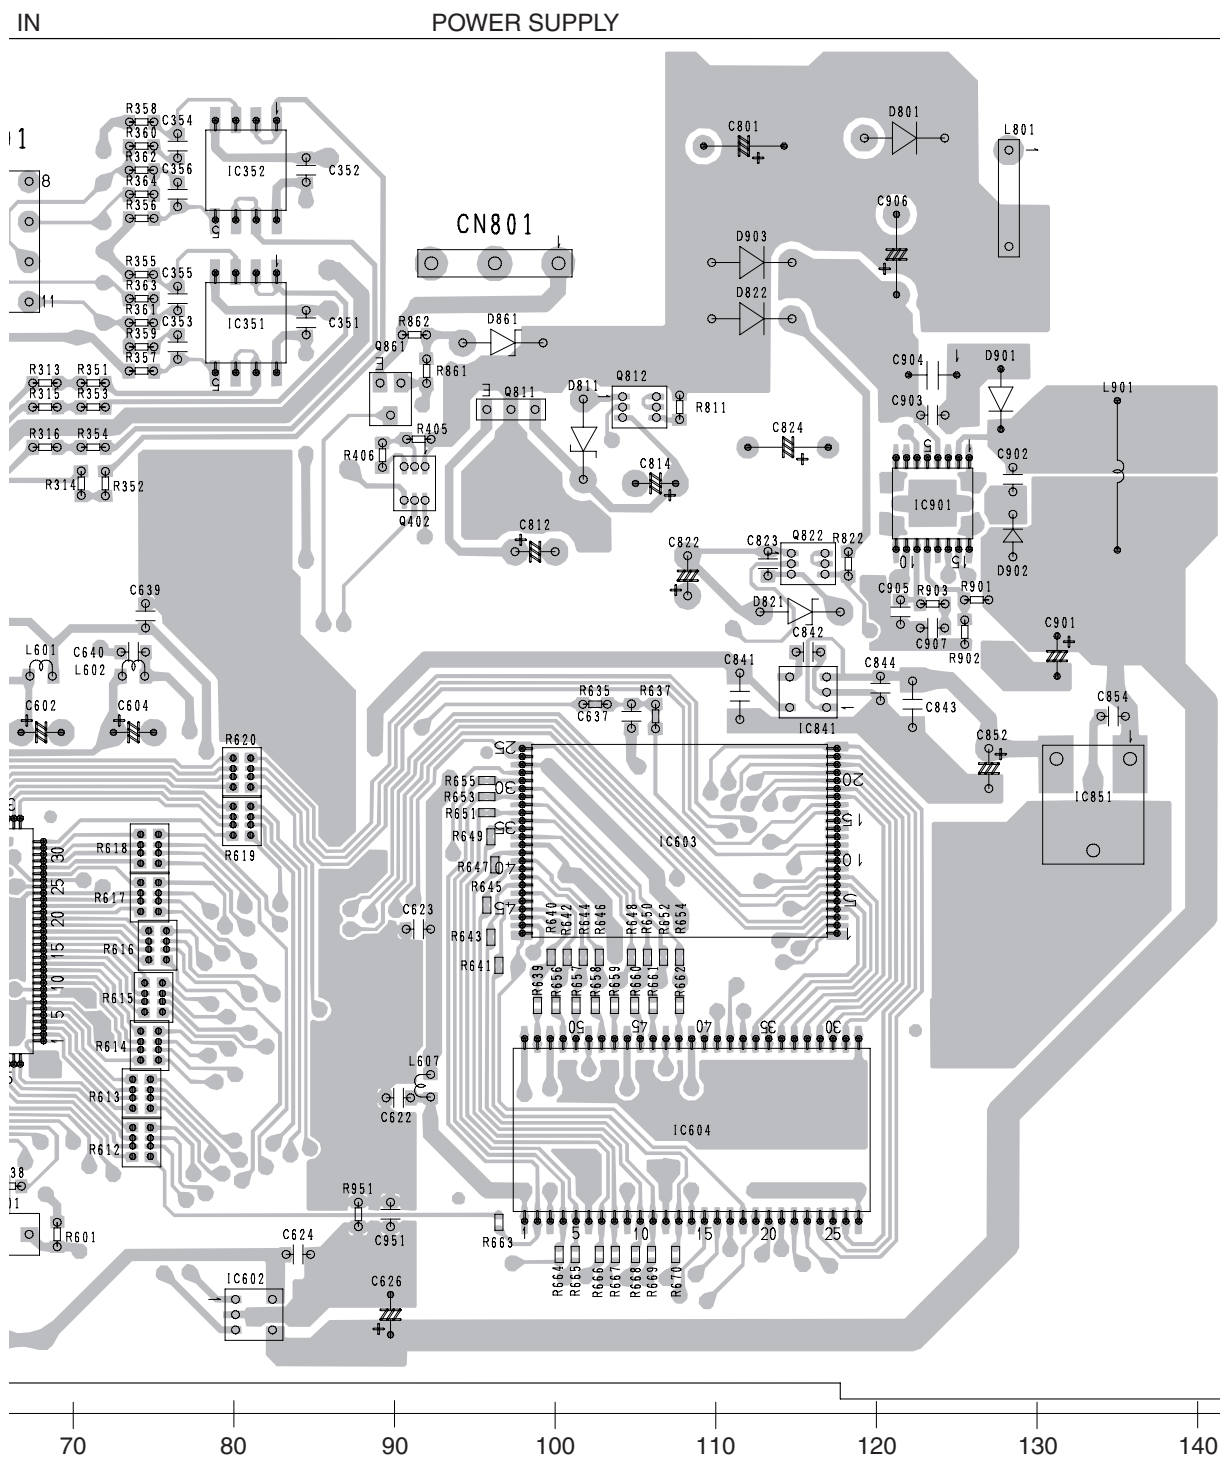

FRONT

CD-UB100/XN/UC

A

A MOTHER UNIT


B

C


D

E

F

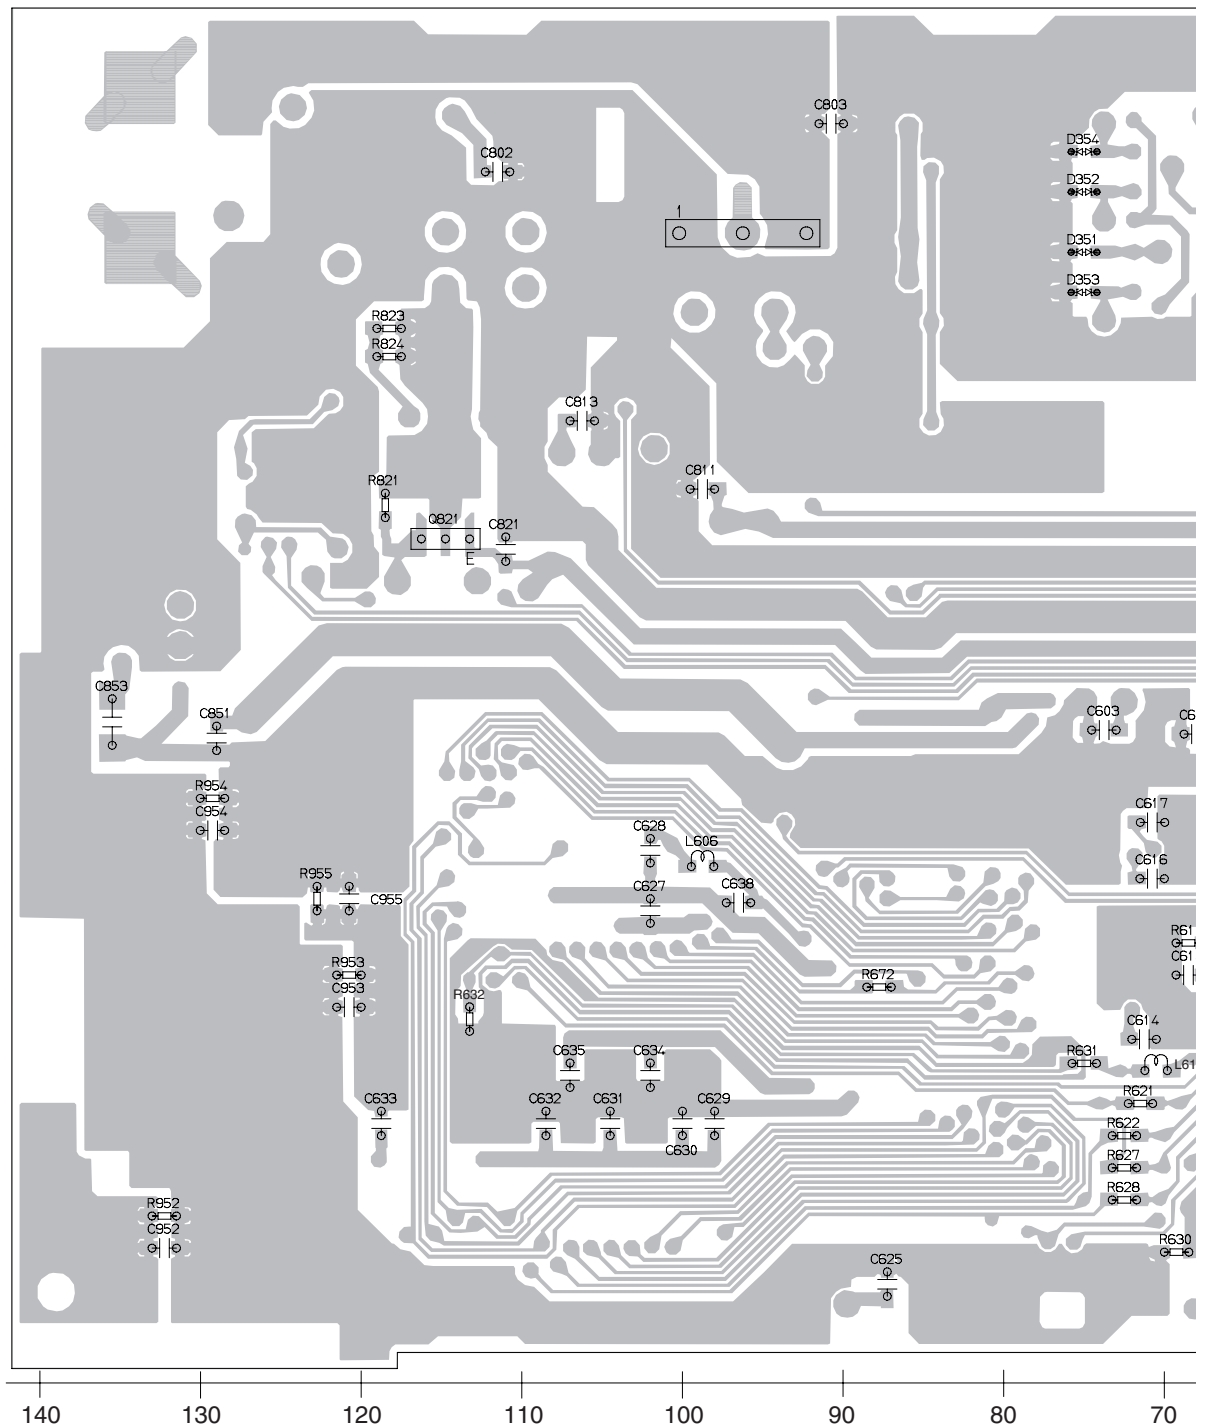
A

SIDE B

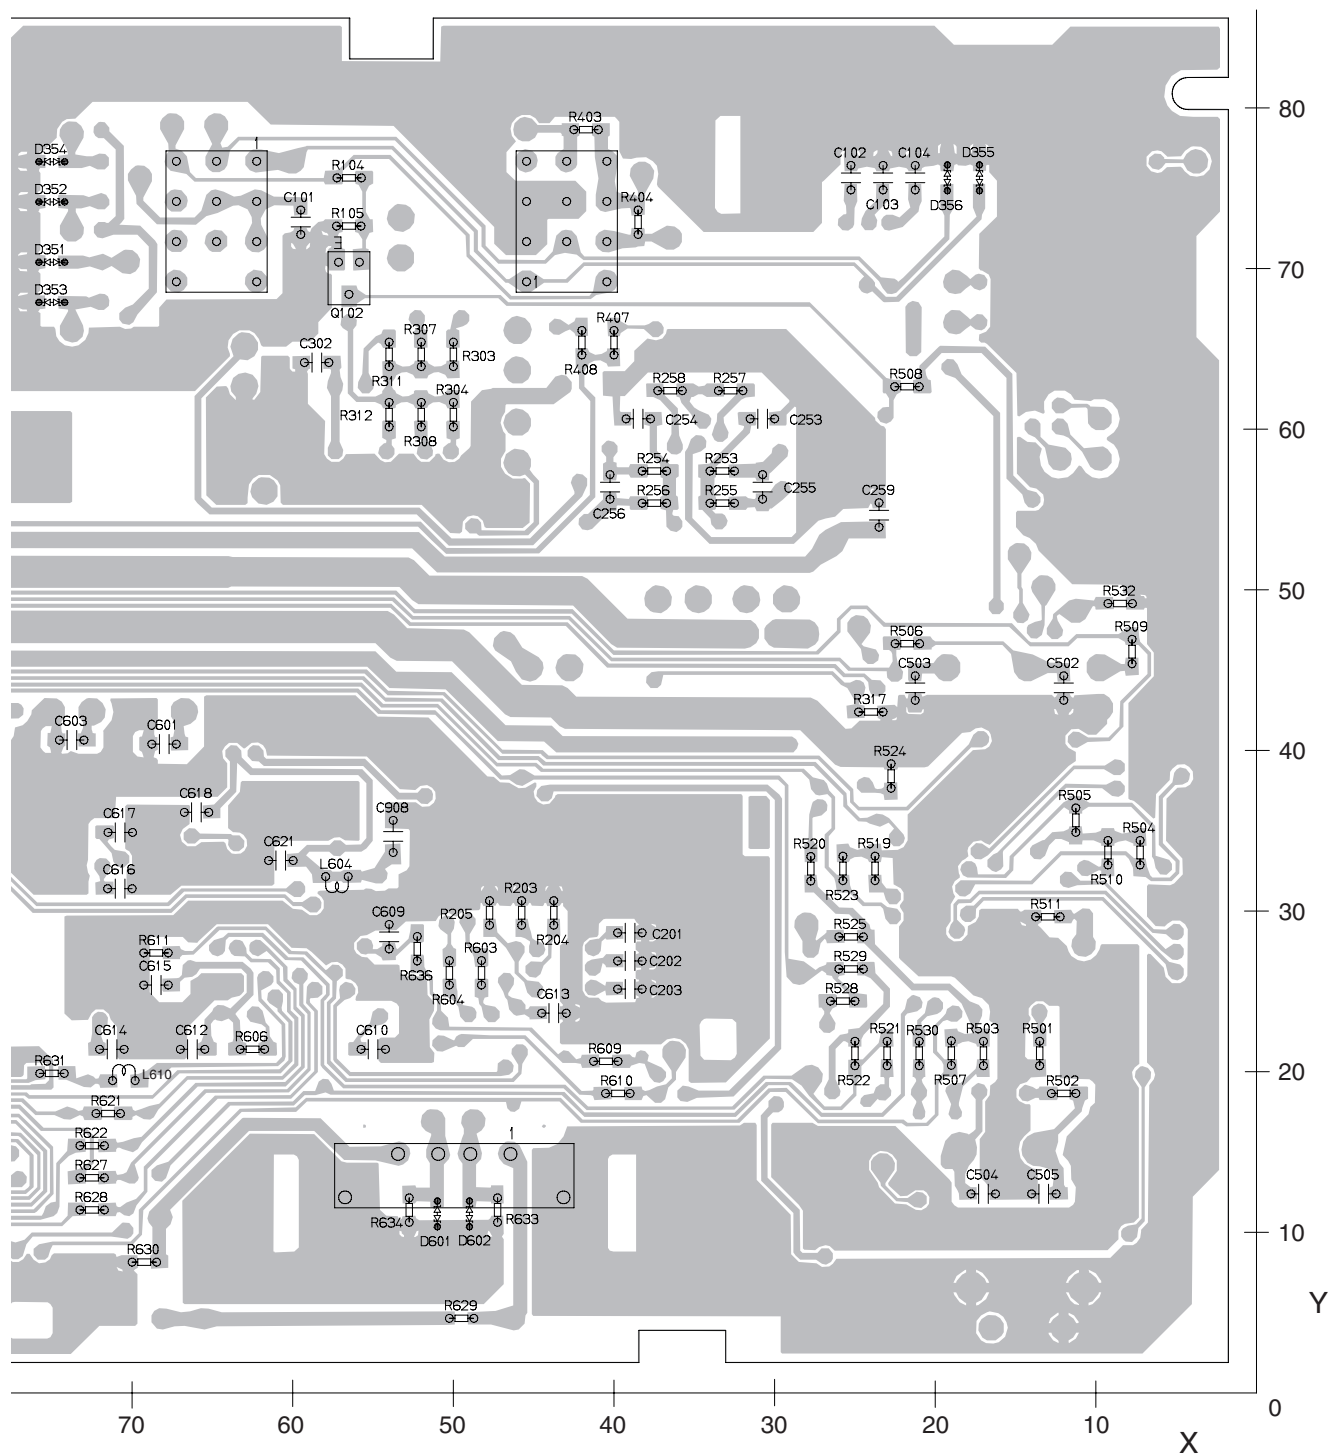

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

A

Unit Number: CWN2102

Unit Name : Mother Unit

MISCELLANEOUS

IC 101	(A,25,78) IC	HA12241FP
IC 201	(A,37,27) IC	AK4388VT
IC 251	(A,35,57) IC	NJM4558MD
IC 351	(A,81,68) IC	NJM4558MD
IC 352	(A,81,77) IC	NJM4558MD
IC 403	(A,54,61) IC	BA3131FS
IC 501	(A,17,30) IC	PEG297A
IC 502	(A,32,11) IC	TC7SH08FUS1
IC 503	(A,32,16) L-MOS	TC7SET08FUS1
IC 505	(A,23,9) IC	S-80835CNNB-B8U
IC 601	(A,61,29) USB Media Control IC	TCC8600-00X-EA-AG
IC 602	(A,81,6) IC	R5523N001B
IC 603	(A,108,36) IC	PEH083A
IC 604	(A,109,18) SD-RAM(64M)	HY57V641620ETP-H
IC 831	(A,45,50) IC	NJM2872BF05
IC 841	(A,116,45) IC	NJM2872BF18
IC 851	(A,134,36) IC	NJM2885DL1-33
IC 901	(A,124,57) IC	LT1766EFE-5
Q 102	(B,57,69) Transistor	2SC4081
Q 401	(A,40,66) Transistor	UMX1N
Q 402	(A,91,58) Transistor	UMF23N
Q 601	(A,66,11) Chip Transistor	DTC114EWA
Q 811	(A,97,61) Transistor	2SD1767
Q 812	(A,105,63) Transistor	UMD2N
Q 821	(B,115,54) Transistor	2SD1767
Q 822	(A,116,53) Transistor	UMD2N
Q 861	(A,90,63) Transistor	2SC4081
D 501	(A,24,6) Diode	MA111
D 601	(B,51,11) Diode	MALS068X
D 602	(B,49,11) Diode	MALS068X
D 801	(A,122,79) Diode	MPG06G-6415G50
D 811	(A,102,61) Diode	HZS9L(B3)
D 812	(A,23,42) Diode	DAN202U
D 821	(A,115,50) Diode	HZS6L(B1)

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
D 822	(A,112,68) Diode	MPG06G-6415G50	
D 861	(A,97,67) Diode	HZS7L(C3)	
D 901	(A,128,63) Diode	RB160L-40	
D 902	(A,129,55) Diode	1SS355	
D 903	(A,112,72) Diode	MPG06G-6415G50	
L 101	(A,26,70) Inductor	LCTC3R3K2125	
L 202	(A,42,33) Inductor	CTF1379	
L 501	(A,17,45) Ferri-Inductor	LAU100K	
L 502	(A,34,13) Inductor	CTF1379	
L 503	(A,33,18) Inductor	CTF1379	
L 601	(A,68,46) Inductor	CTF1379	
L 602	(A,74,46) Inductor	CTF1379	
L 603	(A,48,42) Inductor	CTF1379	
L 606	(B,99,32) Inductor	CTF1379	
L 607	(A,92,20) Inductor	CTF1379	
L 608	(A,46,36) Inductor	LCTC2R2K1608	
L 609	(A,46,32) Inductor	LCTC2R2K1608	
L 610	(B,71,19) Inductor	CTF1384	
L 801	(A,134,76) Choke Coil 1.8 mH	CTH1367	
L 901	(A,135,58) Inductor	CTH1255	
X 501	(A,16,15) Crystal Resonator 15.000 MHz	CSS1653	
X 601	(A,58,43) Crystal Resonator 12.000 MHz	CSS1723	
S 501	(A,14,4) Switch(RESET)	CSG1046	

RESISTORS

R 101	(A,28,69)	RS1/16S102J
R 102	(A,24,71)	RS1/16S101J
R 103	(A,23,71)	RS1/16S101J
R 104	(B,57,76)	RS1/16S473J
R 105	(B,57,73)	RS1/16S223J
R 106	(A,31,68)	RS1/16S472J
R 107	(A,31,67)	RS1/16S472J
R 201	(A,42,23)	RS1/16S101J
R 202	(A,42,21)	RS1/16S101J
R 203	(B,46,30)	RS1/16S473J
R 204	(B,44,30)	RS1/16S473J
R 205	(B,48,30)	RS1/16S473J
R 206	(A,42,30)	RS1/16S473J
R 251	(A,31,53)	RS1/16S103J
R 252	(A,40,53)	RS1/16S103J

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 253	(B,33,57)	RS1/16S103J		R 514	(A,34,10)	RS1/16S101J	
R 254	(B,38,57)	RS1/16S103J		R 515	(A,32,14)	RS1/16S101J	
R 255	(B,33,55)	RS1/16S103J		R 517	(A,14,51)	RS1/16S104J	
R 256	(B,38,55)	RS1/16S103J		R 519	(B,24,33)	RS1/16S473J	A
R 257	(B,33,62)	RS1/16S153J		R 520	(B,28,33)	RS1/16S473J	
R 258	(B,37,62)	RS1/16S153J		R 521	(B,23,21)	RS1/16S272J	
R 259	(A,34,53)	RS1/16S151J		R 522	(B,25,21)	RS1/16S472J	
R 260	(A,37,53)	RS1/16S151J		R 523	(B,26,33)	RS1/16S473J	
R 301	(A,44,54)	RS1/16S103J		R 524	(B,23,38)	RS1/16S104J	
R 302	(A,43,53)	RS1/16S103J		R 525	(B,25,28)	RS1/16S473J	
R 303	(B,50,65)	RS1/16S473J		R 528	(B,26,24)	RS1/16S272J	
R 304	(B,50,61)	RS1/16S473J		R 529	(B,25,26)	RS1/16S472J	
R 305	(A,51,67)	RS1/16S103J		R 530	(B,21,21)	RS1/16S222J	
R 306	(A,51,54)	RS1/16S103J		R 532	(B,9,49)	RS1/16S104J	
R 307	(B,52,65)	RS1/16S153J		R 601	(A,69,11)	RS1/16S472J	B
R 308	(B,52,61)	RS1/16S153J		R 602	(A,48,30)	RS1/16S473J	
R 309	(A,55,67)	RS1/16S153J		R 603	(B,48,26)	RS1/16S270J	
R 310	(A,54,55)	RS1/16S153J		R 604	(B,50,26)	RS1/16S270J	
R 311	(B,54,65)	RS1/16S473J		R 605	(A,43,26)	RAB4CQ101J	
R 312	(B,54,61)	RS1/16S473J		R 606	(B,63,21)	RS1/16S473J	
R 313	(A,68,64)	RS1/16S133J		R 607	(A,49,26)	RS1/16S221J	
R 314	(A,71,58)	RS1/16S133J		R 608	(A,50,39)	RS1/16S473J	
R 315	(A,68,63)	RS1/16S133J		R 609	(B,41,21)	RS1/16S101J	
R 316	(A,68,60)	RS1/16S133J		R 610	(B,40,19)	RS1/16S101J	
R 317	(B,24,42)	RS1/16S153J		R 611	(B,69,27)	RS1/16S473J	C
R 351	(A,71,64)	RS1/16S361J		R 612	(A,74,17)	RAB4CQ101J	
R 352	(A,72,58)	RS1/16S361J		R 613	(A,74,20)	RAB4CQ101J	
R 353	(A,71,63)	RS1/16S361J		R 614	(A,75,23)	RAB4CQ101J	
R 354	(A,71,60)	RS1/16S361J		R 615	(A,75,26)	RAB4CQ101J	
R 355	(A,74,71)	RS1/16S104J		R 616	(A,75,29)	RAB4CQ101J	
R 356	(A,74,74)	RS1/16S104J		R 617	(A,75,32)	RAB4CQ101J	
R 357	(A,74,65)	RS1/16S104J		R 618	(A,75,35)	RAB4CQ101J	
R 358	(A,74,80)	RS1/16S104J		R 619	(A,81,37)	RAB4CQ221J	
R 359	(A,74,66)	RS1/16S102J		R 620	(A,81,40)	RAB4CQ221J	
R 360	(A,74,79)	RS1/16S102J		R 621	(B,72,17)	RS1/16S181J	
R 361	(A,74,68)	RS1/16S223J		R 622	(B,73,15)	RS1/16S101J	D
R 362	(A,74,77)	RS1/16S223J		R 624	(A,64,44)	RS1/16S473J	
R 363	(A,74,69)	RS1/16S181J		R 625	(A,59,39)	RS1/16SS102J	
R 364	(A,74,76)	RS1/16S181J		R 626	(A,59,40)	RS1/16SS205J	
R 401	(A,42,66)	RS1/16S102J		R 627	(B,73,13)	RS1/16S101J	
R 402	(A,38,64)	RS1/16S102J		R 628	(B,73,11)	RS1/16S271J	
R 403	(B,42,79)	RS1/16S223J		R 629	(B,50,5)	RS1/16S0R0J	
R 404	(B,39,73)	RS1/16S223J		R 630	(B,69,8)	RS1/16S0R0J	
R 405	(A,92,61)	RS1/16S332J		R 631	(B,75,20)	RS1/16S121J	
R 406	(A,89,60)	RS1/16S562J		R 632	(B,113,23)	RS1/16S473J	
R 407	(B,40,65)	RS1/16S103J		R 633	(B,47,11)	RS1/16S153J	
R 408	(B,42,65)	RS1/16S103J		R 634	(B,53,11)	RS1/16S153J	E
R 501	(B,14,21)	RS1/16S473J		R 636	(B,52,28)	RS1/16S473J	
R 502	(B,12,19)	RS1/16S0R0J		R 639	(A,99,25)	RS1/16SS0R0J	
R 503	(B,17,21)	RS1/16S473J		R 656	(A,100,25)	RS1/16SS101J	
R 504	(B,7,34)	RS1/16S473J		R 657	(A,101,25)	RS1/16SS101J	
R 505	(B,11,36)	RS1/16S473J		R 658	(A,103,25)	RS1/16SS101J	
R 506	(B,22,47)	RS1/16S473J		R 659	(A,104,25)	RS1/16SS101J	
R 507	(B,19,21)	RS1/16S104J		R 660	(A,105,25)	RS1/16SS101J	
R 508	(B,22,63)	RS1/16S473J		R 661	(A,106,25)	RS1/16SS101J	
R 509	(B,8,46)	RS1/16S473J		R 662	(A,108,25)	RS1/16SS101J	
R 510	(B,9,34)	RS1/16S473J		R 663	(A,97,12)	RS1/16SS0R0J	
R 511	(B,13,30)	RS1/16S473J		R 664	(A,100,10)	RS1/16SS101J	F
R 512	(A,20,10)	RS1/16S102J		R 665	(A,101,10)	RS1/16SS101J	
R 513	(A,21,7)	RS1/16S183J		R 666	(A,103,10)	RS1/16SS101J	
				R 667	(A,104,10)	RS1/16SS101J	

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	R 668	(A,105,10)	RS1/16SS101J
	R 669	(A,106,10)	RS1/16SS101J
	R 670	(A,108,10)	RS1/16SS0R0J
	R 672	(B,88,25)	RS1/16S0R0J
	R 811	(A,108,63)	RS1/16S182J
	R 821	(B,119,55)	RS1/16S333J
	R 822	(A,118,53)	RS1/16S822J
	R 823	(B,118,66)	RS1/16S360J
	R 824	(B,118,64)	RS1/16S360J
B	R 861	(A,92,65)	RS1/16S104J
	R 862	(A,91,67)	RS1/16S473J
	R 901	(A,126,51)	RS1/16S0R0J
	R 903	(A,124,50)	RS1/16S332J

CAPACITORS

	C 101	(B,60,73)	CKSRYB104K16
	C 102	(B,25,76)	CKSRYB104K16
	C 103	(B,23,76)	CKSRYB102K50
	C 104	(B,21,76)	CKSRYB102K50
	C 204	(A,39,34)	CKSYB106K6R3
C	C 205	(A,41,33)	CKSRYB102K50
	C 206	(A,42,35)	CKSRYB102K50
	C 207	(A,37,34)	CKSYB106K6R3
	C 208	(A,35,32)	CKSRYB104K16
	C 251	(A,31,49)	CEJQ100M16
	C 252	(A,36,49)	CEJQ100M16
	C 253	(B,31,61)	CCSRCH681J50
	C 254	(B,39,61)	CCSRCH681J50
	C 255	(B,31,56)	CCSRCH181J50
	C 256	(B,40,56)	CCSRCH181J50
D	C 257	(A,27,54)	CEAT220M25
	C 259	(B,24,55)	CKSRYB104K16
	C 301	(A,63,56)	CEAT470M10
	C 302	(B,59,64)	CKSRYB103K50
	C 303	(A,53,72)	CEAT220M25
	C 304	(A,63,64)	CEAT101M16
	C 351	(A,85,68)	CKSRYB104K16
	C 352	(A,85,77)	CKSRYB104K16
	C 353	(A,77,66)	CKSRYB105K10
	C 354	(A,77,79)	CKSRYB105K10
E	C 355	(A,77,69)	CKSRYB105K10
	C 356	(A,77,76)	CKSRYB105K10
	C 401	(A,46,65)	CEJQ100M16
	C 402	(A,46,59)	CEJQ100M16
	C 501	(A,10,44)	CEAT4R7M50
	C 502	(B,12,44)	CKSRYB103K50
	C 504	(B,17,12)	CCSRCH180J50
	C 505	(B,13,12)	CCSRCH180J50
	C 507	(A,25,9)	CKSRYB105K10
	C 508	(A,29,11)	CKSRYB104K16
	C 509	(A,29,16)	CKSRYB104K16
	C 601	(B,68,40)	CKSRYB104K16
	C 602	(A,68,42)	CEJQ100M16
	C 603	(B,74,41)	CKSRYB104K16
	C 604	(A,74,42)	CEJQ100M16
F	C 605	(A,48,38)	CKSYB475K10
	C 606	(A,50,36)	CKSRYB104K16
	C 607	(A,49,34)	CKSRYB122K50
	C 608	(A,49,32)	CKSRYB331K50

C 609	(B,54,28)	CKSRYB104K16
C 610	(B,55,21)	CKSRYB104K16
C 611	(A,45,34)	CKSRYB103K50
C 612	(B,66,21)	CKSRYB104K16
C 614	(B,71,21)	CKSRYB104K16
C 615	(B,69,25)	CKSRYB104K16
C 616	(B,71,31)	CKSRYB104K16
C 617	(B,71,35)	CKSRYB104K16
C 618	(B,66,36)	CKSRYB104K16
C 619	(A,57,41)	CCSSCH5R0C50
C 620	(A,60,41)	CCSSCH150J50
C 621	(B,61,33)	CKSRYB104K16
C 624	(A,84,10)	CKSRYB104K16
C 625	(B,87,6)	CKSRYB104K16
C 626	(A,90,6)	CEJQ100M16
C 627	(B,102,29)	CKSRYB104K16
C 628	(B,102,33)	CKSRYB104K16
C 629	(B,98,16)	CKSRYB104K16
C 630	(B,100,16)	CKSRYB104K16
C 631	(B,105,16)	CKSRYB104K16
C 632	(B,109,16)	CKSRYB104K16
C 633	(B,119,16)	CKSRYB104K16
C 634	(B,102,19)	CKSRYB104K16
C 635	(B,107,19)	CKSRYB104K16
C 801	(A,112,79)	CEAT102M16
C 802	(B,112,75)	CKSRYB104K16
C 803	(B,91,78)	CKSRYB103K50
C 811	(B,99,56)	CKSRYB104K16
C 812	(A,99,54)	CEAT470M10
C 813	(B,106,60)	CKSRYB104K16
C 814	(A,106,58)	CEJQ100M16
C 821	(B,111,52)	CKSRYB103K50
C 822	(A,108,52)	CEAT470M10
C 823	(A,113,53)	CKSRYB103K50
C 824	(A,115,60)	CEAT102M16
C 831	(A,48,49)	CKSRYB102K50
C 833	(A,44,45)	CEJQ100M16
C 834	(A,43,49)	CKSRYB104K16
C 841	(A,112,45)	CKSYB475K10
C 842	(A,116,47)	CKSRYB104K16
C 843	(A,122,44)	CKSYB475K10
C 844	(A,120,45)	CKSRYB104K16
C 851	(B,129,40)	CKSRYB103K50
C 852	(A,127,40)	CEAT101M16
C 853	(B,136,41)	CKSYB475K10
C 854	(A,135,43)	CKSRYB104K16
C 901	(A,131,47)	CEHAZL101M25
C 902	(A,129,58)	CKSRYB334K10
C 903	(A,124,62)	CKSRYB104K16
C 904	(A,124,65)	CCG1111
C 905	(A,122,50)	CKSRYB472K50
C 906	(A,121,72)	CEAT471M16
C 907	(A,124,49)	CKSRYB473K50
C 908	(B,54,35)	CKSQYB106K6R3
C 952	(B,132,8)	CCSRCH102J50
C 953	(B,121,23)	CCSRCH471J50

4.7 μ F


6. ADJUSTMENT

6.1 TEST MODE

● Implemented functions

	Model with 1-6 keys	Model without 1-6 keys	
	Main unit	Main unit (only the model 07)	Remote control
TEST1 command	Right key	Right key	Right key
TEST2 command	Left key	Left key	Left key
TEST3 command	Key 1	LIST key	Key 1
TEST4 command	Key 2	DISP key	Key 2
TEST0 command	BAND/ESC key	BAND/ESC key	BAND/ESC key

- Indication of system microcomputer Ver
- Indication of TCC firmware Ver
- To enter the TCC firmware UpDate mode:
 - Set this mode and insert a USB device having the UpDate program to start rewriting the device.
 - * If you carry out the TEST 3 command with the USB device inserted, a correct result is not displayed.
- Confirmation on connection mode (mass storage class connection)
 - Set this mode and insert a USB device. Then, the connection mode is displayed.
 - * Do not insert a USB device having the UpDate program.
 - * If you carry out the TEST 4 command with the USB device inserted, a correct result is not displayed.
 - Be sure to insert a USB device when "DeviceIn" is being displayed.

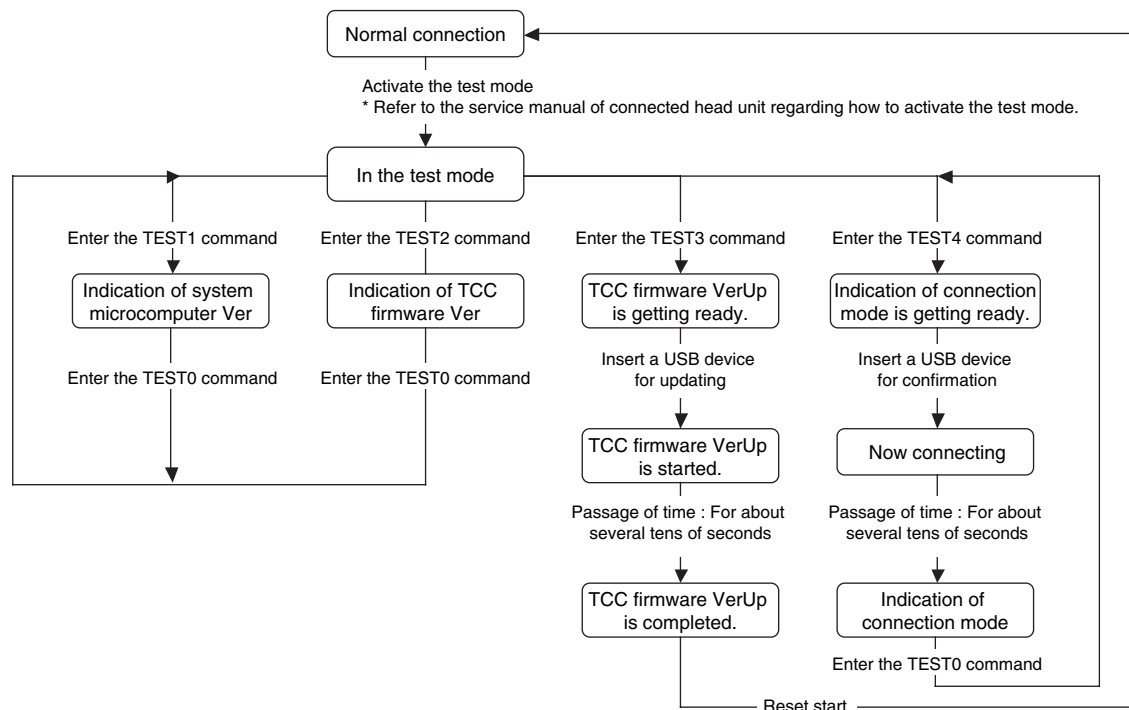

● Indications

Indication of system microcomputer Ver
Indication of TCC firmware Ver

V e r	*	.	*	*
V e r	*	.	*	*

MIN SEC SEC

TCC firmware VerUp is getting ready.
TCC firmware VerUp is started.
TCC firmware VerUp is completed.

R E A D Y	0	0	0
U P D T	0	0	0
C O M P L E T E			

Displays 0:00 to 5:00 (in increments of minutes and seconds)
Displays 0:00 to 5:00 (in increments of minutes and seconds)
* The time increment stops when it reaches 5:00.

Confirmation on connection mode is getting ready.
Now connecting
Indication of connection mode

D e v i c e I n
C o n n e c t
M S C

When a device supporting mass storage class is connected

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DISASSEMBLY

● Removing the Case (Fig.1)

- ➡ 1 Remove the four screws and then remove the Case.

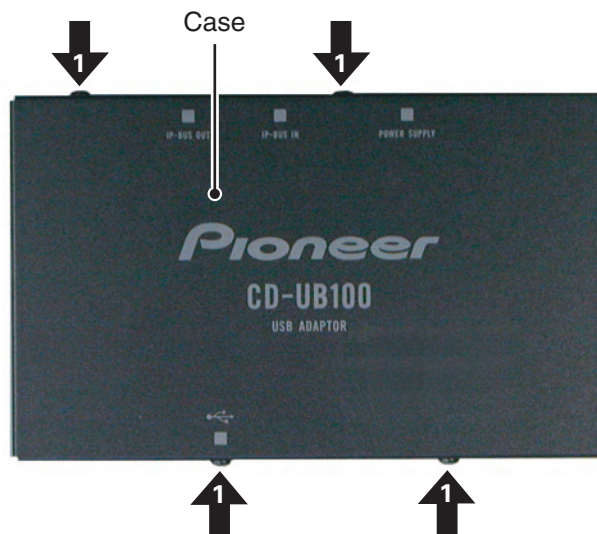


Fig.1

● Removing the Mother Unit (Fig.2)

- ➡ 1 Straighten the tabs at three locations indicated.

Remove the Mother Unit.



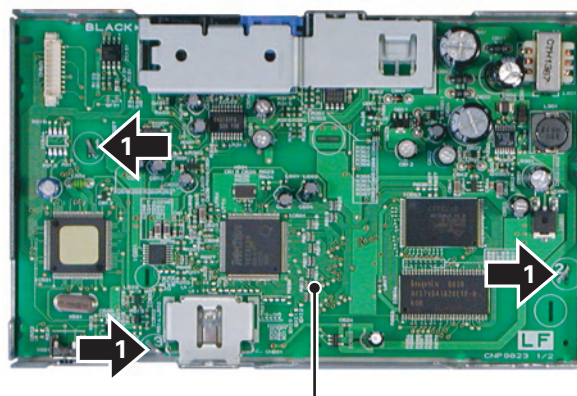



Fig.2

7.1.2 CONNECTOR FUNCTION DESCRIPTION

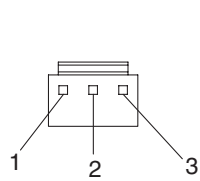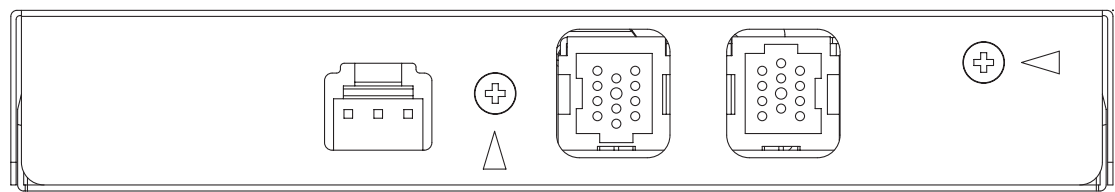


POWER SUPPLY

1	GND
2	NC
3	B. UP

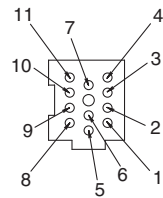



IP-BUS IN(BLUE)

1	BUS +
2	BUSG1
3	BUSG1
4	NC
5	BUS -
6	BUSG1
7	BUSL1
8	ASENB
9	BUSR1
10	BUSR2
11	BUSL2

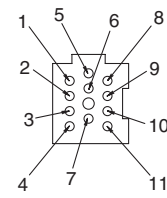

IP-BUS OUT(BLACK)

1	BUS +
2	BUSG5
3	BUSG5
4	NC
5	BUS -
6	BUSG5
7	BUSL3
8	ASENB
9	BUSR3
10	BUSAG1
11	BUSAG1

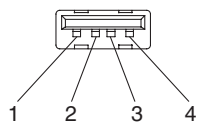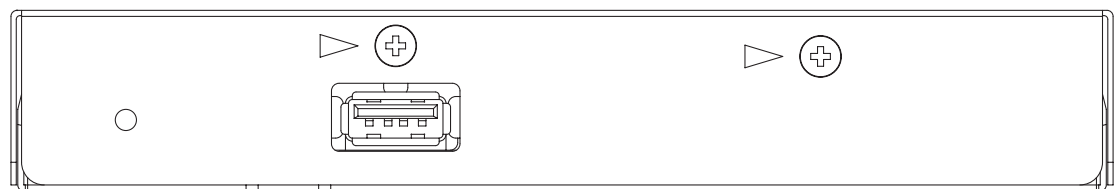

USB

1	USB5V
2	D-
3	D+
4	GND


7.2 IC

● Pin Functions(PEG297A)

Pin No.	Pin Name	I/O	Function and Operation
1-5	NC		Not used
6	BYTE		External data bus width change input
7	CNVSS		Processor mode change input
8,9	NC		Not used
10	RESET		Reset input
11	XOUT		Clock output
12	VSS		Power supply input
13	XIN		Clock input
14	VCC		Power supply input
15	NMI	I	NMI input
16-18	NC		Not used
19	RX2	I	IPBUS : Input 2
20,21	NC		Not used
22	DDSYNC	O	DD converter synchronous clock output
23	NC		Not used
24	XRST	O	TCC860 reset output
25	WUP	O	For TCC860WakeUp(uncontrolled)
26	NC		Not used
27	RX		IPBUS : Input
28	TX		IPBUS : Output
29	TXD		For flash rewriting
30	RXD/TSI		For flash rewriting(combined with communication terminal for chip check)
31	SCLK/TSCLK		For flash rewriting(combined with communication terminal for chip check)
32	BUSY	O	For flash rewriting
33	USBTX		For TCC860 communication
34	USB RX		For TCC860 communication
35-37	NC		Not used
38	USBPW	O	DD converter power supply control output
39	EPM	I	For flash rewriting
40,41	NC		Not used
42	MUTE	O	MUTE output
43	SEL	O	Selector output
44	CE	I	For flash rewriting
45,46	NC		Not used
47	USBCTL	O	USB bus power control output
48	FLG	I	Overcurrent detection output
49	SYSPW	O	System power control output
50-53	NC		Not used
54	USBTEST_TRK	I	TrackUP operation terminal
55	USBTEST_NOW	O	TEST(SDRAM, Vendor ID check) completion determination terminal
56	USBTEST_NG	O	OK/NG output terminal
57,58	NC		Not used
59	USBTEST_IN	I	TESTIN terminal for USB
60	VDD		Power supply input
61	NC		Not used
62	VSS		Power supply input
63-66	NC		Not used
67	DALMON	O	For consumption current reduction output
68-70	NC		Not used
71	ROMCS	O	ROM correction chip select output
72	ASENSB	I	ASENBO sense
73	BSENS	I	Back up sense input
74	ROMCK	O	ROM correction : Clock output
75	ROMDATA	I/O	ROM correction : Data input/output
76-78	NC		Not used


Pin No.	Pin Name	I/O	Function and Operation
79	IPPW	O	IPBUS : Driver power supply control output
80-85	NC		Not used
86	TESTIN	I	Test program input
87-93	NC		Not used
94	AVSS		A/D converter power supply input terminal
95	NC		Not used
96	VREF		AD translation reference voltage
97	AVCC		A/D converter power supply input terminal
98-100	NC		Not used

PEG297A

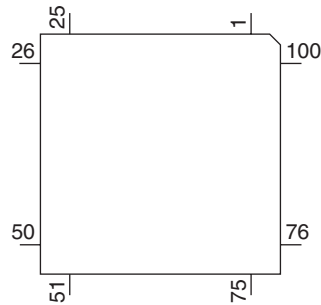


AK4388VT

● Block Diagram

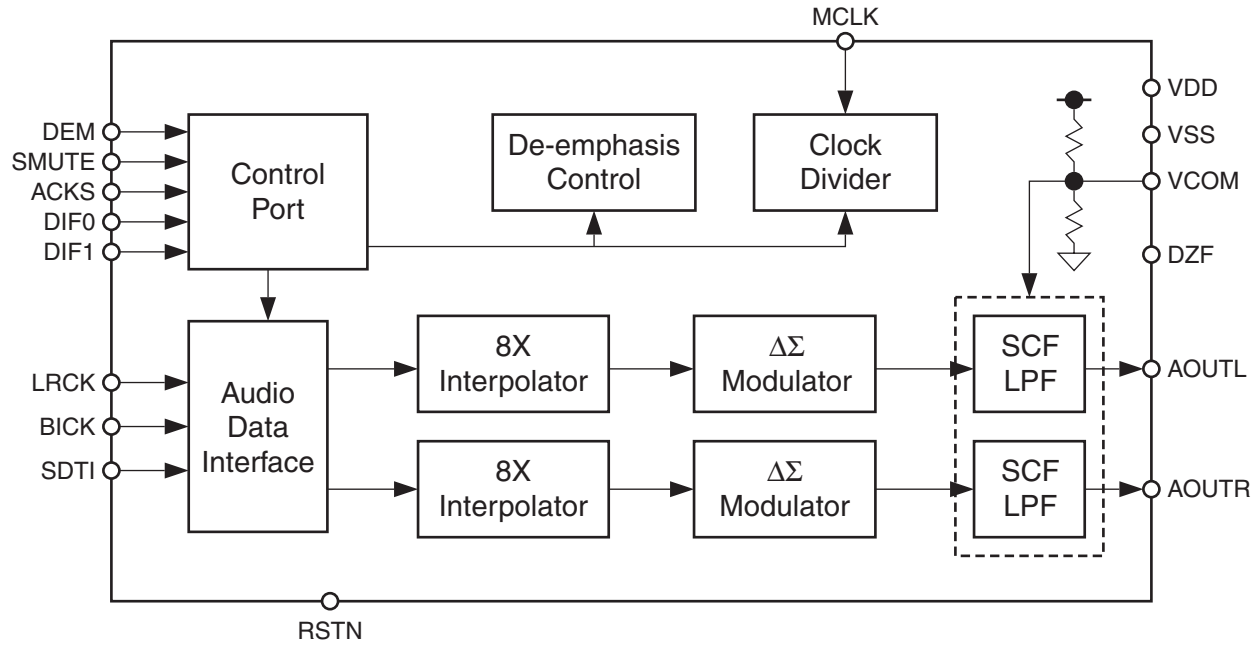

● Pin Layout

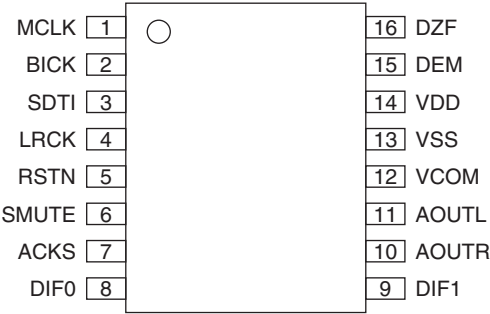


● Pin Functions(TCC8600-00X-EA-AG)

Pin No.	Pin Name	I/O	Function and Operation
1	VSS		Digital ground
2-6	XD[4]-[8]	I/O	External bus data bit [4]-[8]. Internal pull-up resistor enabled at reset.
7	VDDI		Digital power for internal core (1.8 V)
8	VSS		Digital ground
9	VDDIO		Digital power for I/O (3.3 V)
10-16	XD[9]-[15]	I/O	External bus data bit [9]-[15]. Internal pull-up resistor enabled at reset.
17-23	XA[0]-[6]	I/O	External bus address bit [0]-[6]
24	VDDI		Digital power for internal core (1.8 V)
25	VSS		Digital ground
26	VDDIO		Digital power for I/O (3.3 V)
27-39	XA[7]-[19]	I/O	External bus address bit [7]-[19]
40	VDDI		Digital power for internal core (1.8 V)
41,42	XA[20], [21]	I/O	External bus address bit [20], [21]
43	VDDIO		Digital power for I/O (3.3 V)
44	SD_CLK	I/O	SDRAM clock
45	VSS		Digital ground
46	SD_CKE	I/O	SDRAM clock enable signal. Active high.
47	SD_nCS	I/O	Chip select signal for SDRAM, active low
48	nWE	I/O	Static memory write enable signal. Active low.
49	nOE	I/O	Static memory output enable signal. Active low.
50	nCS[0]/ND_nOE[0]	I/O	External bus chip select [0] / NAND flash output enable [0]
51	nCS[1]/ND_nOE[1]	I/O	External bus chip select [1] / NAND flash output enable [1]
52	nCS[2]/ND_nOE[2]	I/O	External bus chip select [2] / NAND flash output enable [2]
53	nCS[3]/ND_nOE[3]	I/O	External bus chip select [3] / NAND flash output enable [3]
54	XOUT	O	12 MHz crystal oscillator output
55	XIN	I	12 MHz crystal oscillator input. Voltage must not exceed VDDI (1.95 V).
56	XTOUT	O	32.768 kHz crystal oscillator output
57	XTIN	I	32.768 kHz crystal oscillator input. Voltage must not exceed VDDI (1.95 V).
58	VDDI		Digital power for internal core (1.8 V)
59	VSS		Digital ground
60	GPIO_B[6]	I/O	GPIO_B[6]
61	ND_nWE	I/O	NAND flash WE. Active low
62	UART0TXD	I/O	UART0 TX data
63	UART0RXD	I/O	UART0 RX data
64	READY	I	Ready information from external device.
65	VDDIO		Digital power for I/O (3.3 V)
66	ADIN4		General purpose multi-channel ADC input 4
67	ADIN2		General purpose multi-channel ADC input 2
68	ADIN0		General purpose multi-channel ADC input 0
69	VDDADC		Analog power for ADC (3.3 V)
70	VSSADC		Analog ground for ADC
71	VSSPLL1		Analog ground for PLL
72	XFILT1		PLL1 filter output. 1 200 pF capacitor is required.
73	VDDPLL1		Analog & digital power for PLL1 (1.8 V)
74	VDDPLL		Analog & digital power for PLL (1.8 V)
75	XFILT		PLL0 filter output. 350 pF capacitor is required.
76	VSSPLL		Analog ground for PLL
77	nRESET	I	System Reset. Active low.
78	MODE1	I	Mode setting input 1. Pull-down for normal operation.
79	USBH0_DN	I/O	USB host port 0 D- signal
80	USBH0_DP	I/O	USB host port 0 D+ signal
81	VSS		Digital ground
82	USBH1_DN	I/O	USB host port 1 D- signal
83	USBH1_DP	I/O	USB host port 1 D+ signal
84	VDDUSB		Power for USB I/O (3.3 V)

Pin No.	Pin Name	I/O	Function and Operation
85	VDDIO		Digital power for I/O (3.3 V)
86	BCLK	I/O	I2S bit clock / Boot mode bit 0 (BM[0])
87	LRCK	I/O	I2S word clock / Boot mode bit 1 (BM[1])
88	MCLK	I/O	I2S System Clock
89	DAO	I/O	I2S digital audio data output / Boot mode bit 2 (BM[2])
90	DAI	I/O	I2S digital audio data input
91	VDDI		Digital power for internal core (1.8 V)
92	GPIO_D[15]	I/O	GPIO_D[15]
93	GPIO_D[16]	I/O	GPIO_D[16] / I2C SDA
94	GPIO_D[17]	I/O	GPIO_D[17] / I2C SCL
95,96	GPIO_D[18],[19]	I/O	GPIO_D[18], [19]. Internal pull-up resistor enabled at reset.
97	VSS		Digital ground
98,99	GPIO_D[20],[21]	I/O	GPIO_D[21], [20]. Internal pull-up resistor enabled at reset.
100	TDI	I/O	JTAG serial data input. Internal pull-up resistor is enabled at reset
101	TMS	I/O	JTAG test mode select. Internal pull-up resistor is enabled at reset
102	TCK	I/O	JTAG test clock. Internal pull-up resistor is enabled at reset
103	TDO	I/O	JTAG serial data output. Internal pull-up resistor is enabled at reset
104	nTRST	I/O	JTAG reset signal. Active low. Internal pull-up resistor is enabled at reset
105	GPIO_A[0]	I/O	GPIO_A[0] / GPSB/GSIO1 data output
106	GPIO_A[1]	I/O	GPIO_A[1] / GPSB/GSIO1 clock
107	GPIO_A[2]	I/O	GPIO_A[2] / GPSB/GSIO1 FRM
108	GPIO_A[3]	I/O	GPIO_A[3] / GPSB/GSIO1 data in
109	GPIO_A[4]	I/O	GPIO_A[4] / GPSB/GSIO1 data output
110	VDDI		Digital power for internal core (1.8 V)
111	GPIO_A[5]	I/O	GPIO_A[5] / GPSB/GSIO1 clock
112	GPIO_A[6]	I/O	GPIO_A[6] / GPSB/GSIO1 FRM
113	GPIO_A[7]	I/O	GPIO_A[7] / GPSB/GSIO1 data in
114	GPIO_A[8]	I/O	GPIO_A[8] / I2C data line / GPSB/GSIO3 data output
115	GPIO_A[9]	I/O	GPIO_A[9] / I2C clock./ Bus width (BW) / GPSB/GSIO3 clock
116	GPIO_A[10]	I/O	GPIO_A[10] / I2C data line / GPSB/GSIO3 FRM
117	GPIO_A[11]	I/O	GPIO_A[11] / I2C clock / GPSB/GSIO3 data in
118	VSS		Digital ground
119	VDDIO		Digital power for I/O (3.3 V)
120-123	EXINT[0]-[3]	I/O	External interrupt request [0]-[3]
124	VDDI		Digital power for internal core (1.8 V)
125-128	XD[0]-[3]	I/O	External bus data bit [0]-[3]. Internal pull-up resistor enabled at reset.

TCC8600-00X-EA-AG

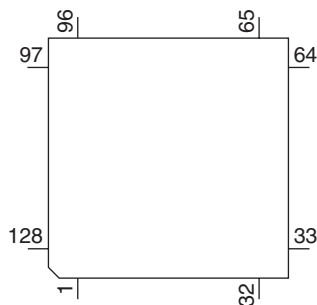


R5523N001B

A

B

C

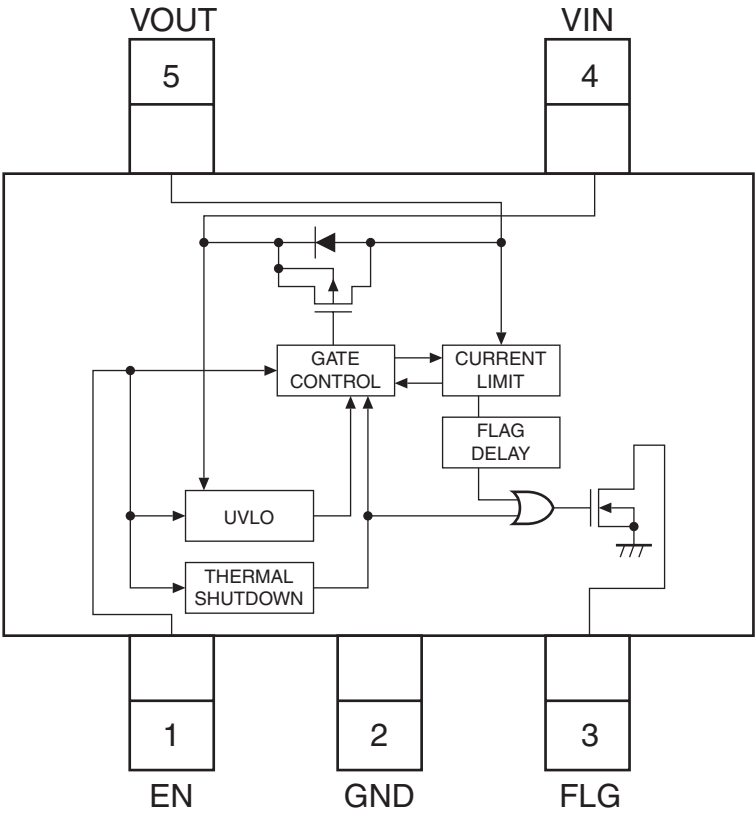


PEH083A


D

E

F

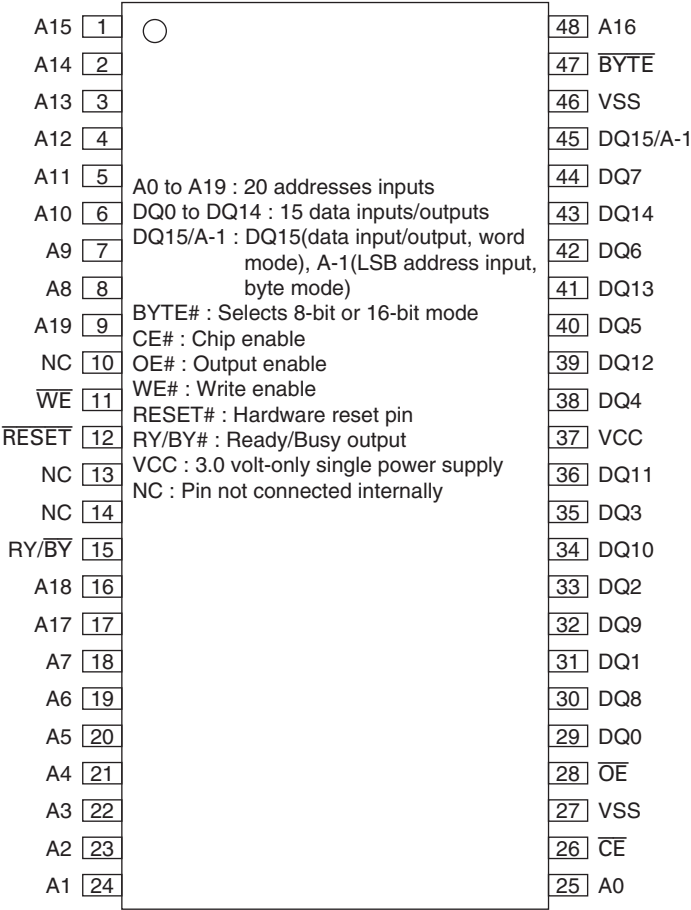


HY57V641620ETP-H

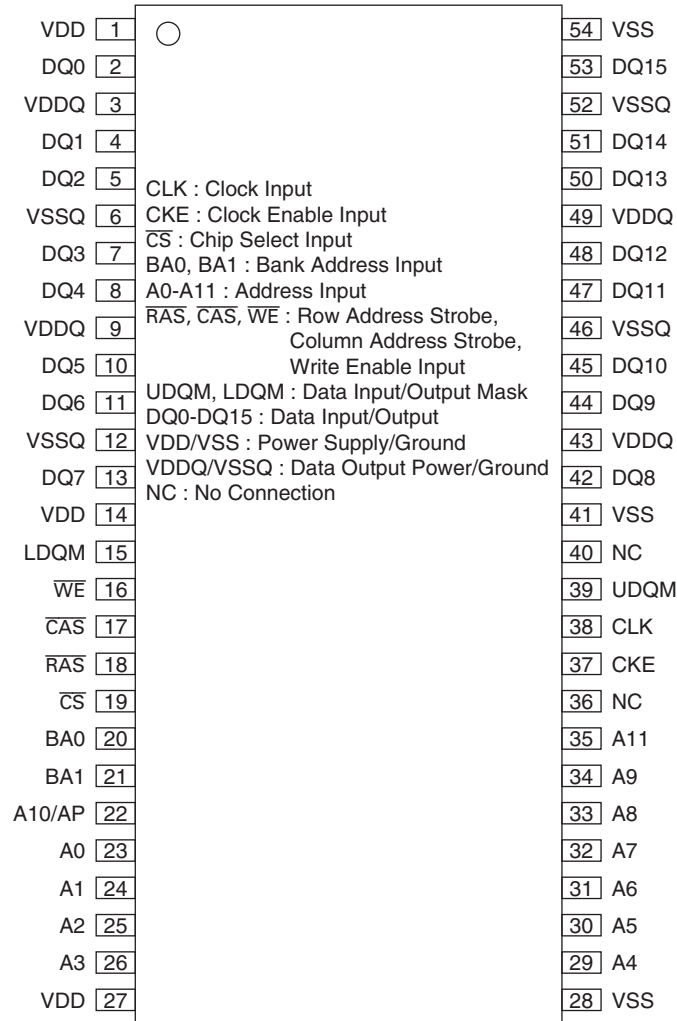


NJM2872BF05, NJM2872BF18

● Block Diagram

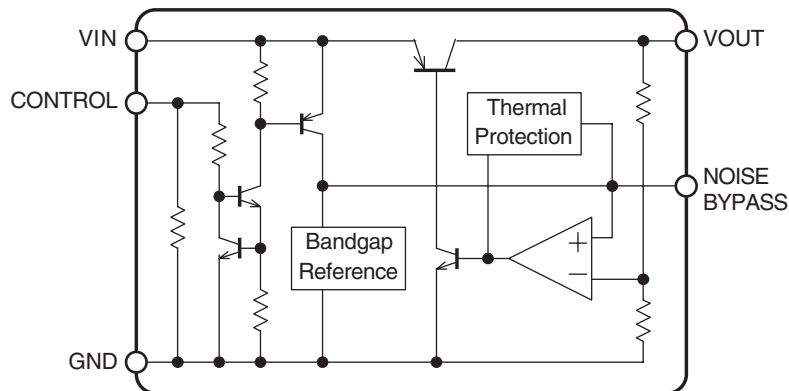


● Pin Layout

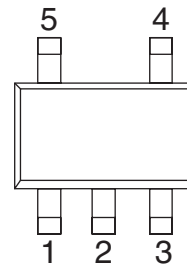


1. VIN
2. GND
3. CONTROL
4. NOISE BYPASS
5. VOUT

LT1766EFE-5


Block Diagram

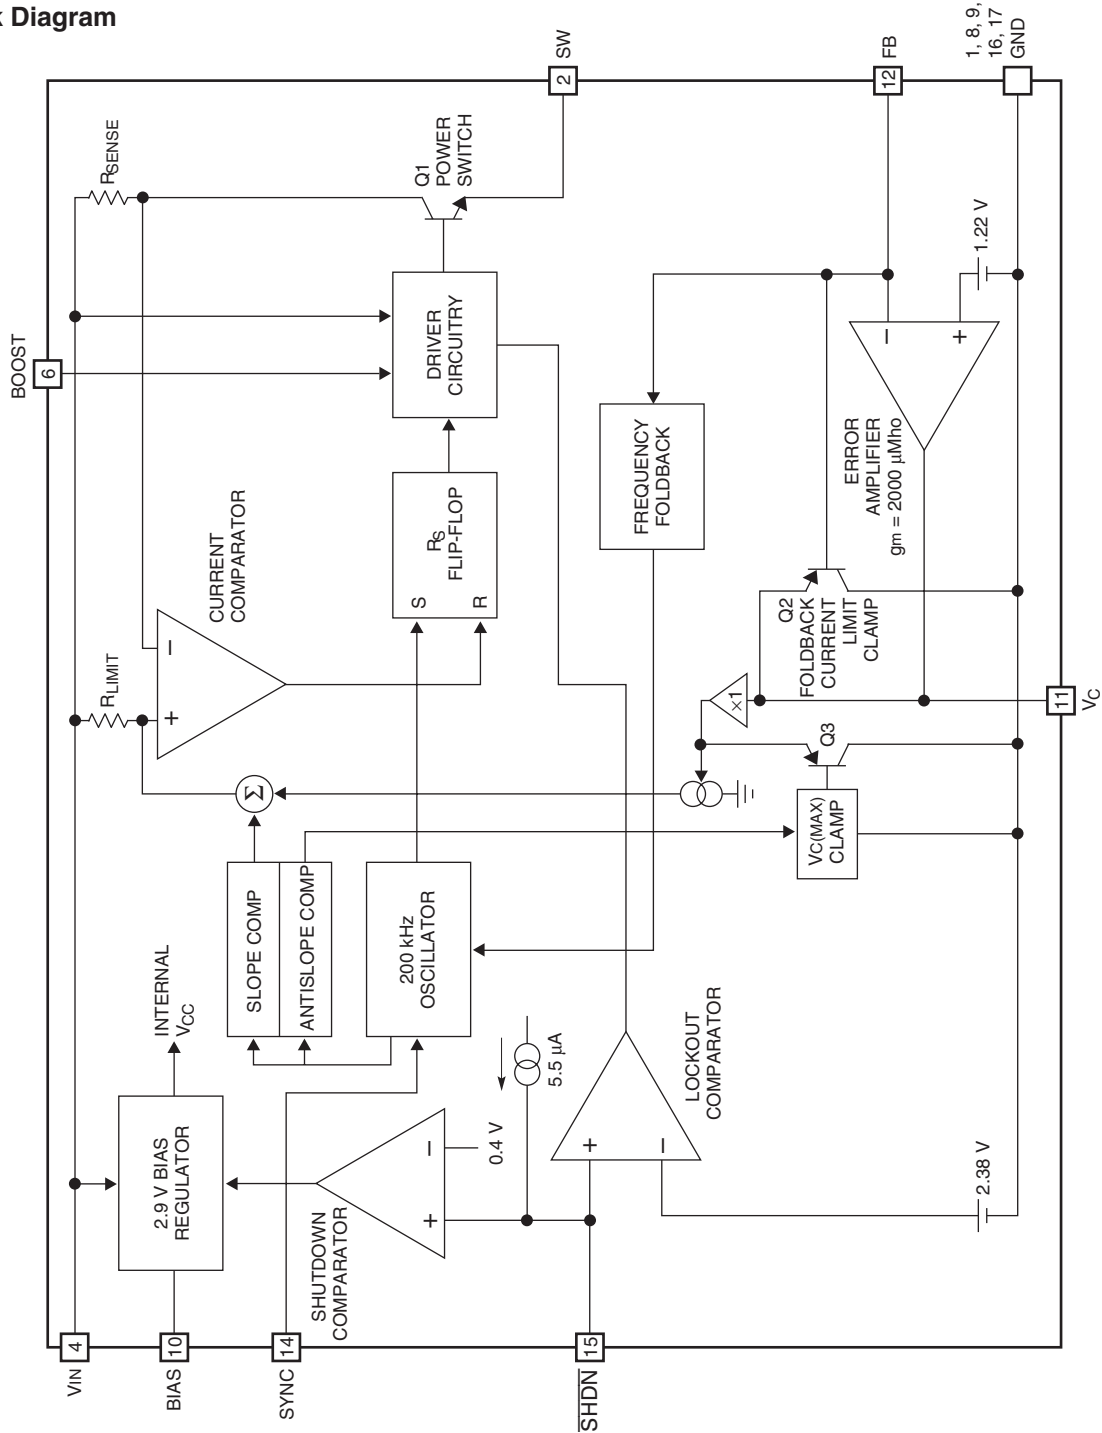

Pin Layout

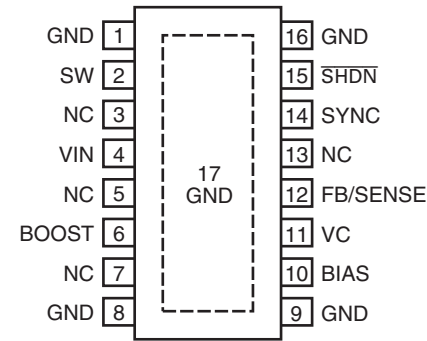

7.3 OPERATIONAL FLOW CHART

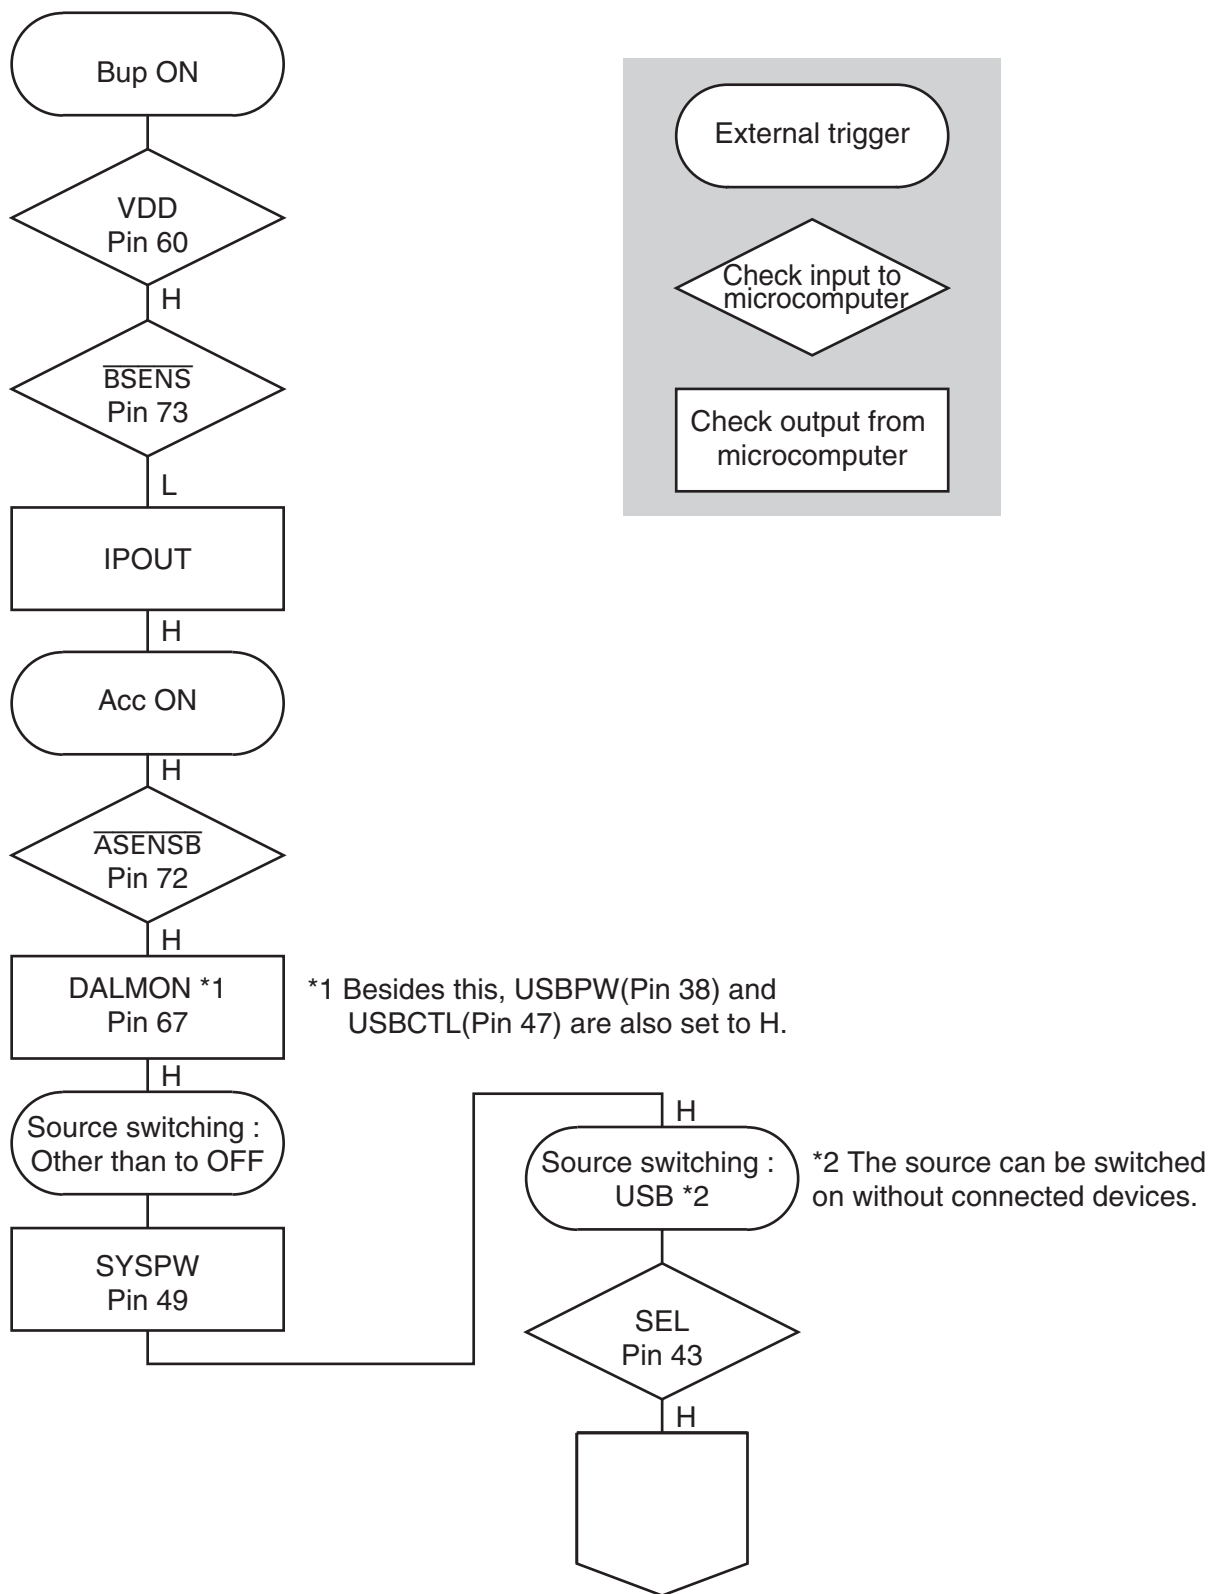

1 2 3 4

8. OPERATIONS

A

B

C

D

E

F

● Connection Diagram

