


# Service Manual

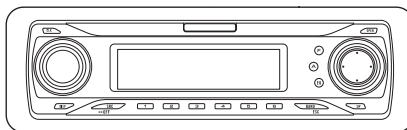

DEH-P5750MP/XM/ES

ORDER NO.  
**CRT3357**

MULTI-CD CONTROL HIGH POWER CD/MP3/WMA/WAV PLAYER WITH FM/AM TUNER

# DEH-P5750MP /XM/ES

This service manual should be used together with the following manual(s):

| Model No. | Order No. | Mech.Module | Remarks                                                             |
|-----------|-----------|-------------|---------------------------------------------------------------------|
| CX-3158   | CRT3394   | S10.1AAC    | CD Mech. Module:Circuit Description, Mech. Description, Disassembly |



For details, refer to "Important Check Points for Good Servicing".

# SAFETY INFORMATION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer.

Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.



## ● Service Precaution

1. You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.
2. Before disassembling the unit, be sure to turn off the power. Unplugging and plugging the connectors during power-on mode may damage the ICs inside the unit.
3. To protect the pickup unit from electrostatic discharge during servicing, take an appropriate treatment (shorting-solder) on page 53.
4. After replacing the pickup unit, be sure to check the grating.



## [Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.  
Please be sure to confirm and follow these procedures.

### 1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification (addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.  
Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.  
In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.  
If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.  
Please pay attention to your surroundings and repair safely.

### 2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.  
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

### 3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.  
Make sure the proper amount is applied.

### 4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

### 5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

# CONTENTS

|   |                                                               |    |
|---|---------------------------------------------------------------|----|
|   | SAFETY INFORMATION .....                                      | 2  |
|   | 1. SPECIFICATIONS .....                                       | 5  |
| A | 2. EXPLODED VIEWS AND PARTS LIST .....                        | 6  |
|   | 2.1 PACKING .....                                             | 6  |
|   | 2.2 EXTERIOR .....                                            | 8  |
|   | 2.3 CD MECHANISM MODULE .....                                 | 10 |
|   | 3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM .....                  | 12 |
|   | 3.1 BLOCK DIAGRAM .....                                       | 12 |
|   | 3.2 OVERALL CONNECTION DIAGRAM(GUIDE PAGE) .....              | 14 |
|   | 3.3 KEYBOARD UNIT .....                                       | 20 |
|   | 3.4 CD MECHANISM MODULE(GUIDE PAGE) .....                     | 22 |
|   | 4. PCB CONNECTION DIAGRAM .....                               | 32 |
|   | 4.1 TUNER AMP ASSY .....                                      | 32 |
|   | 4.2 KEYBOARD UNIT .....                                       | 36 |
| B | 4.3 CD MECHAMODULE UNIT .....                                 | 38 |
|   | 4.4 PANEL UNIT .....                                          | 40 |
|   | 5. ELECTRICAL PARTS LIST .....                                | 41 |
|   | 6. ADJUSTMENT .....                                           | 47 |
|   | 6.1 CD ADJUSTMENT .....                                       | 47 |
|   | 6.2 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT ..... | 49 |
|   | 6.3 ERROR MODE .....                                          | 51 |
|   | 6.4 SYSTEM MICROCOMPUTER TEST PROGRAM .....                   | 52 |
|   | 7. GENERAL INFORMATION .....                                  | 53 |
|   | 7.1 DIAGNOSIS .....                                           | 53 |
|   | 7.1.1 DISASSEMBLY .....                                       | 53 |
|   | 7.1.2 CONNECTOR FUNCTION DESCRIPTION .....                    | 56 |
| C | 7.2 PARTS .....                                               | 57 |
|   | 7.2.1 IC .....                                                | 57 |
|   | 7.2.2 DISPLAY .....                                           | 65 |
|   | 7.3 OPERATIONAL FLOW CHART .....                              | 66 |
|   | 7.4 CLEANING .....                                            | 67 |
|   | 8. OPERATIONS .....                                           | 68 |

D

E

F

# 1. SPECIFICATIONS

## General

|                                |                                                |
|--------------------------------|------------------------------------------------|
| Rated power source .....       | 14.4 V DC                                      |
|                                | (allowable voltage range:<br>12.0 – 14.4 V DC) |
| Grounding system .....         | Negative type                                  |
| Max. current consumption ..... | 10.0 A                                         |
| Backup current .....           | 5 mA or less                                   |
| Dimensions (W × H × D):        |                                                |
| DIN                            |                                                |
| Chassis .....                  | 178 × 50 × 157 mm                              |
| Nose .....                     | 188 × 58 × 19 mm                               |
| D                              |                                                |
| Chassis .....                  | 178 × 50 × 162 mm                              |
| Nose .....                     | 170 × 46 × 14 mm                               |
| Weight .....                   | 1.4 kg                                         |

## Audio

Continuous power output is 22 W per channel minimum into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

|                                                |                                                             |
|------------------------------------------------|-------------------------------------------------------------|
| Maximum power output .....                     | 50 W × 4                                                    |
|                                                | 50 W × 2/4 $\Omega$ + 70 W × 1/2 $\Omega$ (for subwoofer)   |
| Load impedance .....                           | 4 $\Omega$ (4 – 8 $\Omega$ [2 $\Omega$ for 1 ch] allowable) |
| Preout max output level/output impedance ..... | 2.2 V/1 k $\Omega$                                          |
| Equalizer (3-Band Parametric Equalizer):       |                                                             |
| Low                                            |                                                             |
| Frequency .....                                | 40/80/100/160 Hz                                            |
| Q Factor .....                                 | 0.35/0.59/0.95/1.15 (+6 dB when boosted)                    |
| Gain .....                                     | ±12dB                                                       |
| Mid                                            |                                                             |
| Frequency .....                                | 200/500/1k/2k Hz                                            |
| Q Factor .....                                 | 0.35/0.59/0.95/1.15 (+6 dB when boosted)                    |
| Gain .....                                     | ±12dB                                                       |
| High                                           |                                                             |
| Frequency .....                                | 3.15k/8k/10k/12.5k Hz                                       |
| Q Factor .....                                 | 0.35/0.59/0.95/1.15 (+6 dB when boosted)                    |
| Gain .....                                     | ±12dB                                                       |
| Loudness contour                               |                                                             |
| Low .....                                      | +3.5 dB (100 Hz), +3 dB (10 kHz)                            |
| Mid .....                                      | +10 dB (100 Hz), +6.5 dB (10 kHz)                           |

|            |                                                      |
|------------|------------------------------------------------------|
| High ..... | +11 dB (100 Hz), +11 dB (10 kHz)<br>(volume: -30 dB) |
|------------|------------------------------------------------------|

## Tone controls:

### Bass

|                 |                  |
|-----------------|------------------|
| Frequency ..... | 40/63/100/160 Hz |
| Gain .....      | ±12dB            |

### Treble

|                 |                     |
|-----------------|---------------------|
| Frequency ..... | 2.5k/4k/6.3k/10k Hz |
| Gain .....      | ±12dB               |

## HPF:

|                 |              |
|-----------------|--------------|
| Frequency ..... | 50/80/125 Hz |
| Slope .....     | -12 dB/oct   |

## Subwoofer:

|                 |                |
|-----------------|----------------|
| Frequency ..... | 50/80/125 Hz   |
| Slope .....     | -18 dB/oct     |
| Gain .....      | ±12dB          |
| Phase .....     | Normal/Reverse |

## CD player

|                                   |                               |
|-----------------------------------|-------------------------------|
| System .....                      | Compact disc audio system     |
| Usable discs .....                | Compact disc                  |
| Signal format:                    |                               |
| Sampling frequency .....          | 44.1 kHz                      |
| Number of quantization bits ..... | 16; linear                    |
| Frequency characteristics .....   | 5 – 20,000 Hz (±1 dB)         |
| Signal-to-noise ratio .....       | 94 dB (1 kHz) (IEC-A network) |
| Dynamic range .....               | 92 dB (1 kHz)                 |
| Number of channels .....          | 2 (stereo)                    |
| MP3 decoding format .....         | MPEG-1 & 2 Audio Layer 3      |
| WMA decoding format .....         | Ver. 7, 7.1, 8, 9 (2ch audio) |
| WAV signal format .....           | Linear PCM & MS ADPCM         |

## FM tuner

|                                  |                                                                     |
|----------------------------------|---------------------------------------------------------------------|
| Frequency range .....            | 87.5 – 108.0 MHz                                                    |
| Usable sensitivity .....         | 8 dBf (0.7 $\mu$ V/75 $\Omega$ mono, S/N: 30 dB)                    |
| 50 dB quieting sensitivity ..... | 10 dBf (0.9 $\mu$ V/75 $\Omega$ mono)                               |
| Signal-to-noise ratio .....      | 75 dB (IEC-A network)                                               |
| Distortion .....                 | 0.3 % (at 65 dBf, 1 kHz, stereo)<br>0.05 % (at 65 dBf, 1 kHz, mono) |
| Frequency response .....         | 30 – 15,000 Hz (±3 dB)                                              |
| Stereo separation .....          | 45 dB (at 65 dBf, 1 kHz)                                            |

## AM tuner


|                       |                          |
|-----------------------|--------------------------|
| Frequency range ..... | 531 – 1,602 kHz (9 kHz)  |
|                       | 530 – 1,640 kHz (10 kHz) |

## 2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " \* " are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to  mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.  
(In the case of no amount instructions, apply as you think it appropriate.)

### 2.1 PACKING

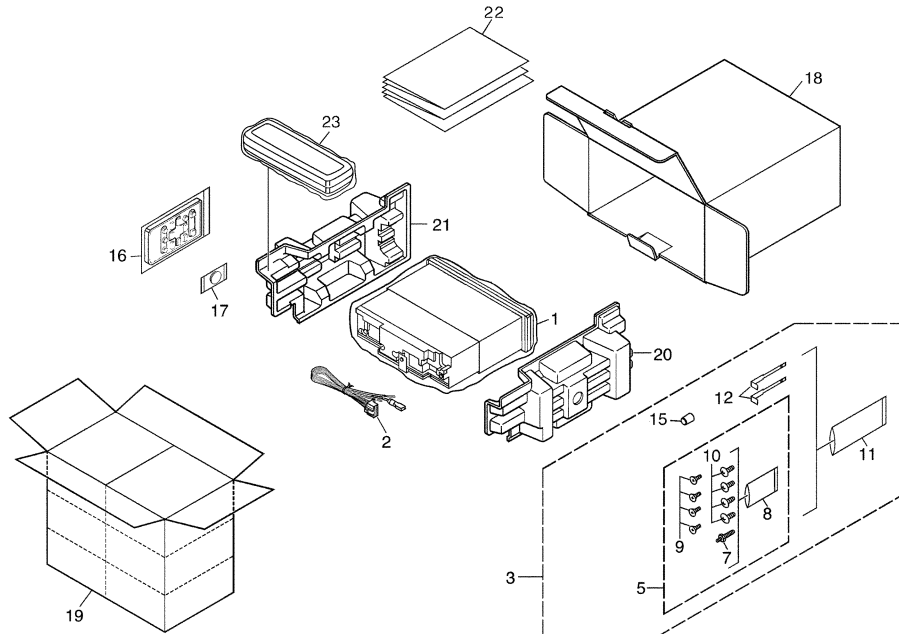

#### PACKING SECTION PARTS LIST

| Mark No. | Description      | Part No.     | Mark No. | Description         | Part No. |
|----------|------------------|--------------|----------|---------------------|----------|
| 1        | Polyethylene Bag | CEG-162      | 15       | Bush                | CNV3930  |
| 2        | Cord Assy        | XDE7007      | 16       | Remote Control Unit | CXC3173  |
| 3        | Accessory Assy   | CEA4850      | * 17     | Battery             | CEX1065  |
| 4        | .....            |              | 18       | Carton              | XHG7091  |
| 5        | Screw Assy       | CEA3849      | 19       | Contain Box         | XHL7091  |
| 6        | .....            |              | 20       | Protector           | XHP7003  |
| 7        | Screw            | CBA1650      | 21       | Protector           | XHP7004  |
| * 8      | Polyethylene Bag | CEG-127      | 22-1     | Owner's Manual      | XRD7062  |
| 9        | Screw            | CRZ50P090FTC | 22-2     | Owner's Manual      | XRD7063  |
| 10       | Screw            | TRZ50P080FTC | 22-3     | Installation Manual | XRD7064  |
| * 11     | Polyethylene Bag | CEG-158      | 22-4     | Caution Card        | CRP1310  |
| 12       | Handle           | CNC5395      | 23       | Case Assy           | CXB3520  |
| 13       | .....            |              |          |                     |          |
| 14       | .....            |              |          |                     |          |

#### Owner's Manual, Installation Manual

| Part No. | Language                                                     |
|----------|--------------------------------------------------------------|
| XRD7062  | English, Spanish, Portuguese(B)                              |
| XRD7063  | Traditional Chinese, Arabic                                  |
| XRD7064  | English, Spanish, Portuguese(B), Traditional Chinese, Arabic |

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

DEH-P5750MP/XM/ES

■

7


■

8

7

■

## 2.2 EXTERIOR

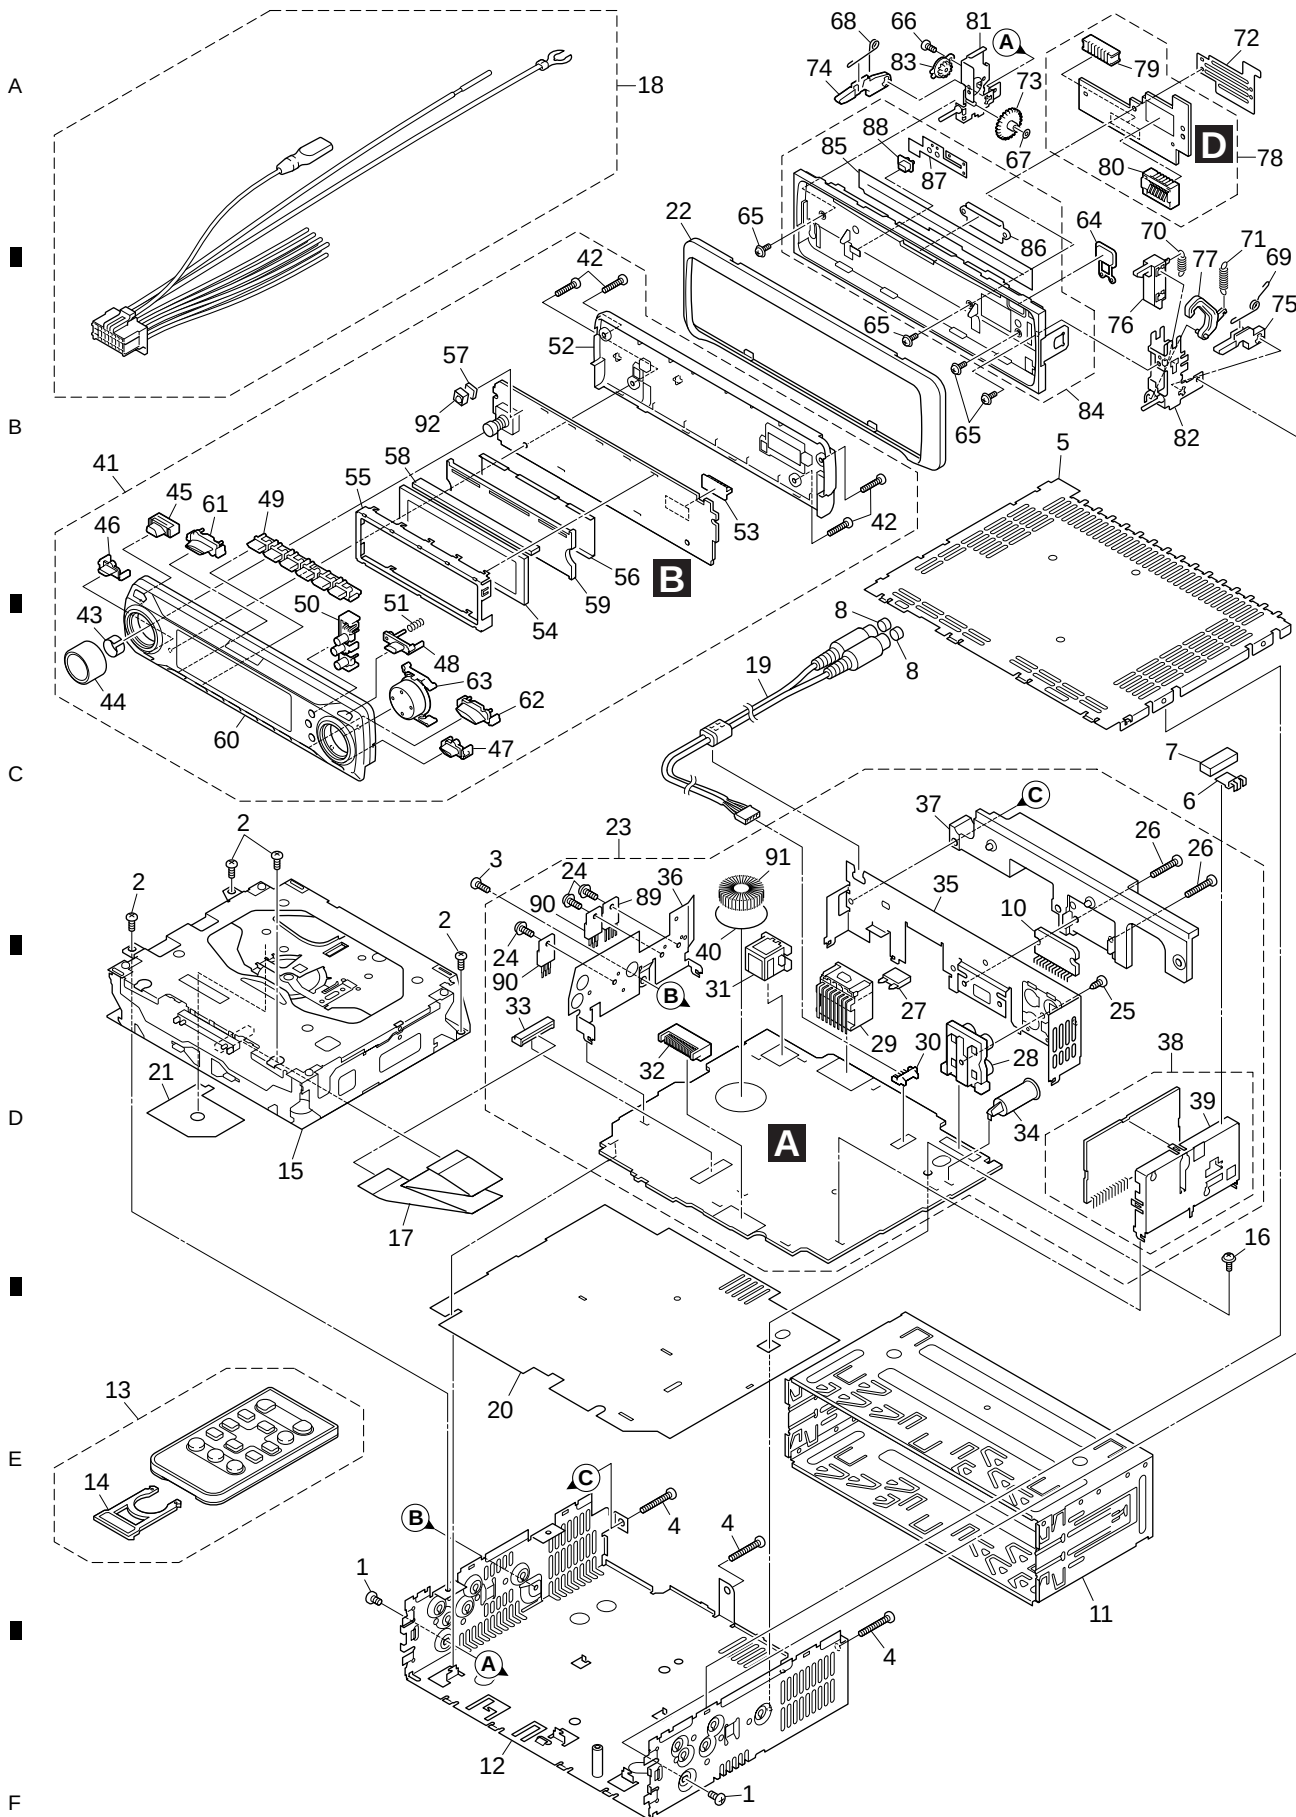




# EXTERIOR SECTION PARTS LIST

| Mark No. | Description                   | Part No.     | Mark No. | Description          | Part No.    |   |
|----------|-------------------------------|--------------|----------|----------------------|-------------|---|
| 1        | Screw                         | BMZ30P040FZK | 47       | Button(SW)           | XAC7064     |   |
| 2        | Screw                         | BSZ26P060FTC | 48       | Button(OPEN)         | XAC7065     | A |
| 3        | Screw                         | BSZ30P060FTC | 49       | Button(1-6)          | XAC7070     |   |
| 4        | Screw                         | BSZ30P200FTC | 50       | Button(F,A,EQ)       | XAC7071     |   |
| 5        | Case                          | CNB2793      |          |                      |             |   |
|          |                               |              | 51       | Spring               | XBH7001     |   |
| 6        | Earth Plate                   | CNC8915      | 52       | Cover                | XNS7087     |   |
| 7        | Cushion                       | CNM8890      | 53       | Connector(CN1800)    | CKS4524     |   |
| 8        | Cap                           | CNV6727      | 54       | LCD                  | XAW7013     |   |
| 9        | .....                         |              | 55       | Holder               | XNC7008     |   |
| 10       | IC(IC301)                     | PAL007A      |          |                      |             |   |
|          |                               |              | 56       | Sheet                | XNM7044     |   |
| 11       | Holder Unit                   | CXB6681      | 57       | Cushion              | XNM7049     | B |
| 12       | Chassis Unit                  | CXB9528      | 58       | Connector            | XNV7020     |   |
| 13       | Remote Control Unit           | CXC3173      | 59       | Lighting Conductor   | XNV7021     |   |
| 14       | Cover                         | CNS7068      | 60       | Sub Grille Assy      | XXA7290     |   |
| 15       | CD Mechanism Module(S10.1AAC) | CXK5668      |          |                      |             |   |
|          |                               |              | 61       | Button Unit(SRC)     | XXA7307     |   |
| 16       | Screw                         | ISS26P055FTC | 62       | Button Unit(BAND)    | XXA7308     |   |
| 17       | Cable                         | XDE7002      | 63       | Sub Button Assy      | XXA7310     |   |
| 18       | Cord Assy                     | XDE7007      | 64       | Button(EJECT)        | CAC7752     |   |
| 19       | Cord Assy                     | XDE7009      | 65       | Screw(M2x4.5)        | CBA1647     |   |
| 20       | Insulator                     | XNM7100      |          |                      |             |   |
|          |                               |              | 66       | Screw(M2x4)          | CBA1649     | C |
| 21       | Insulator                     | XNM7106      | 67       | Washer               | CBF1038     |   |
| 22       | Panel                         | XNS7088      | 68       | Spring               | CBH2650     |   |
| 23       | Tuner Amp Assy                | XWM7091      | 69       | Spring               | CBH2651     |   |
| 24       | Screw                         | ASZ26P060FTC | 70       | Spring               | CBH2652     |   |
| 25       | Screw                         | BPZ26P080FTC |          |                      |             |   |
|          |                               |              | 71       | Spring               | CBH2653     |   |
| 26       | Screw                         | BSZ26P160FTC | 72       | Holder               | CND1254     |   |
| ⚠ 27     | Fuse(10A)                     | CEK1208      | 73       | Gear                 | CNV5997     |   |
| 28       | Pin Jack(CN352)               | CKB1051      | 74       | Arm                  | CNV7400     |   |
| 29       | Plug(CN901)                   | CKM1376      | 75       | Arm                  | CNV7401     | D |
| 30       | Plug(CN351)                   | CKS1238      |          |                      |             |   |
|          |                               |              | 76       | Arm                  | CNV7402     |   |
| 31       | Connector(CN101)              | CKS3408      | 77       | Arm                  | CNV7403     |   |
| 32       | Plug(CN801)                   | CKS3537      | 78       | Panel Unit           | CWM8758     |   |
| 33       | Connector(CN651)              | CKS3837      | 79       | Socket(CN1950)       | CKS3550     |   |
| 34       | Antenna Jack(CN401)           | CKX1056      | 80       | Connector(CN1951)    | CKS4806     |   |
| 35       | Holder                        | CND1239      |          |                      |             |   |
|          |                               |              | 81       | Holder Unit          | CXB9501     |   |
| 36       | Holder                        | CND1352      | 82       | Holder Unit          | CXB9502     |   |
| 37       | Heat Sink                     | CNR1668      | 83       | Damper Unit          | CXB9503     |   |
| 38       | FM/AM Tuner Unit              | CWE1802      | 84       | Sub Panel Unit       | XXA7361     | E |
| 39       | Holder                        | CND2144      | 85       | Cover                | CNM6854     |   |
| 40       | Insulator                     | XNM7031      |          |                      |             |   |
|          |                               |              | 86       | Lighting Conductor   | CNV6487     |   |
| 41       | Detachable Assy               | XXA7281      | 87       | Spring               | CBL1512     |   |
| 42       | Screw                         | BPZ20P100FZK | 88       | Pin                  | CNV6486     |   |
| 43       | Spring                        | CBL1470      | 89       | IC(IC901)            | NJM2388F84  |   |
| 44       | Knob                          | XAA7021      | 90       | Transistor(Q650,911) | 2SD2396     |   |
| 45       | Button(CLK)                   | XAC7062      |          |                      |             |   |
|          |                               |              | 91       | Choke Coil(L901)     | CTH1280     |   |
| 46       | Button(DISPLAY)               | XAC7063      | 92       | IC(IC1802)           | TSOP4840SB1 | F |

## 2.3 CD MECHANISM MODULE

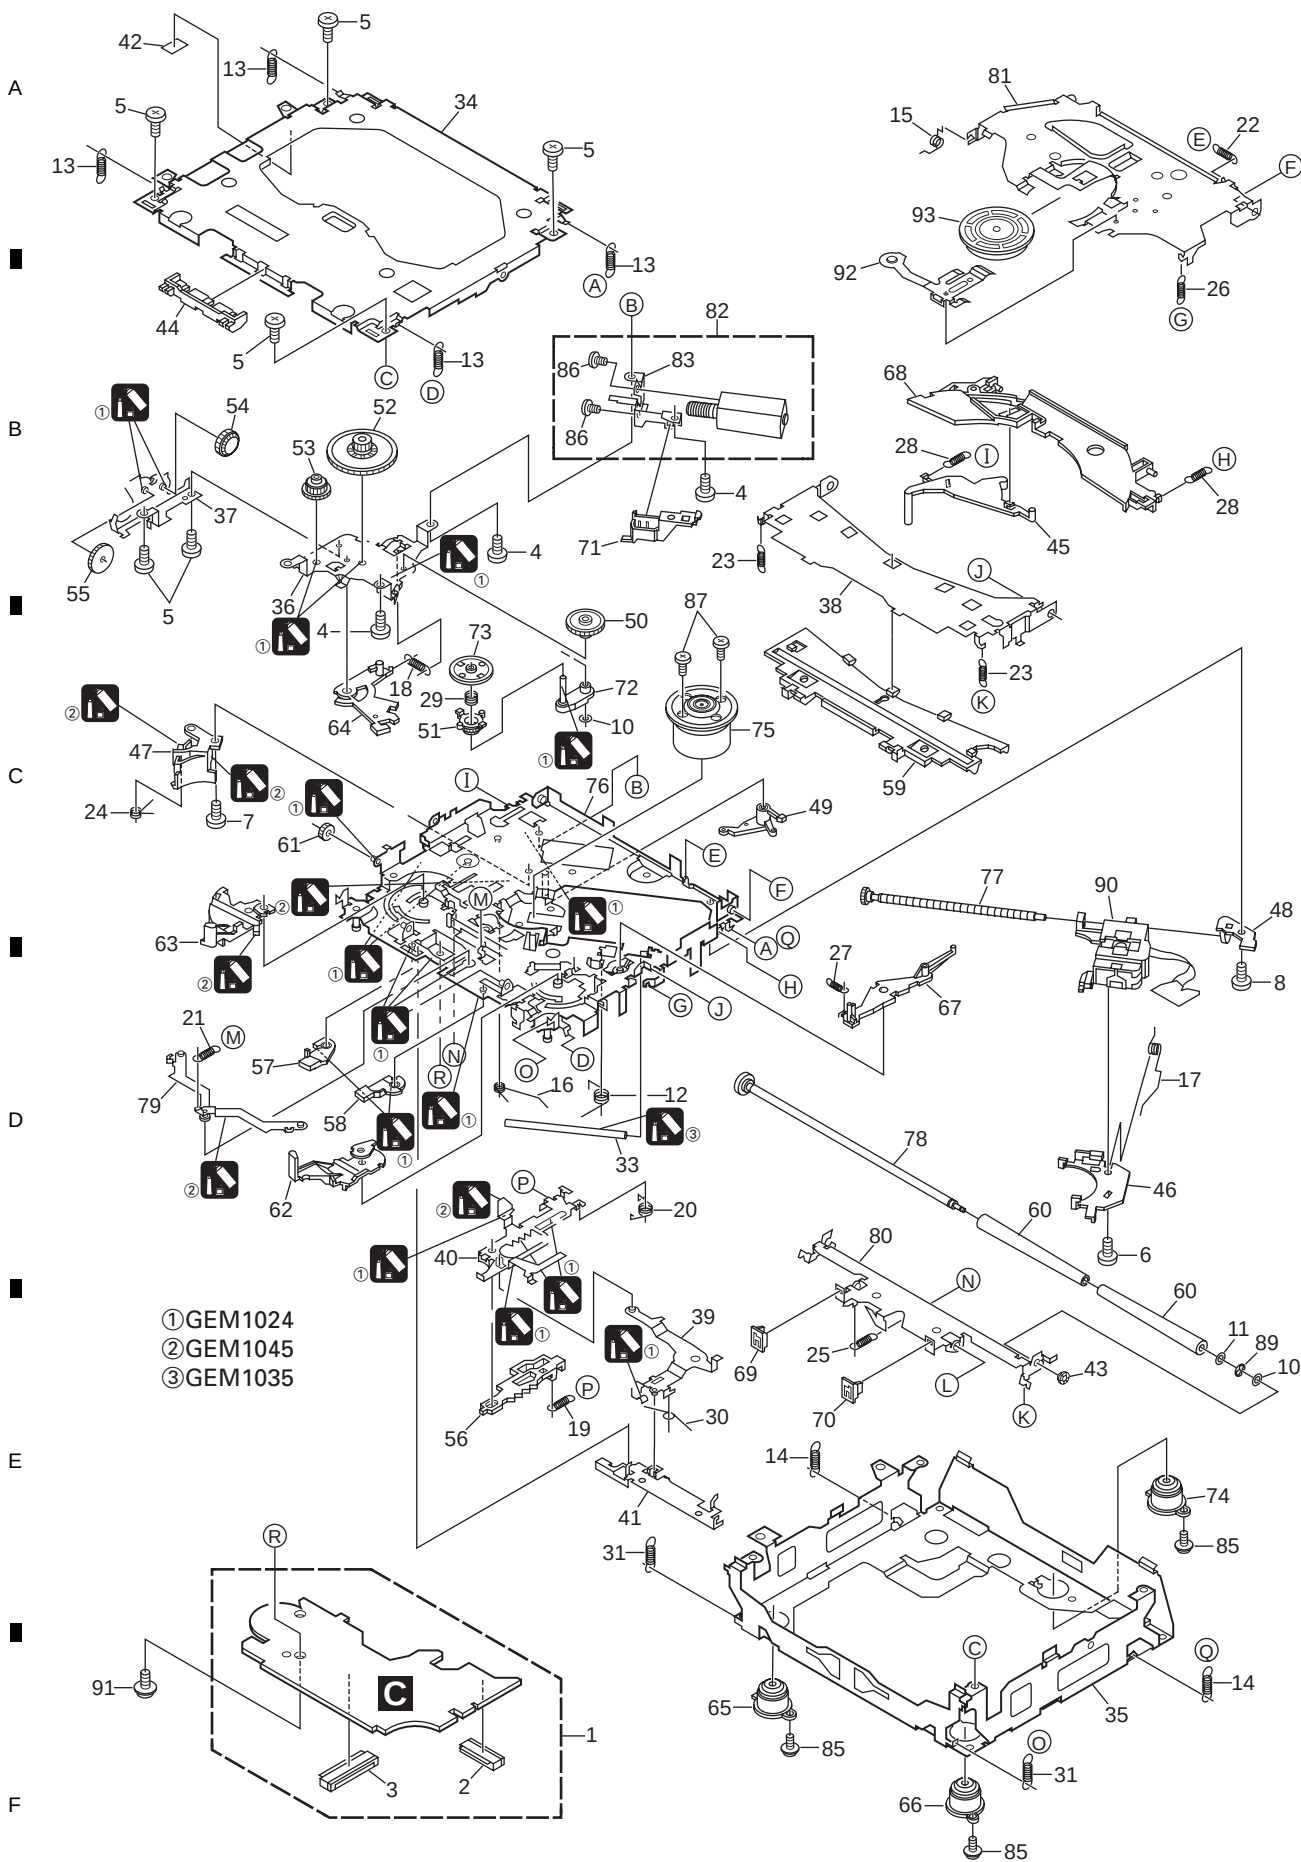

# CD MECHANISM MODULE SECTION PARTS LIST

| Mark No. | Description         | Part No.     | Mark No. | Description               | Part No.     |   |
|----------|---------------------|--------------|----------|---------------------------|--------------|---|
| 1        | CD Core Unit(S10.1) | CWX3096      | 50       | Gear                      | CNV8379      |   |
| 2        | Connector(CN101)    | CKS4182      |          |                           |              | A |
| 3        | Connector(CN901)    | CKS4017      | 51       | Gear                      | CNV8380      |   |
| 4        | Screw               | BMZ20P035FTC | 52       | Gear                      | CNV8381      |   |
| 5        | Screw               | BSZ20P040FTC | 53       | Gear                      | CNV8382      |   |
|          |                     |              | 54       | Gear                      | CNV8383      |   |
| 6        | Screw(M2x4)         | CBA1362      | 55       | Gear                      | CNV8384      |   |
| 7        | Screw(M2x3)         | CBA1824      |          |                           |              |   |
| 8        | Screw(M2x3)         | CBA1825      | 56       | Rack                      | CNV8385      |   |
| 9        | .....               |              | 57       | Arm                       | CNV8386      |   |
| 10       | Washer              | CBF1038      | 58       | Arm                       | CNV8387      |   |
|          |                     |              | 59       | Guide                     | CNV8388      |   |
| 11       | Washer              | CBF1060      | 60       | Roller                    | CNV7218      | B |
| 12       | Spring              | CBH2390      |          |                           |              |   |
| 13       | Spring              | CBH2606      | 61       | Gear                      | CNV8389      |   |
| 14       | Spring              | CBH2607      | 62       | Arm                       | CNV8391      |   |
| 15       | Spring              | CBH2608      | 63       | Arm                       | CNV8390      |   |
|          |                     |              | 64       | Arm                       | CNV8392      |   |
| 16       | Spring              | CBH2609      | 65       | Damper                    | CNV7313      |   |
| 17       | Spring              | CBH2610      |          |                           |              |   |
| 18       | Spring              | CBH2735      | 66       | Damper                    | CNV7314      |   |
| 19       | Spring              | CBH2612      | 67       | Arm                       | CNV8394      |   |
| 20       | Spring              | CBH2613      | 68       | Arm                       | CNV8395      |   |
|          |                     |              | 69       | Guide                     | CNV8396      | C |
| 21       | Spring              | CBH2614      | 70       | Guide                     | CNV8397      |   |
| 22       | Spring              | CBH2615      |          |                           |              |   |
| 23       | Spring              | CBH2616      | 71       | Holder                    | CNV8398      |   |
| 24       | Spring              | CBH2617      | 72       | Arm                       | CNV8402      |   |
| 25       | Spring              | CBH2620      | 73       | Gear                      | CNV8400      |   |
|          |                     |              | 74       | Damper                    | CNV7618      |   |
| 26       | Spring              | CBH2621      | 75       | Motor Unit(M1)            | CXC4440      |   |
| 27       | Spring              | CBH2641      |          |                           |              |   |
| 28       | Spring              | CBH2642      | 76       | Chassis Unit              | CXC2318      |   |
| 29       | Spring              | CBH2643      | 77       | Screw Unit                | CXB8729      |   |
| 30       | Spring              | CBH2659      | 78       | Gear Unit                 | CXC2397      | D |
|          |                     |              | 79       | Arm Unit                  | CXC2316      |   |
| 31       | Spring              | CBH2688      | 80       | Arm                       | CND1896      |   |
| 32       | .....               |              |          |                           |              |   |
| 33       | Shaft               | CLA4441      | 81       | Arm                       | CND1894      |   |
| 34       | Frame               | CNC9962      | 82       | Motor Unit(M2)            | CXB8933      |   |
| 35       | Frame               | CNC9963      | 83       | Bracket                   | CNC9985      |   |
|          |                     |              | 84       | .....                     |              |   |
| 36       | Bracket             | CND2712      | 85       | Screw(M2x5)               | EBA1028      |   |
| 37       | Bracket             | CND1895      |          |                           |              |   |
| 38       | Arm                 | CNC9968      | 86       | Screw                     | JFZ20P020FTC | E |
| 39       | Arm                 | CND1909      | 87       | Screw                     | JGZ17P022FTC |   |
| 40       | Lever               | CND2032      | 88       | .....                     |              |   |
|          |                     |              | 89       | Washer                    | YE20FTC      |   |
| 41       | Lever               | CNC9984      | 90       | Pickup Unit(P10)(Service) | CXX1641      |   |
| 42       | Sheet               | CNM8134      |          |                           |              |   |
| 43       | Collar              | CNV7798      | 91       | Screw                     | IMS26P030FTC |   |
| 44       | Guide               | CNV7799      | 92       | Spring                    | CBL1635      |   |
| 45       | Arm                 | CNV8403      | 93       | Clamper                   | CNV8372      |   |
|          |                     |              |          |                           |              |   |
| 46       | Rack                | CNV8374      |          |                           |              |   |
| 47       | Holder              | CNV8376      |          |                           |              | F |
| 48       | Holder              | CNV8377      |          |                           |              |   |
| 49       | Arm                 | CNV8378      |          |                           |              |   |

# 3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

## 3.1 BLOCK DIAGRAM

A

### A TUNER AMP ASSY

B

ANTENNA CN401

C


D


E

F

### PICKUP UNIT (P10)(SERVICE)

### C CD CORE UNIT(S10.1)


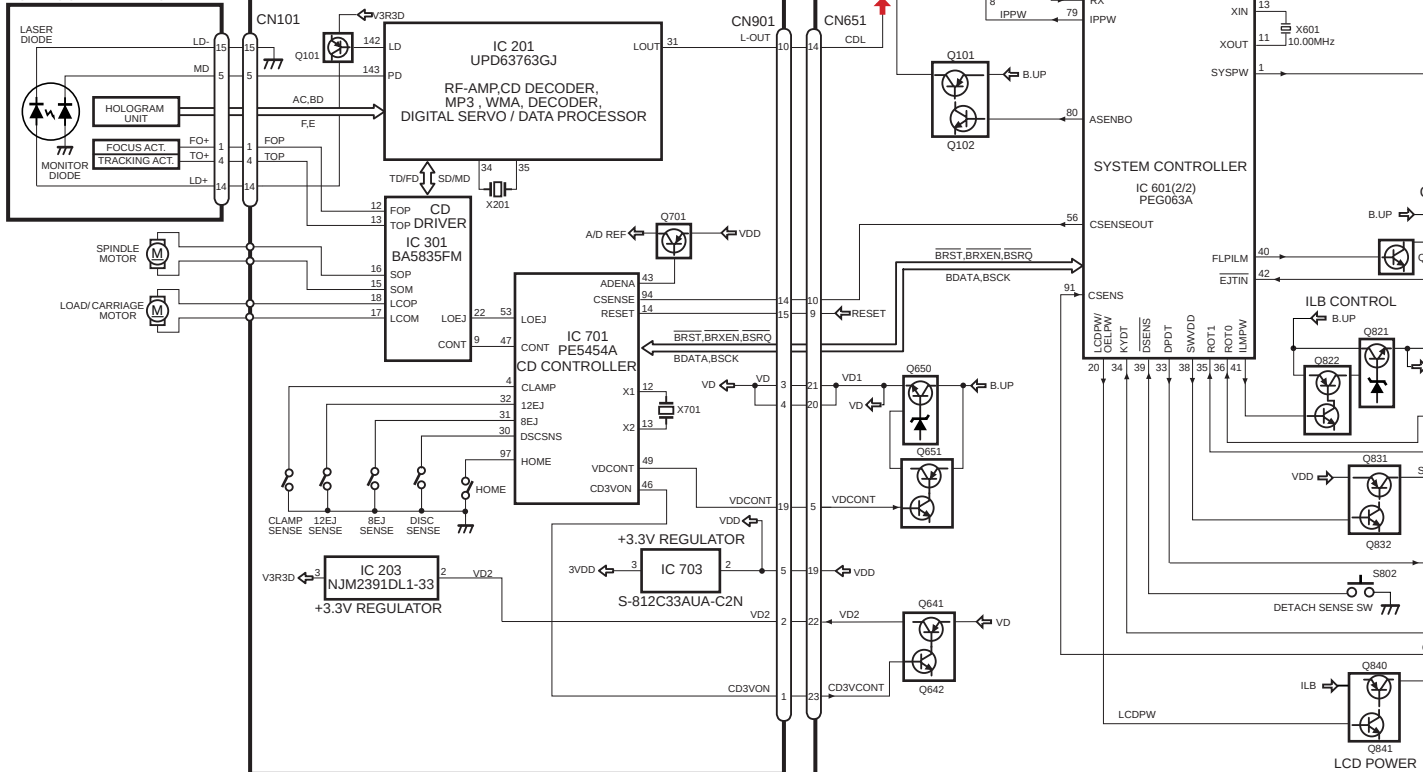


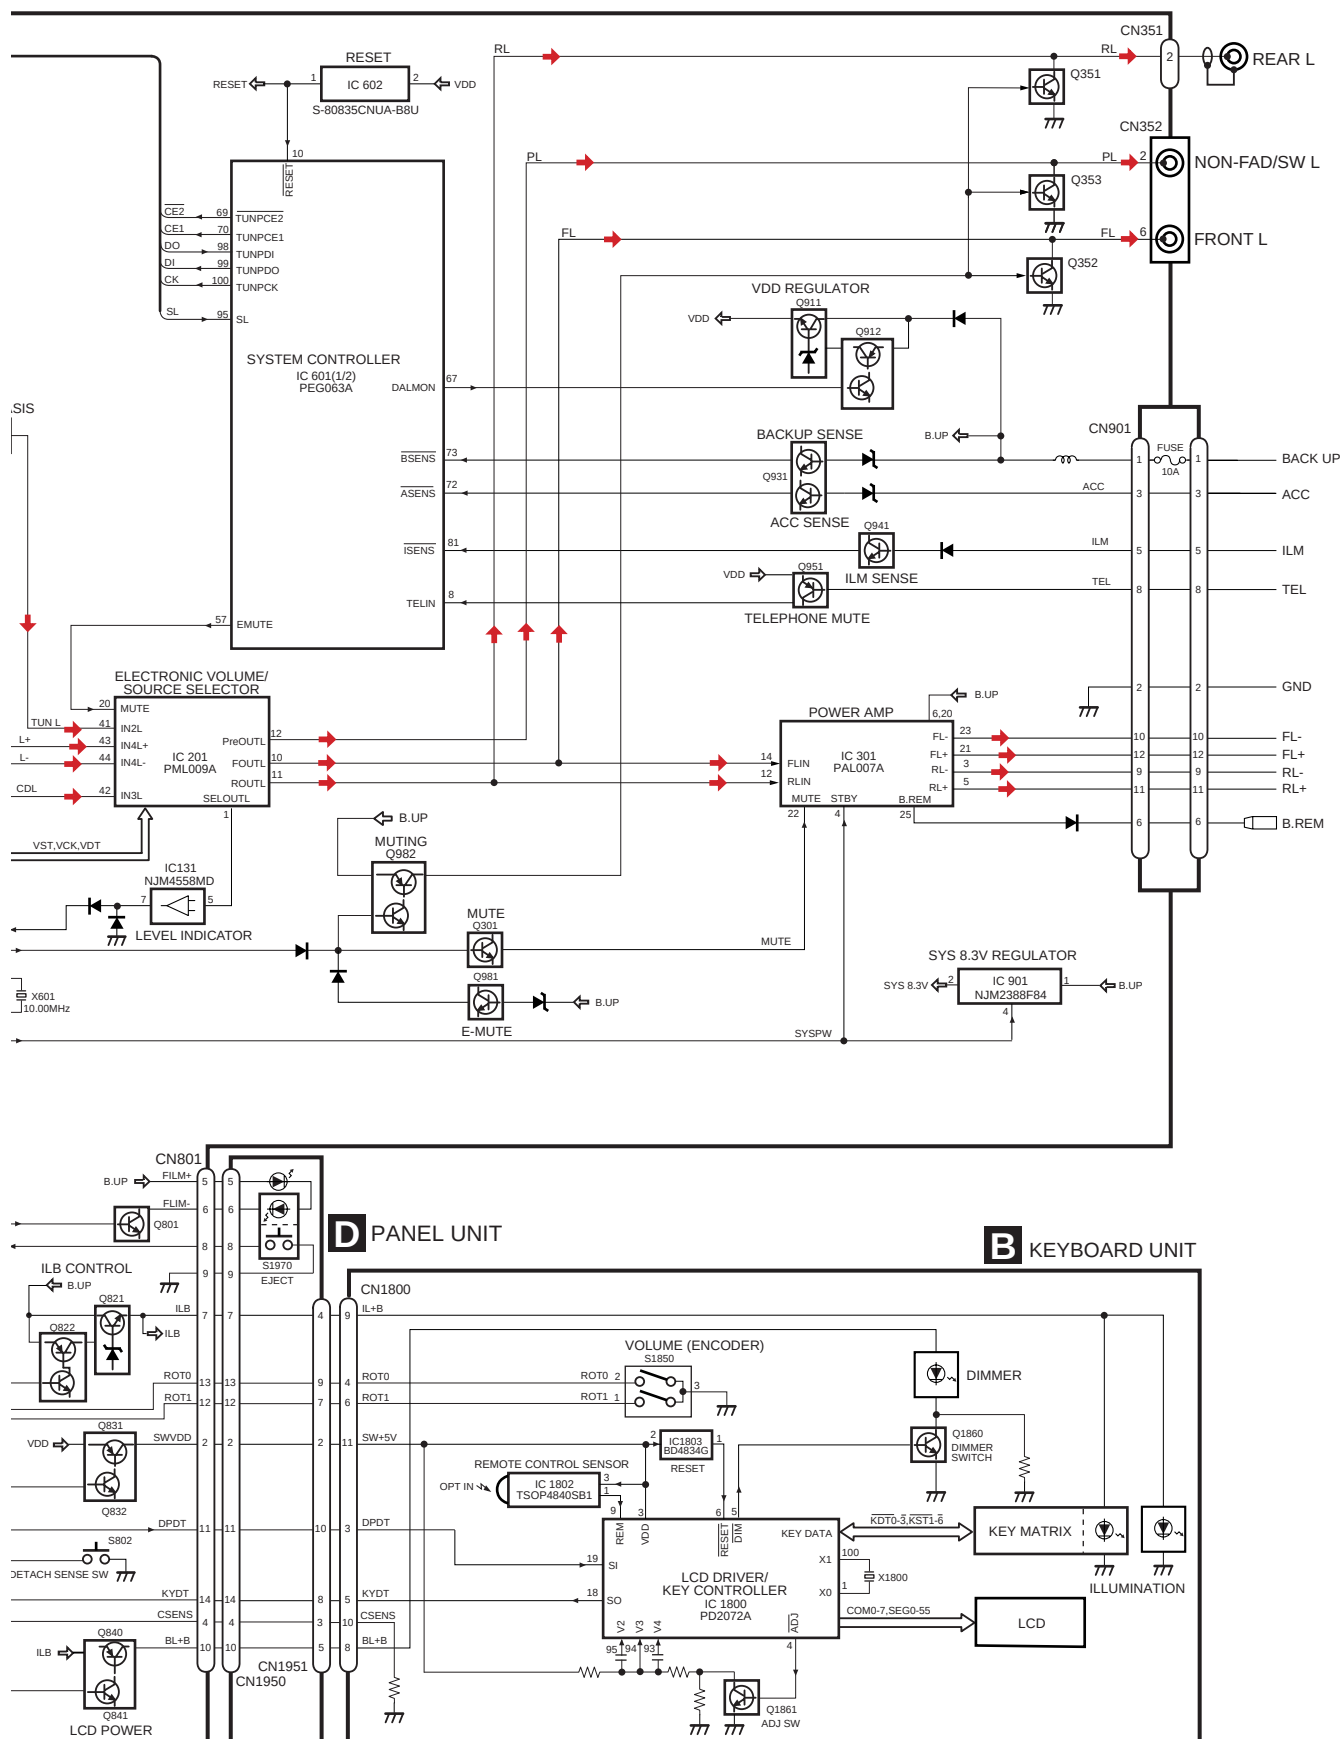

## 3.2 OVERALL CONNECTION DIAGRAM(GUIDE PAGE)

Note: When ordering service parts, be sure to refer to "EXPLODED VIEWS AND PARTS LIST" or "ELECTRICAL PARTS LIST".

A-a

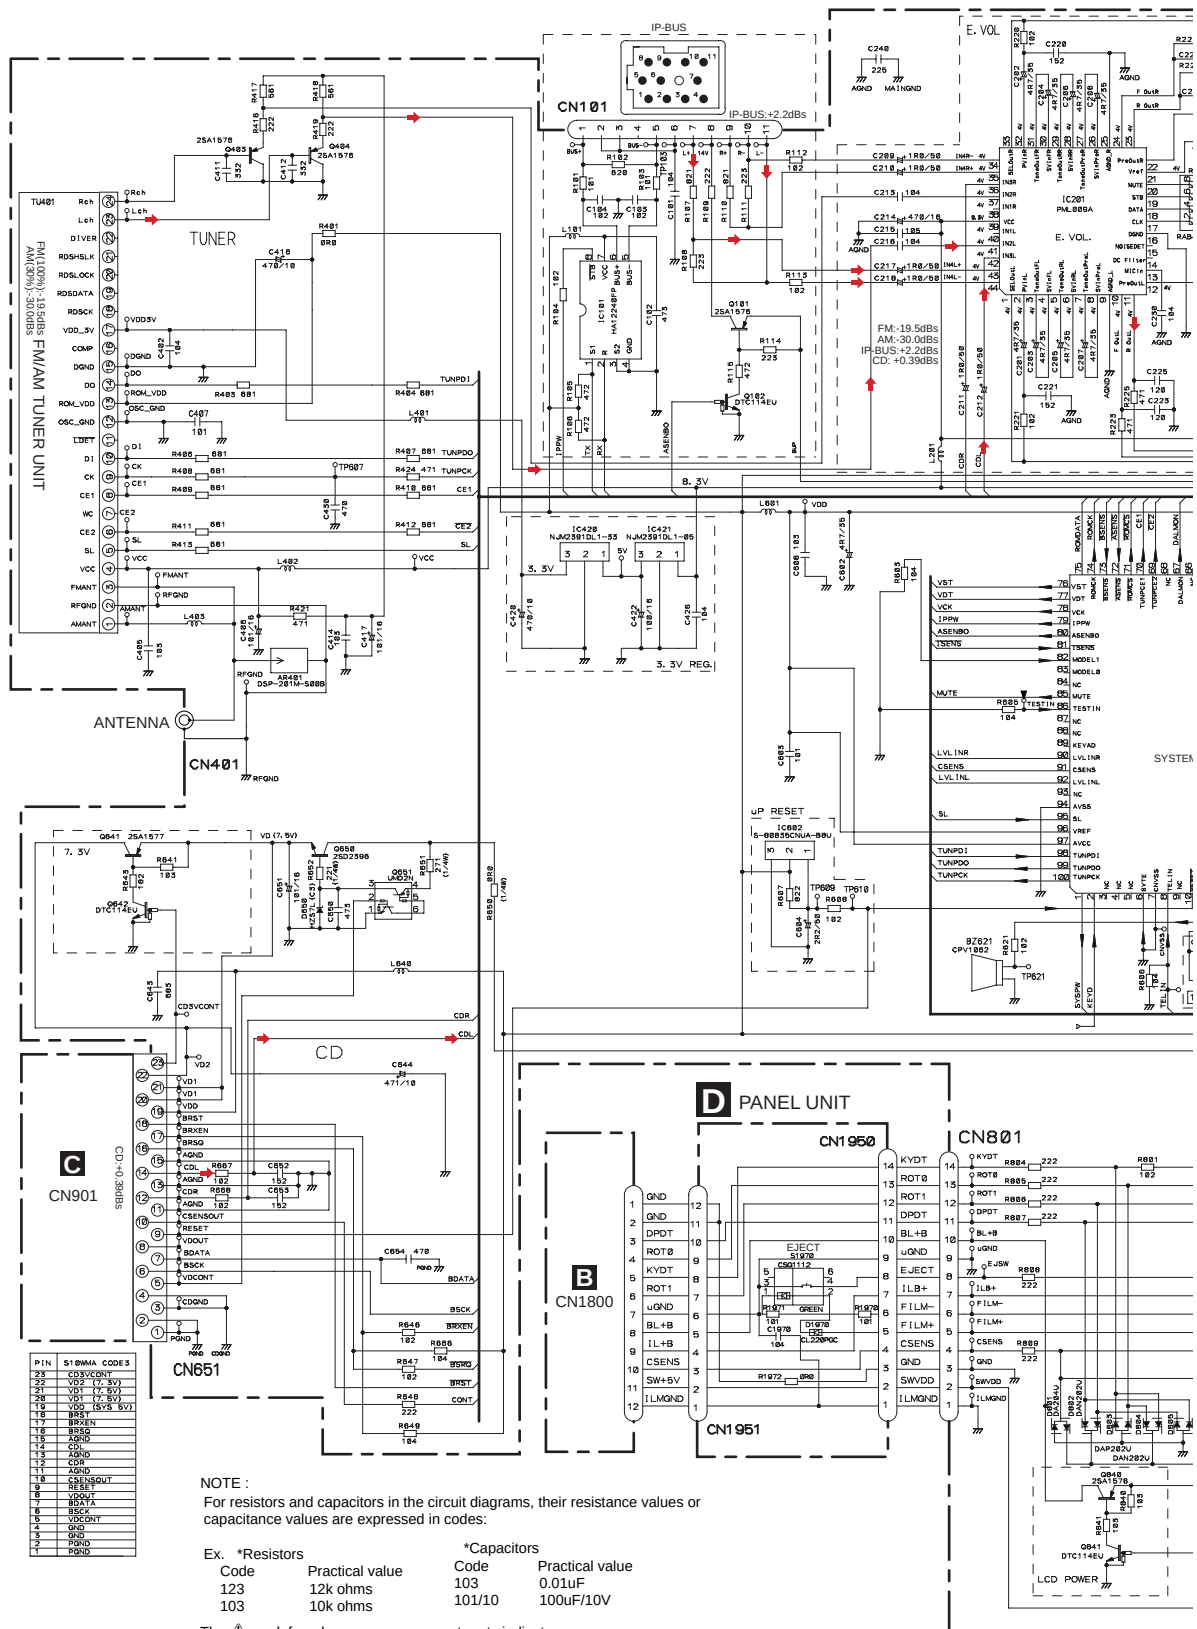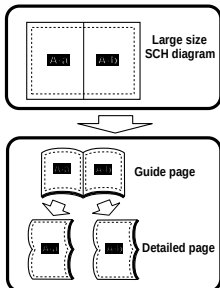

AD

DEH-P5750MP/XM/ES

A

## B



D

E

F

A

A-b

B


C

D


E

F

A-a

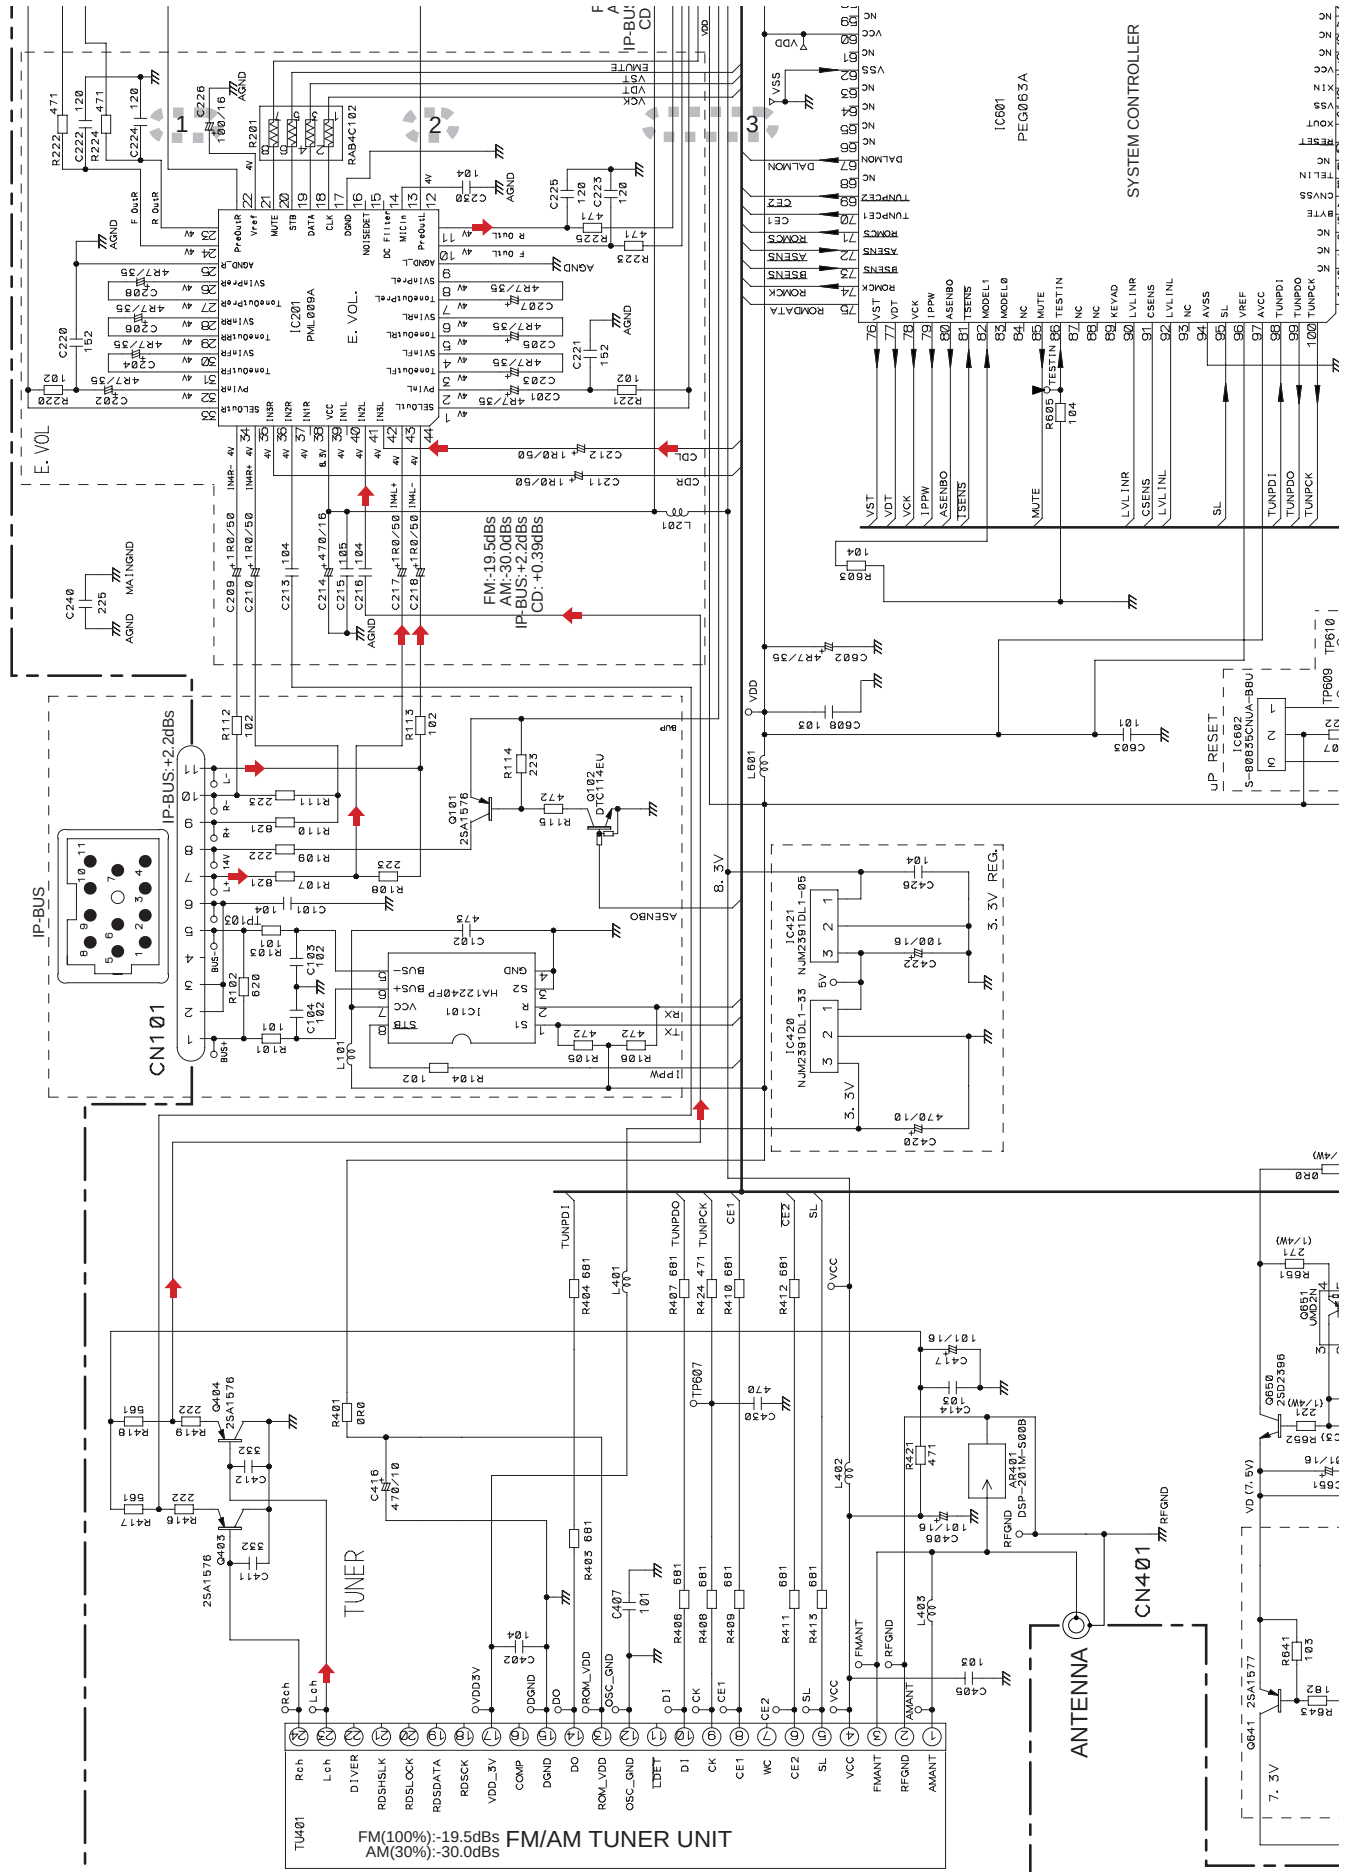



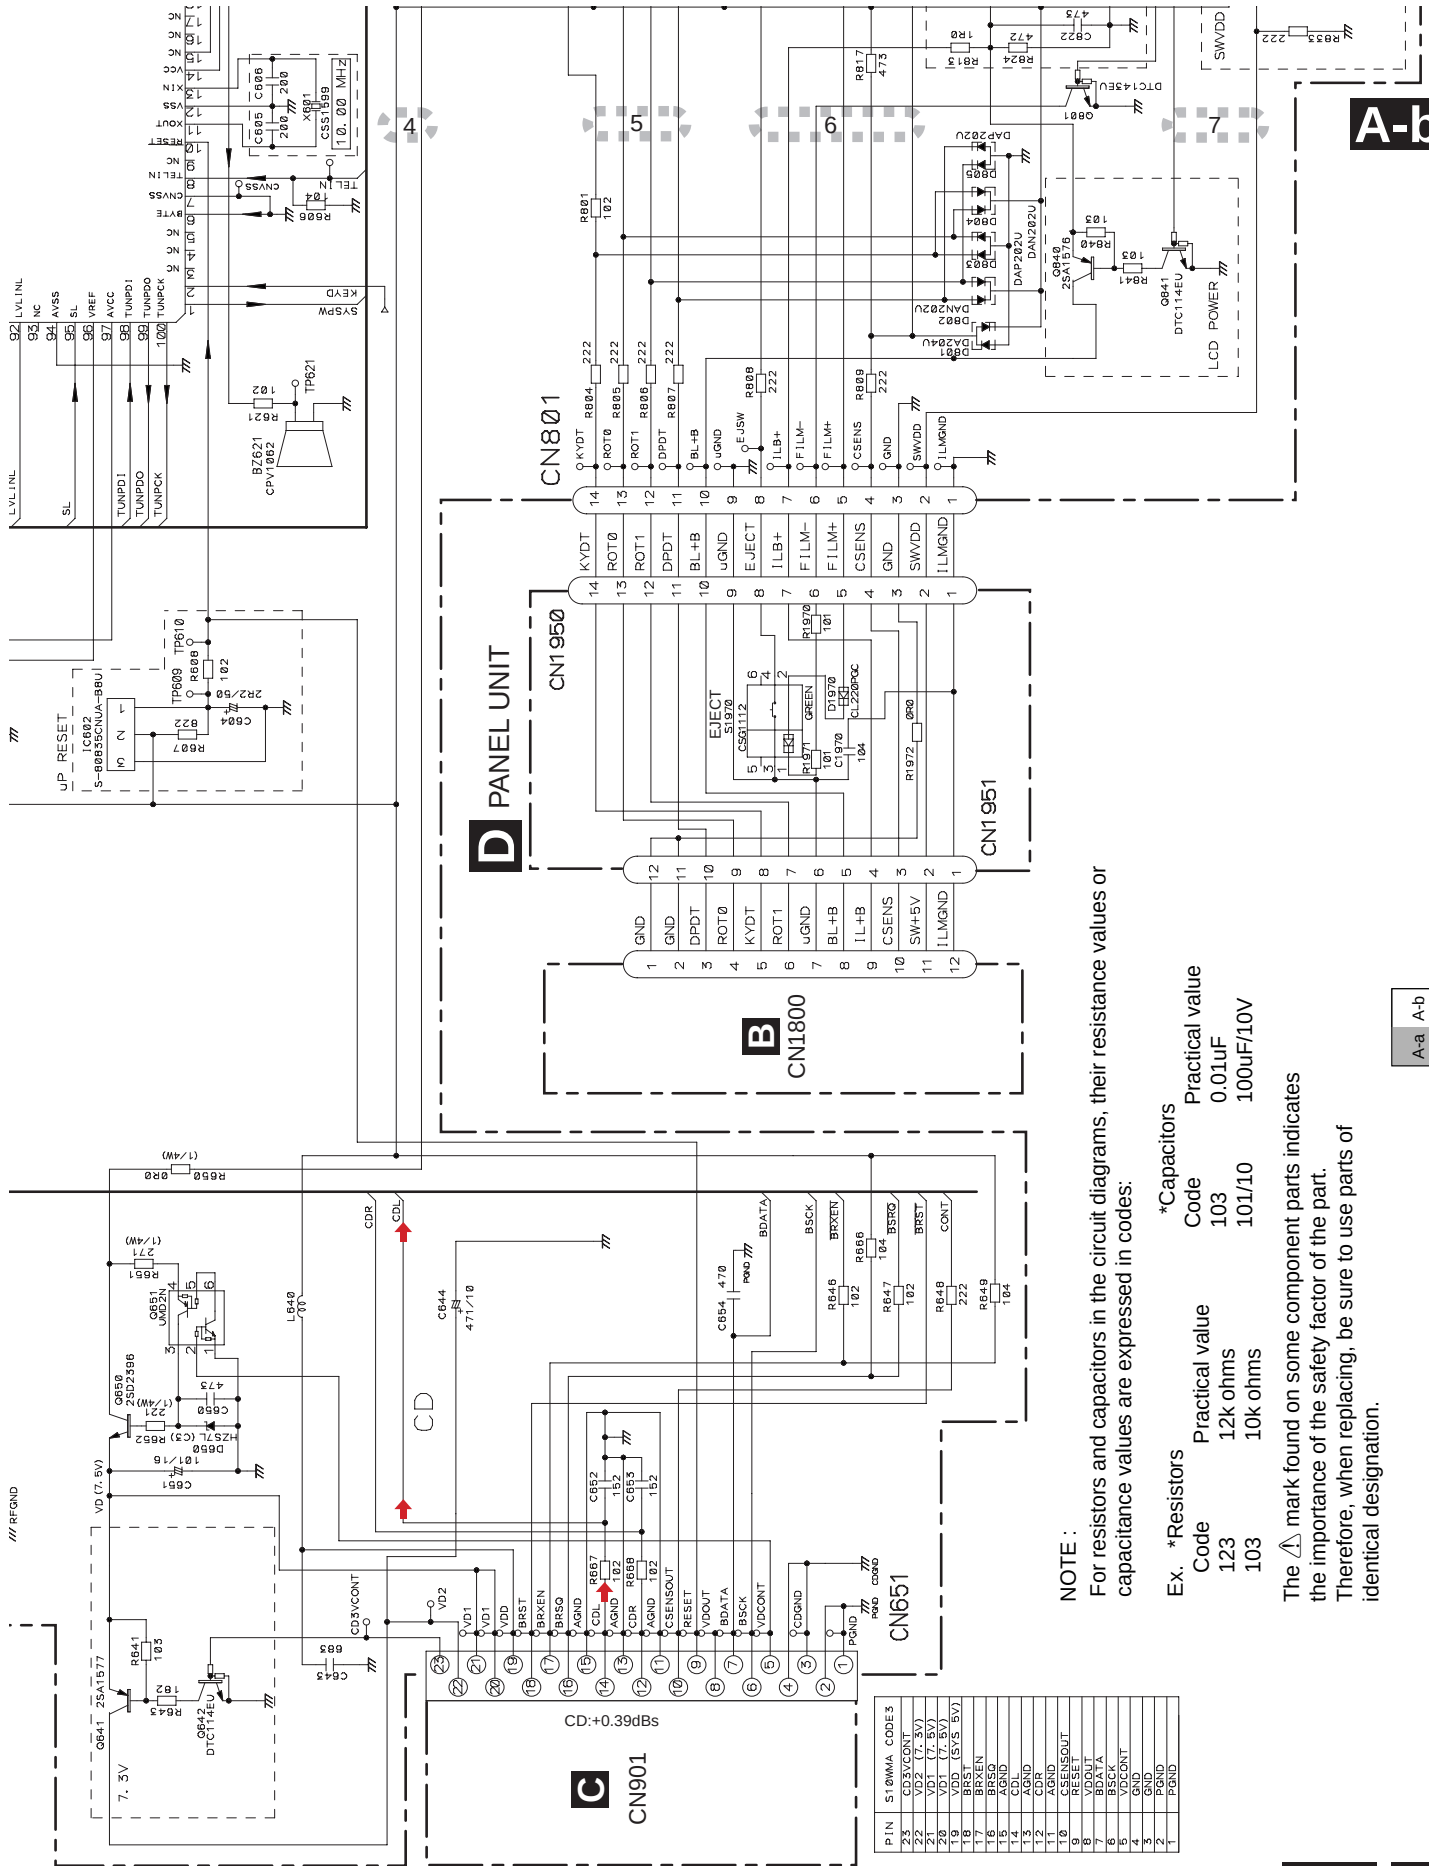

A

B

C

D


E

F

A-a A-b

A TUNER AMP ASSY

A-b

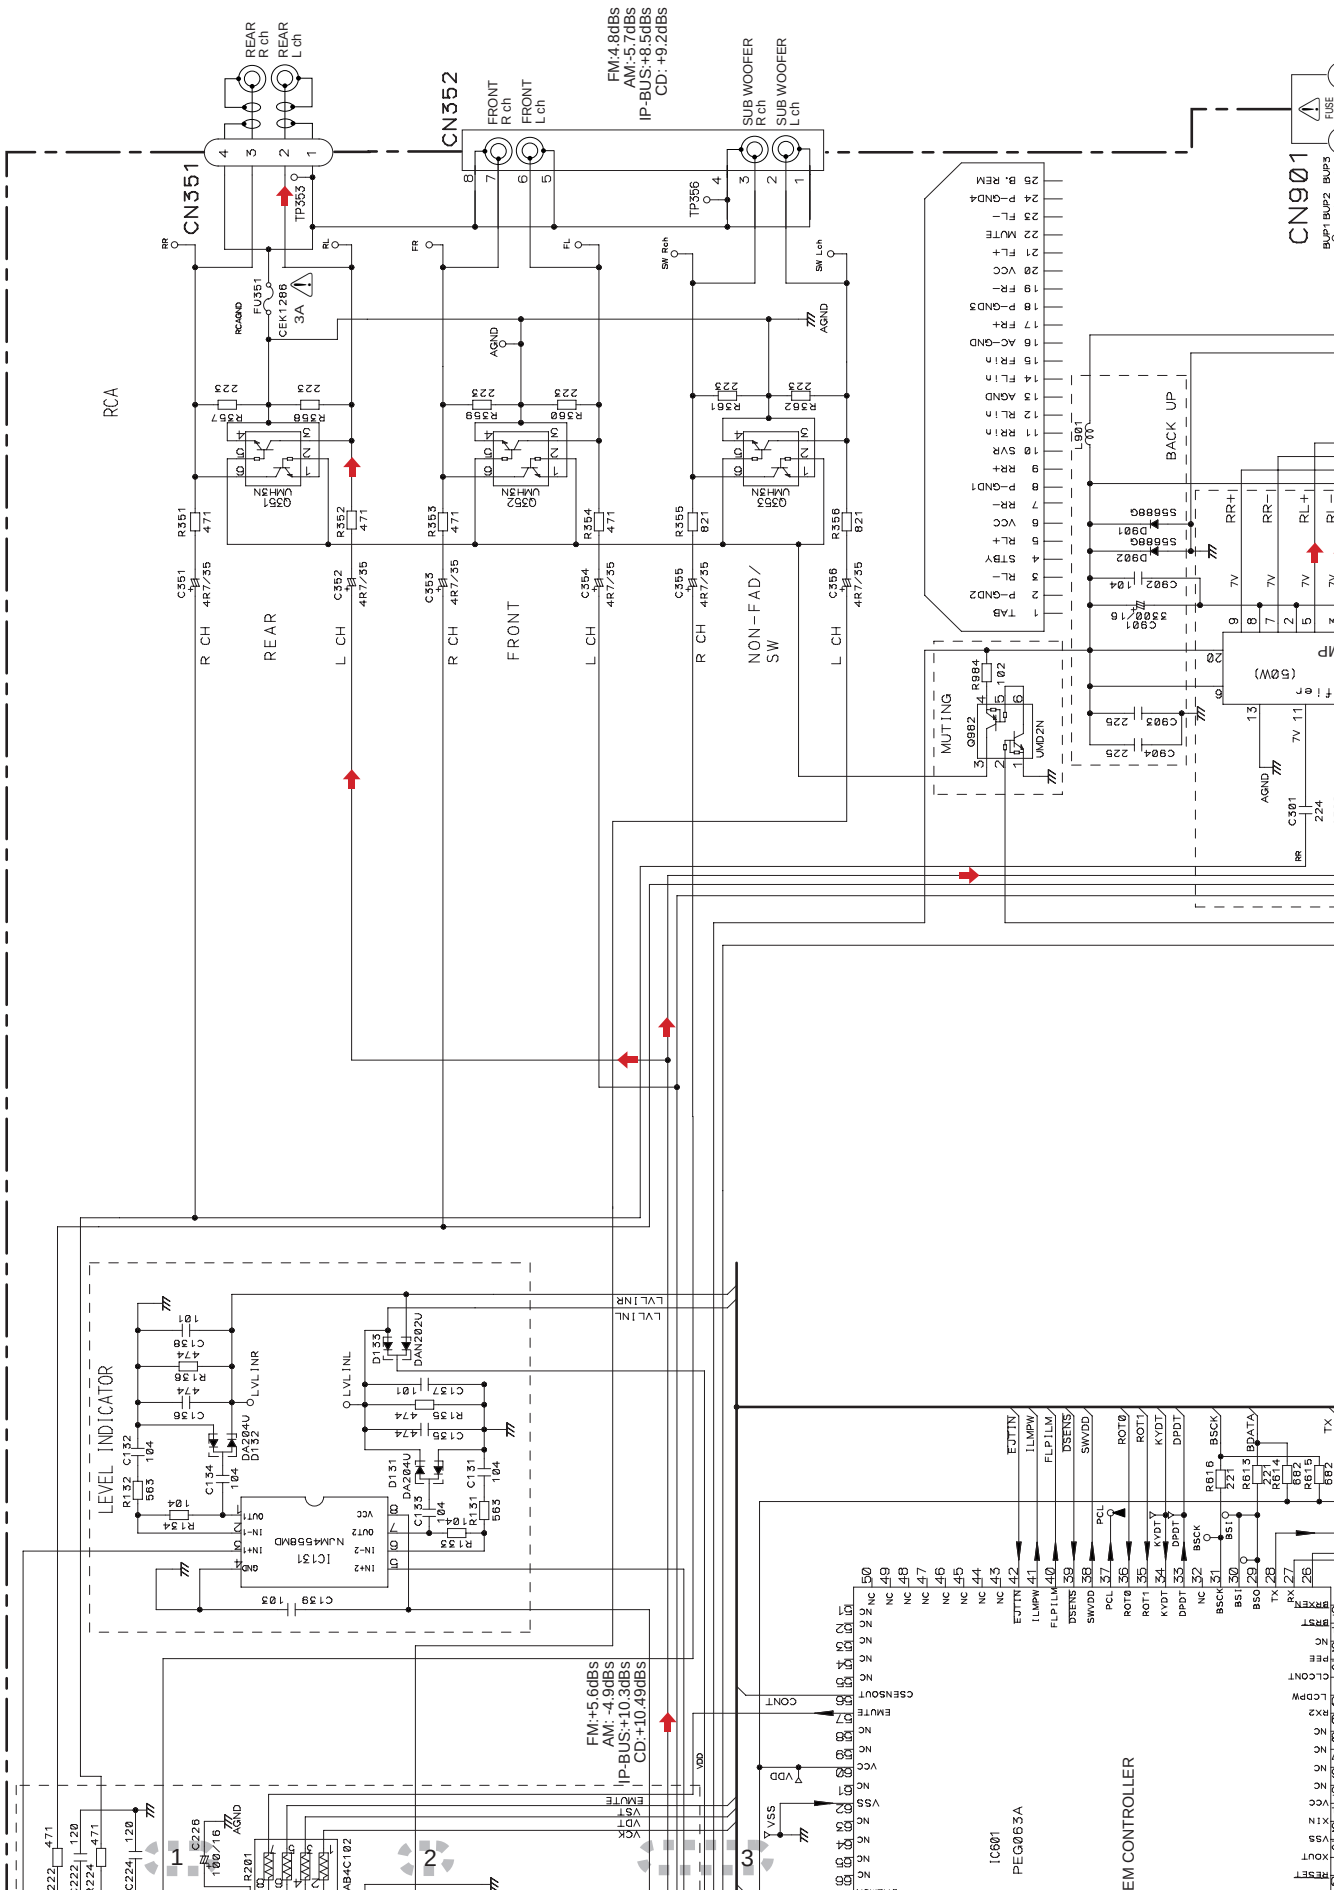




## 4

F




# B KEYBOARD UNIT

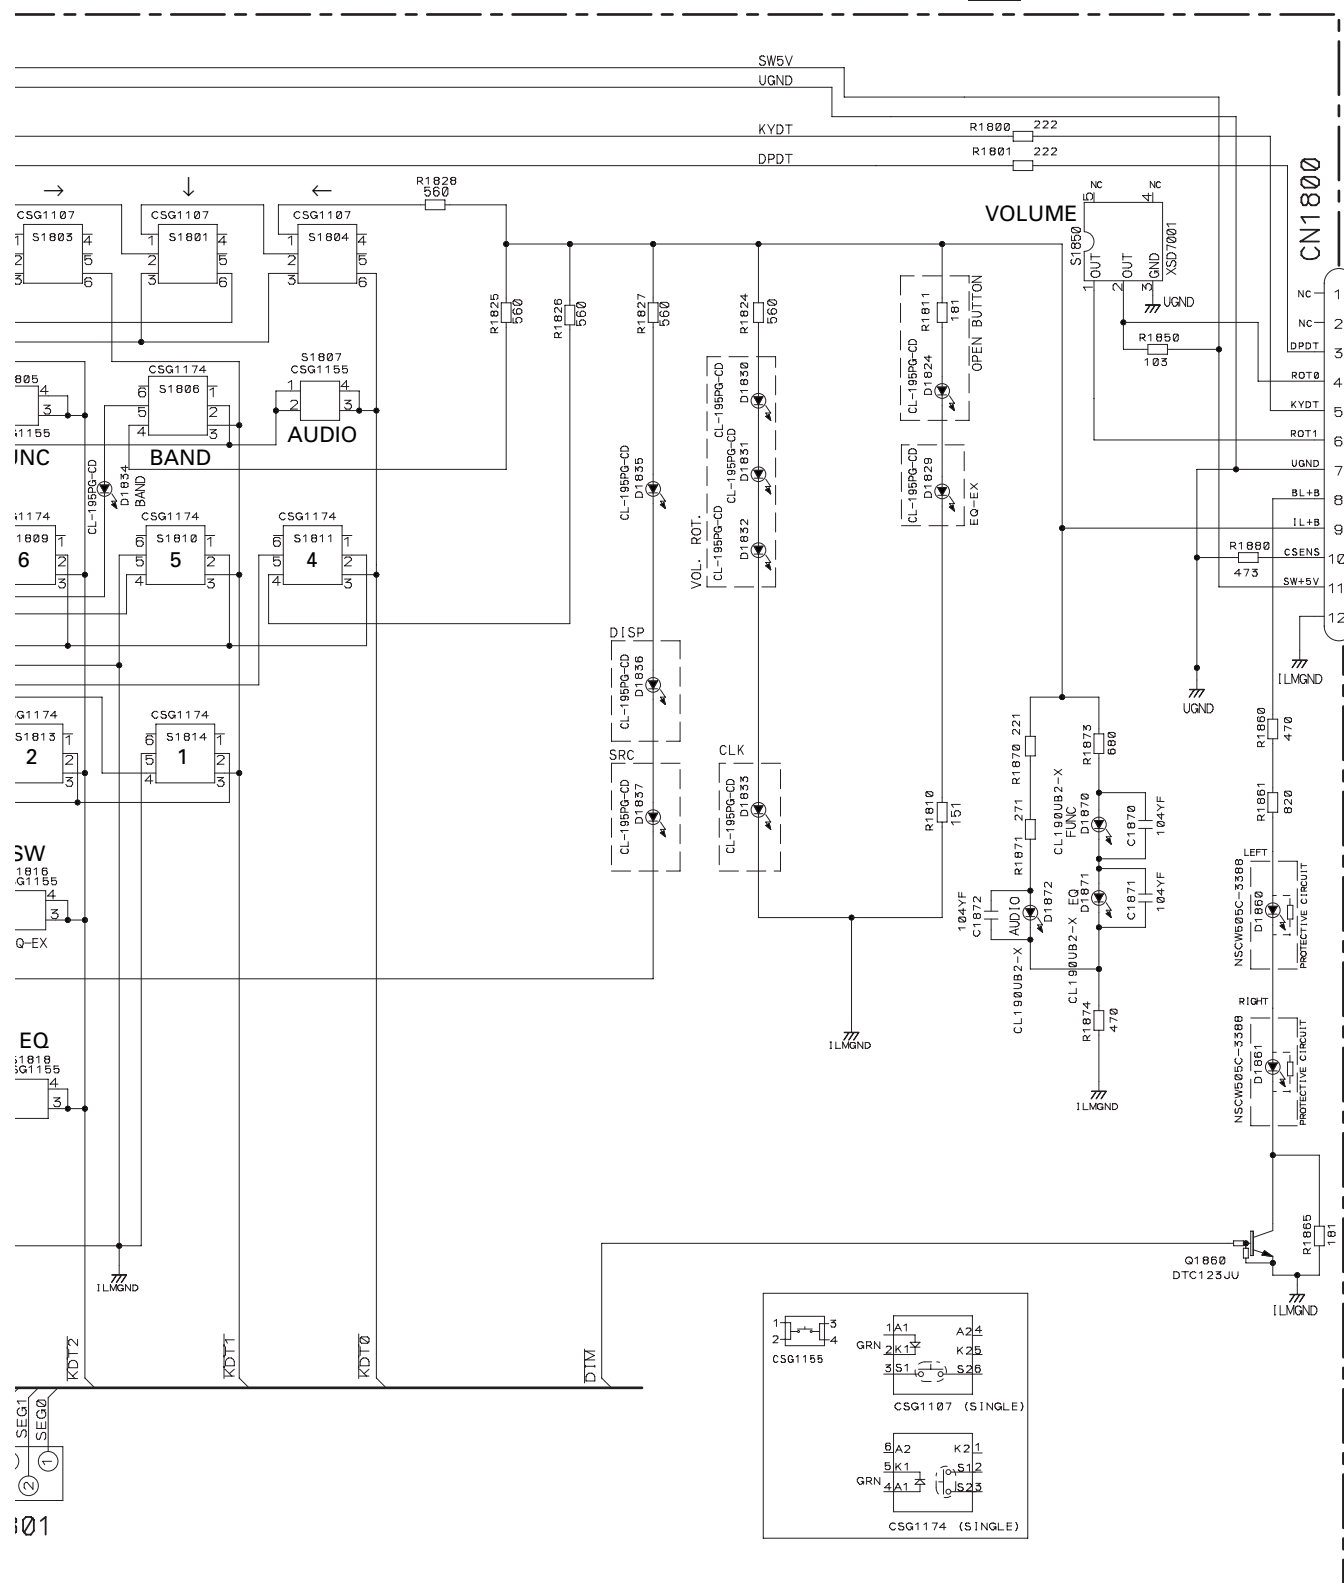

D CN1951

# 3.4 CD MECHANISM MODULE(GUIDE PAGE)

C-a

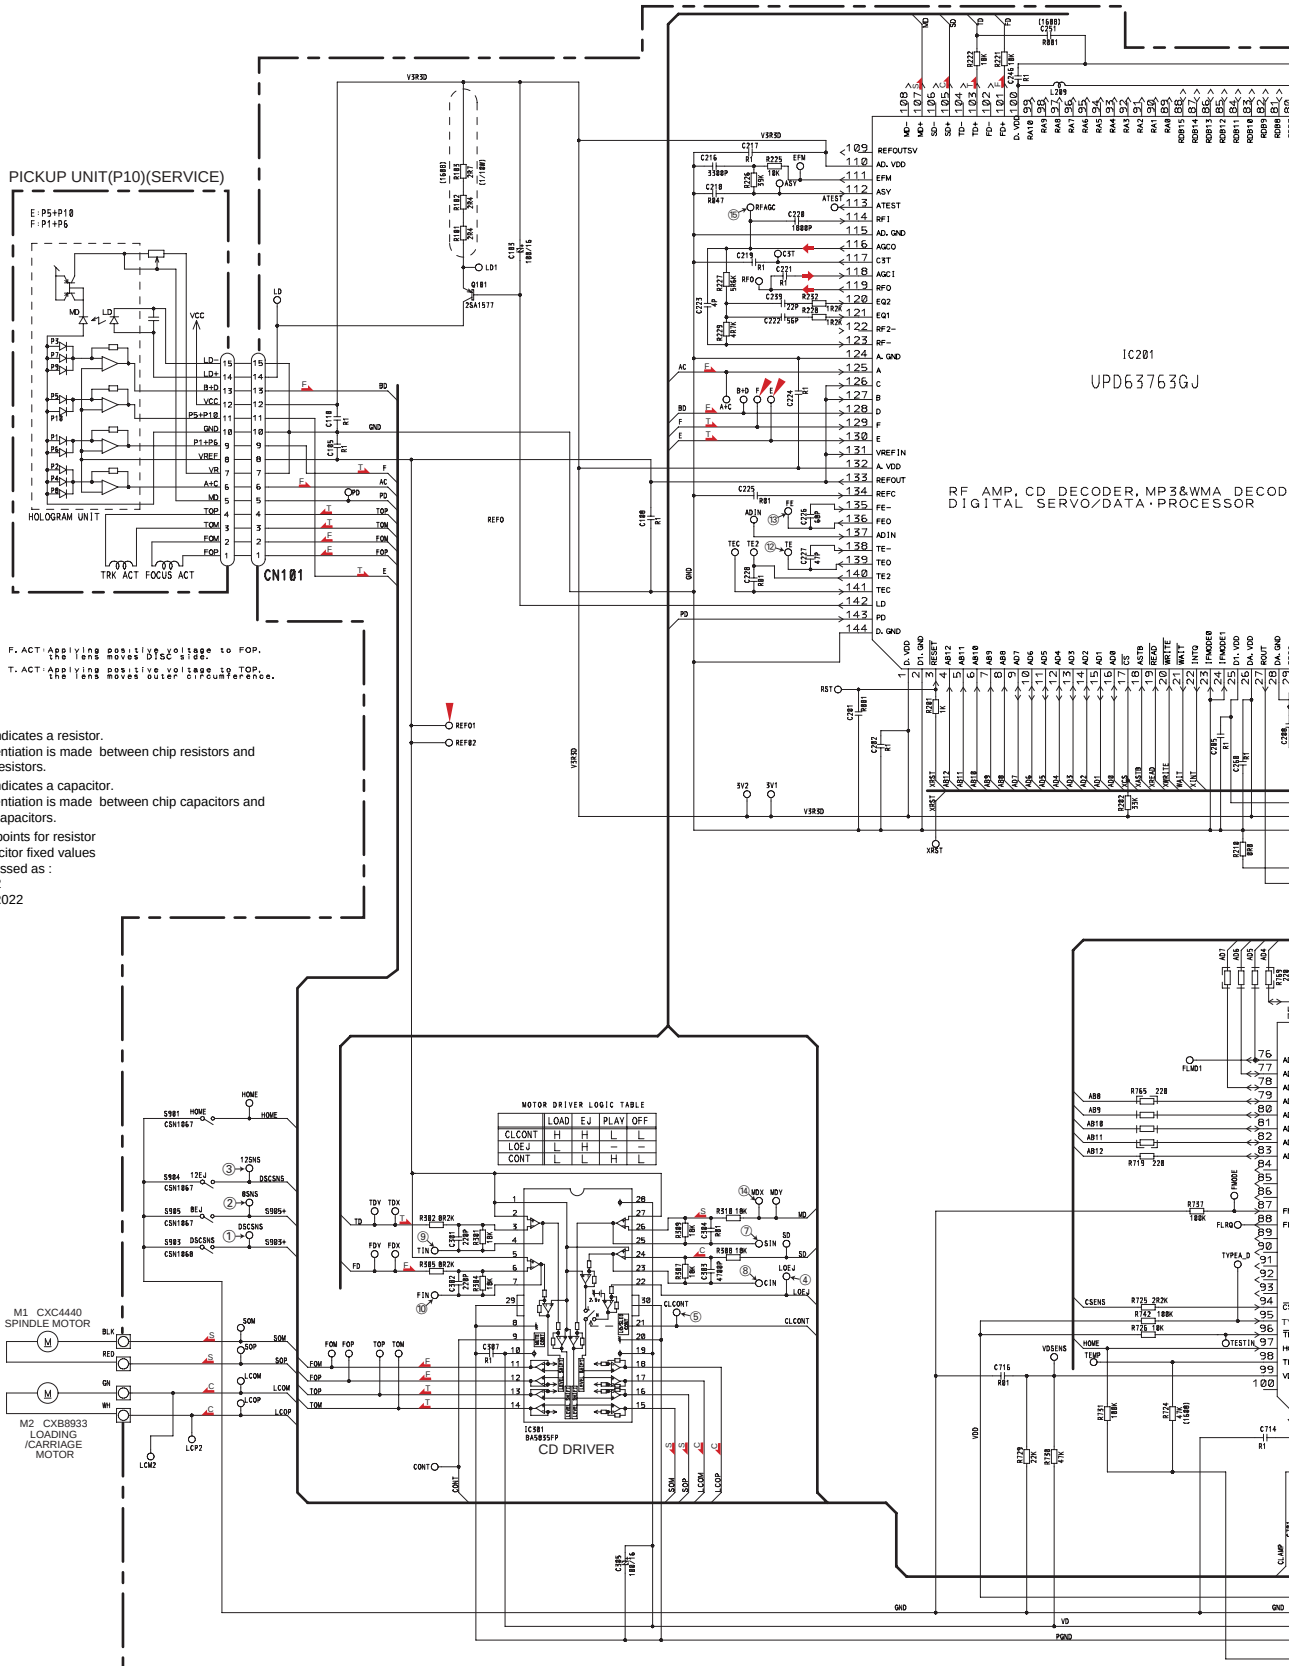

C-b

NOTE1) GND ...CD,LS1,RFAMP,CPU  
PGND ...Actuator,Motor Driver  
AGND ...Audio  
These GND's are not connected to each other on PCB.  
PGND is connected to a floating mechanism part by a screw.


- ① Monitor land(ø1.2mm)  
② Monitor land(ø0.8mm)  
③ Land for manual soldering

SWITCHES:  
CD CORE UNIT(S10.1)  
S901:HOME SWITCH.....ON-OFF  
S903:DSCSNS SWITCH.....ON-OFF  
S904:12EJ SWITCH.....ON-OFF  
S905:8EJ SWITCH.....ON-OFF

The underlined indicates the switch position.

- SIGNAL LINE  
→ FOCUS SERVO LINE  
→ TRACKING SERVO LINE  
→ CARRIAGE SERVO LINE  
→ SPINDLE SERVO LINE

## C CD CORE UNIT(S10.1)

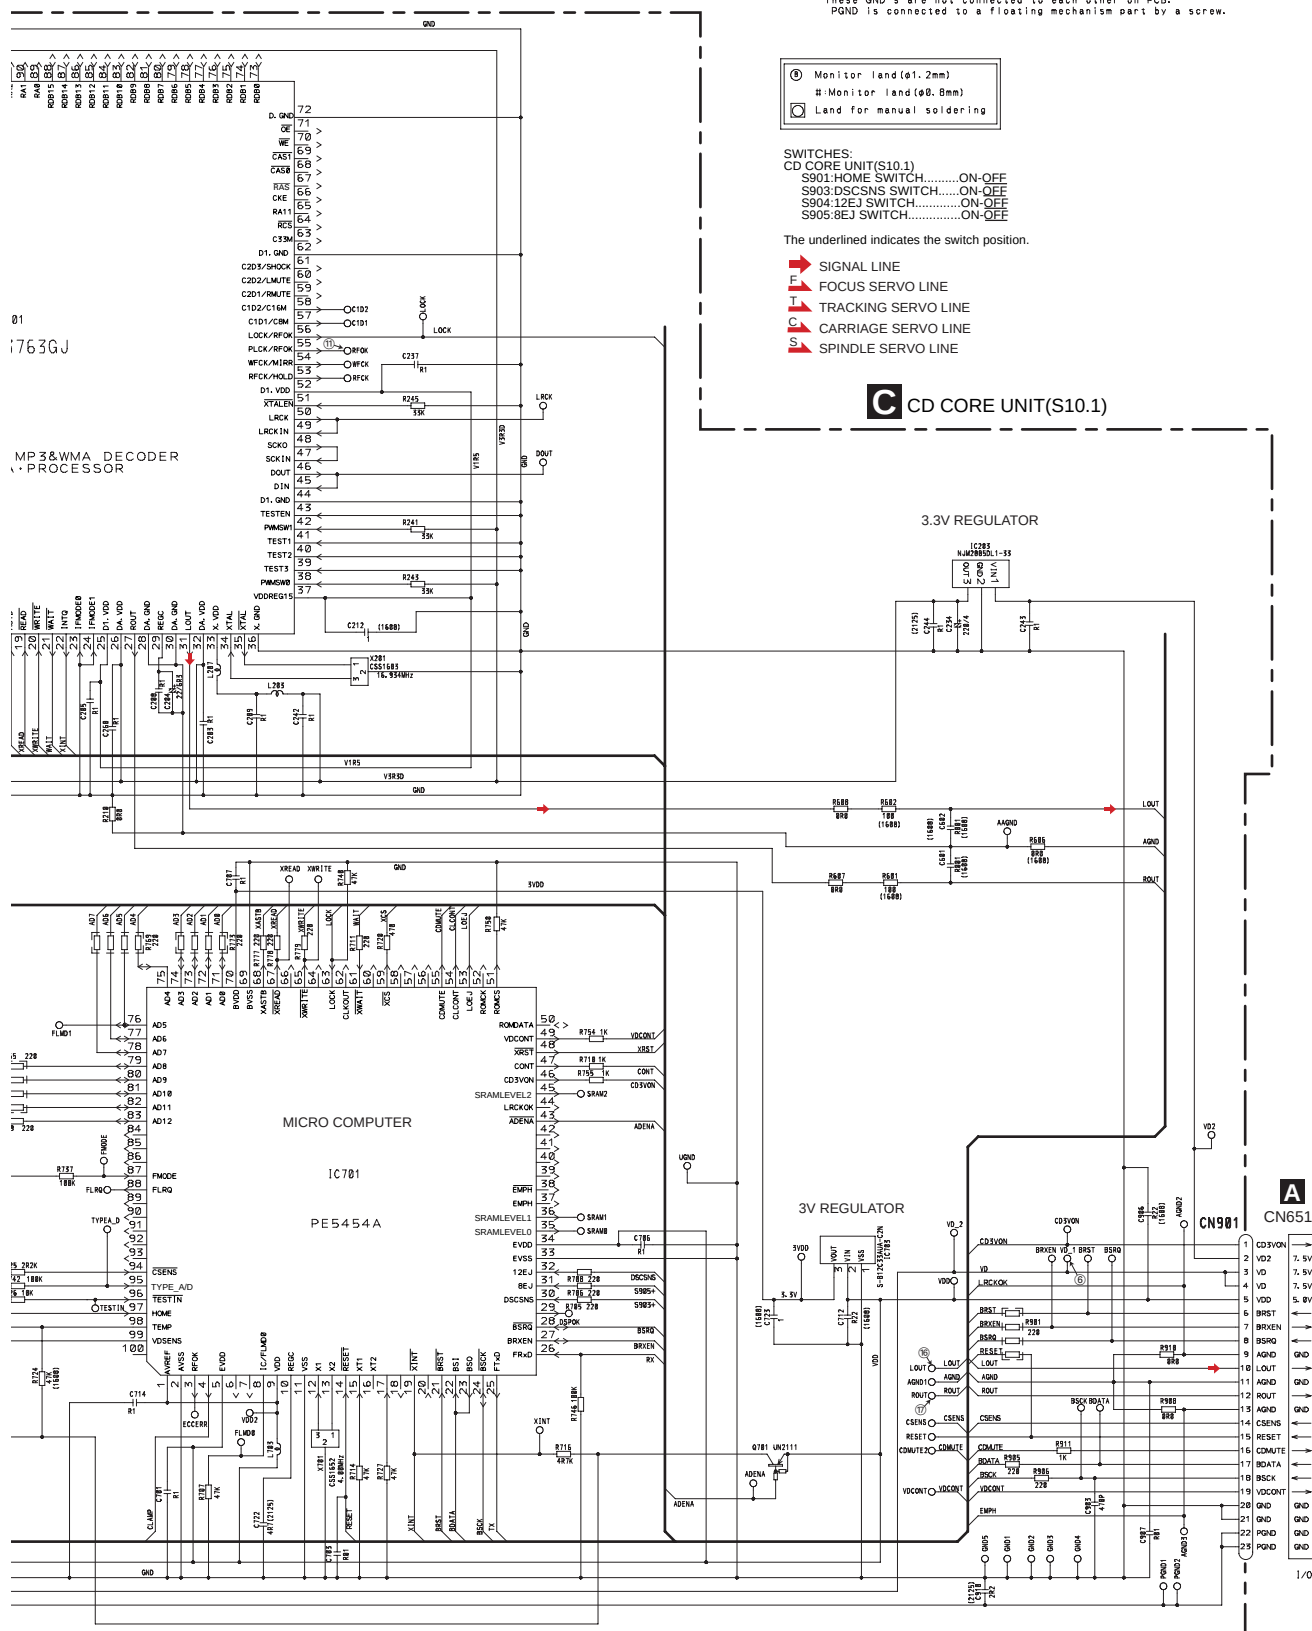







discrete capacitors.

Decimal points for resistor  
and capacitor fixed values  
are expressed as :  
2.2 → 2R2  
0.022 → R022

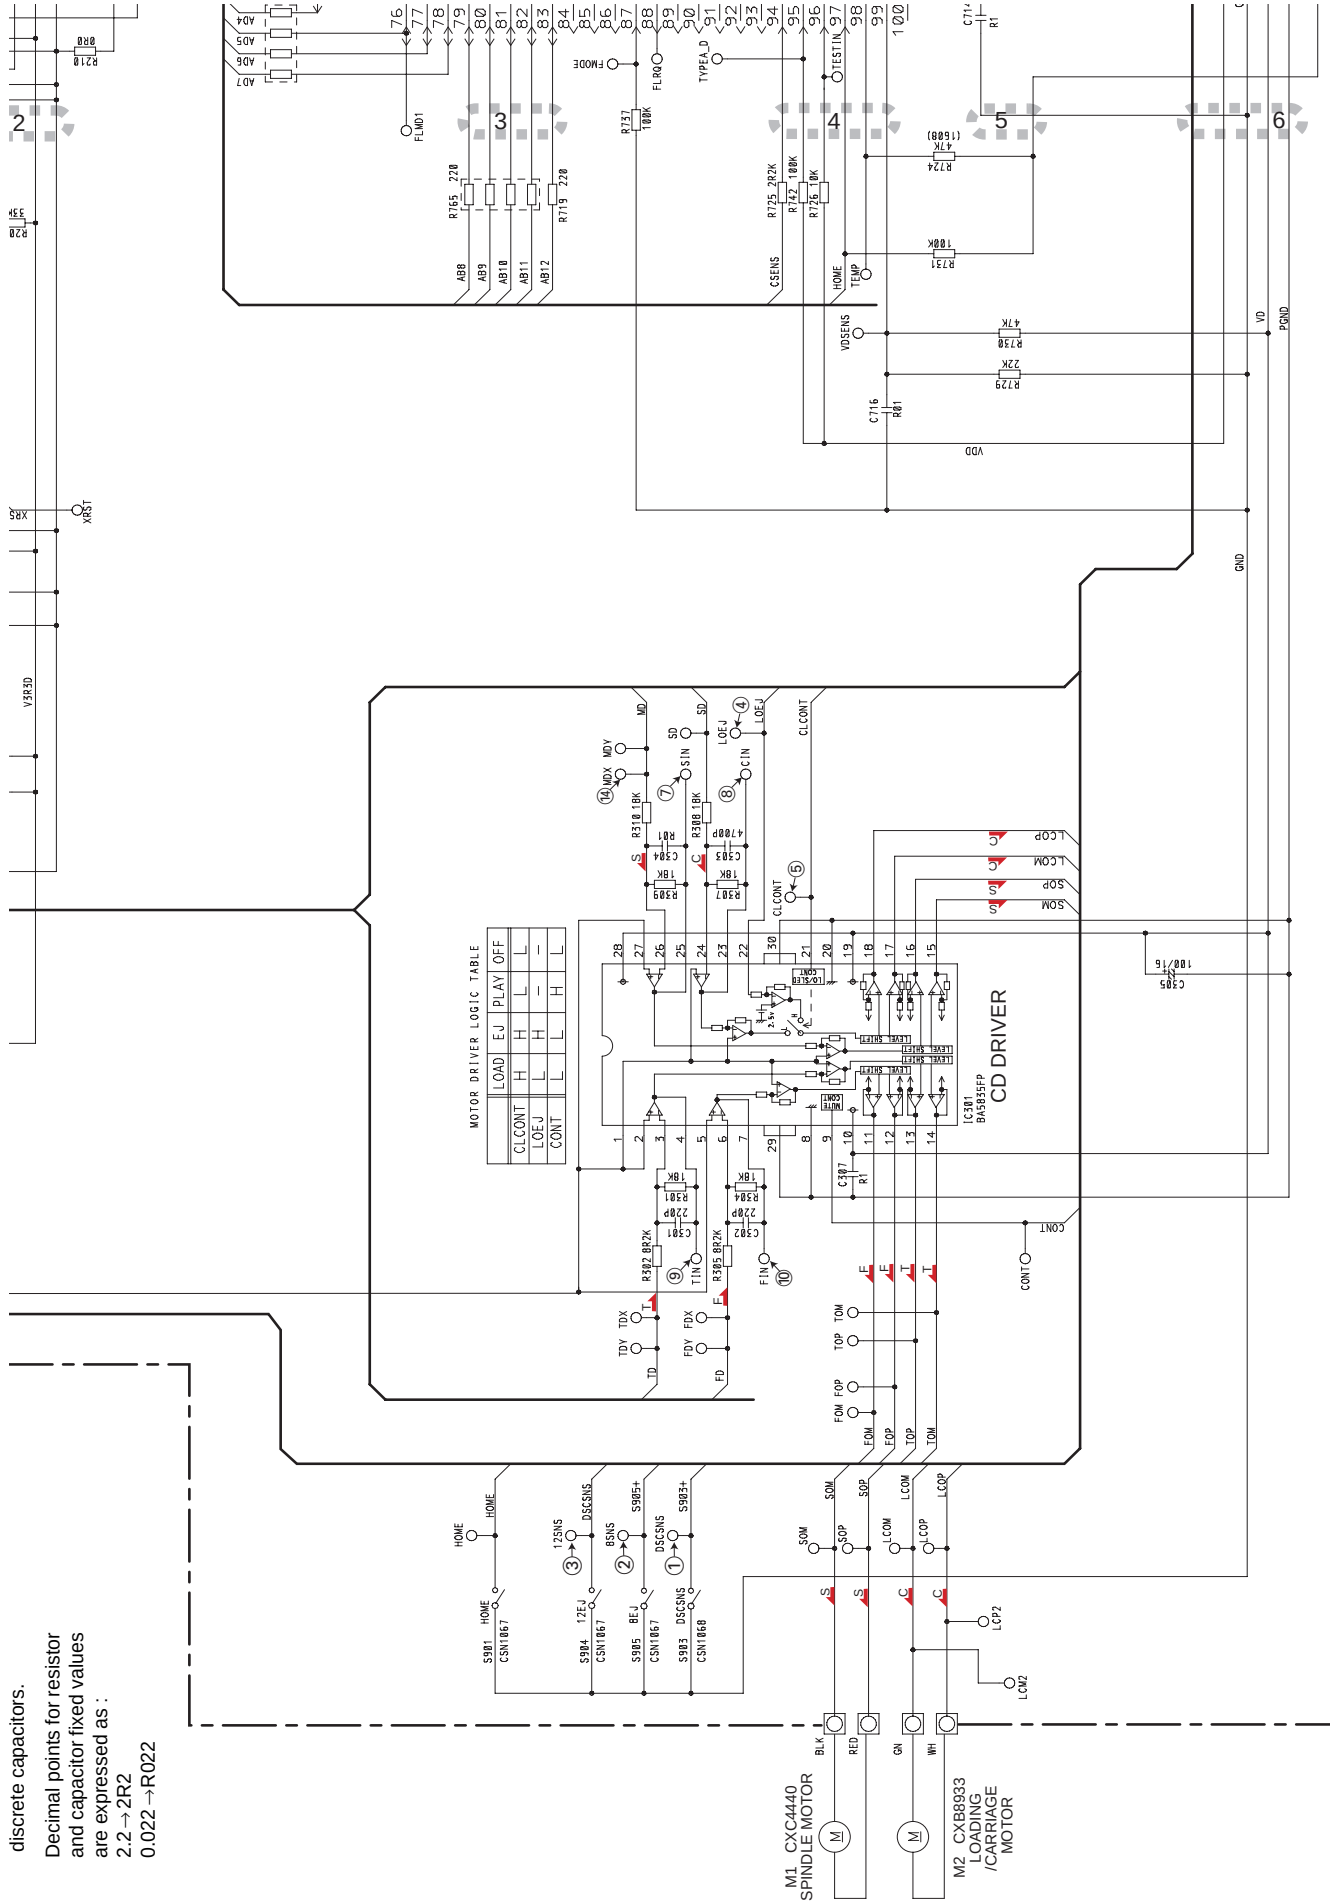



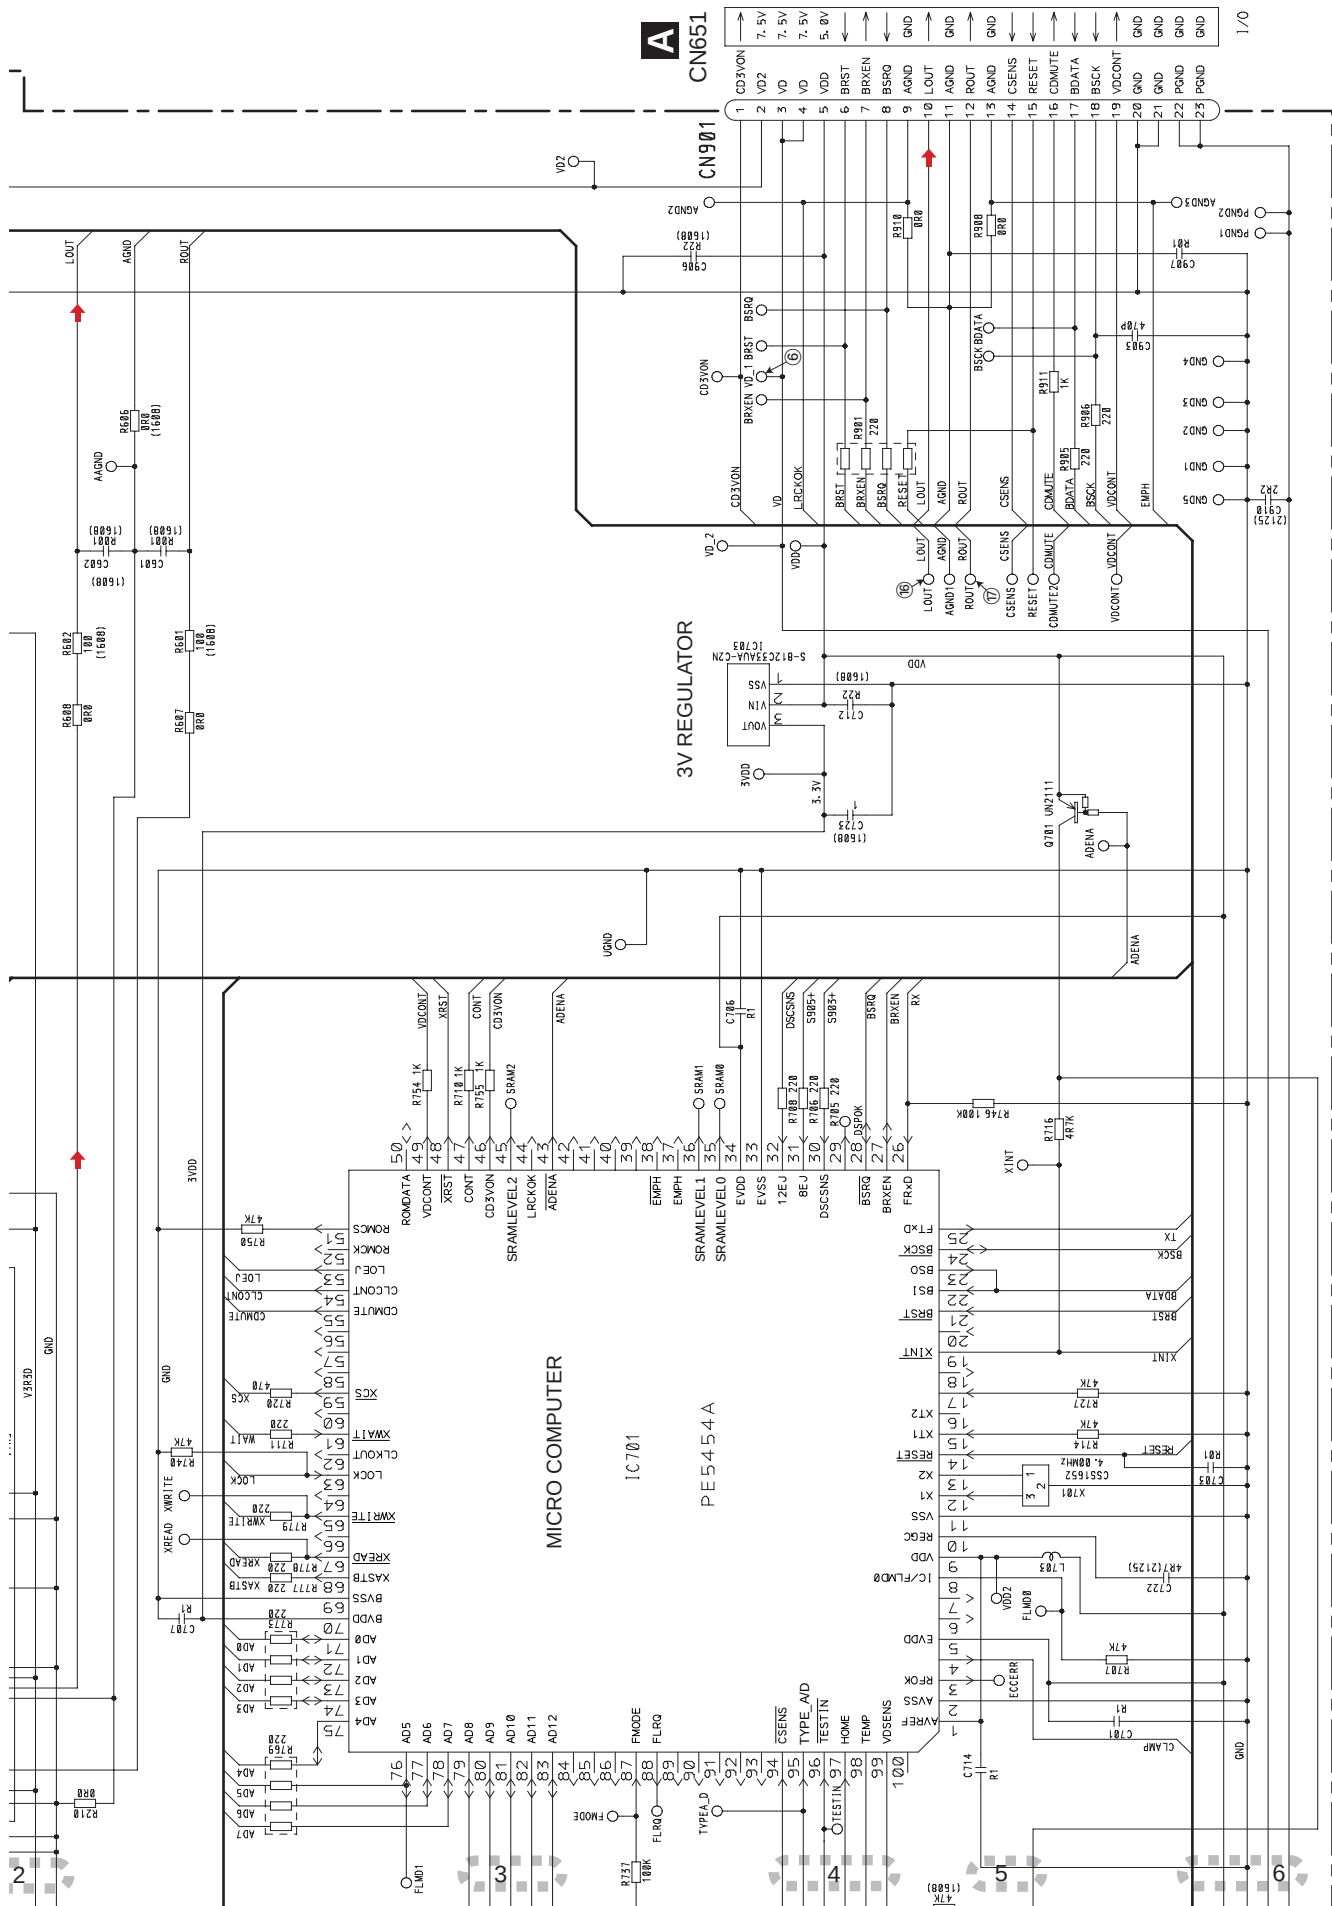

DEH-P5750MP/XM/ES

C-b


# Waveforms

Note : 1. The encircled numbers denote measuring points in the circuit diagram.  
2. Reference voltage REFO1(1.65V)

A

① DSCSNS 5V/div 500ms/div  
② 8SNS 5V/div  
③ 12SNS 5V/div  
④ LOEJ 5V/div


12 cm CD Loading operation

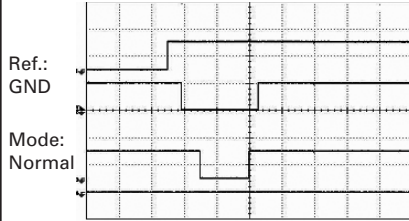

B


① DSCSNS 5V/div 500ms/div  
⑤ CLCONT 5V/div  
④ LOEJ 5V/div  
⑥ VD 10V/div

12 cm CD Loading operation

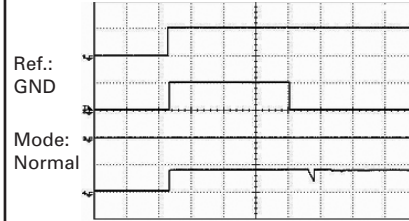

① DSCSNS 5V/div 500ms/div  
② 8SNS 5V/div  
③ 12SNS 5V/div  
④ LOEJ 5V/div


8 cm CD Loading operation

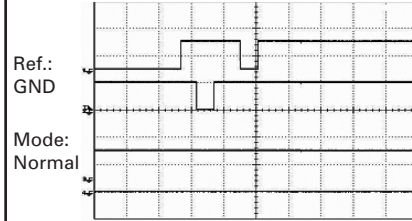

C


⑦ SIN 1V/div 2s/div  
⑧ CIN 500mV/div  
⑨ TIN 500mV/div

12 cm CD-DA setup operation after loading

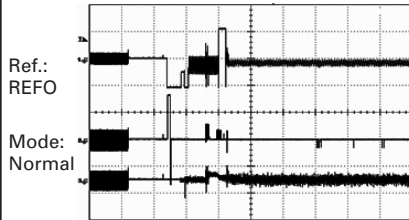


⑦ SIN 1V/div 1s/div  
⑧ CIN 500mV/div  
⑨ TIN 500mV/div

12 cm CD-ROM(1 session) setup operation after loading

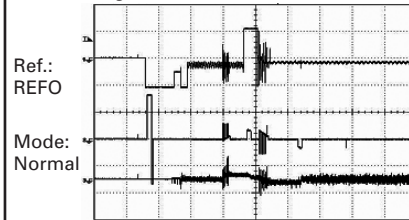

⑦ SIN 1V/div 2s/div  
⑧ CIN 500mV/div  
⑨ TIN 500mV/div


12 cm CD-ROM(3 sessions) setup operation after loading

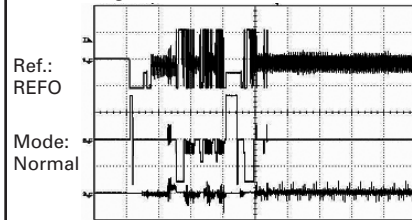

D


⑩ FIN 200mV/div 500ms/div  
⑪ RFOK 2V/div  
⑦ SIN 2V/div

12 cm CD-DA Source On setup operation

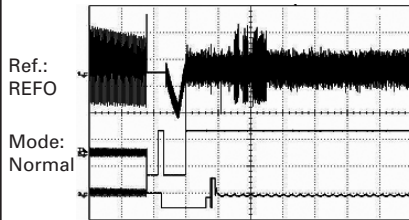


⑫ TE 500mV/div 200ms/div  
⑬ FE 500mV/div

Source On setup operation

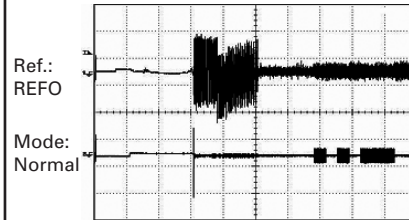

⑬ FE 500mV/div 20ms/div  
⑩ FIN 500mV/div  
⑫ TE 500mV/div  
⑨ TIN 500mV/div


CD-DA Play operation

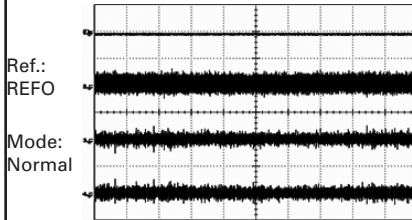

E


⑬ FE 500mV/div 20ms/div  
⑩ FIN 500mV/div  
⑫ TE 500mV/div  
⑨ TIN 500mV/div

CD-ROM play operation(Regular track Jump)

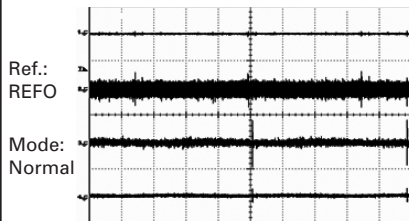


⑭ MDX 1V/div 50ms/div  
⑦ SIN 200mV/div

Spindle waveform during play operation

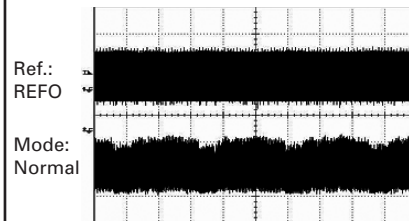


⑭ MDX 2V/div 5μs/div  
⑦ SIN 1V/div

Spindle waveform during play operation (Wider)

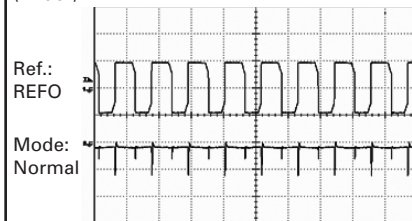


F

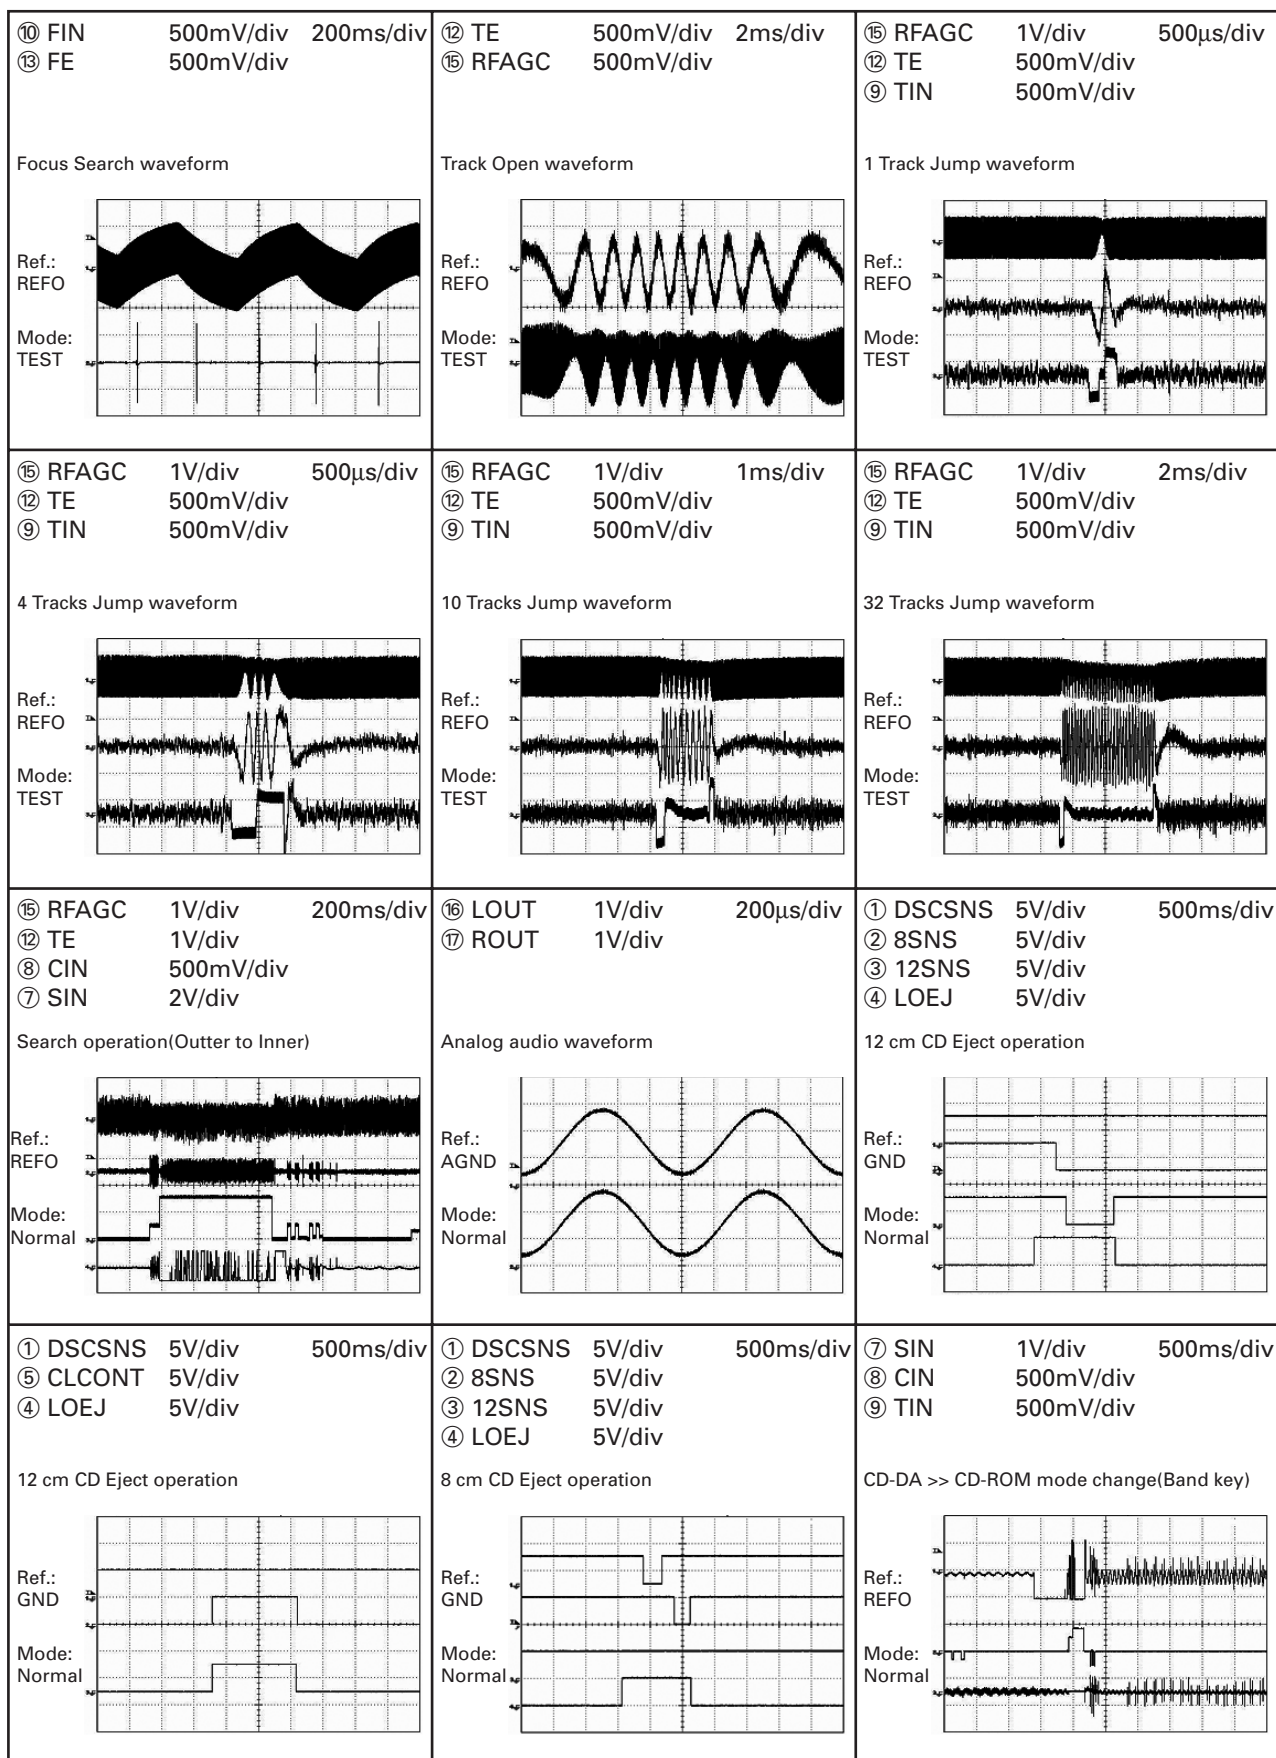

A


⑦ SIN 1V/div 500ms/div  
⑧ CIN 500mV/div  
⑨ TIN 500mV/div

CD-ROM >> CD-DA mode change(Band key)

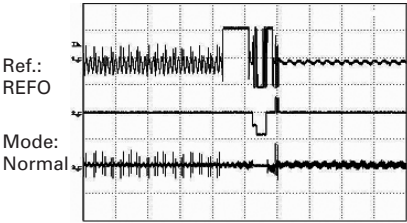

⑮ RFAGC 1V/div 500μs/div  
⑨ TIN 1V/div  
⑫ TE 1V/div  
⑩ FIN 1V/div

Black dot(800μm) during play

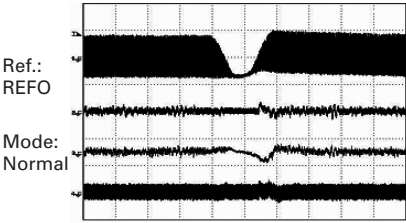

B

C

D

E

F

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

DEH-P5750MP/XM/ES

■

7

■

8


■

## 4




→ CORD ASSY

SIDE A

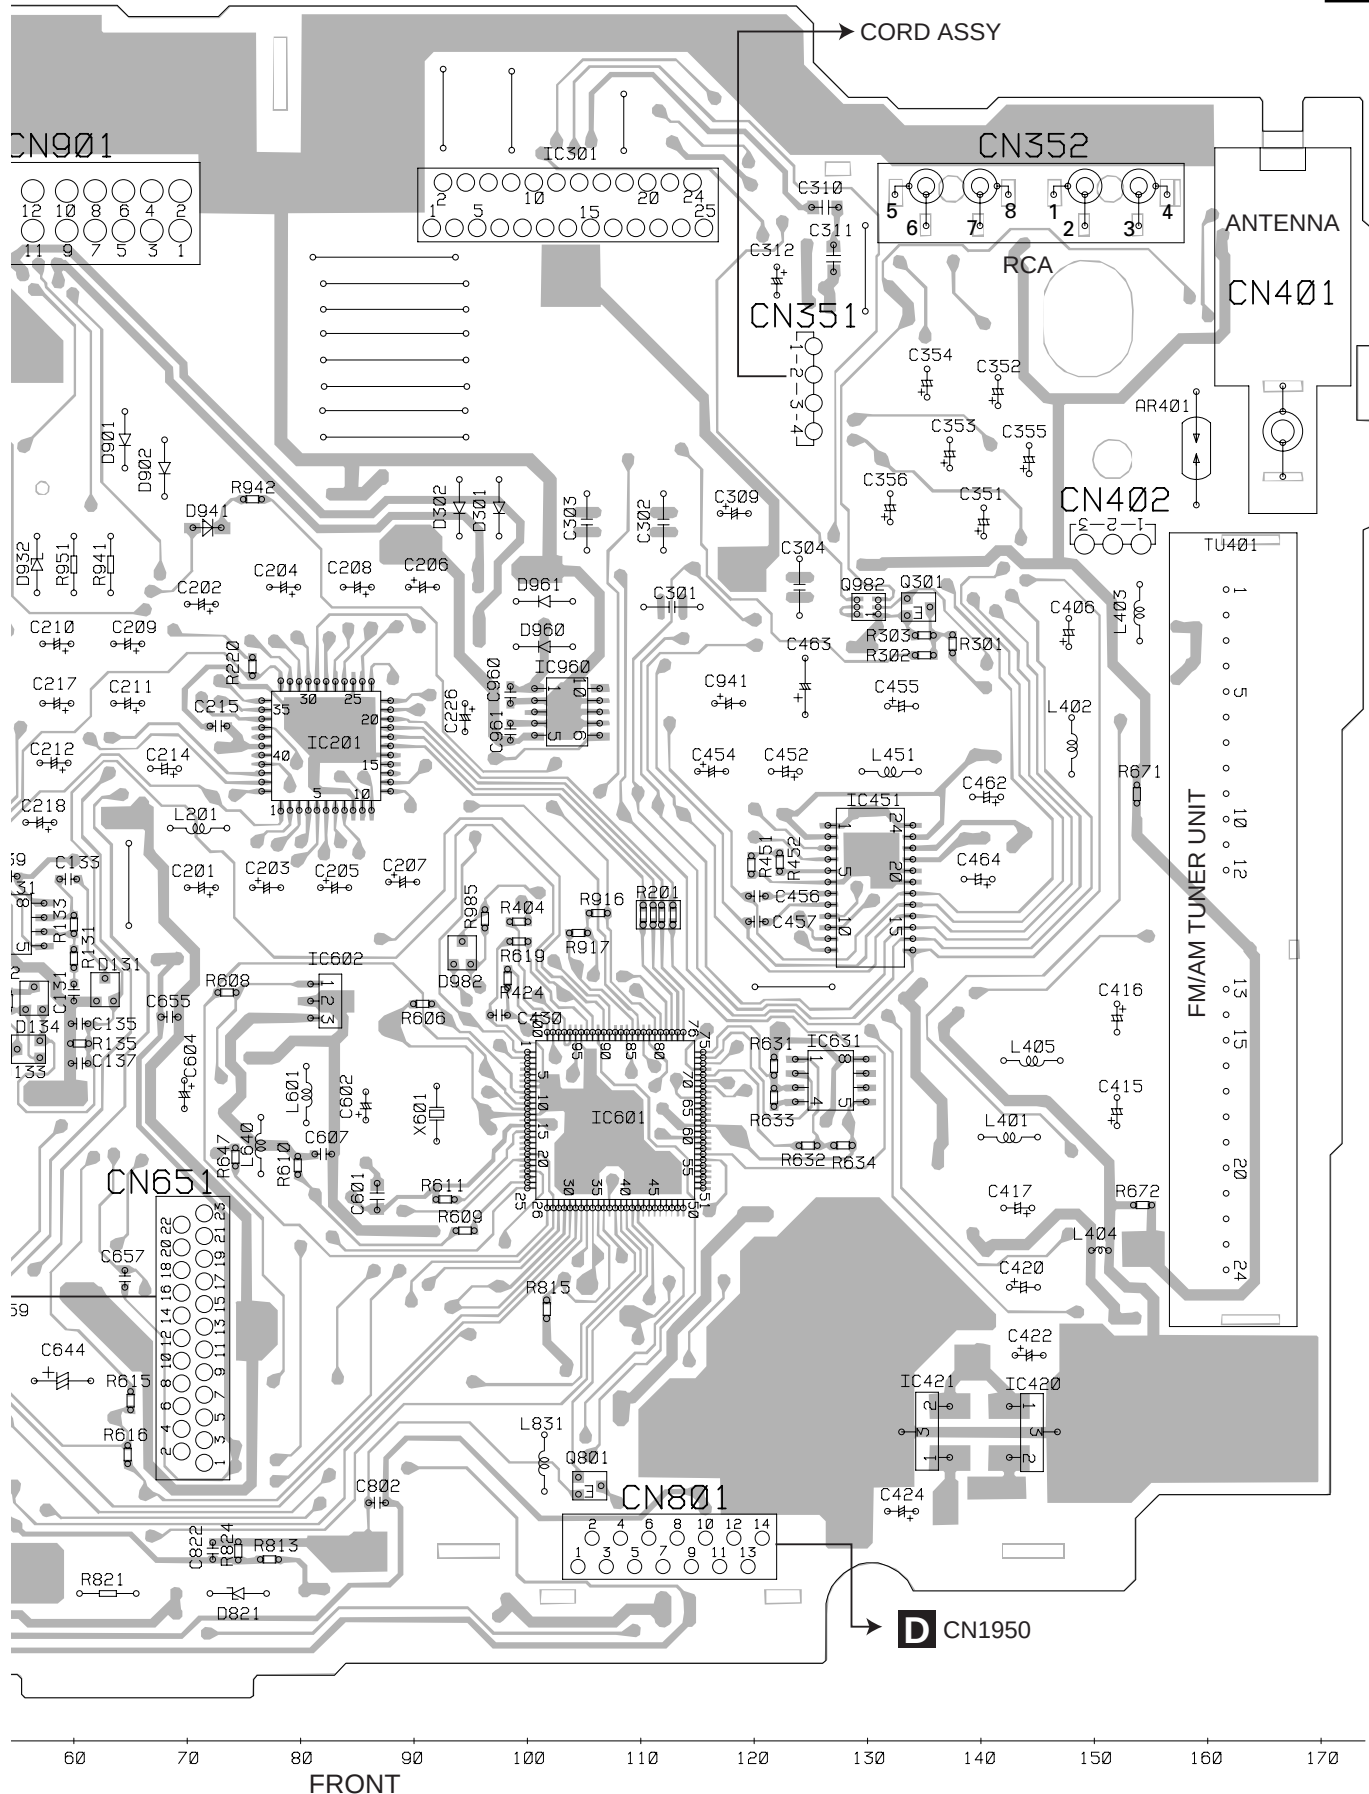

**A**

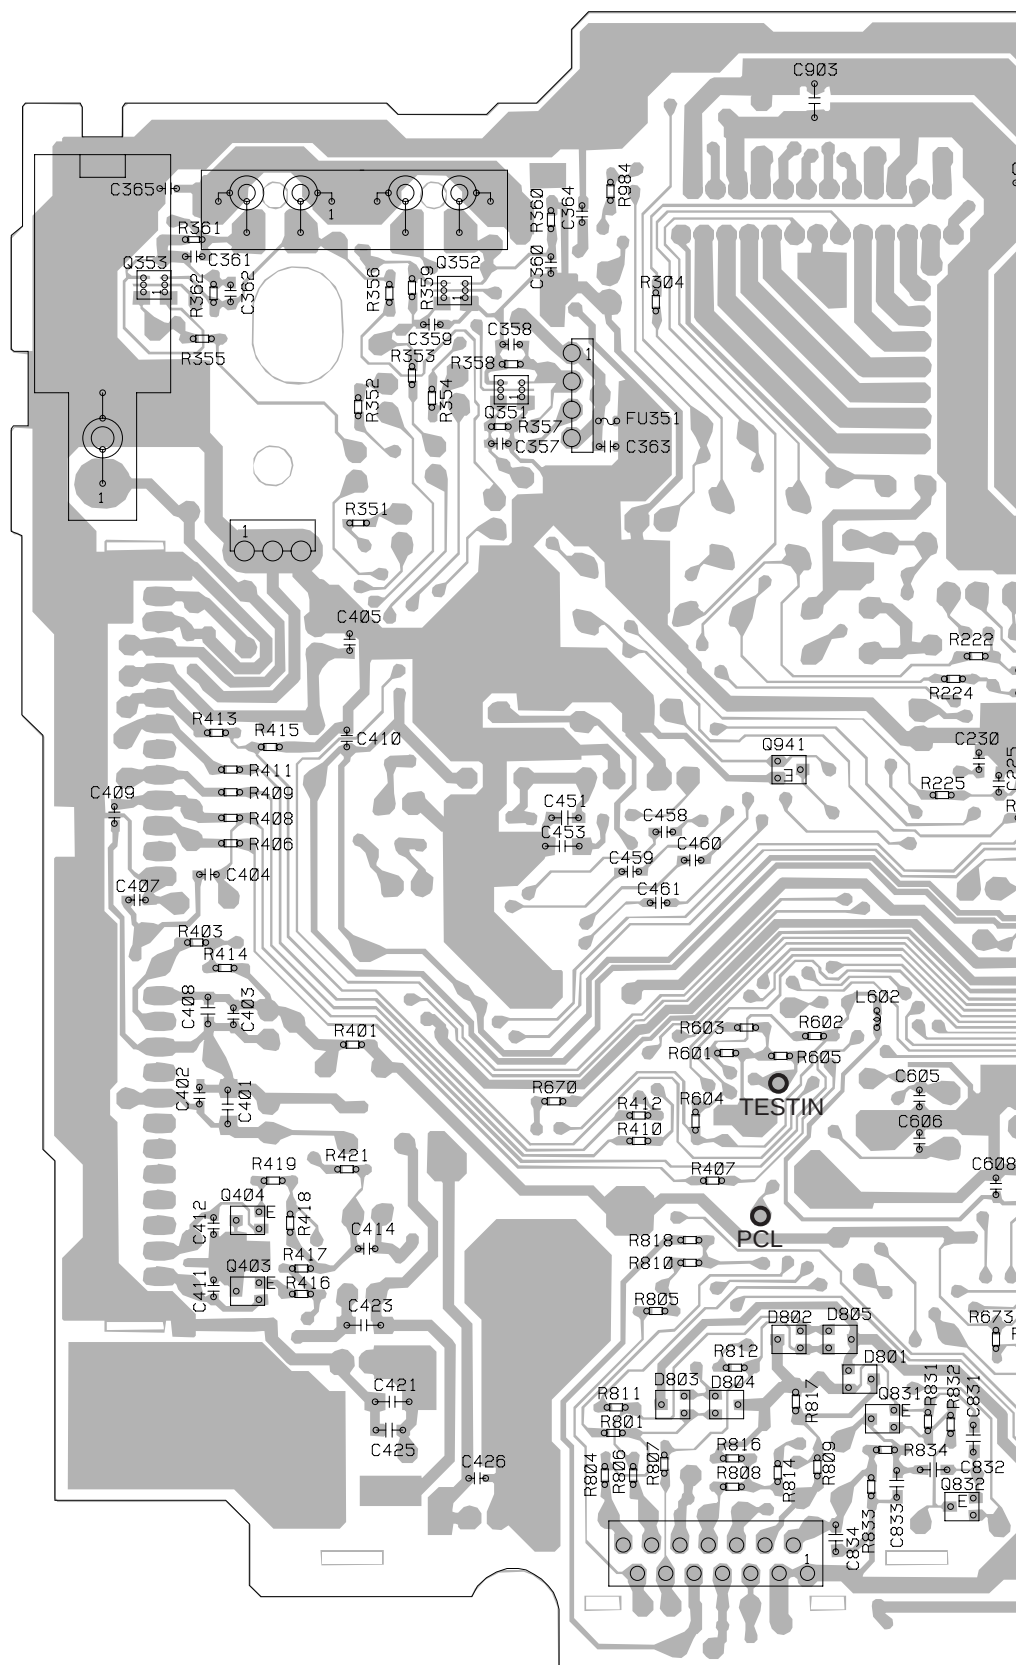

DEH-P5750MP/XM/ES

SIDE B

A


B

C

D

E


F

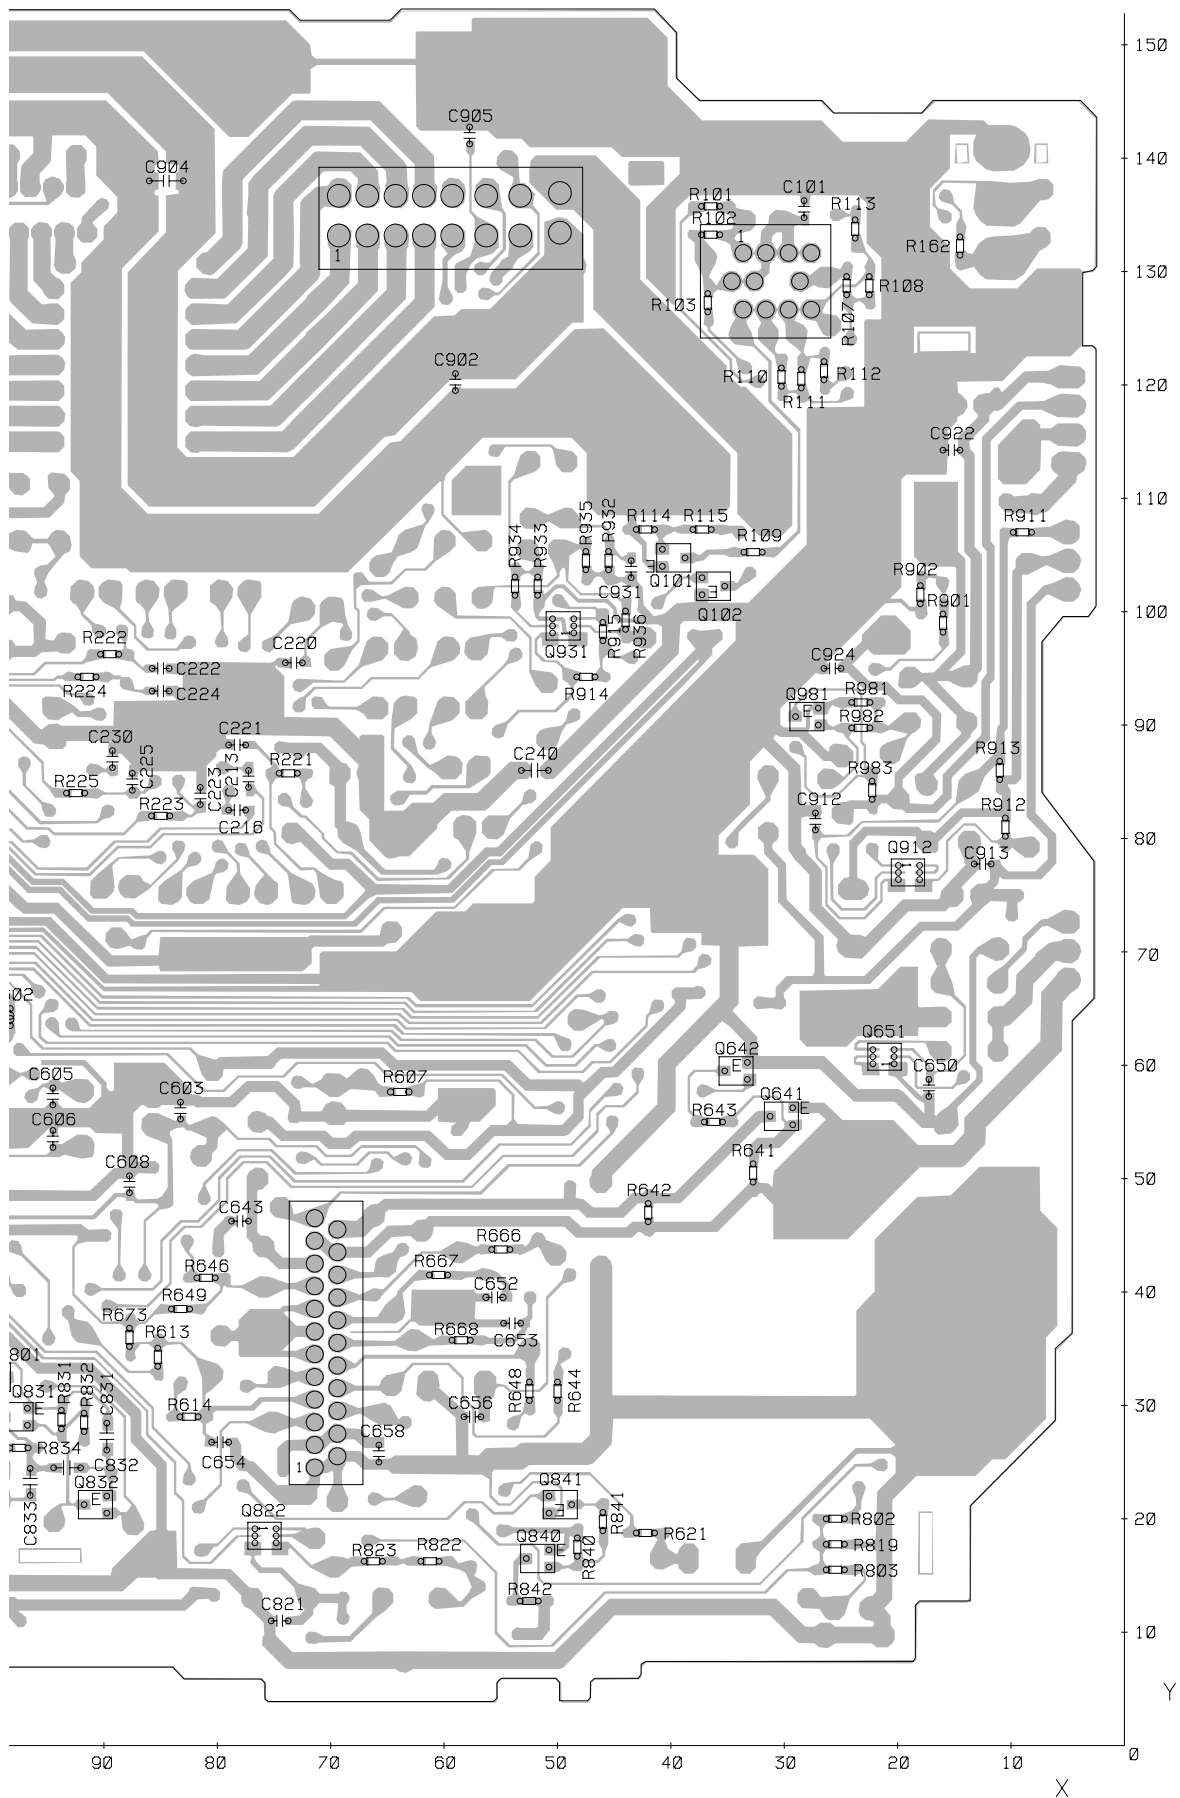

4.2 KEYBOARD UNIT

KEYBOARD UNIT

SIDE A

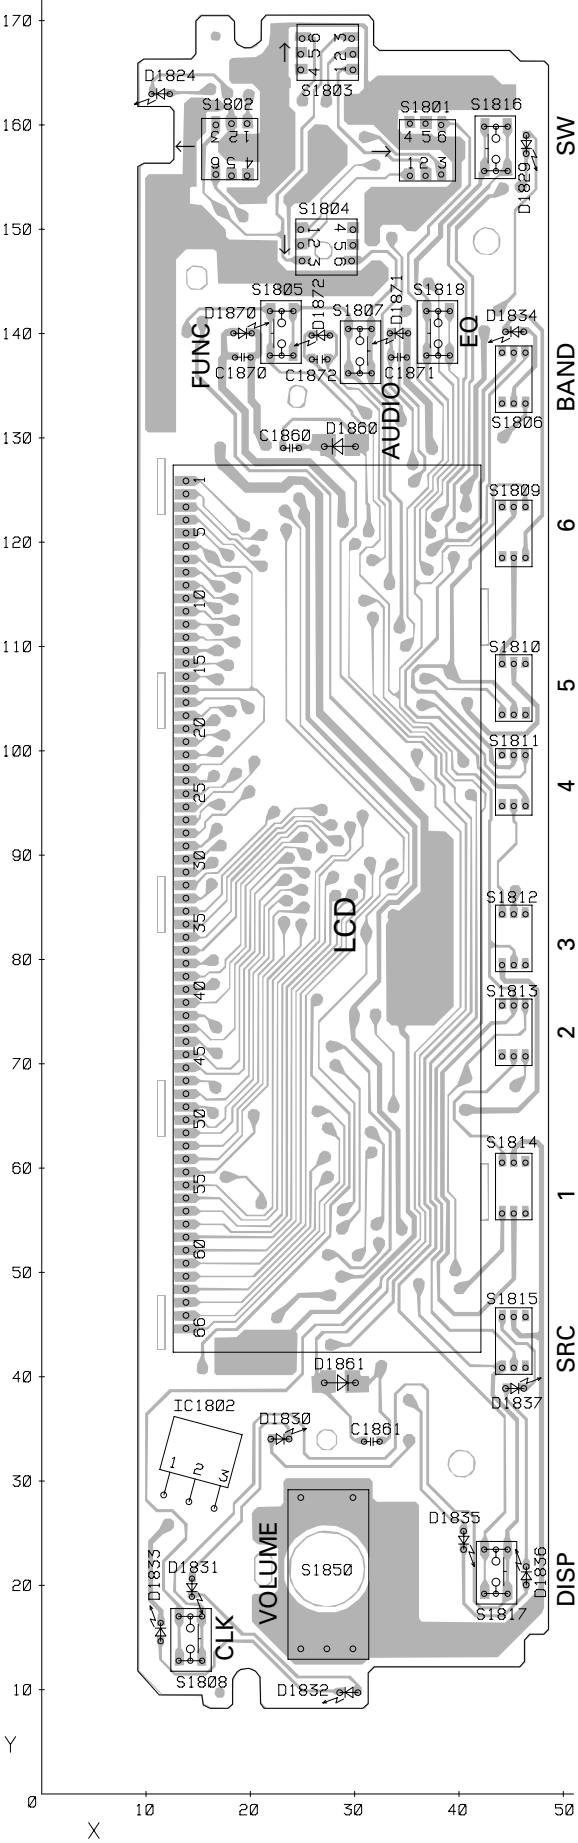

## B KEYBOARD UNIT

## SIDE B

A


B

C

D

E


F

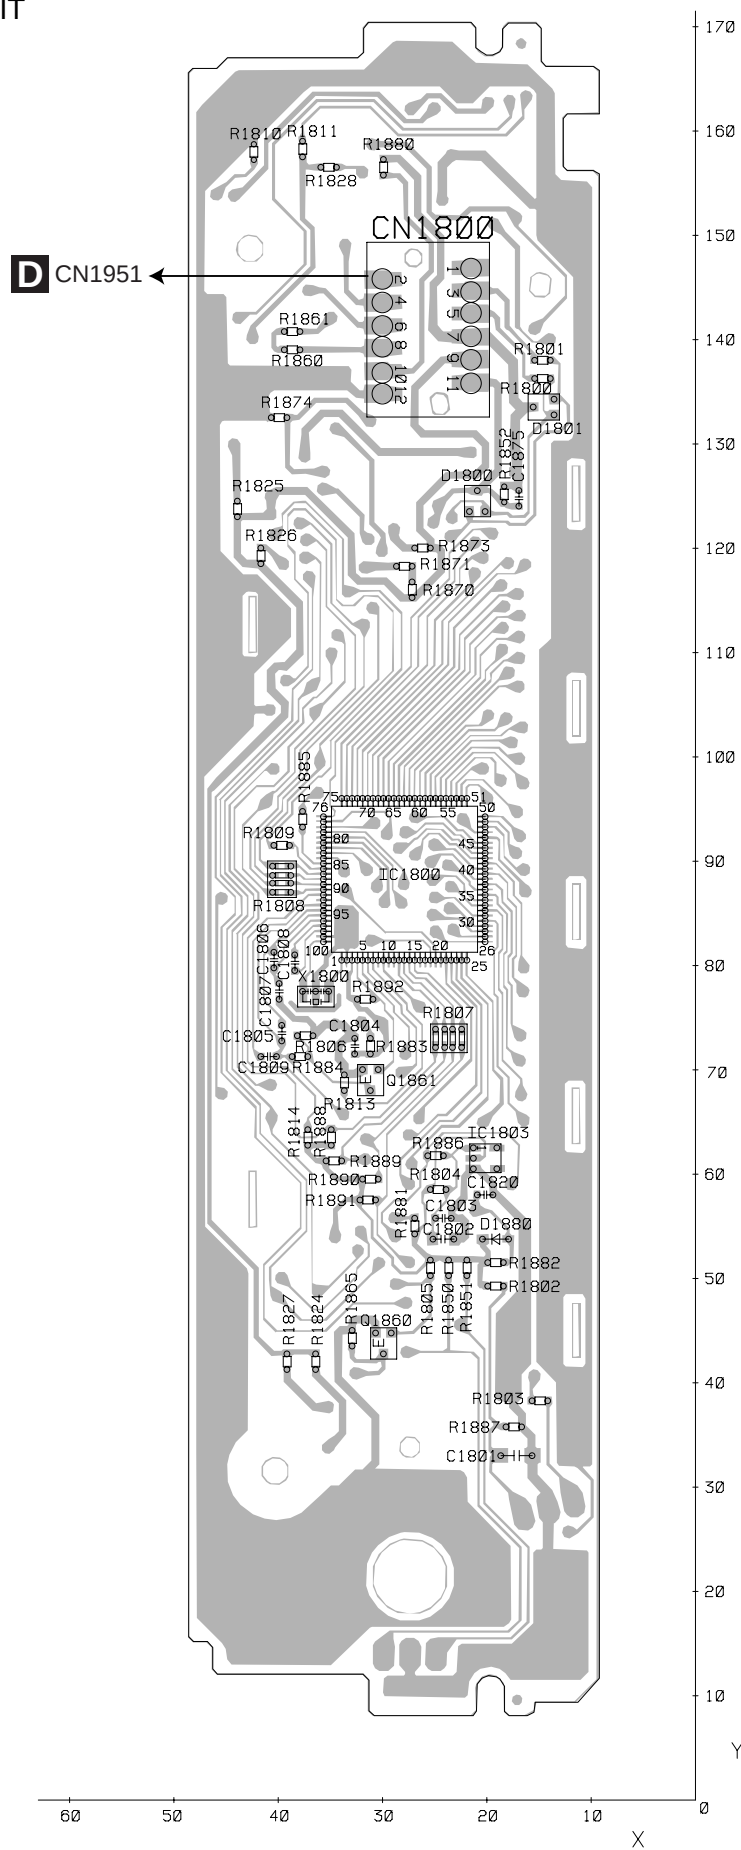

# 4.3 CD MECHAMODULE UNIT


**C** CD CORE UNIT(S10.1)

**SIDE A**

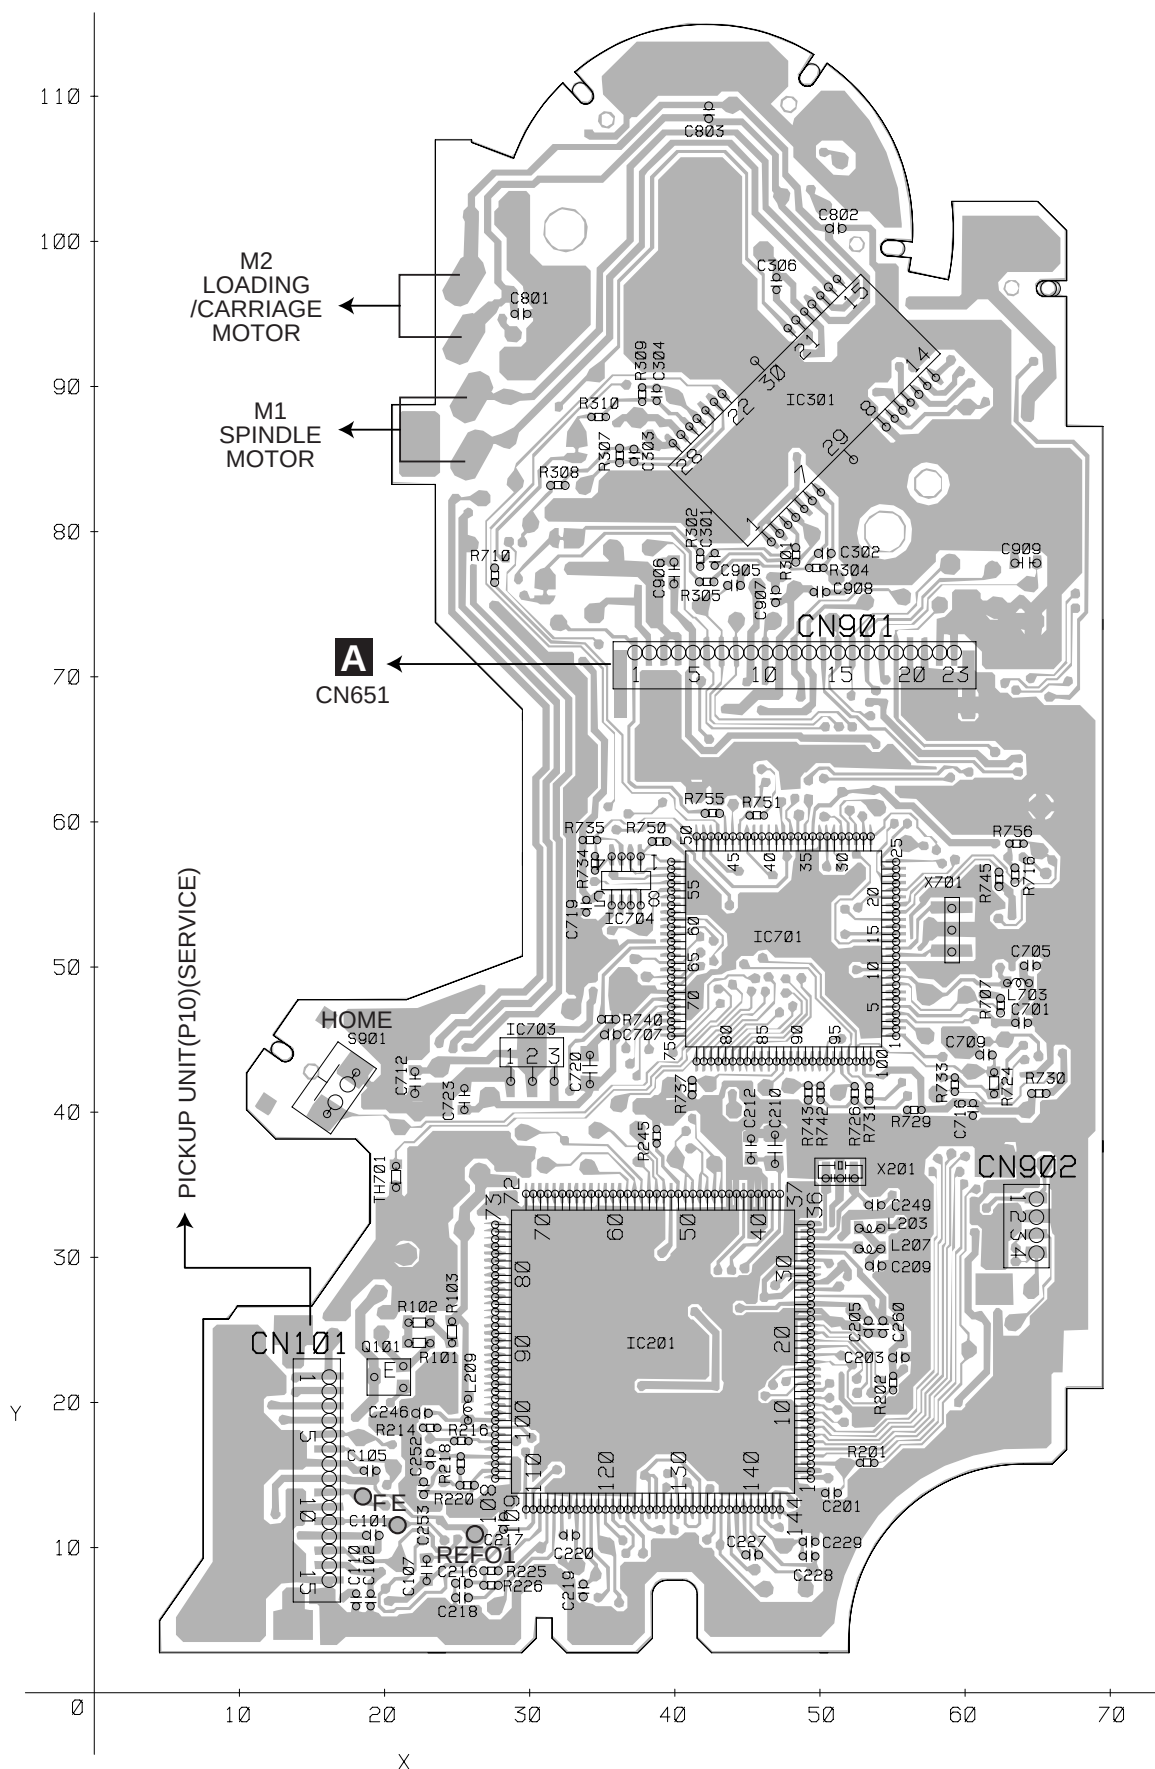

DEH-P5750MP/XM/ES

A

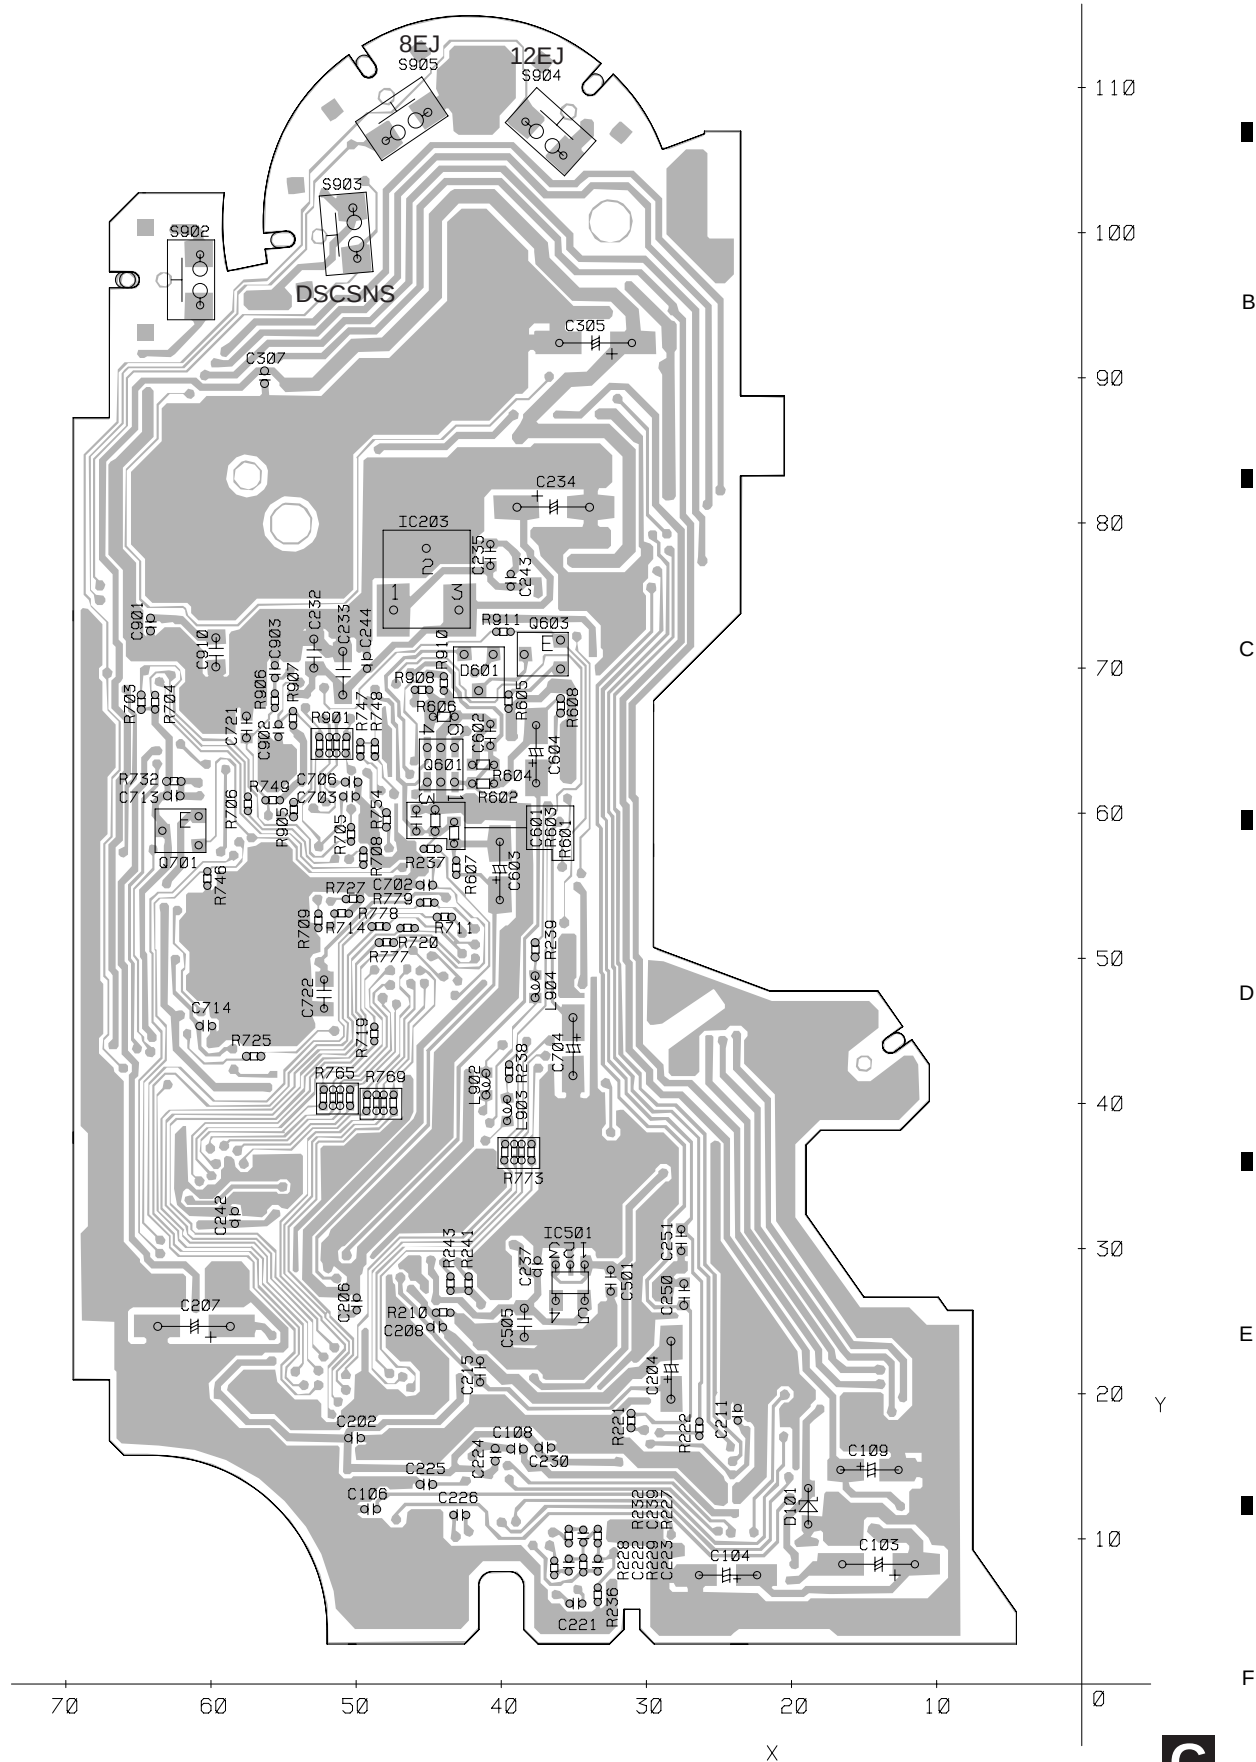


4.4 PANEL UNIT

A

**D** PANEL UNIT

**SIDE A**

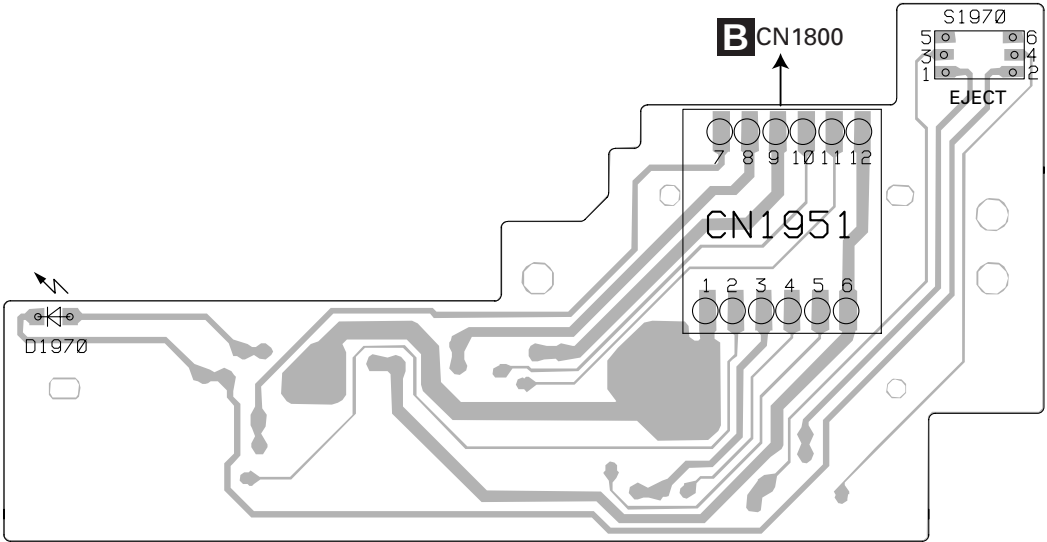


B

C

D

**D** PANEL UNIT

**SIDE B**

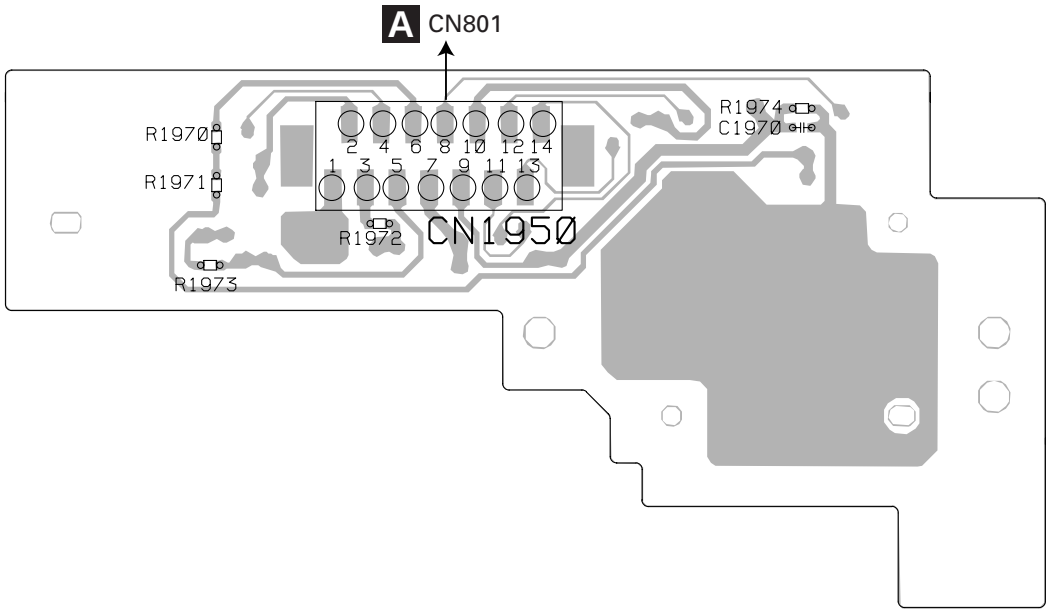

E

F

**D**



# 5. ELECTRICAL PARTS LIST

## NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○ ○ ○ ○ J, RS1/○ ○ S ○ ○ ○ J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

**A**

Unit Number:XWM7091

Unit Name:Tuner Amp Assy

## MISCELLANEOUS

|        |                         |                 |
|--------|-------------------------|-----------------|
| IC 101 | (A,42,87) IC            | HA12240FP       |
| IC 131 | (A,54,72) IC            | NJM4558MD       |
| IC 201 | (A,82,88) IC            | PML009A         |
| IC 301 | (A,92,133) IC           | PAL007A         |
| IC 420 | (A,147,27) IC           | NJM2391DL1-33   |
| IC 421 | (A,133,27) IC           | NJM2391DL1-05   |
| IC 601 | (A,108,55) IC           | PEG063A         |
| IC 602 | (A,82,65) IC            | S-80835CNUA-B8U |
| IC 901 | (A,5,121) IC            | NJM2388F84      |
| Q 101  | (B,40,105) Transistor   | 2SA1576         |
| Q 102  | (B,36,102) Transistor   | DTC114EU        |
| Q 301  | (A,135,100) Transistor  | DTC124EU        |
| Q 351  | (B,131,120) Transistor  | UMH3N           |
| Q 352  | (B,136,129) Transistor  | UMH3N           |
| Q 353  | (B,162,129) Transistor  | UMH3N           |
| Q 403  | (B,154,40) Transistor   | 2SA1576         |
| Q 404  | (B,154,47) Transistor   | 2SA1576         |
| Q 641  | (B,30,56) Transistor    | 2SA1577         |
| Q 642  | (B,34,60) Transistor    | DTC114EU        |
| Q 650  | (A,5,68) Transistor     | 2SD2396         |
| Q 651  | (B,21,61) Transistor    | UMD2N           |
| Q 801  | (A,106,23) Transistor   | DTC143EU        |
| Q 821  | (A,47,25) Transistor    | 2SD1767         |
| Q 822  | (B,76,19) Transistor    | UMD2N           |
| Q 831  | (B,98,29) Transistor    | 2SA1576         |
| Q 832  | (B,91,21) Transistor    | DTC114EU        |
| Q 840  | (B,52,17) Transistor    | 2SA1576         |
| Q 841  | (B,50,21) Transistor    | DTC114EU        |
| Q 911  | (A,5,102) Transistor    | 2SD2396         |
| Q 912  | (B,19,77) Transistor    | UMD2N           |
| Q 931  | (B,50,99) Transistor    | UMX1N           |
| Q 941  | (B,106,86) Transistor   | DTC114EU        |
| Q 951  | (A,45,94) Transistor    | 2SA1576         |
| Q 981  | (B,28,91) Transistor    | 2SC4081         |
| Q 982  | (A,130,100) Transistor  | UMD2N           |
| D 131  | (A,63,66) Diode Network | DA204U          |
| D 132  | (A,46,70) Diode Network | DA204U          |
| D 133  | (A,56,61) Diode         | DAN202U         |

## Circuit Symbol and No.

## Part No.

|                                                                                           |                                |               |
|-------------------------------------------------------------------------------------------|--------------------------------|---------------|
| D 301                                                                                     | (A,98,111) Diode               | S5688G        |
| D 302                                                                                     | (A,94,111) Diode               | S5688G        |
| D 650                                                                                     | (A,11,70) Diode                | HZS7L(C3)     |
| D 801                                                                                     | (B,100,33) Diode Network       | DA204U        |
| D 802                                                                                     | (B,106,36) Diode               | DAN202U       |
| D 803                                                                                     | (B,116,30) Diode               | DAP202U       |
| D 804                                                                                     | (B,112,30) Diode               | DAN202U       |
| D 805                                                                                     | (B,102,36) Diode               | DAP202U       |
| D 821                                                                                     | (A,77,13) Diode                | HZS11L(A1)    |
| D 901                                                                                     | (A,65,117) Diode               | S5688G        |
| D 902                                                                                     | (A,68,115) Diode               | S5688G        |
| D 911                                                                                     | (A,18,85) Diode                | S5688G        |
| D 912                                                                                     | (A,14,80) Diode                | HZS6L(B1)     |
| D 931                                                                                     | (A,53,113) Diode               | HZS7L(A1)     |
| D 932                                                                                     | (A,57,101) Diode               | HZS7L(C3)     |
| D 941                                                                                     | (A,72,107) Diode               | MA111         |
| D 951                                                                                     | (A,41,94) Diode                | DAN202U       |
| D 981                                                                                     | (A,19,90) Diode                | HZS9L(A2)     |
| D 982                                                                                     | (A,94,70) Diode                | DAN202U       |
| L 101                                                                                     | (A,32,81) Inductor             | LAU2R2K       |
| L 201                                                                                     | (A,74,81) Ferri-Inductor       | LAU4R7K       |
| L 401                                                                                     | (A,145,53) Inductor            | LAUR47K       |
| L 402                                                                                     | (A,148,90) Inductor            | LAU1R0K       |
| L 403                                                                                     | (A,154,97) Ferri-Inductor      | LAU4R7K       |
| L 601                                                                                     | (A,81,60) Ferri-Inductor       | LAU100K       |
| L 640                                                                                     | (A,77,50) Ferri-Inductor       | LAU100K       |
| L 831                                                                                     | (A,102,22) Inductor            | LAU2R2K       |
| L 901                                                                                     | (A,31,108) Choke Coil 600μH    | CTH1280       |
| L 951                                                                                     | (A,51,89) Inductor             | LAU2R2K       |
| X 601                                                                                     | (A,92,58) Radiator 10.00MHz    | CSS1599       |
| S 802                                                                                     | (A,21,10) Switch(DETACH SENSE) | CSN1039       |
|  FU351 | (B,122,117) Fuse 3A            | CEK1286       |
| BZ621                                                                                     | (A,36,17) Buzzer               | CPV1062       |
| AR401                                                                                     | (A,159,119) Surge Protector    | DSP-201M-S00B |
|        | Fuse 10A                       | CEK1208       |
|                                                                                           | FM/AM Tuner Unit               | CWE1802       |

## RESISTORS

|       |            |             |
|-------|------------|-------------|
| R 101 | (B,37,136) | RS1/16S101J |
| R 102 | (B,37,133) | RS1/16S620J |
| R 103 | (B,37,127) | RS1/16S101J |
| R 104 | (A,38,83)  | RS1/16S102J |
| R 105 | (A,46,83)  | RS1/16S472J |
| R 106 | (A,47,86)  | RS1/16S472J |
| R 107 | (B,25,129) | RS1/16S821J |
| R 108 | (B,23,129) | RS1/16S223J |

**Circuit Symbol and No.****Part No.****Circuit Symbol and No.****Part No.**

R 109 (B,33,105)  
R 110 (B,30,121)

RS1/16S222J  
RS1/16S821J

R 611 (A,93,48)  
R 613 (B,85,34)

RS1/16S473J  
RS1/16S221J

A R 111 (B,29,121)  
R 112 (B,27,121)  
R 113 (B,24,134)  
R 114 (B,42,107)  
R 115 (B,37,107)

RS1/16S223J  
RS1/16S102J  
RS1/16S102J  
RS1/16S223J  
RS1/16S472J

R 614 (B,83,29)  
R 615 (A,65,30)  
R 616 (A,65,25)  
R 621 (B,42,19)  
R 631 (A,122,60)

RS1/16S682J  
RS1/16S682J  
RS1/16S221J  
RS1/16S102J  
RS1/16S104J

R 131 (A,60,69)  
R 132 (A,49,71)  
R 133 (A,60,72)  
R 134 (A,49,74)  
R 135 (A,61,62)

RS1/16S563J  
RS1/16S563J  
RS1/16S104J  
RS1/16S104J  
RS1/16S474J

R 641 (B,33,51)  
R 643 (B,36,55)  
R 646 (B,81,41)  
R 647 (A,74,52)  
R 648 (B,52,31)

RS1/16S103J  
RS1/16S182J  
RS1/16S102J  
RS1/16S102J  
RS1/16S222J

B R 136 (A,54,65)  
R 201 (A,111,73)  
R 220 (A,76,95)  
R 221 (B,74,86)  
R 222 (B,90,96)

RS1/16S474J  
RAB4C102J  
RS1/16S102J  
RS1/16S102J  
RS1/16S471J

R 649 (B,83,39)  
R 650 (A,11,64)  
R 651 (A,16,61)  
R 652 (A,16,67)  
R 666 (B,55,44)

RS1/16S104J  
RD1/4PU0R0J  
RD1/4PU271J  
RD1/4PU221J  
RS1/16S104J

R 223 (B,85,82)  
R 224 (B,92,94)  
R 225 (B,93,84)  
R 301 (A,138,97)  
R 302 (A,135,96)

RS1/16S471J  
RS1/16S471J  
RS1/16S471J  
RS1/16S103J  
RS1/16S331J

R 667 (B,61,42)  
R 668 (B,59,36)  
R 801 (B,122,28)  
R 802 (B,26,20)  
R 803 (B,26,16)

RS1/16S102J  
RS1/16S102J  
RS1/16S102J  
RS1/16S104J  
RS1/16S102J

C R 303 (A,135,98)  
R 304 (B,118,128)  
R 351 (B,144,108)  
R 352 (B,144,118)  
R 353 (B,139,121)

RS1/16S103J  
RS1/16S153J  
RS1/16S471J  
RS1/16S471J  
RS1/16S471J

R 804 (B,122,24)  
R 805 (B,118,39)  
R 806 (B,120,24)  
R 807 (B,117,25)  
R 808 (B,111,23)

RS1/16S222J  
RS1/16S222J  
RS1/16S222J  
RS1/16S222J  
RS1/16S222J

R 354 (B,138,119)  
R 355 (B,158,124)  
R 356 (B,141,128)  
R 357 (B,132,117)  
R 358 (B,131,122)

RS1/16S471J  
RS1/16S821J  
RS1/16S821J  
RS1/16S223J  
RS1/16S223J

R 809 (B,104,25)  
R 810 (B,115,43)  
R 811 (B,121,30)  
R 812 (B,111,34)  
R 813 (A,77,16)

RS1/16S222J  
RS1/16S102J  
RS1/16S102J  
RS1/16S102J  
RS1/16S1R0J

D R 359 (B,139,129)  
R 360 (B,127,135)  
R 361 (B,159,133)  
R 362 (B,157,128)  
R 401 (B,145,62)

RS1/16S223J  
RS1/16S223J  
RS1/16S223J  
RS1/16S223J  
RS1/16S0R0J

R 814 (B,107,24)  
R 815 (A,102,38)  
R 816 (B,111,26)  
R 817 (B,105,31)  
R 818 (B,115,45)

RS1/16S222J  
RS1/16S473J  
RS1/16S473J  
RS1/16S473J  
RS1/16S104J

R 403 (B,158,71)  
R 404 (A,99,72)  
R 406 (B,155,80)  
R 407 (B,113,50)  
R 408 (B,155,82)

RS1/16S681J  
RS1/16S681J  
RS1/16S681J  
RS1/16S681J  
RS1/16S681J

R 821 (A,61,13)  
R 822 (B,61,16)  
R 823 (B,66,16)  
R 824 (A,75,17)  
R 831 (B,94,29)

RD1/4PU391J  
RS1/16S391J  
RS1/16S391J  
RS1/16S472J  
RS1/16S473J

R 409 (B,155,84)  
R 410 (B,119,54)  
R 411 (B,155,86)  
R 412 (B,119,56)  
R 413 (B,157,90)

RS1/16S681J  
RS1/16S681J  
RS1/16S681J  
RS1/16S681J  
RS1/16S681J

R 832 (B,92,29)  
R 833 (B,99,23)  
R 840 (B,48,18)  
R 841 (B,46,20)  
R 901 (B,16,99)

RS1/16S102J  
RS1/16S222J  
RS1/16S103J  
RS1/16S103J  
RS1/16S102J

R 416 (B,149,40)  
R 417 (B,149,42)  
R 418 (B,150,46)  
R 419 (B,152,50)  
R 421 (B,145,51)

RS1/16S222J  
RS1/16S561J  
RS1/16S561J  
RS1/16S222J  
RS1/16S471J

R 902 (B,18,102)  
R 911 (B,9,107)  
R 912 (B,11,81)  
R 913 (B,11,86)  
R 914 (B,48,94)

RS1/16S103J  
RS1/16S391J  
RS1/16S222J  
RS1/16S223J  
RS1/16S104J

F R 424 (A,98,67)  
R 603 (B,110,64)  
R 605 (B,107,61)  
R 606 (A,91,65)  
R 607 (B,64,58)

RS1/16S471J  
RS1/16S104J  
RS1/16S104J  
RS1/16S104J  
RS1/16S822J

R 915 (B,46,98)  
R 916 (A,106,73)  
R 931 (A,49,108)  
R 932 (B,46,105)  
R 933 (B,52,102)

RS1/16S104J  
RS1/16S104J  
RD1/4PU102J  
RS1/16S472J  
RS1/16S473J

R 608 (A,74,66)  
R 609 (A,95,45)  
R 610 (A,80,51)

RS1/16S102J  
RS1/16S102J  
RS1/16S104J

R 934 (B,54,102)  
R 935 (B,48,105)  
R 936 (B,44,99)

RS1/16S103J  
RS1/16S473J  
RS1/16S104J



**Circuit Symbol and No.****Part No.**

|   |        |                                     |               |
|---|--------|-------------------------------------|---------------|
| Q | 1860   | (B,30,44) Transistor                | DTC123JU      |
| Q | 1861   | (B,31,69) Transistor                | DTC114EU      |
| A | D 1824 | (A,11,163) LED                      | CL-195PG-CD   |
|   | D 1829 | (A,46,158) LED                      | CL-195PG-CD   |
|   | D 1830 | (A,23,34) LED                       | CL-195PG-CD   |
|   | D 1831 | (A,14,20) LED                       | CL-195PG-CD   |
|   | D 1832 | (A,29,10) LED                       | CL-195PG-CD   |
|   | D 1833 | (A,11,16) LED                       | CL-195PG-CD   |
|   | D 1834 | (A,45,140) LED                      | CL-195PG-CD   |
|   | D 1835 | (A,40,24) LED                       | CL-195PG-CD   |
|   | D 1836 | (A,46,21) LED                       | CL-195PG-CD   |
|   | D 1837 | (A,45,39) LED                       | CL-195PG-CD   |
| B | D 1860 | (A,29,129) White LED                | NSCW505C-3388 |
|   | D 1861 | (A,29,40) White LED                 | NSCW505C-3388 |
|   | D 1870 | (A,19,140) LED                      | CL-190UB2-X   |
|   | D 1871 | (A,34,140) LED                      | CL-190UB2-X   |
|   | D 1872 | (A,27,140) LED                      | CL-190UB2-X   |
|   | X 1800 | (B,36,78) Ceramic Resonator 8.18MHz | CSG1107       |
|   | S 1801 | (A,36,158) Switch                   | CSG1107       |
|   | S 1802 | (A,19,158) Switch                   | CSG1107       |
|   | S 1803 | (A,27,166) Switch                   | CSG1107       |
|   | S 1804 | (A,27,149) Switch                   | CSG1107       |
| C | S 1805 | (A,23,140) Push Switch              | CSG1155       |
|   | S 1806 | (A,45,136) Push Switch              | CSG1174       |
|   | S 1807 | (A,31,138) Push Switch              | CSG1155       |
|   | S 1808 | (A,14,15) Push Switch               | CSG1155       |
|   | S 1809 | (A,45,121) Push Switch              | CSG1174       |
|   | S 1810 | (A,45,106) Push Switch              | CSG1174       |
|   | S 1811 | (A,45,97) Push Switch               | CSG1174       |
|   | S 1812 | (A,45,82) Push Switch               | CSG1174       |
|   | S 1813 | (A,45,73) Push Switch               | CSG1174       |
|   | S 1814 | (A,45,58) Push Switch               | CSG1174       |
| D | S 1815 | (A,45,43) Push Switch               | CSG1174       |
|   | S 1816 | (A,44,158) Push Switch              | CSG1155       |
|   | S 1817 | (A,44,21) Push Switch               | CSG1155       |
|   | S 1818 | (A,38,140) Push Switch              | CSG1155       |
|   | S 1850 | (A,27,21) Encoder(VOLUME)           | XSD7001       |

LCD

XAW7013

**RESISTORS**

|   |        |            |              |
|---|--------|------------|--------------|
| R | 1800   | (B,15,136) | RS1/16S222J  |
| R | 1801   | (B,15,138) | RS1/16S222J  |
| R | 1802   | (B,19,49)  | RS1/16S121J  |
| R | 1803   | (B,15,38)  | RS1/16S2R2J  |
| R | 1804   | (B,25,59)  | RS1/16S822J  |
| E | R 1805 | (B,25,51)  | RS1/16S472J  |
|   | R 1806 | (B,37,73)  | RS1/16S1801D |
|   | R 1807 | (B,24,73)  | RAB4C681J    |
|   | R 1808 | (B,40,88)  | RAB4C681J    |
|   | R 1809 | (B,40,92)  | RS1/16S681J  |
|   | R 1810 | (B,42,158) | RS1/16S151J  |
|   | R 1811 | (B,38,158) | RS1/16S181J  |
|   | R 1813 | (B,34,69)  | RS1/16S473J  |
|   | R 1814 | (B,37,64)  | RS1/16S473J  |
|   | R 1824 | (B,36,42)  | RS1/16S560J  |
| F | R 1825 | (B,44,124) | RS1/16S560J  |
|   | R 1826 | (B,42,119) | RS1/16S560J  |
|   | R 1827 | (B,39,42)  | RS1/16S560J  |
|   | R 1828 | (B,35,157) | RS1/16S560J  |

**Circuit Symbol and No.****Part No.**

|   |      |            |              |
|---|------|------------|--------------|
| R | 1850 | (B,24,51)  | RS1/16S103J  |
| R | 1860 | (B,39,139) | RS1/16S470J  |
| R | 1861 | (B,39,141) | RS1/16S820J  |
| R | 1865 | (B,33,44)  | RS1/16S181J  |
| R | 1870 | (B,27,116) | RS1/16S221J  |
| R | 1871 | (B,28,118) | RS1/16S271J  |
| R | 1873 | (B,26,120) | RS1/16S680J  |
| R | 1874 | (B,40,133) | RS1/16S470J  |
| R | 1880 | (B,30,157) | RS1/16S473J  |
| R | 1881 | (B,27,55)  | RS1/16S473J  |
| R | 1883 | (B,31,72)  | RS1/16S3300D |
| R | 1884 | (B,38,71)  | RS1/16S1001D |
| R | 1885 | (B,38,94)  | RS1/16S681J  |
| R | 1886 | (B,25,62)  | RS1/16S102J  |
| R | 1887 | (B,17,36)  | RS1/16S103J  |
| R | 1888 | (B,35,64)  | RS1/16S104J  |
| R | 1889 | (B,35,61)  | RS1/16S104J  |
| R | 1890 | (B,31,60)  | RS1/16S104J  |
| R | 1891 | (B,31,58)  | RS1/16S104J  |
| R | 1892 | (B,32,77)  | RS1/16S472J  |

**CAPACITORS**

|   |      |            |              |
|---|------|------------|--------------|
| C | 1801 | (B,17,33)  | CKSYF106Z10  |
| C | 1802 | (B,24,54)  | CKSQYB225K10 |
| C | 1804 | (B,33,72)  | CKSRYB104K16 |
| C | 1805 | (B,40,74)  | CKSRYB104K16 |
| C | 1806 | (B,40,81)  | CKSRYB104K16 |
| C | 1807 | (B,40,78)  | CKSRYB104K16 |
| C | 1808 | (B,38,80)  | CKSRYB104K16 |
| C | 1809 | (B,41,71)  | CKSRYB104K16 |
| C | 1870 | (A,19,138) | CKSRYF104Z25 |
| C | 1871 | (A,34,138) | CKSRYF104Z25 |
| C | 1872 | (A,27,138) | CKSRYF104Z25 |

**D****Unit Number:CWM8758****Unit Name:Panel Unit****MISCELLANEOUS**

|   |      |                    |          |
|---|------|--------------------|----------|
| D | 1970 | LED                | CL220PGC |
| S | 1970 | Push Switch(EJECT) | CSG1112  |

**RESISTORS**

|   |      |  |             |
|---|------|--|-------------|
| R | 1970 |  | RS1/16S101J |
| R | 1971 |  | RS1/16S101J |
| R | 1972 |  | RS1/16S0R0J |

**CAPACITORS**

|   |      |  |              |
|---|------|--|--------------|
| C | 1970 |  | CKSRYB104K16 |
|---|------|--|--------------|

**C****Unit Number:CWX3096****Unit Name:CD Core Unit(S10.1)****MISCELLANEOUS**

|    |     |              |            |
|----|-----|--------------|------------|
| IC | 201 | (A,39,24) IC | UPD63763GJ |
|----|-----|--------------|------------|

| Circuit Symbol and No. |                                       | Part No.        | Circuit Symbol and No. |                    | Part No.     |
|------------------------|---------------------------------------|-----------------|------------------------|--------------------|--------------|
| IC 203                 | (B,45,78) IC                          | NJM2885DL1-33   | R 726                  | (A,52,41)          | RS1/16SS103J |
| IC 301                 | (A,49,88) IC                          | BA5835FP        | R 727                  | (B,50,54)          | RS1/16SS473J |
| IC 701                 | (A,48,51) IC                          | PE5454A         | R 729                  | (A,57,40)          | RS1/16SS223J |
| IC 703                 | (A,30,44) IC                          | S-812C33AUA-C2N | R 730                  | (A,65,41)          | RS1/16SS473J |
| Q 101                  | (A,20,22) Transistor                  | 2SA1577         | R 731                  | (A,53,41)          | RS1/16SS104J |
| Q 701                  | (B,62,59) Transistor                  | UN2111          | R 737                  | (A,41,42)          | RS1/16SS104J |
| L 203                  | (A,53,32) Inductor                    | CTF1389         | R 740                  | (A,35,46)          | RS1/16SS473J |
| L 207                  | (A,53,31) Inductor                    | CTF1389         | R 742                  | (A,50,41)          | RS1/16SS104J |
| L 209                  | (A,26,20) Inductor                    | CTF1389         | R 746                  | (B,60,56)          | RS1/16SS104J |
| L 703                  | (A,64,49) Inductor                    | CTF1389         | R 750                  | (A,39,59)          | RS1/16SS473J |
| X 201                  | (A,51,35) Ceramic Resonator 16.934MHz | CSS1603         | R 754                  | (B,48,60)          | RS1/16SS102J |
| X 701                  | (A,59,53) Ceramic Resonator 4.00MHz   | CSS1652         | R 755                  | (A,43,61)          | RS1/16SS102J |
| S 901                  | (A,15,43) Switch(HOME)                | CSN1067         | R 765                  | (B,51,40)          | RAB4CQ221J   |
| S 903                  | (B,53,100) Switch(DSCSNS)             | CSN1068         | R 769                  | (B,48,40)          | RAB4CQ221J   |
| S 904                  | (B,35,108) Switch(12EJ)               | CSN1067         | R 773                  | (B,39,37)          | RAB4CQ221J   |
| S 905                  | (B,48,109) Switch(8EJ)                | CSN1067         | R 777                  | (B,48,51)          | RS1/16SS221J |
| <b>RESISTORS</b>       |                                       |                 | R 778                  | (B,48,52)          | RS1/16SS221J |
| R 101                  | (A,22,24)                             | RS1/10SR2R4J    | R 779                  | (B,45,54)          | RS1/16SS221J |
| R 102                  | (A,22,26)                             | RS1/10SR2R4J    | R 901                  | (B,52,65)          | RAB4CQ221J   |
| R 103                  | (A,25,25)                             | RS1/10SR2R7J    | R 905                  | (B,54,60)          | RS1/16SS221J |
| R 201                  | (A,53,16)                             | RS1/16SS102J    | R 906                  | (B,56,68)          | RS1/16SS221J |
| R 202                  | (A,55,21)                             | RS1/16SS333J    | R 908                  | (B,45,69)          | RS1/16SS0R0J |
| R 221                  | (B,31,18)                             | RS1/16SS103J    | R 910                  | (B,44,69)          | RS1/16SS0R0J |
| R 222                  | (B,26,18)                             | RS1/16SS103J    | R 911                  | (B,40,73)          | RS1/16SS102J |
| R 225                  | (A,27,8)                              | RS1/16SS103J    | <b>CAPACITORS</b>      |                    |              |
| R 226                  | (A,27,7)                              | RS1/16SS393J    | C 103                  | (B,14,8) 100μF/16V | CCH1504      |
| R 227                  | (B,33,10)                             | RS1/16SS562J    | C 105                  | (A,19,15)          | CKSSYB104K10 |
| R 228                  | (B,36,8)                              | RS1/16SS122J    | C 108                  | (B,39,16)          | CKSSYB104K10 |
| R 229                  | (B,34,8)                              | RS1/16SS472J    | C 110                  | (A,18,6)           | CKSSYB104K10 |
| R 232                  | (B,35,10)                             | RS1/16SS122J    | C 201                  | (A,51,14)          | CKSSYB102K50 |
| R 241                  | (B,42,28)                             | RS1/16SS333J    | C 202                  | (B,50,17)          | CKSSYB104K10 |
| R 243                  | (B,44,28)                             | RS1/16SS333J    | C 203                  | (A,55,23)          | CKSSYB104K10 |
| R 245                  | (A,39,38)                             | RS1/16SS333J    | C 204                  | (B,28,22)          | CEVW220M6R3  |
| R 301                  | (A,48,78)                             | RS1/16SS183J    | C 205                  | (A,53,25)          | CKSSYB104K10 |
| R 302                  | (A,42,78)                             | RS1/16SS822J    | C 208                  | (B,44,25)          | CKSSYB104K10 |
| R 304                  | (A,50,78)                             | RS1/16SS183J    | C 209                  | (A,54,29)          | CKSSYB104K10 |
| R 305                  | (A,42,77)                             | RS1/16SS822J    | C 212                  | (A,45,37)          | CKSRYB105K10 |
| R 307                  | (A,36,85)                             | RS1/16SS183J    | C 216                  | (A,25,8)           | CKSSYB332K50 |
| R 308                  | (A,32,83)                             | RS1/16SS183J    | C 217                  | (A,28,12)          | CKSSYB104K10 |
| R 309                  | (A,38,89)                             | RS1/16SS183J    | C 218                  | (A,25,7)           | CKSSYB473K10 |
| R 310                  | (A,35,88)                             | RS1/16SS183J    | C 219                  | (A,34,7)           | CKSSYB104K10 |
| R 601                  | (B,43,59)                             | RS1/16S101J     | C 220                  | (A,33,11)          | CKSSYB182K50 |
| R 602                  | (B,41,62)                             | RS1/16S101J     | C 221                  | (B,35,6)           | CKSSYB104K10 |
| R 606                  | (B,44,67)                             | RS1/16S0R0J     | C 222                  | (B,35,8)           | CCSSCH560J50 |
| R 607                  | (B,43,56)                             | RS1/16SS0R0J    | C 223                  | (B,33,8)           | CCSSCH4R0C50 |
| R 608                  | (B,36,67)                             | RS1/16SS0R0J    | C 224                  | (B,40,16)          | CKSSYB104K10 |
| R 705                  | (B,50,59)                             | RS1/16SS221J    | C 225                  | (B,45,14)          | CKSSYB103K16 |
| R 706                  | (B,57,61)                             | RS1/16SS221J    | C 226                  | (B,43,12)          | CCSSCH680J50 |
| R 707                  | (A,62,47)                             | RS1/16SS473J    | C 227                  | (A,45,10)          | CCSSCH470J50 |
| R 708                  | (B,50,57)                             | RS1/16SS221J    | C 228                  | (A,49,9)           | CKSSYB103K16 |
| R 710                  | (A,28,77)                             | RS1/16SS102J    | C 234                  | (B,36,81)          | CEVW221M4    |
| R 711                  | (B,44,53)                             | RS1/16SS221J    | C 237                  | (B,38,29)          | CKSSYB104K10 |
| R 714                  | (B,51,53)                             | RS1/16SS473J    | C 239                  | (B,34,10)          | CCSSCH220J50 |
| R 716                  | (A,63,56)                             | RS1/16SS472J    | C 242                  | (B,58,32)          | CKSSYB104K10 |
| R 719                  | (B,49,45)                             | RS1/16SS221J    | C 243                  | (B,39,76)          | CKSSYB104K10 |
| R 720                  | (B,46,52)                             | RS1/16SS471J    | C 244                  | (B,49,70)          | CKSSYB104K10 |
| R 724                  | (A,62,42)                             | RS1/16S473J     | C 246                  | (A,23,19)          | CKSSYB104K10 |
| R 725                  | (B,57,43)                             | RS1/16SS222J    | C 251                  | (B,28,31)          | CKSRYB102K50 |
|                        |                                       |                 | C 260                  | (A,54,25)          | CKSSYB104K10 |

Circuit Symbol and No.

Part No.

A

|       |           |              |
|-------|-----------|--------------|
| C 301 | (A,43,78) | CKSSYB221K50 |
| C 302 | (A,50,79) | CKSSYB221K50 |
| C 303 | (A,37,85) | CKSSYB472K25 |
| C 304 | (A,39,89) | CKSSYB103K16 |
| C 305 | (B,34,92) | CEVW101M16   |
| C 307 | (B,56,90) | CKSSYB104K10 |

B

|       |           |               |
|-------|-----------|---------------|
| C 601 | (B,46,60) | CCSRCH102J50  |
| C 602 | (B,41,65) | CCSRCH102J50  |
| C 701 | (A,64,46) | CKSSYB104K10  |
| C 703 | (B,50,61) | CKSSYB103K16  |
| C 706 | (B,50,62) | CKSSYB104K10  |
| C 707 | (A,36,45) | CKSSYB104K10  |
| C 712 | (A,22,42) | CKSRYB224K16  |
| C 714 | (B,60,45) | CKSSYB104K10  |
| C 716 | (A,61,40) | CKSSYB103K16  |
| C 722 | (B,52,48) | CKSQYB475K6R3 |

|       |           |              |
|-------|-----------|--------------|
| C 723 | (A,26,41) | CKSRYB105K10 |
| C 903 | (B,56,70) | CKSSYB471K50 |
| C 906 | (A,40,77) | CKSRYB224K16 |
| C 907 | (A,47,76) | CKSSYB103K16 |
| C 910 | (B,60,71) | CKSQYB225K10 |

Miscellaneous Parts List

C

|     |                              |         |
|-----|------------------------------|---------|
|     | Pickup Unit(P10)(Service)    | CXX1641 |
| M 1 | Motor Unit(SPINDLE)          | CXC4440 |
| M 2 | Motor Unit(LOADING/CARRIAGE) | CXB8933 |

D

E

F

## 6. ADJUSTMENT

### 6.1 CD ADJUSTMENT

#### 1) Cautions on adjustments

- In this product the single voltage (3.3V) is used for the regulator. The reference voltage is the REFO1 (1.65V) instead of the GND.

If you should mistakenly short the REFO1 with the GND during adjustment, accurate voltage will not be obtained, and the servo's misoperation will apply excessive shock to the pickup. To avoid such problems:

- a. Do not mix up the REFO1 with the GND when connecting the (-) probe of measuring instruments. Especially on an oscilloscope, avoid connecting the (-) probe for CH1 to the GND.

- b. In many cases, measuring instruments have the same potential as that for the (-) probe. Be sure to set the measuring instruments to the floating state.

- c. If you have mistakenly connected the REFO1 to the GND, turn off the regulator or the power immediately.

- Before mounting and removing filters or leads for adjustment, be sure to turn off the regulator.

- For stable circuit operation, keep the mechanism operating for about one minute or more after the regulator is turned on.

- In the test mode, any software protections will not work. Avoid applying any mechanical or electrical shock to the mechanism during adjustment.

- The RFI and RFO signals with a wide frequency range are easy to oscillate. When observing the signals, insert a resistor of 1k ohms in series.

- The load and eject operation is not guaranteed with the mechanism upside down. If the mechanism is blocked due to mistaken eject operation, reset the product or turn off and on the ACC to restore it.

#### 2) Test mode

This mode is used to adjust the CD mechanism module.

- To enter the test mode.

While pressing the 4 and 6 keys at the same time, reset.

- To exit from the test mode.

Turn off the ACC and back up.

#### Notes:

- a. During ejection, do not press any other keys than the EJECT key until the loaded disc is ejected.

- b. If you have pressed the (→) key or (←) key during focus search, turn off the power immediately to protect the actuator from damage caused by the lens stuck.

- c. For the TR jump modes except 100TR, the track jump operation will continue even if the key is released.

- d. For the CRG move and 100TR jump modes, the tracking loop will be closed at the same time when the key is released.

- e. When the power is turned off and on, the jump mode is reset to the single TR (91), the RF amp gain is set to 0dB, and the auto-adjustment values are reset to the default settings.


# Flow Chart

A

|          |                                    |
|----------|------------------------------------|
| [KEY]    | [4]+[6]+Reset or<br>[4]+[6]+BU+ACC |
| Contents | Test Mode In                       |
| Display  |                                    |

|                |
|----------------|
| [CD]or[SOURCE] |
| Source On      |
| TRK MIN SEC    |

B

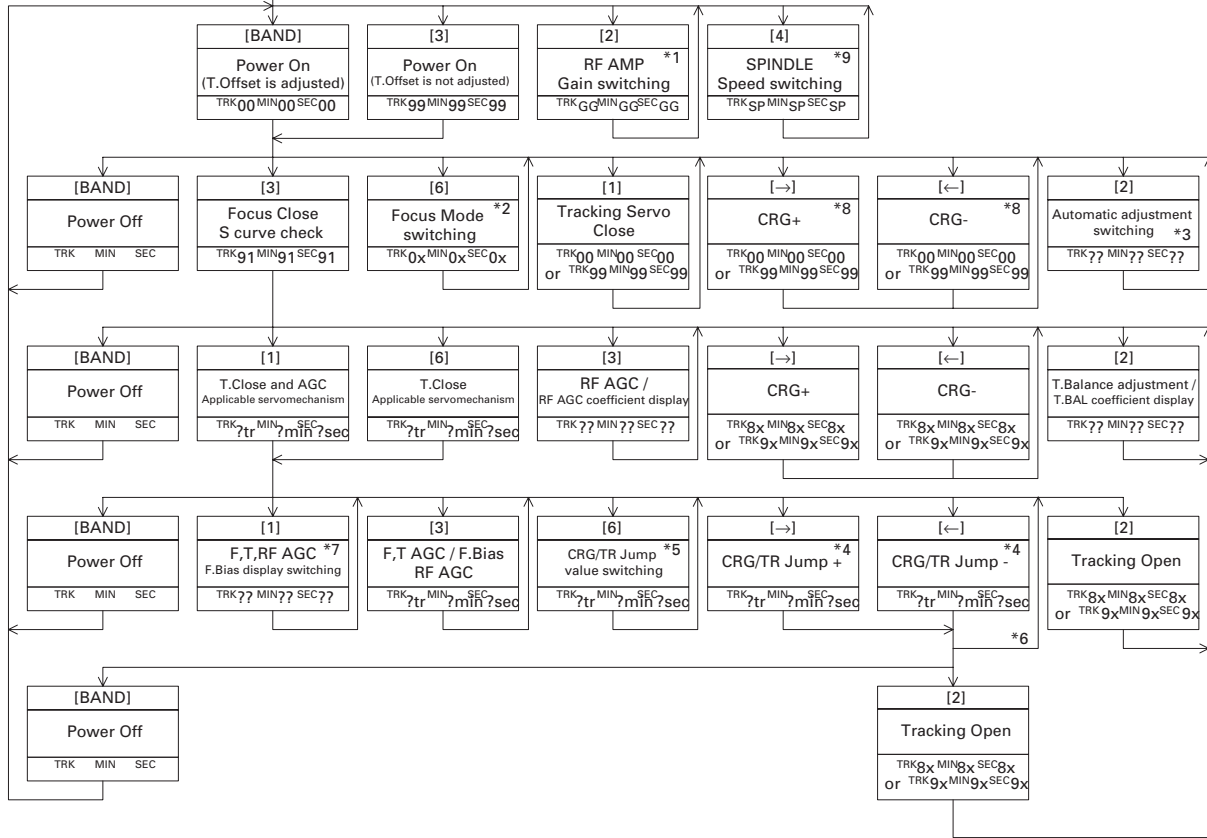

C

D

E

- \*1) TYP → -6dB → -12dB  
TRK MIN SEC TRK 06 MIN 06 SEC 06 TRK 12 MIN 12 SEC 12
- \*2) Focus Close → S.Curve check setting → F EQ measurement setting  
TRK 00 MIN 00 SEC 00 TRK 01 MIN 01 SEC 01 TRK 02 MIN 02 SEC 02  
(TRK 99 MIN 99 SEC 99)
- \*3) F.Offset Display → T.Offset Display → Switch to the order of the original display
- \*4) 1TR / 32TR / 100TR
- \*5) Single TR → 32TR → 100TR → CRG Move  
9x(8x) : 91(81) 92(82) 93(83) 94(84)
- \*6) Only at the time of CRG move, 100TR jump
- \*7) TRK/MIN/SEC → F.AGC → T.AGC → F Bias → RF AGC
- \*8) CRG motor voltage = 2[V]
- \*9) Applicability : A, B, C, D, E, F  
TYP(1X) → 2X → 1X  
TRK MIN SEC TRK 22 MIN 22 SEC 22 TRK 11 MIN 11 SEC 11
- As for the double speed (2x), audio output cannot be supported

F

- Applicability : G  
TYP(2X) → 1X → 2X  
TRK MIN SEC TRK 11 MIN 11 SEC 11 TRK 22 MIN 22 SEC 22

| [Key]  | Operation                                                                                        |
|--------|--------------------------------------------------------------------------------------------------|
|        | Test Mode                                                                                        |
| [BAND] | Power On / Off                                                                                   |
| [→]    | CRG + / TR Jump +<br>(Direction of the external surface)                                         |
| [←]    | CRG - / TR Jump -<br>(Direction of the internal surface)                                         |
| [1]    | U.CLS and AGC and Applicable servomechanism /<br>AGC, AGC display setting                        |
| [2]    | RF Gain switching / Offset adjustment display /<br>T.Balance adjustment / T.Open                 |
| [3]    | Close, S.Curve / Rough Servo and RF AGC /<br>F, T, RF AGC                                        |
| [4]    | SPDL 1X / 2X switching<br>As for the double speed (2x), audio output cannot be supported.        |
| [5]    | Error Rate measurement 1st - ON : ERR count Beginning (30Sec)<br>2nd - ON : BER display data [%] |
| [6]    | F.Mode switching / Tracking Close /<br>CRG • TR Jump switching                                   |



## 6.2 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT



### • Note :

The grating angle of the PU unit cannot be adjusted after the PU unit is changed. The PU unit in the CD mechanism module is adjusted on the production line to match the CD mechanism module and is thus the best adjusted PU unit for the CD mechanism module. Changing the PU unit is thus best considered as a last resort. However, if the PU unit must be changed, the grating should be checked using the procedure below.

### • Purpose :


To check that the grating is within an acceptable range when the PU unit is changed.

### • Symptoms of Mal-adjustment :

If the grating is off by a large amount symptoms such as being unable to close tracking, being unable to perform track search operations, or taking a long time for track searching.

### • Method :

- |                       |                            |
|-----------------------|----------------------------|
| • Measuring Equipment | • Oscilloscope, Two L.P.F. |
| • Measuring Points    | • E, F, REFO1              |
| • Disc                | • TCD-782                  |
| • Mode                | • TEST MODE                |

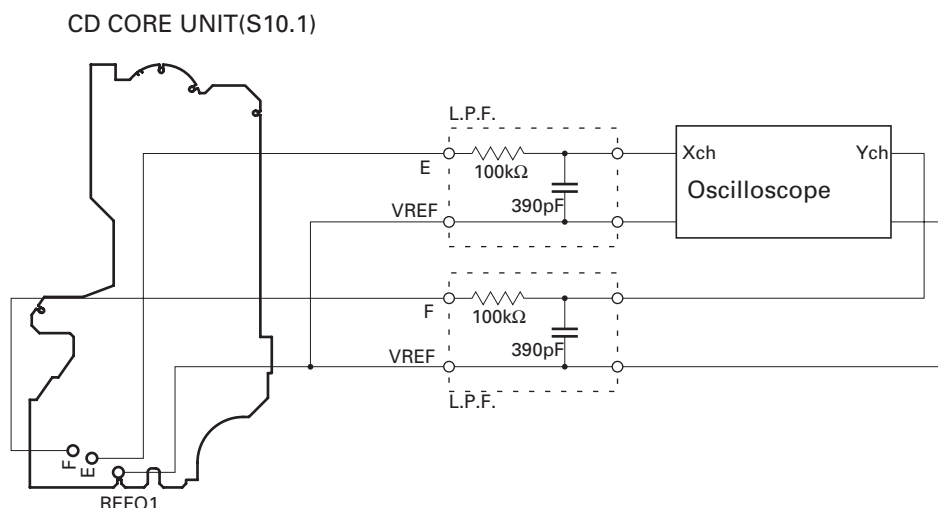

### • Checking Procedure

1. In test mode, load the disc and switch the 3V regulator on.
2. Using the → and ← buttons, move the PU unit to the innermost track.
3. Press key 3 to close focus, the display should read "91". Press key 2 to implement the tracking balance adjustment the display should now read "81". Press key 3. The display will change, returning to "81" on the fourth press.
4. As shown in the diagram above, monitor the LPF outputs using the oscilloscope and check that the phase difference is within  $75^\circ$ . Refer to the photographs supplied to determine the phase angle.
5. If the phase difference is determined to be greater than  $75^\circ$  try changing the PU unit to see if there is any improvement. If, after trying this a number of times, the grating angle does not become less than  $75^\circ$  then the mechanism should be judged to be at fault.

### • Note

Because of eccentricity in the disc and a slight misalignment of the clamping center the grating waveform may be seen to "wobble" ( the phase difference changes as the disc rotates). The angle specified above indicates the average angle.

### • Hint

Reloading the disc changes the clamp position and may decrease the "wobble".


**Grating waveform**

Ech → Xch 20mV/div, AC

Fch → Ych 20mV/div, AC


A

0°

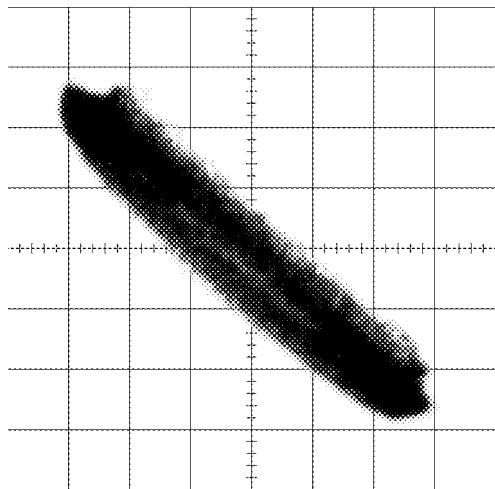


B

30°

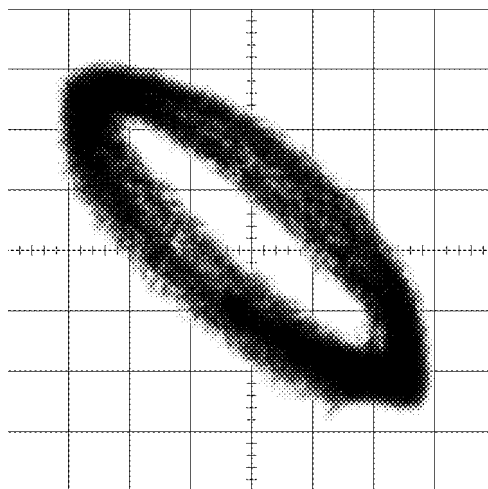


C

45°

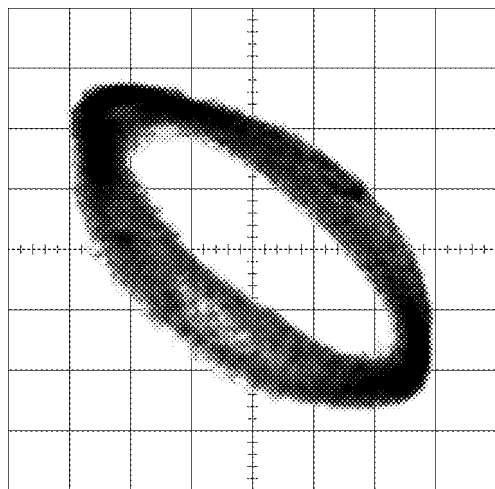


D

60°

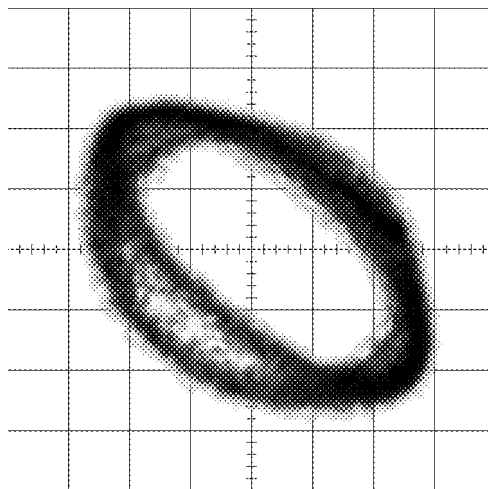


E

75°

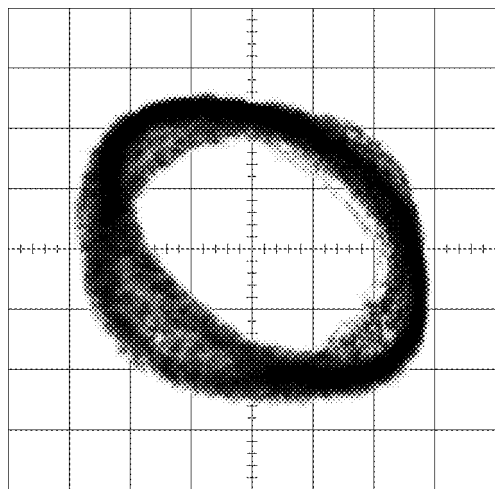

F

90°

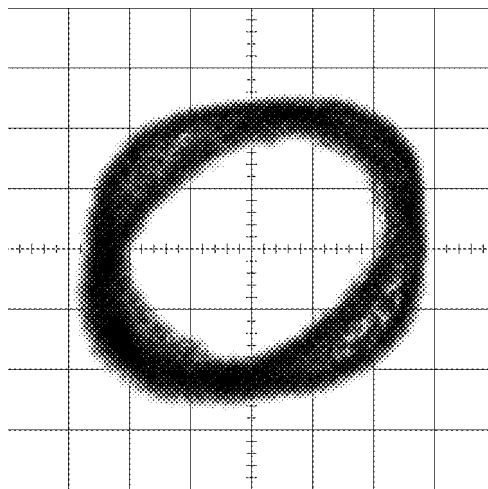

## 6.3 ERROR MODE

### ● Error Messages

Error is displayed with number for Error cause when CD is inoperative or stops with Error during operation. The purpose is to reduce nonsense calls from users as well as to assist all related analysis and repair for defects at service station.

#### (1) Basic Display Method

1) When CSMOD (CD mode area for system) is SERRORM, Error code will be written in DMIN (minutes area for display), DSEC (seconds area for display). The same data shall be written in DMIN and DSEC. DTNO is blank as usual.

#### 2) Display Example of Head Unit

The following is about LCD display ability. xx is Error number.

|          |          |          |
|----------|----------|----------|
| 8 digits | 6 digits | 4 digits |
| ERROR-xx | ERR-xx   | E-xx     |
|          | OR       |          |
|          | Err-xx   |          |

#### (2) Error Code List

| No. | Classification | Contents                                   | Details • Cause                                                                                                                                                                                                                                                                                                             |
|-----|----------------|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10  | Electricity    | Carriage Home NG                           | CRG can't move to the inner.<br>CRG can't move from the inner.<br>→ HOME SW failure, CRG movement failure.                                                                                                                                                                                                                  |
| 11  | Electricity    | Focus Search NG                            | Focus can't be caught.<br>→ Back of Disc / Severe dirt and vibration.                                                                                                                                                                                                                                                       |
| 12  | Electricity    | Spindle Lock NG<br>Subcode NG<br>RF-amp NG | Not spindle, lock. Wrong subcode (can't read).<br>→ Defective Spindle. Scratch and dirt on Disc. Intense vibration.<br>The appropriate gain of the RF amp cannot be obtained.<br>→ Defective spindle.<br>→ Scratched or dirty disc. Severe vibration. Abnormal CD signals.<br>→ Blanc CD-R disc. Disc inserted upside down. |
| 17  | Electricity    | Setup NG                                   | AGC protection doesn't work, out of Focus soon.<br>→ Scratch on Disc/Severe dirt and vibration.                                                                                                                                                                                                                             |
| 22  | Disc           | Impossible to play                         | There is no playable MP3 or WMA file present in a disc.<br>→ No MP3 or WMA file exists in a CD-ROM disc inserted.                                                                                                                                                                                                           |
| 23  | Disc           | File Format NG                             | Contents are stored in an incompatible file format.<br>→ The contents in a CD-ROM disc inserted are recorded in a file format other than ISO9660 Level-1 and 2.                                                                                                                                                             |
| 30  | Electricity    | Search Time Out                            | Can't reach the target address.<br>→ Defective CRG/tracking, or scratch on Disc.                                                                                                                                                                                                                                            |
| 44  | Disc           | Impossible to play                         | There is no playable TRK No. present in a disc.<br>→ All TRK Nos. In a disc inserted are specified as a track which should be skipped, in the track skip information.                                                                                                                                                       |
| 50  | Mecha          | Disc Load / Eject NG                       | Disc loading/ejection cannot be complete.<br>→ Foreign objects entered into the mechanism. Disc caught in between during loading/ejection.                                                                                                                                                                                  |
| A0  | System         | Power NG                                   | Power supply (VD) isn't connected to the ground.<br>→ Defective SW transistor. Abnormal power (failed connector)                                                                                                                                                                                                            |

Note : Error doesn't display in mechanism only. (CD off causes mechanism off)

If TOC can't be read, error wouldn't occur, but mechanism still continues its operation.

The upper digits of error code is mainly classified by 3 kinds as follows:

1x: Setup related error, 3x: Search related error, Ax: Other errors.

1234

## 6.4 SYSTEM MICROCOMPUTER TEST PROGRAM



● **PCL output**  
In the normal operation mode (with the detachable panel installed, the ACC switched ON, the standby mode cancelled), shift the TESTIN (Pin 86) terminal to H.  
The clock signal is output from the PCL terminal (Pin 37).  
The frequency of the clock signal is 312.500kHz that is one 32nd of the fundamental frequency.  
The clock signal should be 312.500kHz ± 13Hz.  
If the clock signal is out of the range, the X'tal (X601) should be replaced with new one.

B

C

D

E

F

## 7. GENERAL INFORMATION

### 7.1 DIAGNOSIS

#### 7.1.1 DISASSEMBLY

##### ● Removing the Case (not shown)

1. Remove the Case.

##### ● Removing the CD Mechanism Module (Fig.1)

- 1 Remove the four screws.

Disconnect the connector and then remove the CD Mechanism Module.

##### ● Removing the Grille Assy (Fig.1)

- 2 Remove the two screws and then remove the Grille Assy.

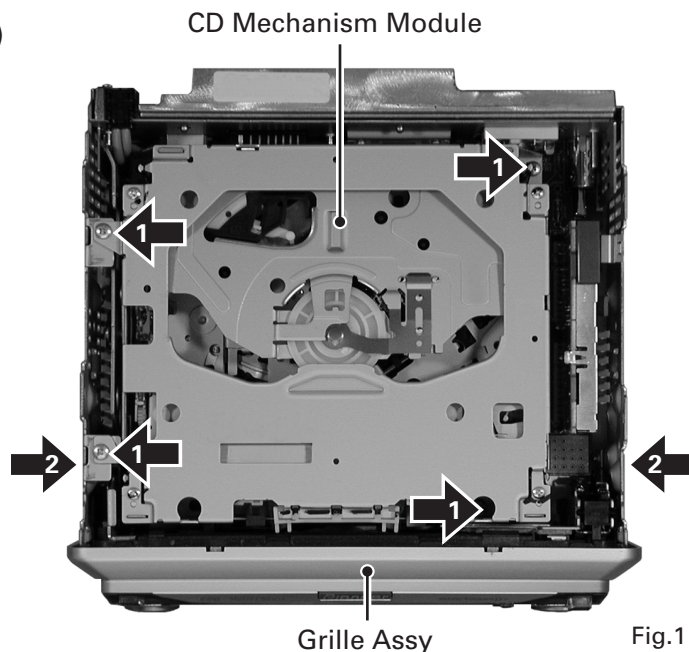


Fig.1

##### ● Removing the Tuner Amp Assy (Fig.2)

- 1 Remove the screw.
- 2 Remove the three screws.
- 3 Straighten the tabs at three locations indicated.
- 4 Remove the screw and then remove the Tuner Amp Assy.


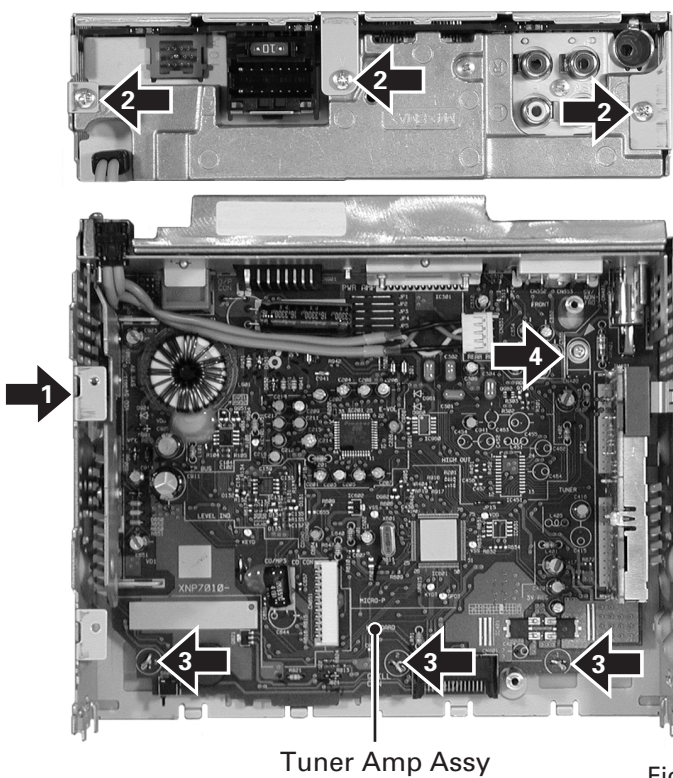


Fig.2

### ● How to hold the Mechanism Unit

1. Hold the top and bottom frame.
2. Do not squeeze top frame's front portion too tight, because it is fragile.

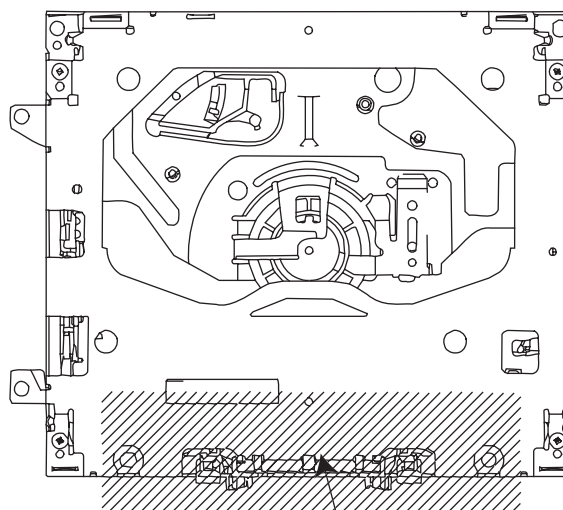


Do not squeeze.

### ● Removing the Upper and Lower Frames

1. With a disc clamped, remove the four springs (A), the two springs (B), the two springs (C), and the four screws.
2. To remove the upper frame, open it on the fulcrum A.
3. While lifting the carriage mechanism, remove the three dampers.
4. With the frames removed, insert the connectors coming from the main unit and eject the disc.

Caution: Before installing the carriage mechanism in the frames, be sure to apply some alcohol to the dampers and set the mechanism to the clamp mode.


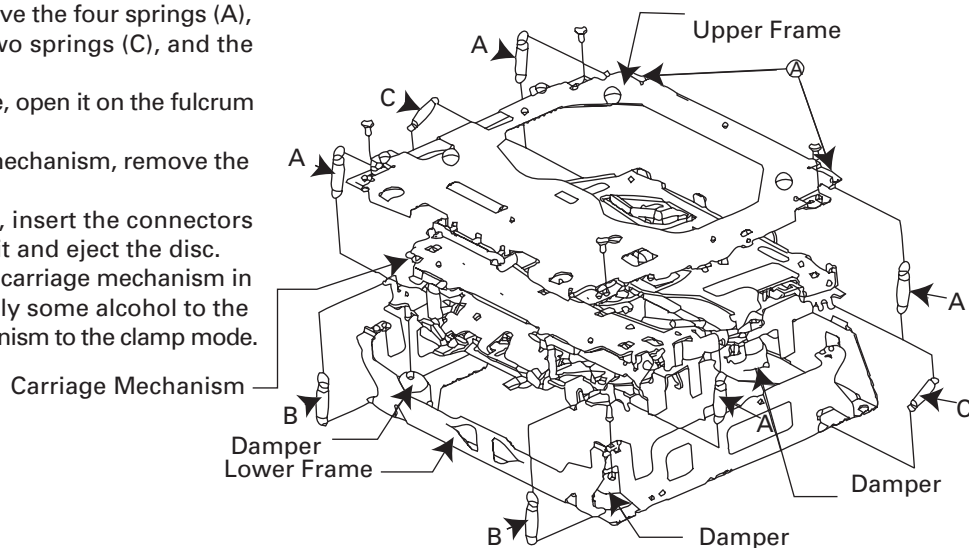


### ● Removing the Pickup Unit

1. Apply shorting solder to the Pickup flexible cable.  
Disconnect the cable.
2. Set the mechanism to the clamp mode.
3. Remove the lead wires from the inner holder.
4. Remove the washer, styling holder, change arm, and pickup lock arm.
5. While releasing from the hook of the inner holder, lift the end of the feed screw.

Caution: In assembling, move the planet gear to the load/eject position before setting the feed screw in the inner holder.


Shorting  
Solder

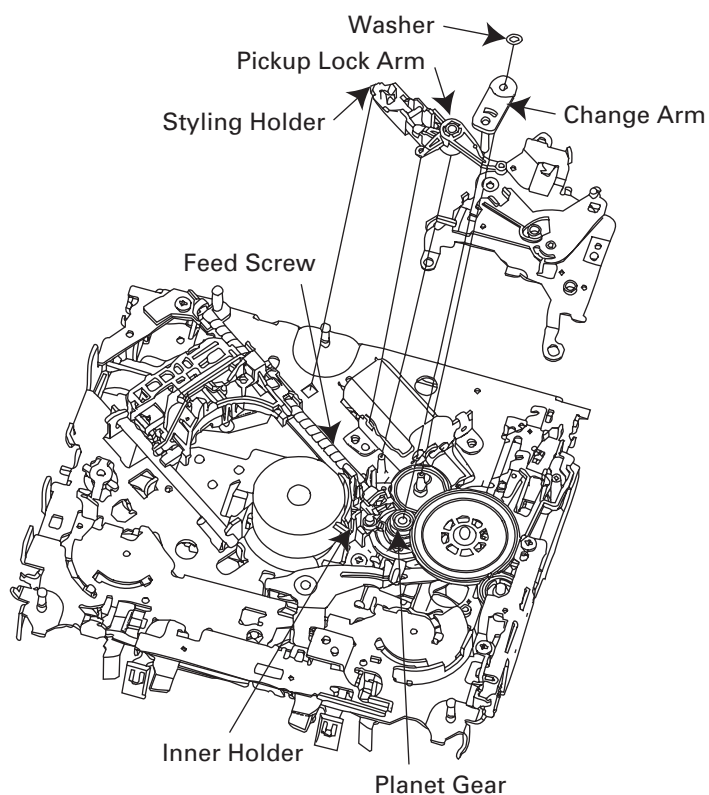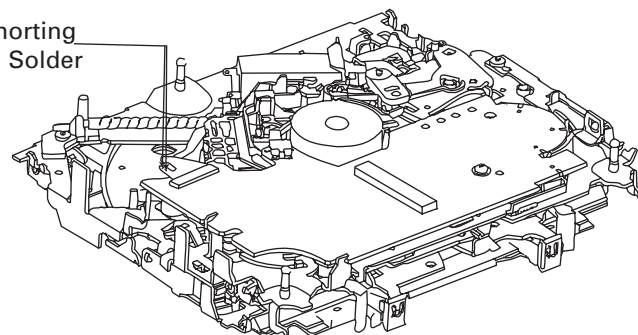



7.1.2 CONNECTOR FUNCTION DESCRIPTION

A  
B  
C  
D  
E  
F

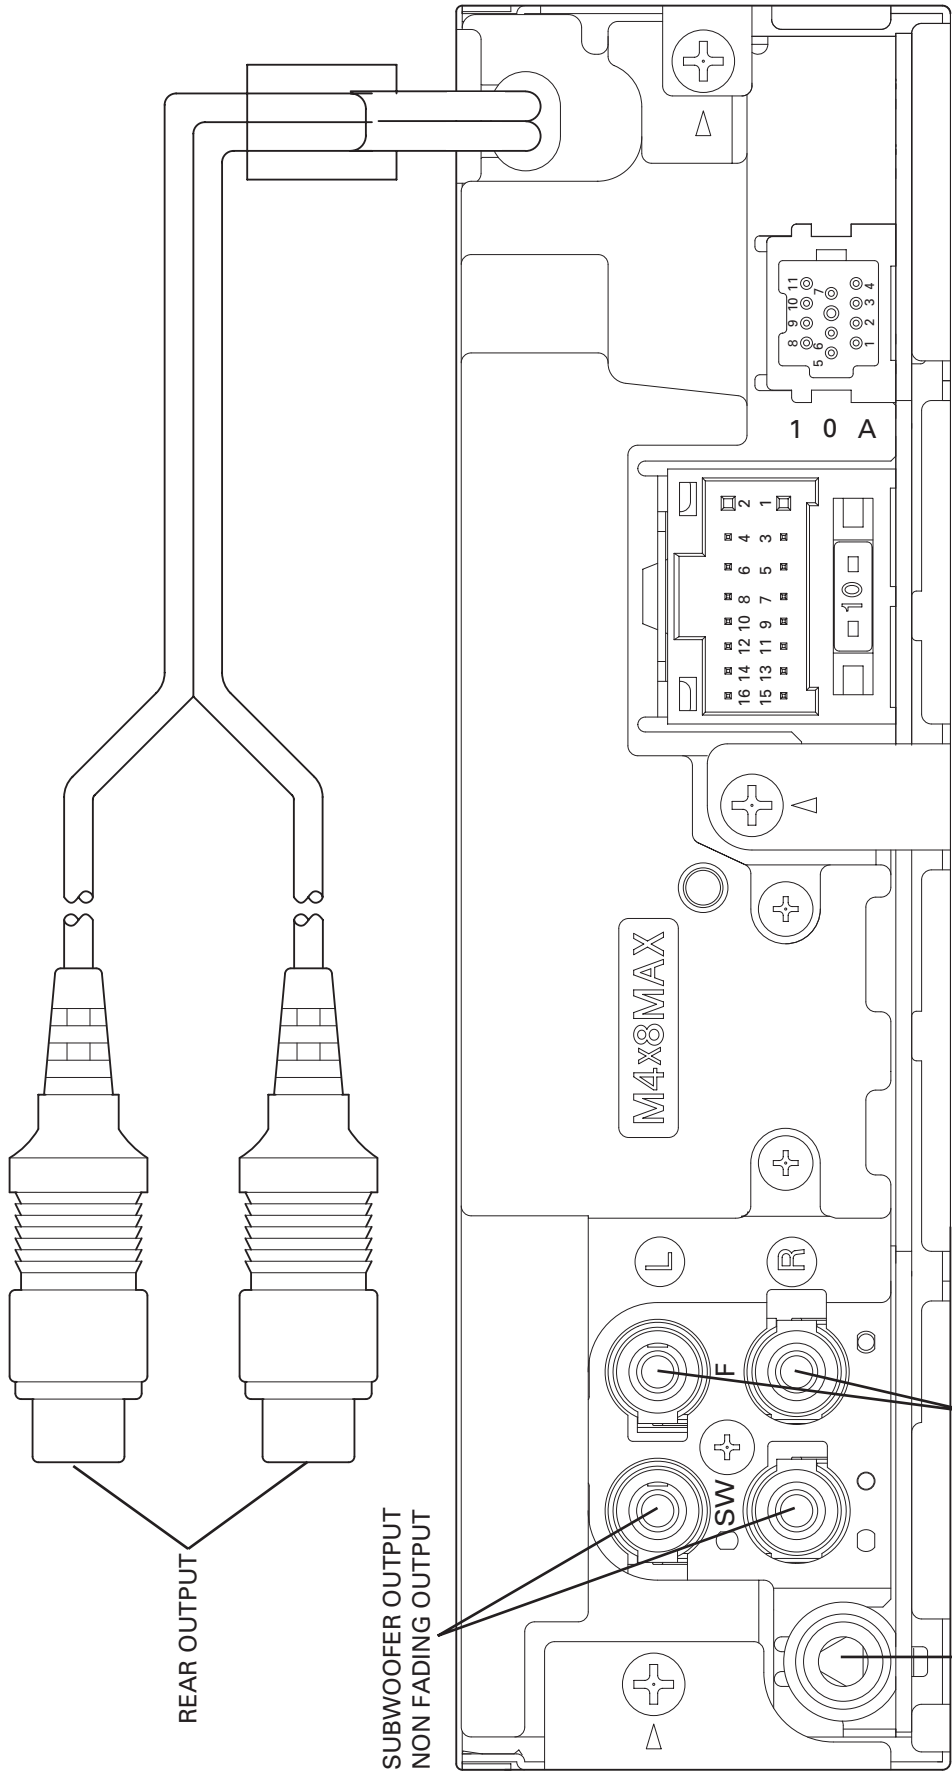

- |             |         |                  |
|-------------|---------|------------------|
| 1. BACKUP   | 9. RL-  | 1. BUS+          |
| 2. GND      | 10. FL- | 2. GND           |
| 3. ACC      | 11. RL+ | 3. GND           |
| 4. NC       | 12. FL+ | 4. NC            |
| 5. ILM      | 13. RR- | 5. BUS-          |
| 6. B.REM    | 14. FR- | 6. GND           |
| 7. NC       | 15. RR+ | 7. BUS L+ INPUT  |
| 8. TEL MUTE | 16. FR+ | 8. ASEN B        |
|             |         | 9. BUS R+ INPUT  |
|             |         | 10. BUS R- INPUT |
|             |         | 11. BUS L- INPUT |



## 7.2 PARTS


### 7.2.1 IC

#### ● Pin Functions(PEG063A)

| Pin No. | Pin Name | I/O | Function and Operation                     |
|---------|----------|-----|--------------------------------------------|
| 1       | SYSPW    | O   | System power control output                |
| 2       | KEYD     | I   | Wired remote control key input             |
| 3-5     | NC       |     | Not used                                   |
| 6       | BYTE     | I   | External data bus width change input       |
| 7       | CNVSS    | I   | Processor mode change input                |
| 8       | TELIN    | I   | TEL : Cellular mute input                  |
| 9       | NC       |     | Not used                                   |
| 10      | RESET    | I   | Reset input                                |
| 11      | XOUT     | O   | Clock output                               |
| 12      | VSS      |     | GND                                        |
| 13      | XIN      | I   | Clock input                                |
| 14      | VCC      |     | Power supply input                         |
| 15-18   | NC       |     | Not used                                   |
| 19      | RX2      | I   | IPBUS : Input 2                            |
| 20      | LCDPW    | O   | Back light power supply output             |
| 21      | NC       |     | Not used                                   |
| 22      | PEE      | O   | PEE sound output                           |
| 23      | NC       |     | Not used                                   |
| 24      | BRST     | O   | PBUS : Reset output                        |
| 25      | BRXEN    | I/O | PBUS : Communication input/output          |
| 26      | BSRQ     | I   | PBUS : Communication demand input          |
| 27      | RX       | I   | IPBUS : Input                              |
| 28      | TX       | O   | IPBUS : Output                             |
| 29      | BSO      | O   | PBUS : Output                              |
| 30      | BSI      | I   | PBUS : Input                               |
| 31      | BSCK     | O   | PBUS : Clock output                        |
| 32      | NC       |     | Not used                                   |
| 33      | DPDT     | O   | GRILL : Data output                        |
| 34      | KYDT     | I   | GRILL : Data input                         |
| 35, 36  | ROT1, 0  | I   | Rotary encoder pulse input1, 0             |
| 37      | PCL      | O   | Output for clock adjustment                |
| 38      | SWVDD    | O   | GRILL : Chip enable output                 |
| 39      | DSENS    | I   | Detach sense input                         |
| 40      | FLPILM   | O   | Illumination output inside flap            |
| 41      | ILMPW    | O   | Illumination output                        |
| 42      | EJTIN    | I   | Eject key input                            |
| 43-55   | NC       |     | Not used                                   |
| 56      | CSENSOUT | O   | CSENS state output(H : FLAP open)          |
| 57      | EMUTE    | O   | EVOL : Mute output                         |
| 58, 59  | NC       |     | Not used                                   |
| 60      | VCC      | I   | Power supply input                         |
| 61      | NC       |     | Not used                                   |
| 62      | VSS      | I   | GND                                        |
| 63-66   | NC       |     | Not used                                   |
| 67      | DALMON   | O   | For consumption current reduction          |
| 68      | NC       |     | Not used                                   |
| 69      | TUNPCE2  | O   | TUNER : Chip enable output(EEPROM)         |
| 70      | TUNPCE1  | O   | TUNER : Chip enable output(PLL)            |
| 71      | NC       |     | Not used                                   |
| 72      | ASENS    | I   | ACC sense input                            |
| 73      | BSENS    | I   | Back up sense input                        |
| 74      | ROMCK    | O   | ROM correction : Clock output              |
| 75      | ROMDATA  | I/O | ROM correction : Data input/output         |
| 76      | VST      | O   | EVOL : Strobe output                       |
| 77      | VDT      | O   | EVOL : Data output                         |
| 78      | VCK      | O   | EVOL : Clock output                        |
| 79      | IPPW     | O   | IPBUS : Driver power supply control output |
| 80      | ASENBO   | O   | IPBUS : Slave ACC sense output             |
| 81      | ISENS    | I   | Illumination sense input                   |
| 82,83   | MODEL1,0 | I   | Model select input                         |

| Pin No. | Pin Name | I/O | Format | Function and Operation                     |
|---------|----------|-----|--------|--------------------------------------------|
| 84      | NC       |     |        | Not used                                   |
| 85      | MUTE     | O   |        | MUTE output                                |
| 86      | TESTIN   | I   |        | Test program input                         |
| 87,89   | NC       |     |        | Not used                                   |
| 89      | KEYAD    | I   |        | Wired remote control key input             |
| 90      | LVLINR   | I   |        | Level indicator R.ch input                 |
| 91      | CSENS    | I   |        | Flap opening-and-closing sense input       |
| 92      | LVLINL   | I   |        | Level indicator L.ch input                 |
| 93      | NC       |     |        | Not used                                   |
| 94      | AVSS     |     |        | GND                                        |
| 95      | SL       | I   |        | TUNER : Signal level input                 |
| 96      | VREF     |     |        | AD translation reference voltage           |
| 97      | AVCC     |     |        | AD translation power supply input terminal |
| 98      | TUNPDI   | I   |        | TUNER : PLL communication input            |
| 99      | TUNPDO   | O   |        | TUNER : Data output(PLL)                   |
| 100     | TUNPCK   | O   |        | TUNER : Clock output(PLL)                  |



\* PEG063A

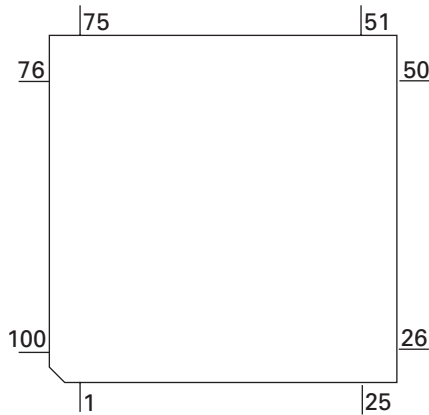

IC's marked by \* are MOS type.  
Be careful in handling them because they are very liable to be damaged by electrostatic induction.

NJM2391DL1-05


NJM2388F84

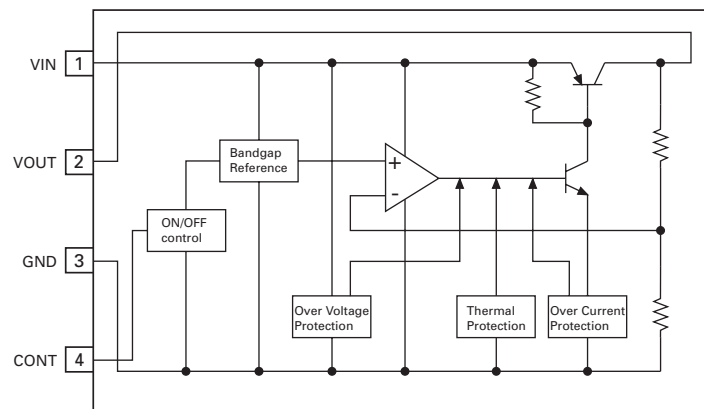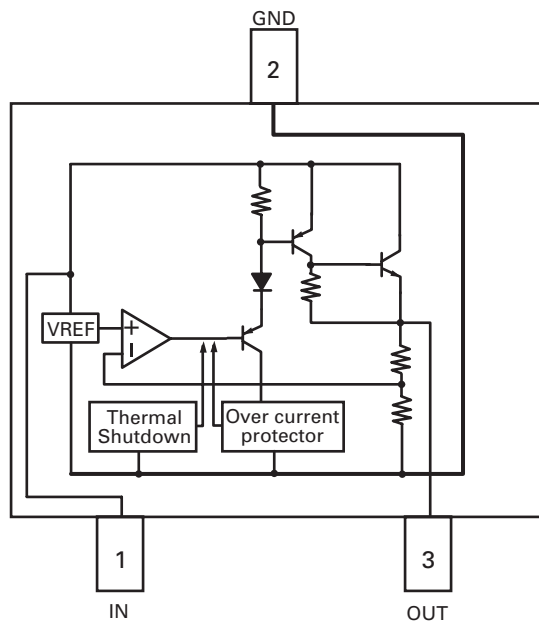


# **● Pin Functions (PD2072A)**

| Pin No. | Pin Name | I/O | Function and Operation                               |
|---------|----------|-----|------------------------------------------------------|
| 1       | X0       |     | Crystal oscillator connection pin                    |
| 2       | TEST     | I   | Test input                                           |
| 3       | VDD      |     | Power supply                                         |
| 4       | ADJ      | O   | LCD brightness adjustment output                     |
| 5       | DIM      | O   | Dimmer output                                        |
| 6       | RESET    | I   | Reset input                                          |
| 7,8     | NC       |     | Not used                                             |
| 9       | REM      | I   | Remote control reception input                       |
| 10,11   | NC       |     | Not used                                             |
| 12-15   | KDT0-3   | I   | Key data input                                       |
| 16,17   | NC       |     | Not used                                             |
| 18      | SO       | O   | System micro computer UART communication data output |
| 19      | SI       | I   | System micro computer UART communication data input  |
| 20      | NC       |     | Not used                                             |
| 21-75   | SEG55-1  | O   | LCD segment output                                   |
| 76-84   | COM0-7   | O   | LCD common output                                    |
| 85-90   | KST1-6   | O   | Key strobe output                                    |
| 91,92   | NC       |     | Not used                                             |
| 93-96   | V4-1     |     | LCD drive power supply                               |
| 97,98   | C1,C0    |     | Not used                                             |
| 99      | VSS      |     | GND                                                  |
| 100     | X1       |     | Crystal oscillator connection pin                    |


\* PD2072A

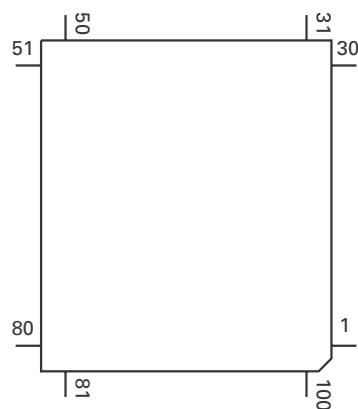

HA12240FP

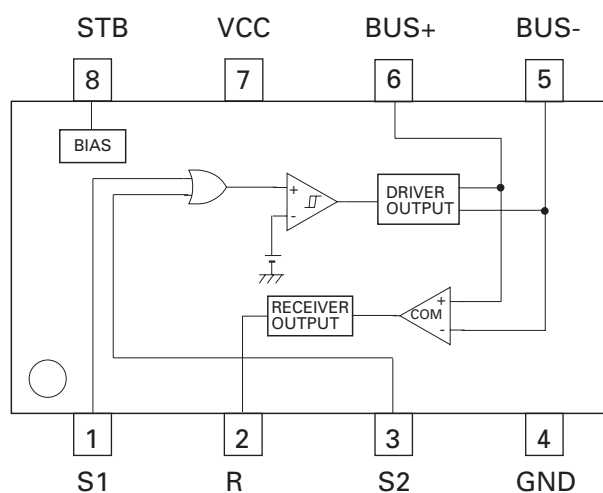

BD4834G

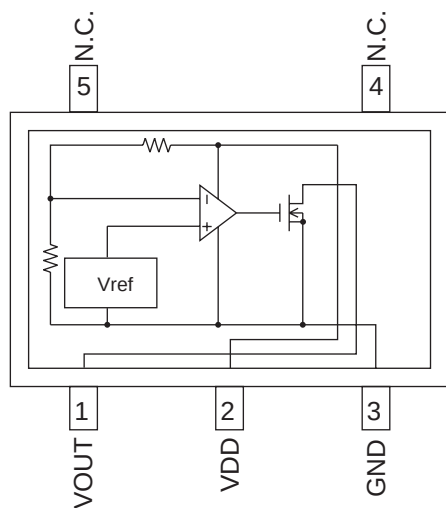


# **Pin Functions(PE5454A)**

| Pin No. | Pin Name      | I/O | Format | Function and Operation                                                          |
|---------|---------------|-----|--------|---------------------------------------------------------------------------------|
| 1       | AVREF         |     |        | A power supply Positive power supply(5V)                                        |
| 2       | AVSS          |     |        | A power supply GND                                                              |
| 3       | RFOK          | O   | C      | Output of state of RFOK                                                         |
| 4       | NC            |     |        | Not used                                                                        |
| 5       | EVDD          |     |        | E power supply Positive power supply                                            |
| 6, 7    | NC            |     |        | Not used                                                                        |
| 8       | IC/FLMD0      |     |        | IC : VSS direct connection/FLMOD0 : Pull-down                                   |
| 9       | VDD           |     |        | Positive power supply(5V)                                                       |
| 10      | REGC          |     |        | Connected to the capacity stabilizing output of the regulator                   |
| 11      | VSS           |     |        | GND                                                                             |
| 12      | X1            | I   |        | Oscillator connection for mainclock                                             |
| 13      | X2            |     |        | Oscillator connection for mainclock                                             |
| 14      | RESET         | I   |        | System reset input                                                              |
| 15      | XT1           | I   |        | Connected to the oscillator for subclock<br>(connected to VSS via the resistor) |
| 16      | XT2           |     |        | Connected to the oscillator for subclock(Open)                                  |
| 17      | NC            |     |        | Connected to EVDD or EVSS via the resistor                                      |
| 18      | NC            |     |        | Not used                                                                        |
| 19      | XINT          | I   | C      | CD LSI interruption signal input                                                |
| 20      | NC            |     |        | Connected to VSS via the resistor                                               |
| 21      | BRST          | I   |        | P-Bus reset input                                                               |
| 22      | BSI           | I   |        | P-Bus serial data input                                                         |
| 23      | BSO           | O   | C      | P-Bus serial data output                                                        |
| 24      | BSCK          | I/O | /C     | P-Bus serial clock input/output                                                 |
| 25      | FTXD          | O   | C      | For flash rewriting(transmitted signal)                                         |
| 26      | FRXD          | I   |        | For flash rewriting(received signal)                                            |
| 27      | BRXEN         | I/O | /C     | It is possible to receive P-Bus                                                 |
| 28      | BSRQ          | I/O | /C     | P-Bus service request demand                                                    |
| 29      | NC            |     |        | Not used                                                                        |
| 30      | DSCSNS        | I   |        | Disc state sense input                                                          |
| 31      | 8EJ(S905)     | I   |        | Input of detection of 8 cm disc ejection                                        |
| 32      | 12EJ(S904)    | I   |        | Input of detection of 12 cm disc ejection                                       |
| 33      | EVSS          |     |        | E power supply GND                                                              |
| 34      | EVDD          |     |        | E power supply Positive power supply                                            |
| 35, 36  | SRAMLEVEL0, 1 | O   | C      | SRAM level meter output                                                         |
| 37      | EMPH          | O   | C      | Emphasis information output                                                     |
| 38      | EMPH          | O   | C      | Emphasis information output                                                     |
| 39-42   | NC            |     |        | Not used                                                                        |
| 43      | ADENA         | O   | C      | A/D reference voltage supply control output                                     |
| 44      | LRCKOK        | O   | C      | (DOUT mute output)                                                              |
| 45      | SRAMLEVEL2    | O   | C      | SRAM level meter output                                                         |
| 46      | CD3VON        | O   | C      | CD +3.3V power supply control output                                            |
| 47      | CONT          | O   | C      | Servo driver power supply control output                                        |
| 48      | XRST          | O   | C      | CD LSI reset control output                                                     |
| 49      | VDCONT        | O   | C      | VD power supply control output                                                  |
| 50      | ROMDATA       | I/O | /C     | E2PROM data input/output                                                        |
| 51      | ROMCS         | O   | C      | E2PROM chip selection output                                                    |
| 52      | ROMCK         | O   | C      | E2PROM clock output                                                             |
| 53      | LOEJ          | O   | C      | The direction change output of LOAD/EJECT                                       |
| 54      | CLCONT        | O   | C      | Driver input change output                                                      |
| 55      | CDMUTE        | O   | C      | CD mute control output                                                          |
| 56-58   | NC            |     |        | Not used                                                                        |
| 59      | XCS           | O   | C      | CD LSI chip selection output                                                    |
| 60      | NC            |     |        | Not used                                                                        |
| 61      | XWAIT         | I   |        | CD LSI write control signal output                                              |
| 62      | CLKOUT        | O   | C      | Internal system clock output(Open)                                              |
| 63      | LOCK          | I   |        | Spindle lock input                                                              |
| 64      | NC            |     |        | Not used                                                                        |
| 65      | XWRITE        | O   |        | CD LSI write control signal output                                              |
| 66      | NC            |     |        | Not used                                                                        |


| Pin No. | Pin Name | I/O | Format | Function and Operation                                |
|---------|----------|-----|--------|-------------------------------------------------------|
| 67      | XREAD    | O   |        | CD LSI read control signal output                     |
| 68      | XASTB    | O   |        | CD LSI address strobe output                          |
| 69      | BVSS     |     |        | B power supply GND                                    |
| 70      | BVDD     |     |        | B power supply Positive power supply                  |
| 71-83   | AD0-12   | I/O | /C     | Address/data Bus 0-12 input/output                    |
| 84-86   | NC       |     |        | Not used                                              |
| 87      | FMODE    | I   |        | For flash rewriting Connected to VSS via the resistor |
| 88      | FLRQ     | O   | C      | For flash rewriting output                            |
| 89-93   | NC       |     |        | Not used                                              |
| 94      | CSSENS   | I   |        | Flap closing sense input                              |
| 95      | TYPE A/D | I   |        | CD-DA analog/digital output change setup input        |
| 96      | TESTIN   | I   |        | Chip check test program starting input                |
| 97      | HOME     | I   |        | Home SW sense input                                   |
| 98      | TEMP     | I   |        | Temperature information sense input                   |
| 99      | VDSSENS  | I   |        | VD power supply short sense input                     |
| 100     | NC       |     |        | Not used                                              |

\* PE5454A

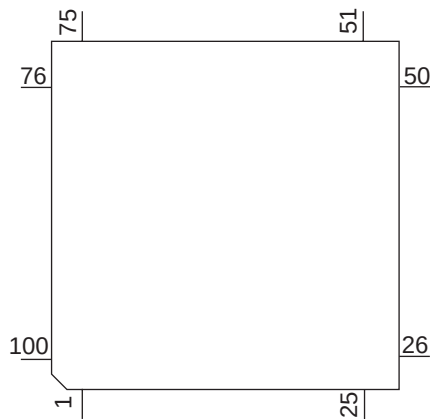

| Format | Meaning |
|--------|---------|
| C      | CMOS    |

NJM2885DL1-33

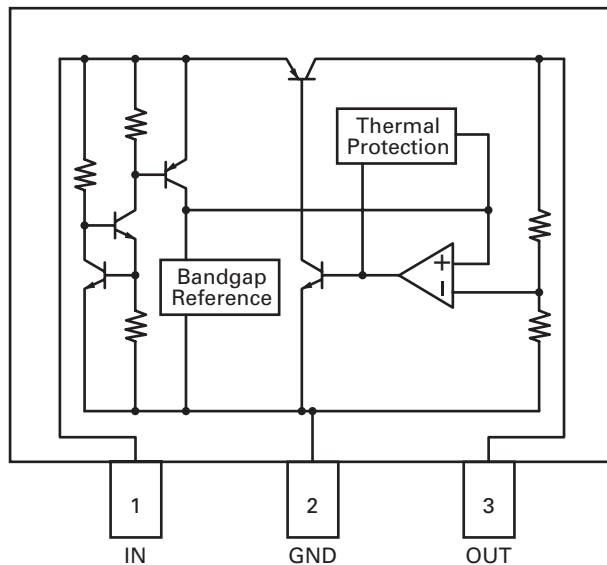


# **● Pin Functions(UPD63763GJ)**


| Pin No. | Pin Name                 | I/O | Function and Operation                                 |
|---------|--------------------------|-----|--------------------------------------------------------|
| 1       | D.VDD                    |     | Power supply for digital circuits                      |
| 2       | D1.GND                   |     | GND for 1.6V digital circuits                          |
| 3       | RESET                    | I   | Input of reset                                         |
| 4-8     | AB12-8                   | I   | Address bus 12-8 from the microcomputer                |
| 9-16    | AD7-0                    | I/O | Address/data bus 7-0 to the microcomputer              |
| 17      | $\overline{CS}$          | I   | Chip selection                                         |
| 18      | ASTB                     | I   | Address strobe                                         |
| 19      | READ                     | I   | Control signals(read)                                  |
| 20      | WRITE                    | I   | Control signals(write)                                 |
| 21      | WAIT                     | O   | Control signals(wait)                                  |
| 22      | INTQ                     | O   | Interruption signals to the external microcomputer     |
| 23, 24  | IFMODE0, 1               | I   | Switching the microcomputer I/F 0, 1                   |
| 25      | D1.VDD                   |     | Power supply for 1.6V digital circuits                 |
| 26      | DA.VDD                   |     | Power supply for DAC                                   |
| 27      | ROUT                     | O   | Output of audio for the right channel                  |
| 28      | DA.GND                   |     | GND for DAC                                            |
| 29      | REGC                     |     | Connected to the capacitor for band gap                |
| 30      | DA.GND                   |     | GND for DAC                                            |
| 31      | LOUT                     | O   | Output of audio for the left channel                   |
| 32      | DA.VDD                   |     | Power supply for DAC                                   |
| 33      | X.VDD                    |     | Power supply for the crystal oscillator                |
| 34      | XTAL                     | I   | Connected to the crystal oscillator(16.9344MHz)        |
| 35      | XTAL                     | O   | Connected to the crystal oscillator(16.9344MHz)        |
| 36      | X.GND                    |     | Ground for the crystal oscillator                      |
| 37      | VDDREG15                 |     | Control of 1.6V regulator                              |
| 38      | PWMSW0                   | I   | Setup 0 for PWM output(SD, MD)                         |
| 39-41   | TEST3-1                  | I   | Connected to GND                                       |
| 42      | PWMSW1                   | I   | Setup 1 for PWM output(FD, TD)                         |
| 43      | TESTEN                   | I   | Connected to GND                                       |
| 44      | D1.GND                   |     | GND for 1.6V digital circuits                          |
| 45      | DIN                      | I   | Input of audio data                                    |
| 46      | DOUT                     | O   | Output of audio data                                   |
| 47      | SCKIN                    | I   | Clock input for audio data                             |
| 48      | SCKO                     | O   | Clock output for audio data                            |
| 49      | LRCKIN                   | I   | Input of LRCK for audio data                           |
| 50      | LRCK                     | O   | Output LRCK for audio data                             |
| 51      | $\overline{XTALEN}$      | I   | Permission to oscillate 16.9344MHz                     |
| 52      | D1.VDD                   |     | Power supply for 1.6V digital circuits                 |
| 53      | RFCK/HOLD                | O   | Output of RFCK/HOLD signal                             |
| 54      | WFCK/MIRR                | O   | Output of WFCK/MIRR signal                             |
| 55      | PLCK/RFOK                | O   | Output of PLCK/Output of RFOK                          |
| 56      | LOCK/RFOK                | O   | Output of LRCK/Output of RFOK                          |
| 57      | C1D1/C8M                 | O   | Information on error correction/C8M : 8MHz             |
| 58      | C1D2/C16M                | O   | Information on error correction/C16M : 16MHz           |
| 59      | C2D1/RMUTE               | O   | Information on error correction/Mute for Rch           |
| 60      | C2D2/LMUTE               | O   | Information on error correction/Mute for Lch           |
| 61      | C2D3/SHOCK               | O   | Information on error correction/Detection of vibration |
| 62      | D1.GND                   |     | GND for 1.6V digital circuits                          |
| 63      | C33M                     | O   | Output of 33.8688MHz(CLK for SDRAM)                    |
| 64      | (RCS)                    | O   | DRAM $\overline{CS}$                                   |
| 65      | RA11                     | O   | Output of DRAM address 11                              |
| 66      | (CKE)                    | O   | Output of DRAM CKE                                     |
| 67      | RAS                      | O   | Output of DRAM $\overline{RAS}$                        |
| 68      | $\overline{CAS0}$ (LDQM) | O   | Output of DRAM lower $\overline{CAS}$ (LDQM)           |
| 69      | $\overline{CAS1}$ (UDQM) | O   | Output of DRAM upper $\overline{CAS}$ (UDQM)           |
| 70      | $\overline{WE}$          | O   | Output of DRAM $\overline{WE}$                         |
| 71      | OE(CAS)                  | O   | Output of DRAM OE(CAS)                                 |
| 72      | D.GND                    |     | Ground for digital circuits                            |
| 73-88   | RDB0-15                  | I/O | Input/output of DRAM data0-15                          |
| 89-99   | RA0-10                   | O   | Output of DRAM address0-10                             |

| Pin No.  | Pin Name | I/O | Function and Operation                          |
|----------|----------|-----|-------------------------------------------------|
| 100      | D.VDD    |     | Power supply for digital circuits               |
| 101      | FD+      | O   | Output of focus drive PWM +                     |
| 102      | FD-      | O   | Output of focus drive PWM -                     |
| 103      | TD+      | O   | Output of tracking drive PWM +                  |
| 104      | TD-      | O   | Output of tracking drive PWM -                  |
| 105      | SD+      | O   | Output of thread drive PWM +                    |
| 106      | SD-      | O   | Output of thread drive PWM -                    |
| 107      | MD+      | O   | Output of spindle drive PWM +                   |
| 108      | MD-      | O   | Output of spindle drive PWM -                   |
| 109      | REFOUTSV | O   | REFOUT for servo                                |
| 110      | AD.VDD   |     | Power supply for ADC                            |
| 111      | EFM      | O   | Output of EFM signals                           |
| 112      | ASY      | I   | Input of asymmetry                              |
| 113      | ATEST    | O   | Analog tests                                    |
| 114      | RFI      | I   | Input of RF                                     |
| 115      | AD.GND   |     | Ground for the analog system                    |
| 116      | AGCO     | O   | Output of RF                                    |
| 117      | C3T      | O   | Connection to the capacitor for detecting 3T    |
| 118      | AGCI     | I   | Input of AGC                                    |
| 119      | RFO      | O   | Output of RF(AGC)                               |
| 120, 121 | EQ2, 1   | I   | Equalizer 2, 1                                  |
| 122      | RF2-     | I   | Reversal input of RF2                           |
| 123      | RF-      | I   | Reversal input of RF                            |
| 124      | A.GND    |     | Ground for the analog system                    |
| 125      | A        | I   | Input of A                                      |
| 126      | C        | I   | Input of C                                      |
| 127      | B        | I   | Input of B                                      |
| 128      | D        | I   | Input of D                                      |
| 129      | F        | I   | Input of F                                      |
| 130      | E        | I   | Input of E                                      |
| 131      | VREFIN   | I   | Input of reference voltage                      |
| 132      | A.VDD    |     | Power supply for the analog system              |
| 133      | REFOUT   | O   | Output of reference voltage                     |
| 134      | REFC     | I   | Connected to the capacitor for output of REFOUT |
| 135      | FE-      | I   | Reversal input of FE                            |
| 136      | FEO      | O   | Output of FE                                    |
| 137      | ADIN     | I   | Input of FE, TE A/D converter                   |
| 138      | TE-      | I   | Reversal input of TE                            |
| 139      | TEO      | O   | Output of TE                                    |
| 140      | TE2      | O   | TE2                                             |
| 141      | TEC      | I   | TEC                                             |
| 142      | LD       | O   | Output of LD                                    |
| 143      | PD       | I   | Input of PD                                     |
| 144      | D.GND    |     | Ground for digital circuits                     |

\* UPD63763GJ

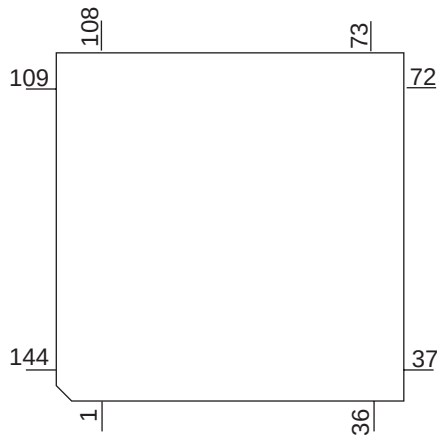

# FM/AM Tuner Unit

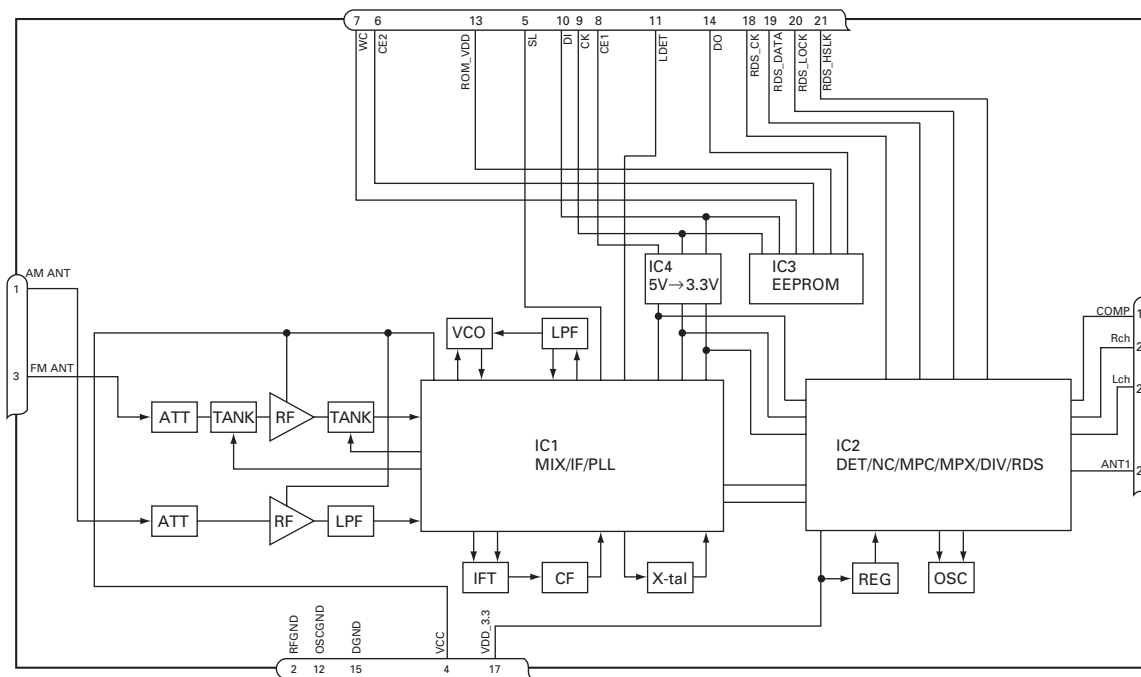


| No. | Symbol   | I/O | Explain                   |                                                                                                                                                                                                                                                                     |
|-----|----------|-----|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | AMANT    | I   | AM antenna input          | AM antenna input high impedance AMANT pin is connected with an all antenna by way of 33μH. (LAU type inductor) A series circuit including an inductor and a resistor is connected with RF ground for the countermeasure against the hum of power transmission line. |
| 2   | RFGND    |     | RF ground                 | Ground of antenna block                                                                                                                                                                                                                                             |
| 3   | FMANT    | I   | FM antenna input          | Input of FM antenna 75Ω Surge absorber is necessary.                                                                                                                                                                                                                |
| 4   | VCC      |     | power supply              | The power supply for analog block. D.C 8.4V ± 0.3V                                                                                                                                                                                                                  |
| 5   | SL       | O   | signal level              | Output of FM/AM signals level                                                                                                                                                                                                                                       |
| 6   | CE2      | I   | chip enable-2             | Chip enable for EEPROM "Low" active                                                                                                                                                                                                                                 |
| 7   | WC       | I   | write control             | You can write EEPROM, when EEPROM write control is "Low". Ordinary non connection                                                                                                                                                                                   |
| 8   | CE1      | I   | chip enable-1             | Chip enable for AF•RF "High" active                                                                                                                                                                                                                                 |
| 9   | CK       | I   | clock                     | Clock data input                                                                                                                                                                                                                                                    |
| 10  | DI       | I   | data in                   | Data input                                                                                                                                                                                                                                                          |
| 11  | LDET     | O   | lock detector             | "Low" active                                                                                                                                                                                                                                                        |
| 12  | OSCGND   |     | osc ground                | Ground of oscillator block                                                                                                                                                                                                                                          |
| 13  | ROM_VDD  |     | power supply              | Power supply for EEPROM pin 13 is connected with a power supply of micro computer.                                                                                                                                                                                  |
| 14  | DO       | O   | data out                  | Data output                                                                                                                                                                                                                                                         |
| 15  | DGND     |     | digital ground            | Ground of digital block                                                                                                                                                                                                                                             |
| 16  | COMP     | O   | composite output          | FM composite signal output.                                                                                                                                                                                                                                         |
| 17  | VDD_3.3  |     | power supply              | The power supply for digital block. 3.3V ± 0.2V                                                                                                                                                                                                                     |
| 18  | RDS_CK   | O   | RDS clock                 | Output of RDS clock(2.5V)                                                                                                                                                                                                                                           |
| 19  | RDS_DATA | O   | RDS data                  | Output of RDS data(2.5V)                                                                                                                                                                                                                                            |
| 20  | RDS_LOCK | O   | RDS lock                  | Output unit "High" active(2.5V) (RDS_LOCK turns over by the external transistor. "Low" active)                                                                                                                                                                      |
| 21  | RDS_HSLK | O   | RDS high speed lock       | Output unit "High" active(2.5V)(RDS_HSLK turns over by the external transistor. "Low" active)                                                                                                                                                                       |
| 22  | ANT1     |     | diversity antenna control | Antenna switch control signal output. "High" : MAIN, "Low"=SUB                                                                                                                                                                                                      |
| 23  | L ch     | O   | L channel output          | FM stereo "L-ch" signal output or AM audio output                                                                                                                                                                                                                   |
| 24  | R ch     | O   | R channel output          | FM stereo "R-ch" signal output or AM audio output                                                                                                                                                                                                                   |




## 7.2.2 DISPLAY

### ● LCD(XAW7013)

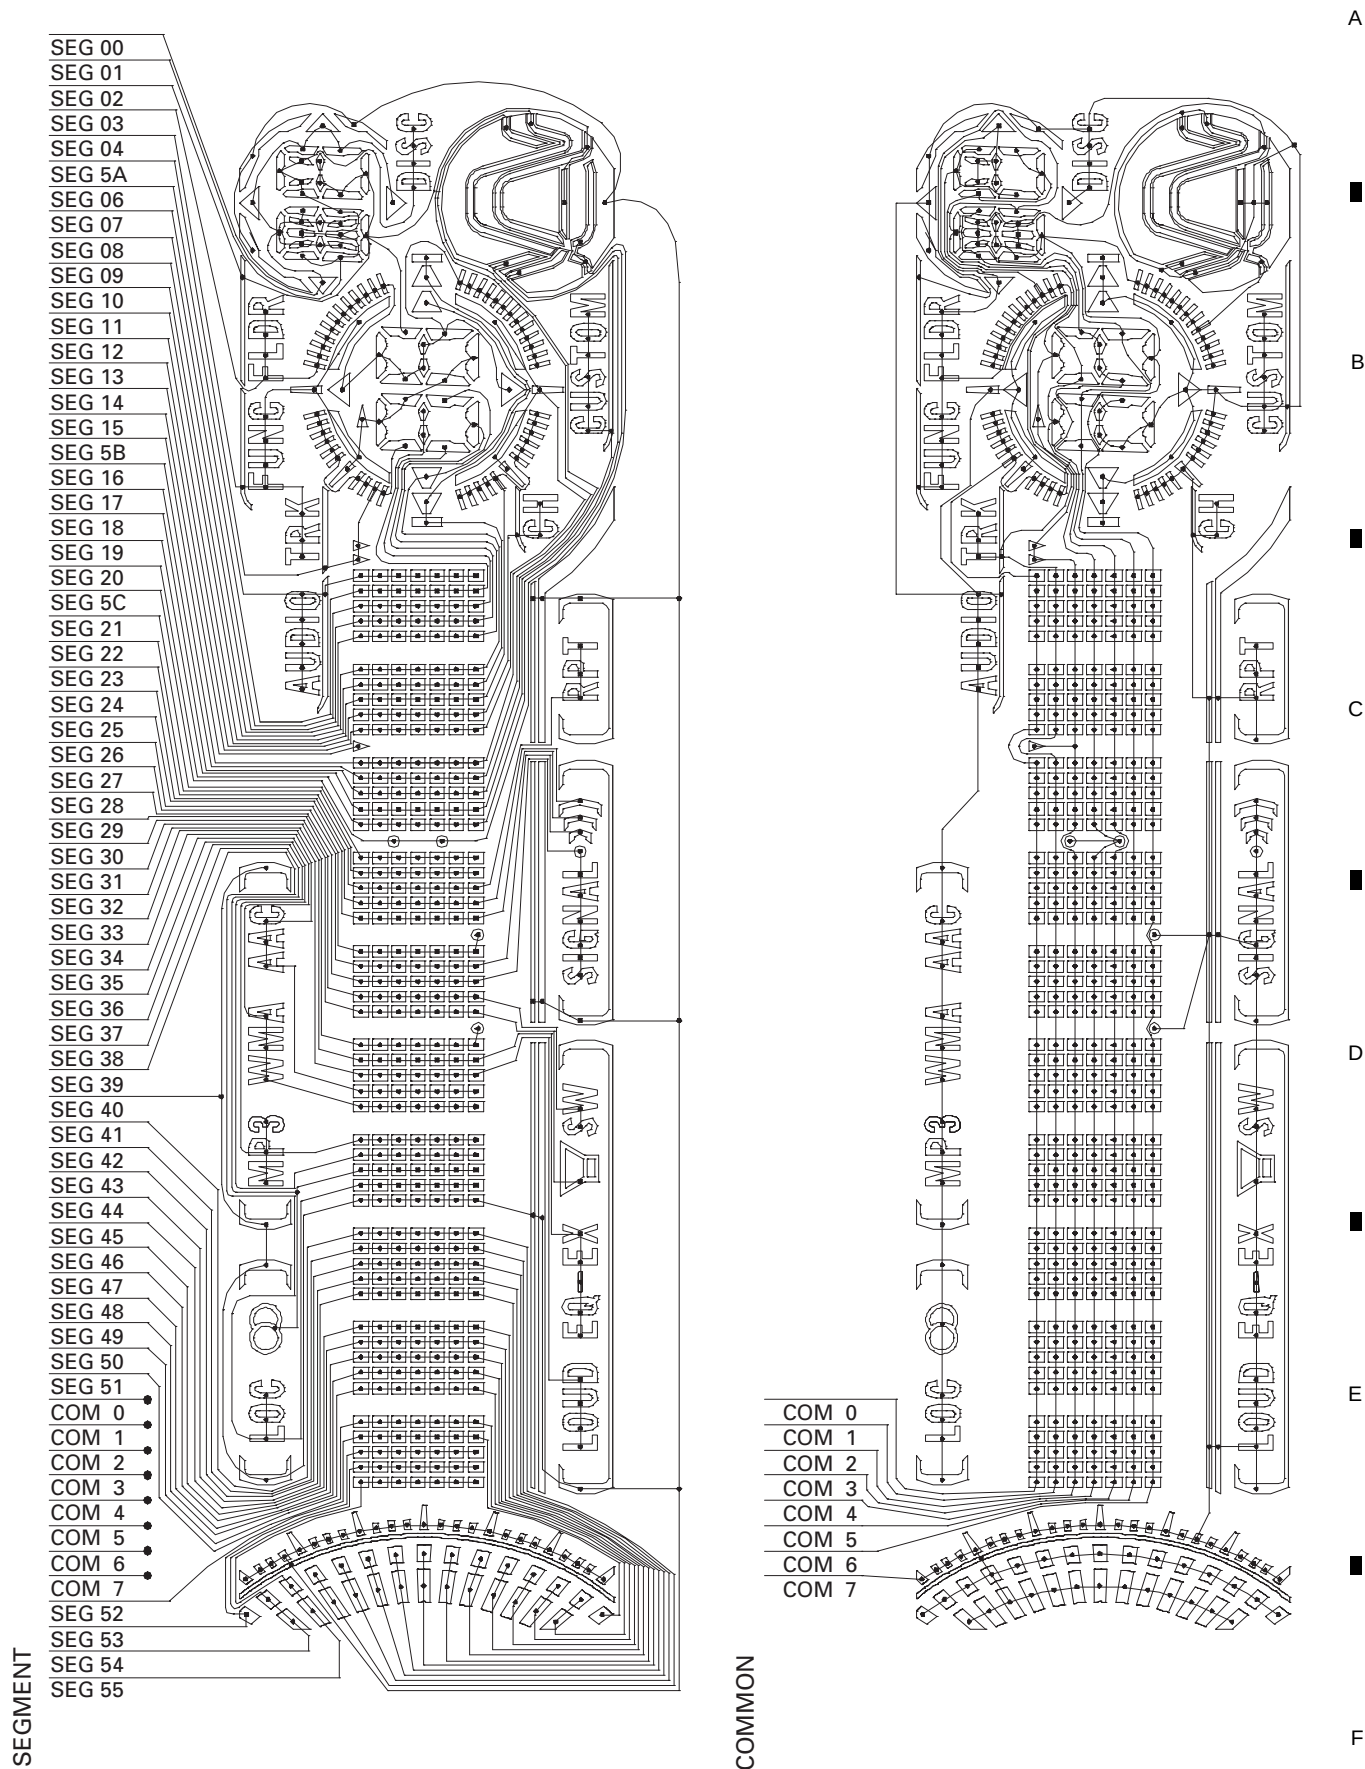

7.3 OPERATIONAL FLOW CHART

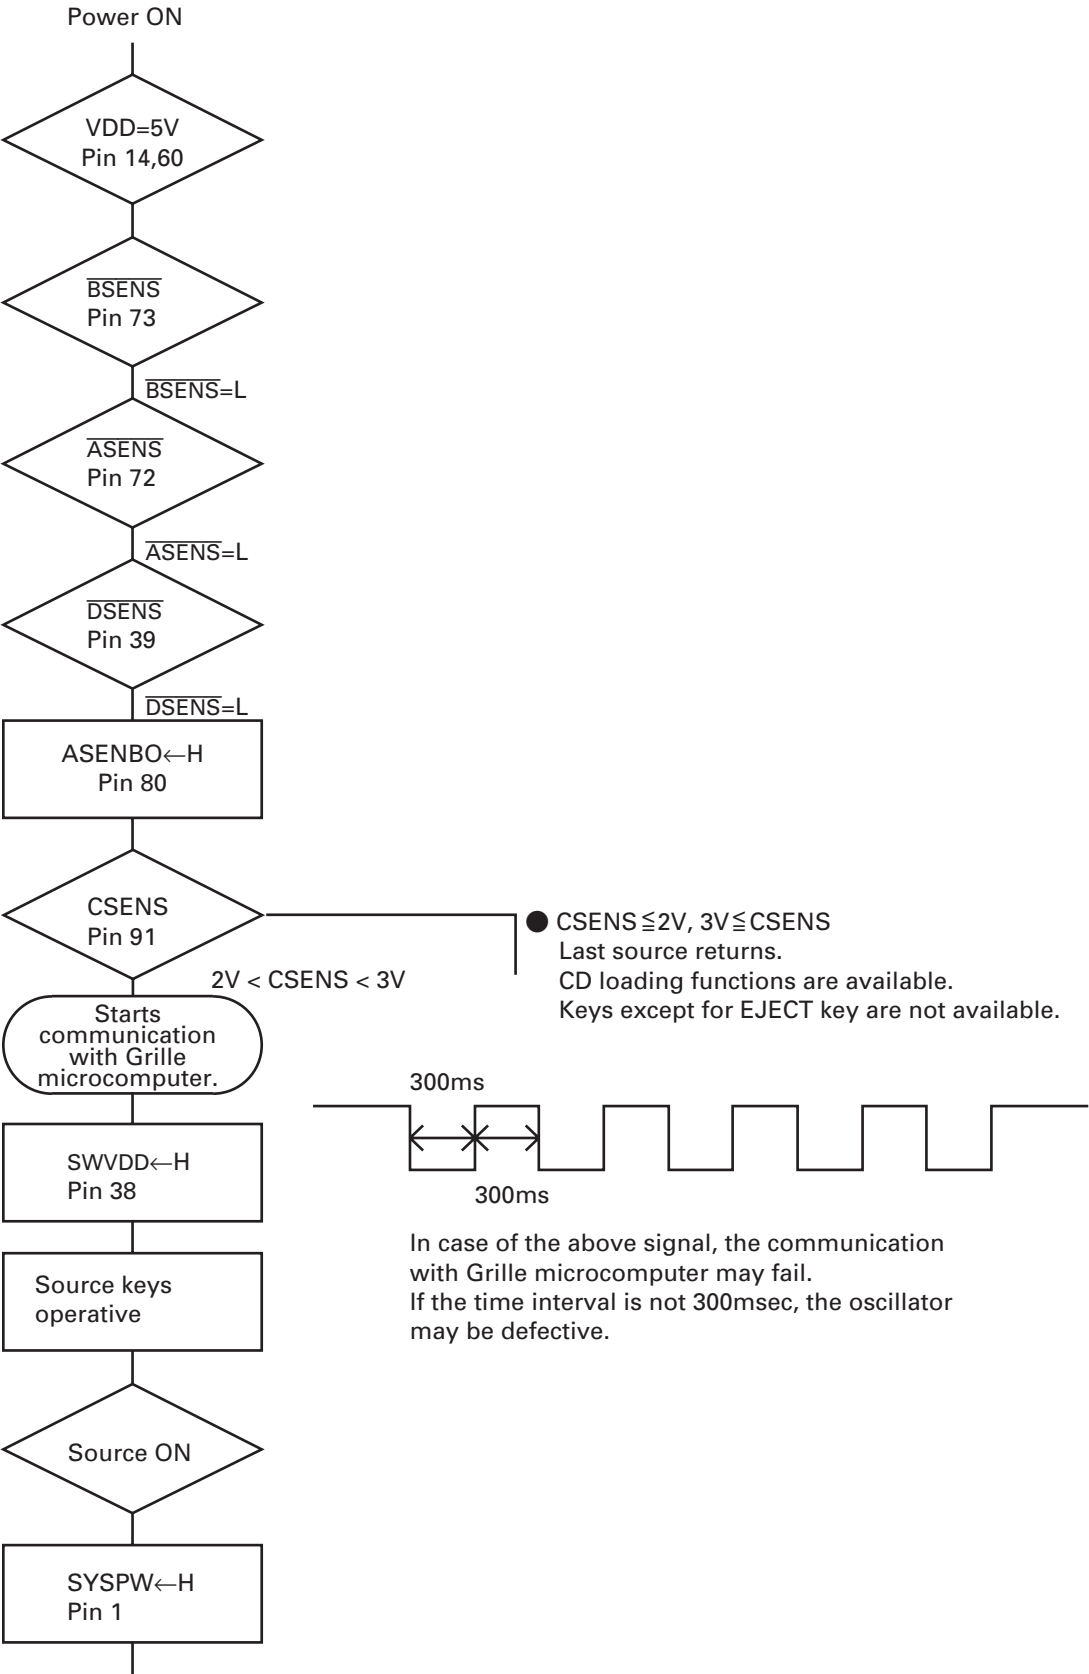

Completes power-on operation.  
(After that, proceed to each source operation)


## 7.4 CLEANING



Before shipping out the product, be sure to clean the following portions by using the prescribed cleaning tools:

| Portions to be cleaned | Cleaning tools                                        |
|------------------------|-------------------------------------------------------|
| CD pickup lenses       | Cleaning liquid : GEM1004<br>Cleaning paper : GED-008 |

## 8. OPERATIONS

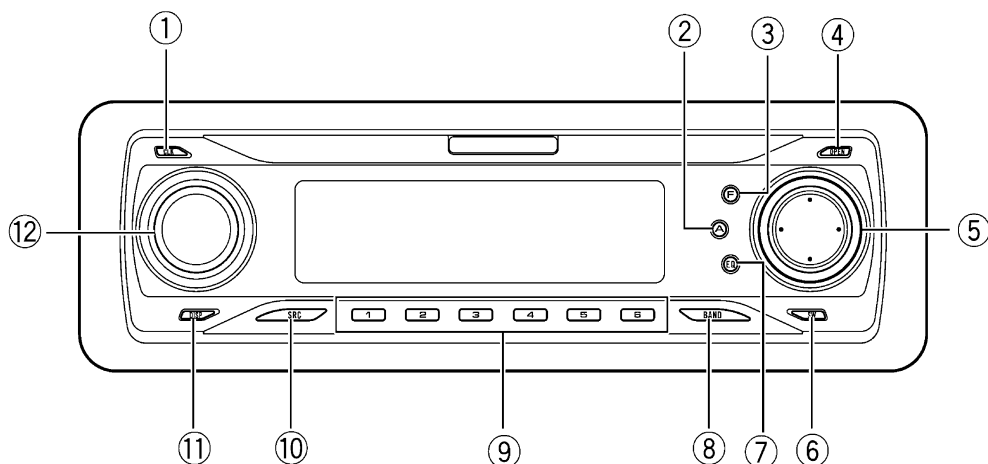

### Head unit

#### ① **CLOCK button**

Press to change to the clock display.

#### ② **AUDIO button**

Press to select various sound quality controls.

#### ③ **FUNCTION button**

Press to select functions.

#### ④ **OPEN button**

Press to open the front panel.

#### ⑤ **▲/▼/◀/▶ buttons**

Press to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

#### ⑥ **SW button**

Press to directly select subwoofer setting menu.

#### ⑦ **EQ button**

Press to select various equalizer curves.

#### ⑧ **BAND button**

Press to select among three FM bands and one AM band and to cancel the control mode of functions.

#### ⑨ **1-6 buttons**

Press for preset tuning and disc number search when using a multi-CD or multi-DVD player.

#### ⑩ **SOURCE button**


This unit is turned on by selecting a source. Press to cycle through all the available sources.

#### ⑪ **DISPLAY button**

Press to select different displays.

#### ⑫ **VOLUME**

When you press **VOLUME**, it extends outward so that it becomes easier to turn. To retract **VOLUME**, press it again. ■

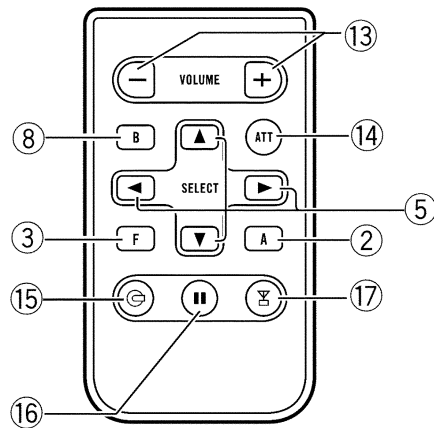

**⑬ VOLUME button**

Press to increase or decrease the volume.

**⑭ ATT button**

Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.

**⑮ CD button**

Press to select the built-in, multi-CD or DVD player as the source.


**⑯ PAUSE button**

Press to turn pause on or off.

**⑰ TUNER button**

Press to select the tuner or TV as the source. 

## Playing a CD

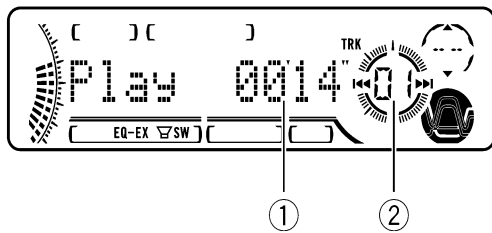

These are the basic steps necessary to play a CD with your built-in CD player. More advanced CD operation is explained starting on the next page.

### ① Play time indicator

Shows the elapsed playing time of the current track.

### ② Track number indicator

Shows the track currently playing.


### 1 Press OPEN to open the front panel.

CD loading slot appears.

- After a CD has been inserted, press **SOURCE** to select the built-in CD player.

### 2 Insert a CD into the CD loading slot.

Playback will automatically start.

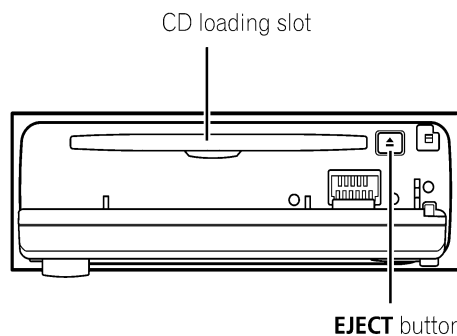

- You can eject a CD by pressing **EJECT**.
- To avoid a malfunction, make sure that no metal object comes into contact with the terminals when the front panel is open.

### 3 Close the front panel.

### 4 Use VOLUME to adjust the sound level.

Rotate it to increase or decrease the volume.

### 5 To perform fast forward or reverse, press and hold ◀ or ▶.

- If you select **Rough**, pressing and holding ◀ or ▶ enables you to search every 10 tracks in the current disc.

### 6 To skip back or forward to another track, press ◀ or ▶.


Pressing ▶ skips to the start of the next track. Pressing ◀ once skips to the start of the current track. Pressing again will skip to the previous track.



#### Notes

- The built-in CD player plays one, standard, 12-cm or 8-cm (single) CD at a time. Do not use an adapter when playing 8-cm CDs.
- Do not insert anything other than a CD into the CD loading slot.
- If you cannot insert a disc completely or if after you insert a disc the disc does not play, check that the label side of the disc is up. Press **EJECT** to eject the disc, and check the disc for damage before inserting it again.
- ▲ and ▼ can be operated when MP3, WMA or WAV is playing.
- If an error message such as **ERROR-11** is displayed.
- When a CD TEXT disc is inserted, the disc and track titles begin to scroll to the left automatically.
- When Ever Scroll is set to ON at the initial setting, CD text information scrolls continuously in the display. If you want to display the first 10 characters of text information temporarily and scroll from the beginning, press and hold **DISPLAY**. About Ever Scroll,

## Introduction of advanced built-in CD player operation

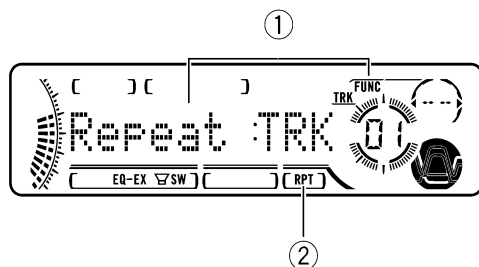

### ① Function display

Shows the function status.

### ② RPT indicator

Shows when repeat play is turned on.

### ● Press FUNCTION to display the function names.

Press **FUNCTION** repeatedly to switch between the following functions:

**Repeat** (repeat play)—**Random** (random play)—**Scan** (scan play)—**Pause** (pause)—**COMP** (compression and BMX)—**FF/REV** (search method)

- To return to the playback display, press **BAND**.

### Note

If you do not operate the function within about 30 seconds, the display is automatically returned to the playback display. ■

## Repeating play

Repeat play lets you hear the same track or disc over again.

### 1 Press FUNCTION to select Repeat.

Press **FUNCTION** until **Repeat** appears in the display.

### 2 Press ◀ or ▶ to select the repeat range.

This switches you to the selected setting.

- **Repeat:DSC** – Repeat the current disc
- **Repeat:TRK** – Repeat just the current track

### Note

If you perform track search or fast forward/reverse during **Repeat:TRK**, the repeat play range changes to **Repeat:DSC**. ■

## Playing tracks in a random order

Random play lets you play back tracks on the CD in a random order.

### 1 Press FUNCTION to select Random.

Press **FUNCTION** until **Random** appears in the display.

### 2 Press ▲ to turn random play on.

**Random:ON** appears in the display. Tracks will play in a random order.

### 3 Press ▼ to turn random play off.

**Random:OFF** appears in the display. Tracks will continue to play in order. ■

## Scanning tracks of a CD

Scan play lets you hear the first 10 seconds of each track on the CD.

### 1 Press FUNCTION to select Scan.

Press **FUNCTION** until **Scan** appears in the display.

### 2 Press ▲ to turn scan play on.

**Scan:ON** appears in the display. The first 10 seconds of each track is played.

A

### 3 When you find the desired track press ▼ to turn scan play off.

**Scan :OFF** appears in the display. The track will continue to play.

- If the display has automatically returned to the playback display, select **Scan** again by pressing **FUNCTION**.

B



#### Note

After scanning of a CD is finished, normal playback of the tracks will begin again. ■

C

## Pausing CD playback

Pause lets you temporarily stop playback of the CD.

### 1 Press **FUNCTION** to select **Pause**.

Press **FUNCTION** until **Pause** appears in the display.

### 2 Press ▲ to turn pause on.

**Pause :ON** appears in the display. Play of the current track pauses.

### 3 Press ▼ to turn pause off.

**Pause :OFF** appears in the display. Play will resume at the same point that you turned pause on. ■

D

■

## Using compression and BMX

Using the COMP (compression) and BMX functions let you adjust the sound playback quality of this player. Each of the functions have a two-step adjustment. The COMP function balances the output of louder and softer sounds at higher volumes. BMX controls sound reverberations to give playback a fuller sound. Listen to each of the effects as you select through them and use the one that best

enhances the playback of the track or CD that you are listening to.

### 1 Press **FUNCTION** to select **COMP**.

Press **FUNCTION** until **COMP** appears in the display.

### 2 Press ▲ or ▼ to select your favorite setting.

Press ▲ or ▼ repeatedly to switch between the following settings:

**COMP OFF—COMP 1—COMP 2—**

**COMP OFF—BMX 1—BMX 2** ■

## Selecting the search method

You can switch the search method between fast forward/reverse and searching every 10 tracks.

### 1 Press **FUNCTION** to select **FF/REV**.

Press **FUNCTION** until **FF/REV** appears in the display.

- If the search method **Rough** has been previously selected, **Rough** will be displayed.

### 2 Press ◀ or ▶ to select the search method.

Press ◀ or ▶ until the desired search method appears in the display.

- **FF/REV** – Fast forward and reverse
- **Rough** – Searching every 10 tracks ■

F



## Searching every 10 tracks in the current disc

If a disc contains over 10 tracks, you can search every 10 tracks. When a disc contains a lot of tracks, you can roughly search for the track you want to play.

### 1 Select the search method Rough.

### 2 Press and hold ◀ or ▶ to search every 10 tracks on a disc.

- If a disc contains less than 10 tracks, pressing and holding ▶ recalls the last track of the disc. Also, if the remaining number of tracks after searching every 10 tracks is less than 10, pressing and holding ▶ recalls the last track of the disc.
- If a disc contains less than 10 tracks, pressing and holding ◀ recalls the first track of the disc. Also, if the remaining number of tracks after searching every 10 tracks is less than 10, pressing and holding ◀ recalls the first track of the disc. ■

## Using disc title functions

You can input CD titles and display the title. The next time you insert a CD for which you have entered a title, the title of that CD will be displayed.

## Entering disc titles

Use the disc title input feature to store up to 48 CD titles in the unit. Each title can be up to 10 characters long.

### 1 Play the CD that you want to enter a title for.

### 2 Press FUNCTION and hold until Title In appears in the display.

- When playing a CD TEXT disc, you cannot switch to **Title In**. The disc title will have already been recorded on a CD TEXT disc.

### 3 Press button 1 to select the desired character type.


Press button **1** repeatedly to switch between the following character types:

Alphabet (upper case), numbers and symbols—Alphabet (lower case)—European letters, such as those with accents (e.g., á, à, ä, ç)

- You can select to input numbers and symbols by pressing button **2**.

### 4 Press ▲ or ▼ to select a letter of the alphabet.

Each press of ▲ will display a letter of the alphabet in **A B C ... X Y Z**, numbers and symbols in **1 2 3 ... > [ ]** order. Each press of ▼ will display a letter in the reverse order, such as **Z Y X ... C B A** order.

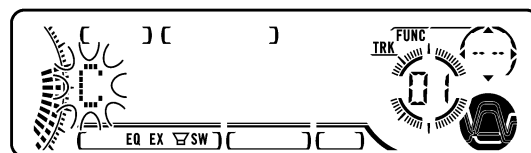

### 5 Press ▶ to move the cursor to the next character position.

When the letter you want is displayed, press ▶ to move the cursor to the next position and then select the next letter. Press ◀ to move backwards in the display.

### 6 Move the cursor to the last position by pressing ▶ after entering the title.

When you press ▶ one more time, the entered title is stored in memory.

### 7 Press BAND to return to the playback display.

**Notes**

- Titles remain in memory, even after the disc has been removed from the unit, and are recalled when the disc is reinserted.
- After data for 48 discs has been stored in memory, data for a new disc will overwrite the oldest one.
- If you connect a multi-CD player, you can input disc titles for up to 100 discs.

**Displaying disc titles**

You can display the title of any disc that has had a disc title entered.

- **Press DISPLAY.**

Press **DISPLAY** repeatedly to switch between the following settings:

Play time—**Disc Title** (disc title)

When you select **Disc Title**, the title of the currently playing disc is shown in the display.

- If no title has been entered for the currently playing disc, **No Title** is displayed.

**Using CD TEXT functions**

Some discs have certain information encoded on the disc during manufacture. These discs may contain such information as the CD title, track title, artist's name and playback time and are called CD TEXT discs. Only these specially encoded CD TEXT discs support the functions listed below.

**Displaying titles on CD TEXT discs**

- **Press DISPLAY.**

Press **DISPLAY** repeatedly to switch between the following settings:

Play time—**Disc Title** (disc title)—**ArtistName** (disc artist name)—**TrackTitle** (track title)—**ArtistName** (track artist name)

- If specific information has not been recorded on a CD TEXT disc, **No XXXX** will be displayed (e.g., **No TRK TTL**).

**Scrolling titles in the display**

This unit can display the first 10 letters only of **Disc Title**, **ArtistName**, **TrackTitle** and **ArtistName**. When the recorded information is longer than 10 letters, you can scroll the text to the left so that the rest of the title can be seen.

- **Press DISPLAY and hold until the title begins to scroll to the left.**

The rest of the title will appear in the display.


**Note**

When Ever Scroll is set to ON at the initial setting, CD text information scrolls continuously in the display. If you want to display the first 10 characters of text information temporarily and scroll from the beginning, press and hold **DISPLAY**. About Ever Scroll.


## Fixing the Front Panel

If you do not operate the Detaching and Replacing the Front Panel Function, use the supplied fixing screws and fix the front panel to this unit.


### 1. Attach the holders to both sides of the front panel.

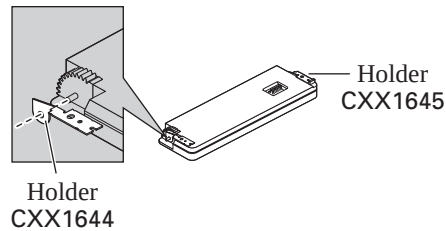


### 2. Replace the front panel to the unit.

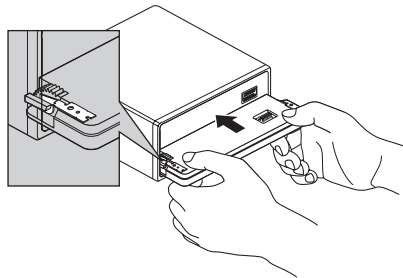

### 3. Flip the holders into upright positions.

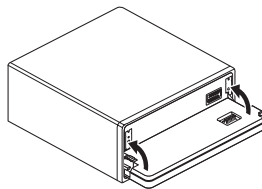

### 4. Fix the front panel to the unit using fixing screws.

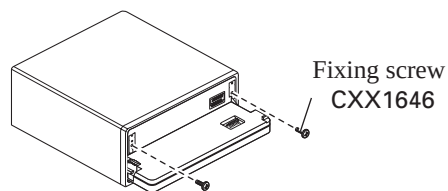

## F

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

DEH-P5750MP/XM/ES

■

7

■

8

■

● Jigs List

| Name      | Jig No. | Remarks                           |
|-----------|---------|-----------------------------------|
| Test Disc | TCD-784 | Checking the grating              |
| L.P.F.    |         | Checking the grating (Two pieces) |

A

B

C

D

E

F