



# Test Instruction, Mechanical

Applicable for G900

## Contents

<b>1</b>	<b>General.....</b>	<b>2</b>
<b>2</b>	<b>Pre-Test Preparations .....</b>	<b>2</b>
2.1	Liquid Damage Inspection .....	2
2.2	Software Update .....	3
2.3	Phone Lock Reset .....	3
<b>3</b>	<b>Service Tests.....</b>	<b>4</b>
3.1	Main Display Test .....	4
3.2	Camera Test .....	4
3.3	Touch screen .....	5
3.4	Illumination Test.....	5
3.5	Led's .....	5
3.6	Keyboard Test .....	5
3.7	Vibrator Test .....	6
3.8	Speaker Test .....	6
3.9	Microphone Test .....	6
3.10	FM Radio Test.....	6
<b>4</b>	<b>Manual Tests .....</b>	<b>7</b>
4.1	SIM Test.....	7
4.2	Bluetooth .....	7
4.3	System Connector .....	7
4.4	On The Air Call to Mobile .....	8
<b>5</b>	<b>Revision History .....</b>	<b>9</b>

# 1 General

- This document describes the process used for software upgrades and how to functionally test the mobile phone at a Mechanical Repair Level.
- These activities can be performed at the Mechanical Repair level and higher.
- All tests must be performed.
- If the mobile passes these tests without any failures, it is OK to return it to the customer.
- If there are any failures, the mobile must be repaired according to the troubleshooting guide or sent to a higher repair level.
- A Battery Eliminator may be used in place of a standard fully charged battery for all tests at the mechanical level with the exception of the Battery Charger test.


## 2 Pre-Test Preparations

### 2.1 Liquid Damage Inspection

Before any tests are performed, an inspection of the liquid intrusion indicator should be made at the location shown. If the liquid intrusion indicator is red this is an indication of possible liquid exposure. If the liquid intrusion indicator suggests liquid exposure please consult your local company for additional handling instructions.

The following image shows the location of the liquid intrusion indicator.

Location of the Liquid Indicator.

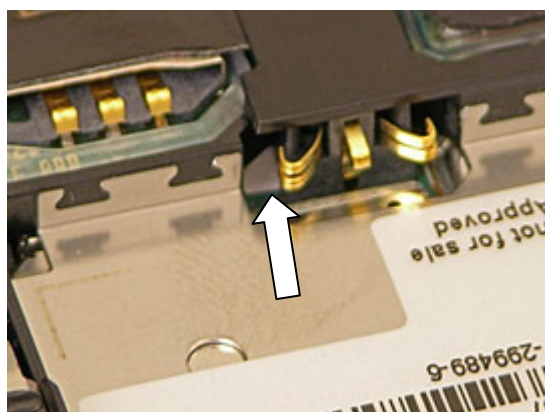



## **2.2 Software Update**

Update the handset with the latest signalling software using EMMA III.

### **2.2.1 Verify Software Version**

To verify if the mobile needs new software, you have to check the Software Version in the mobile. Current Software Versions are checked using the following steps:

1. Start the phone.
2. Press the sequence → \* ← ← \* ← \* with the navigation Key and Key Board
3. Select "Service Info".
4. Select "Software info".
5. Check the software file revisions on the display. (Contact your line supervisor to determine what the latest SW revision is.)
6. Press "OK" to return to the "Service Info" menu.

### **2.2.2 Update Software Version**

Update the software in the mobile by doing the following:

1. Attach a fully charged battery to the mobile.
2. Open the EMMA III application and log in.
3. Ensure the mobile is powered off.
4. While holding the "C" button connect the mobile to the USB Flash Cable.
5. Select the appropriate protocol and follow the instructions.

## **2.3 Phone Lock Reset**

If the phone lock is on for this model, you must use the Phone Lock Reset tool in EMMA III to automatically reset the 4 digit phone lock code.

1. Attach a fully charged battery to the mobile.
2. Open the EMMA III application and log in.
3. Ensure the mobile is powered off.
4. While holding the "C" button, connect the mobile to the USB Flash Cable.
5. When prompted, select "Phone Lock Reset".
6. The program will display "Success" on the USB icon.



## 3 Service Tests

**NOTE!** It is **not** necessary to have a SIM card inserted for the Service Tests unless specifically noted.

1. Press the "On/Off" button to start the mobile.
2. Select "Normal mode", otherwise the radio-test doesn't work.
3. Press the sequence → \* ← ← \* ← \* with the navigation Key and Key Board keyboard
4. Select "Service Tests" then press the "Select" key.

### 3.1 Main Display Test

**NOTE!** Minor variations in display brightness and color may occur between phones. There may be tiny bright dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

To verify the display:

1. Select "Main Display" from the "Service Tests" menu and press the "Select" key.
2. The words "Main Display" will be splashed in the center of the screen and then the display toggles between different test patterns. Make sure that there are no missing segments and the colors/contrast are OK.
3. Press the "Back" key to return to the Service Tests menu.

### 3.2 Camera Test

To verify the camera functionality:

1. Select Camera from the Service Tests menu.
2. The camera function will now starts and are visible in the display.
3. Camera test starts with video camera and you can switch to check the 5 MPixel camera by pressing rear. Make sure that the contrast and light is OK.
4. To check the Flash press flash in the camera test.
5. Press the "Back" key to return to the Service Tests menu.

### **3.3 Touch screen**

To verify the touch screen functionality:

1. Select Touch screen from the Service Tests menu.
2. Use the stylus pen do hand writing check
3. Press the Jog dial key to go back to the service tests menu.

### **3.4 Illumination Test**

To verify that the backlight is OK:

1. Select .illumination from the Service Tests menu.
2. Check that the backlight on the LCD and the keyboard is toggle between on and Off.
3. Press the “Back” key to return to the Service Tests menu.

### **3.5 Led's**

To verify that the LED's are OK:

1. Select LED's from the Service Tests menu
2. Check that the led on the bottom switching between red and green.
3. Press the “Back” key to return to the Service Tests menu.

### **3.6 Keyboard Test**

To verify that the keyboard, Navigation key, side keys and camera lens cover are OK:

1. Select “Keyboard” from the “Service Tests” menu and press the “Select” key.
2. The phrase “Keyboard Test. Press any key.” will be splashed on the screen.
3. Press all keys on the keypad, the side volume keys. If they are ok a text message will be displayed corresponding to the key pressed. All keys should be tested.
4. Press the “Back” key to return to the Service Tests menu.

### 3.7 Vibrator Test

To verify that the vibrator functions:

1. Select "Vibrator" from the "Service Tests" menu and press the "Select" key.
2. The words "Vibrator off" will be displayed on the screen.
3. Press the "ON" button to start the Vibrator test.
4. Press the "Back" key to return to the Service Tests menu.

### 3.8 Speaker Test

**WARNING! DO NOT HOLD THE PHONE TO YOUR EAR WHILE PERFORMING THIS TEST.**

To verify the Speaker functions:

1. Select "Speaker" from the "Service Tests" menu and press the "Select key.
2. Adjust the volume and make sure that the Speaker is working properly.
3. Switch between "front" and "rear" to test both back speaker and earphone.
4. Press the "Back" key to return to the Service Tests menu.

### 3.9 Microphone Test

This test is intended to test the microphone. Therefore, the speaker should be tested before this test is entered.

1. Select "Microphone" from the "Service Tests" menu and press the "Select" key.
2. The phrase "Microphone Recording." will be displayed on the screen. Speak into the phone and then wait until the phrase "Microphone Playing" is displayed. The message that you just recorded will be played back. Ensure that the recorded sound is clear.
3. After playing the recording the phone will return to the Service Tests menu.

### 3.10 FM Radio Test

To verify the function of the FM radio:

1. Install a Portable Hands-Free (PHF) to the system connector.
2. Select "FM radio" from the "Service Tests" menu and press the "Select" key.
3. Using the keypad set the frequency to a known good FM station.
4. While listening to the FM station with the PHF ensure that the sound quality compares to a known good handset.
5. Remove the PHF and press the "OK" key to end the test.

## 4 Manual Tests

### 4.1 SIM Test

To verify that the phone can detect a SIM:

1. Insert a SIM card, connect a battery and start the unit.
2. After the Start-up Menu appears, select "Normal mode".
3. If the SIM is detected the phone will start "Searching" for a signal. If the SIM is not detected the phone will ask you to "Insert SIM card".

### 4.2 Bluetooth

To verify that the Bluetooth communication is functioning properly:

1. Insert a SIM card, connect a battery and start the unit.
2. Activate the Bluetooth function by entering the menu and selecting: **Settings/Connectivity/Bluetooth/Turn On.**
3. Set up a Bluetooth link between the mobile and another device. If a link can be established, the Bluetooth module is considered functional.
4. When test is completed, turn off the Bluetooth function and press/hold the "⏏" to return to the main screen.

### 4.3 System Connector

#### 4.3.1 Battery Charger and Charging LED

To verify if the charging function is properly working:

1. Connect a battery.
2. Connect the Wall Charger to the system connector.
3. Verify that the main display shows that the phone is being charged.
4. Remove the Wall Charger from the system connector and verify that the main display no longer shows the phone being charged.

#### 4.3.2 Portable Hands Free (PHF)

1. Insert a SIM card, connect a battery and start phone.
2. Enter the Service menu using the following Navigation key and keypad sequence: → \* ← ← \* ← \*
3. Select "Service Tests" then press the "Select" key.
4. Install the PHF to the system connector.
5. Select "Microphone" from the "Service Tests" menu and press the "Select" key.

6. The phrase "Microphone Recording." Will be displayed on the screen. Speak into the PHF and then wait until the phrase "Microphone Playing" is displayed. The message that you just recorded will be played back through the PHF earpiece. Ensure that the recorded sound is clear.
7. Press and hold the "Back" key to get out of the "Service Tests" menu and remove the PHF from the system connector.

## 4.4 On The Air Call to Mobile

**NOTE!** An "On the Air" test can only be performed if the mobile has an activated SIM card properly installed in the mobile and a network signal is available. This test cannot be performed with a Test SIM.

To verify the radio functions in the phone do the following:

1. Insert an operator SIM card and start phone.
2. Set up a call from a landline phone (PSTN) to the mobile.
3. Answer the phone call.
4. Check that the ringer is working and that the backlight switches on OK.
5. Check that the quality of sound both in the mobile and the landline phone (PSTN) are OK.
6. Adjust the volume up and down using the side volume key and check that the volume in the mobile is altered.
7. End the call. Check that the ending procedure is OK and that the talk time is displayed.

## 5 Revision History

Rev.	Date	Changes / Comments
1	2008-05-21	Initial Release