

CDC-R504MP/X504MP

SERVICE MANUAL

Ver 1.0 2004. 01

US Model
Canadian Model
CDC-X504MP

AEP Model
UK Model
CDC-R504MP/X504MP



Photo: CDC-X504MP

- The tuner and CD sections have no adjustments.

AUDIO POWER SPECIFICATIONS (US MODEL)

POWER OUTPUT AND TOTAL HARMONIC DISTORTION
23.2 watts per channel minimum continuous average power into
4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more
than 5% total harmonic distortion.

Model Name Using Similar Mechanism	CDX-R3300/R3300T
CD Drive Mechanism Type	MG-611MA-186//Q
Optical Pick-up Name	KSS1000E

SPECIFICATIONS

Tuner section

FM

Tuning range	US, Canadian Model: 87.5 – 107.9 MHz AEP, UK Model: 87.5 – 108 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Usable sensitivity	9 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	67 dB (stereo), 69 dB (mono)
Harmonic distortion at 1 kHz	0.5% (stereo), 0.3% (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz

AM (US, Canadian Model)

Tuning range	530 – 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Sensitivity	30 μ V

MW/LW (AEP, UK Model)

Tuning range	MW: 531 – 1,602 kHz LW: 153 – 279 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Sensitivity	MW: 30 μ V LW: 40 μ V

CD player section

Signal-to-noise ratio	120 dB
Frequency response	10 – 20,000 Hz
Wow and flutter	Below measurable limit

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	52 W $\times$ 4 (at 4 ohms)

General

Outputs	Audio outputs terminal (rear/sub switchable) Power antenna relay control terminal Power amplifier control terminal Telephone ATT control terminal (AEP, UK Model)
Inputs	Antenna input terminal
Tone controls	Low: ± 10 dB at 60 Hz (HIP-HOP) Mid: ± 10 dB at 1 kHz (HIP-HOP) High: ± 10 dB at 10 kHz (HIP-HOP)
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 $\times$ 50 $\times$ 176 mm (7 1/8 $\times$ 2 $\times$ 7 in.) (w/h/d)
Mounting dimensions	Approx. 182 $\times$ 53 $\times$ 161 mm (7 1/4 $\times$ 2 1/8 $\times$ 6 3/8 in.) (w/h/d)
Mass	Approx. 1.2 kg (2 lb. 10 oz.)
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1) Card remote control RM-Z304

Design and specifications are subject to change without
notice.

FM/AM COMPACT DISC PLAYER

US, Canadian model

FM/MW/LW COMPACT DISC PLAYER

AEP, UK model

9-877-518-01

2004A04-1

© 2004. 01

Sony Corporation

e Vehicle Company

Published by Sony Engineering Corporation



SERVICE NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts. The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

TEST DISCS

This set can playback CD-R and CD-ROM discs. The following test discs should be used to check the capability:

CD-R test disc TCD-R082LMT (Part No. J-2502-063-1)
CD-RW test disc TCD-W082L (Part No. J-2502-063-2)

• US, Canadian model

CAUTION


Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

• AEP, UK model

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


This compact disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the exterior.

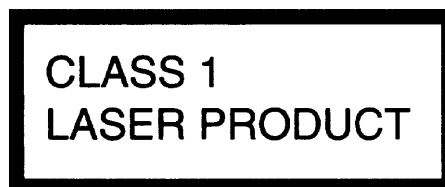

This label is located on the bottom of the chassis.

If the optical pick-up block is defective, please replace the whole optical pick-up block.

Never turn the semi-fixed resistor located at the side of optical pick-up block.

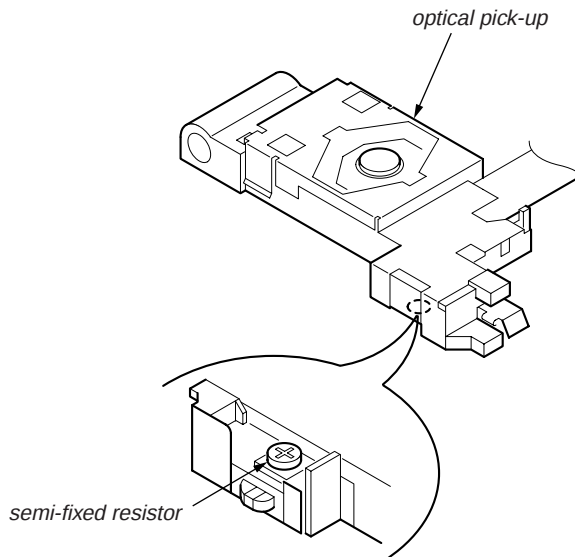

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

Notes on CD-Rs (recordable CDs)/CD-RWs (rewritable CDs)

This unit can play the following discs:

Type of discs	Label on the disc
Audio CD	 
MP3 files	   


- Some CD-Rs/CD-RWs (depending on the equipment used for its recording or the condition of the disc) may not play on this unit.
- You cannot play a CD-R/CD-RW that is not finalized*.
- You can play MP3 files recorded on CD-ROMs, CD-Rs, and CD-RWs.
- A CD-R/CD-RW to which a session can be added can be played.

* A process necessary for a recorded CD-R/CD-RW disc to be played on the audio CD player.

EXTENSION CABLE AND SERVICE POSITION

When repairing or servicing this set, connect the jig (extension cable) as shown below.

- Connect the MAIN board (CN301) and the SERVO board (CN2) with the extension cable (Part No. J-2502-076-1).

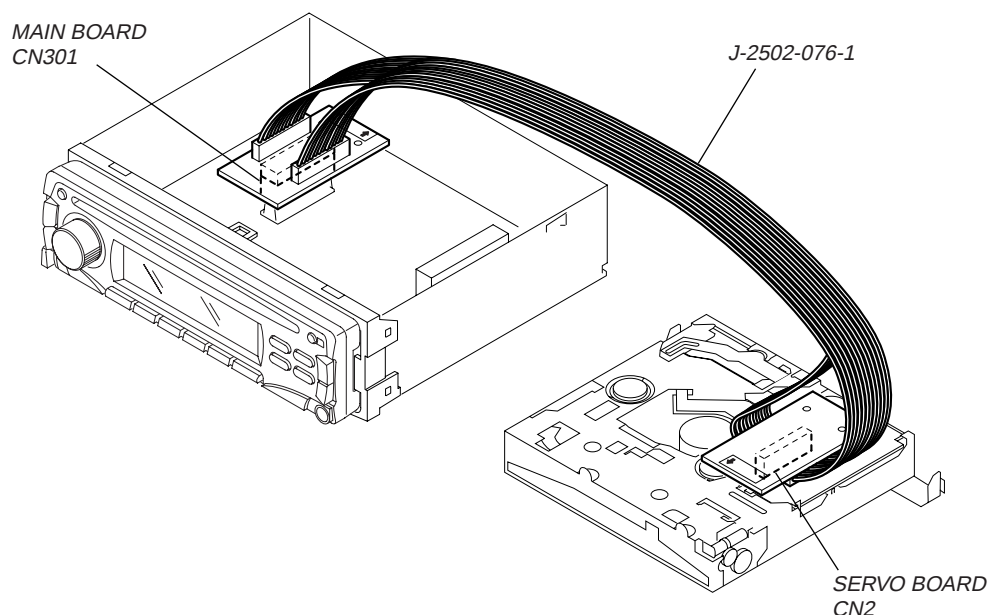

● UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead free mark (LF) indicating the solder contains no lead. (Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time. Soldering irons using a temperature regulator should be set to about 350°C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

TABLE OF CONTENTS

1. GENERAL

Location of Controls	5
Connections (US, Canadian Model)	6
Connections (AEP, UK Model)	7

2. DISASSEMBLY

2-1. Sub Panel Assy	9
2-2. CD Mechanism Block	9
2-3. Main Board	10
2-4. Chassis (T) Sub Assy	10
2-5. Roller Arm Assy	11
2-6. Chassis (OP) Assy	11
2-7. Optical Pick-up	12
2-8. SL Motor Assy (M902)	12
2-9. LE Motor Assy (M903)	13
2-10. Servo Board	13

3. DIAGRAMS

3-1. IC Pin Descriptions	14
3-2. Block Diagram –CD Section–	19
3-3. Block Diagram –Main Section–	20
3-4. Block Diagram –Display Section–	21
3-5. Circuit Boards Location	21
3-6. Note for Printed Wiring Boards and Schematic Diagrams	22
3-7. Waveforms	22
3-8. Printed Wiring Boards –CD Mechanism Section–	23
3-9. Schematic Diagram –CD Mechanism Section (1/2)–	24
3-10. Schematic Diagram –CD Mechanism Section (2/2)–	25
3-11. Schematic Diagram –Main Section (1/2)–	26
3-12. Schematic Diagram –Main Section (2/2)–	27
3-13. Printed Wiring Board –Main Section–	28
3-14. Printed Wiring Boards –Display Section–	29
3-15. Schematic Diagram –Display Section–	30
3-16. IC Block Diagrams	31

4. EXPLODED VIEWS

4-1. Main Section	35
4-2. Front Panel Section	36
4-3. CD Mechanism Section (1)	37
4-4. CD Mechanism Section (2)	38
4-5. CD Mechanism Section (3)	39
4-6. CD Mechanism Section (4)	40


5. ELECTRICAL PARTS LIST

SECTION 1 GENERAL

This section is extracted
from instruction manual.

LOCATION OF CONTROLS

BASIC OPERATION, AUDIO AND CLOCK ADJUSTMENT

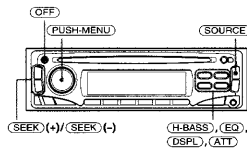

Turning the unit on

Press **(SOURCE)** on the front panel.

The unit also turns on when you insert a disc.

To deactivate the unit

Press **(OFF)**.

The clock appears. After about 10 seconds, the unit switches to DEMO mode (page 4).

To turn the unit off

Press and hold **(OFF)** until everything on the display clears.

This operation is required to avoid car battery drain, if your car has no ACC position on the ignition switch.

Setting the clock

The clock uses a 12-hour digital indication.

- 1 Press and hold **(DSPL)** until the clock appears.

- 2 Turn **(PUSH-MENU)** to set the hour.

- 3 Press **(DSPL)**.

- 4 Turn **(PUSH-MENU)** to set the minute.

- 5 Press **(DSPL)**.

To display the clock

Press **(DSPL)**.

To return to the former display, press **(DSPL)** again.

Adjusting sound

To adjust the volume

Turn **(PUSH-MENU)**.

"VOL (volume)" appears on the display.

To attenuate the sound

Press **(ATT)**.

"ATT•ON" appears on the display.

To restore the previous volume level, press **(ATT)** again.

To adjust sound stage (DSSA*)

You can adjust sound stage and tone balance to best serve a particular seat in the car.

* DSSA: abbreviation of "Drivers Sound Stage Adjustment"

- 1 Press **(PUSH-MENU)**.

- 2 Press **(SEEK) (+)** or **(SEEK) (-)** to select "DSSA."

- 3 Turn **(PUSH-MENU)** to select "L" (for the front left seat), "R" (for the front right seat), or "OFF."

To adjust DSSA manually, press **(PUSH-MENU)** after step 3 above, then press **(SEEK) (+)** or **(SEEK) (-)** to select "BAL" or "FAD," and turn **(PUSH-MENU)** to adjust it.

To adjust the sound characteristics

You can adjust the balance, fader, low pass filter and subwoofer volume.

- 1 Press **(PUSH-MENU)**.

- 2 Press **(SEEK) (+)** or **(SEEK) (-)** to select "BAL," "FAD," "LPF" or "SUB."

Each time you press **(SEEK) (+)**, the item changes as follows:

LOW¹ → MID¹ → HI¹ →

BAL (balance; left-right) →

FAD (fader; front-rear) →

DSSA →

LPF (low pass filter)^{2,3} →

SUB (subwoofer volume)^{2,4}

¹ When EQ is activated (page 6)

² When "SUB" is selected (page 10)

³ The cut off frequency is adjustable to 78 Hz, 125 Hz or OFF.

⁴ The volume level is adjustable between -10 and +10, or to ATT (attenuated).

- 3 Turn **(PUSH-MENU)** to adjust the selected item.

To reinforce the bass sound (H-BASS)

Press **(H-BASS)**.

Each time you press **(H-BASS)**, the H-BASS mode is turned on and off.

Note

The H-BASS adjustment does not affect the signal output from the AUDIO OUT REAR connectors on the rear panel.

To set the equalizer (EQ)

You can select an equalizer curve for 7 music types (HIP-HOP, VOCAL, CLUB, JAZZ, POPS, ROCK, CUSTOM).

You can store a different equalizer setting for each source.

To select the equalizer curve

- 1 Press **(SOURCE)** to select a source (TUNER, CD or AUX).

- 2 Press **(EQ)** repeatedly to select the desired equalizer curve.
To cancel the equalizing effect, select "OFF."

To adjust the equalizer curve

You can adjust and store the equalizer settings for different tone ranges.

- 1 Follow the steps 1 and 2 above.

- 2 Press **(PUSH-MENU)**.

- 3 Press **(SEEK) (+)** or **(SEEK) (-)** to select the desired tone range; "LOW," "MID," or "HI."

- 4 Turn **(PUSH-MENU)** to adjust to the desired volume level.

The volume level is adjustable from -10 to +10 dB by 1 dB steps.

- 5 Repeat steps 2 to 4 to adjust the equalizer curve.

Note

When EQ is set to "OFF," you cannot adjust the equalizer curve settings.


To restore the factory settings

You can restore the factory settings for the equalizer curve settings while adjusting them.

During adjustment, press and hold **(PUSH-MENU)** until the equalizer type (such as HIP-HOP) appears on the display.


SECTION 2
DISASSEMBLY

Note : This set can be disassemble according to the following sequence.

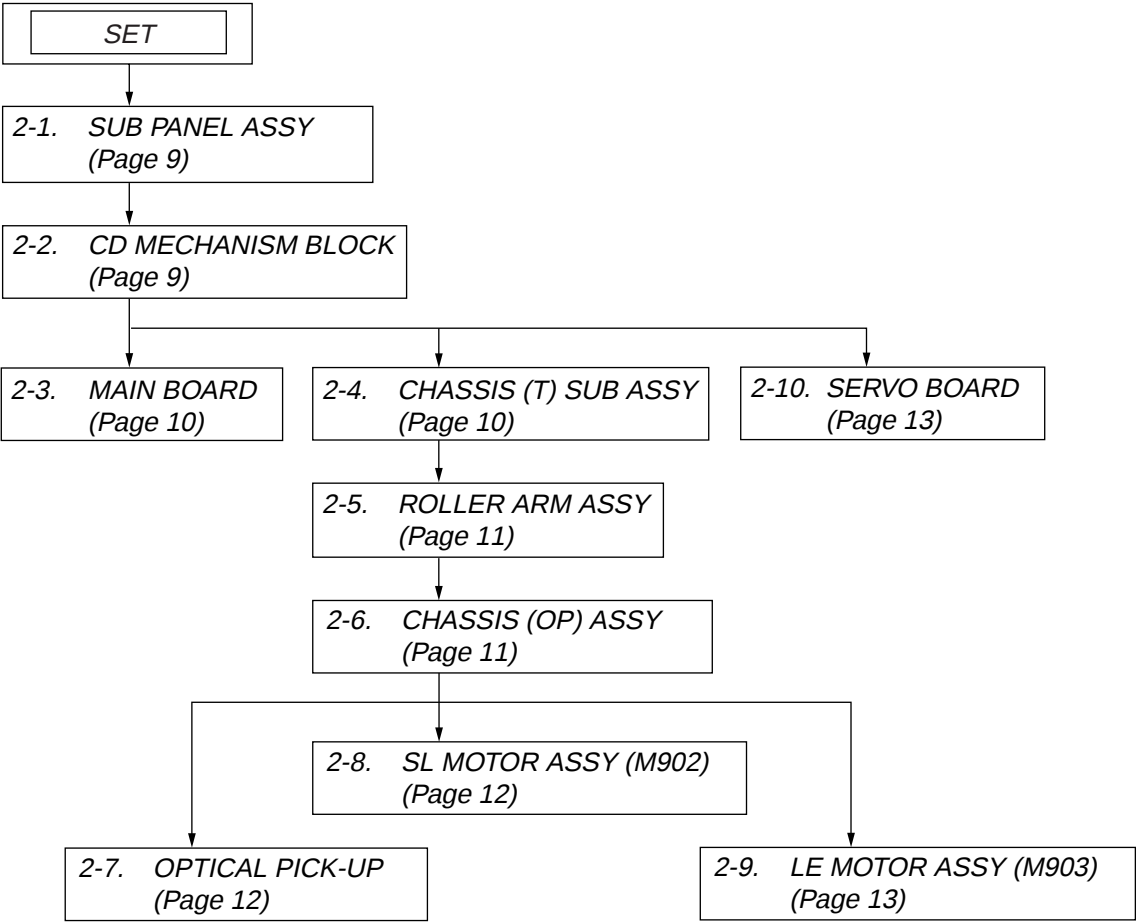


Note : Follow the disassembly procedure in the numerical order given.


2-1. SUB PANEL ASSY

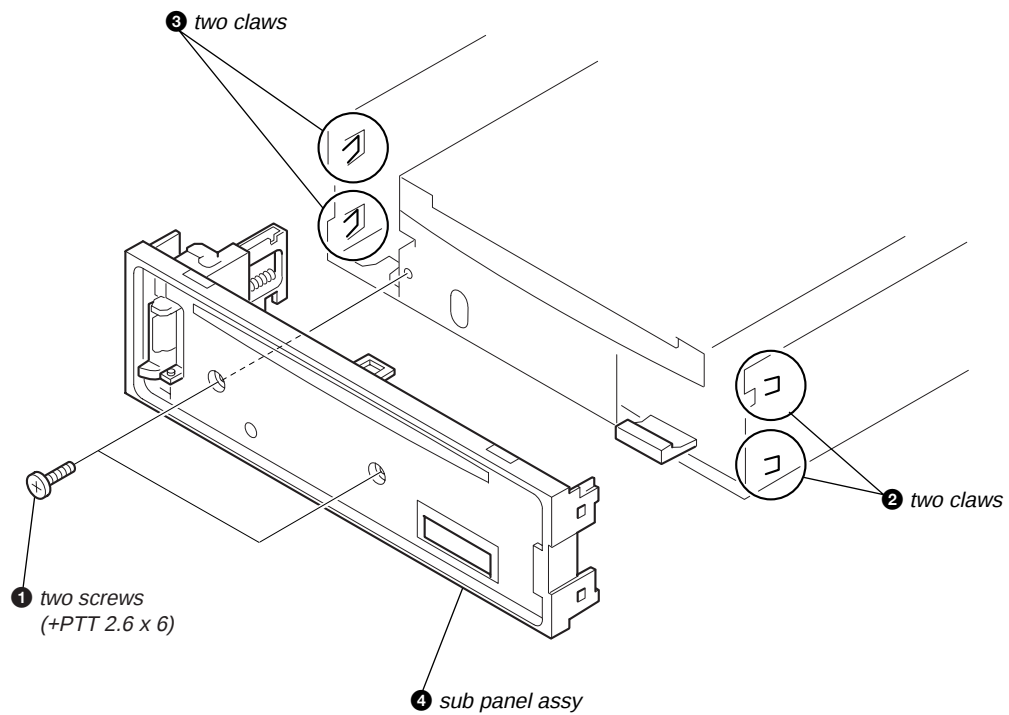


2-2. CD MECHANISM BLOCK

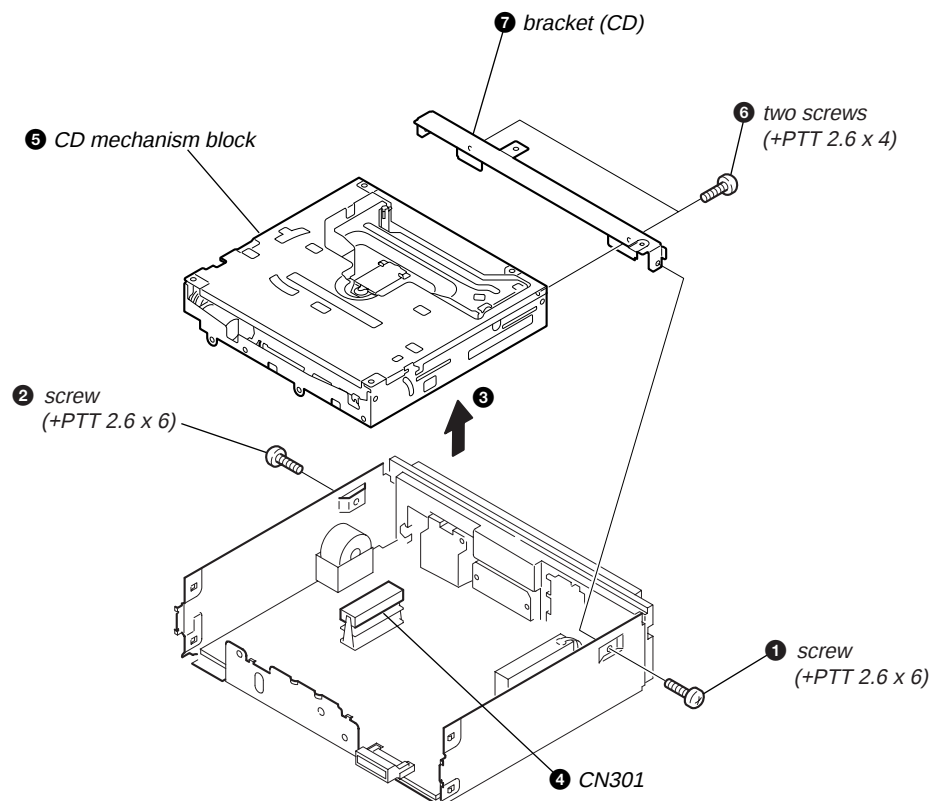


2-3. MAIN BOARD

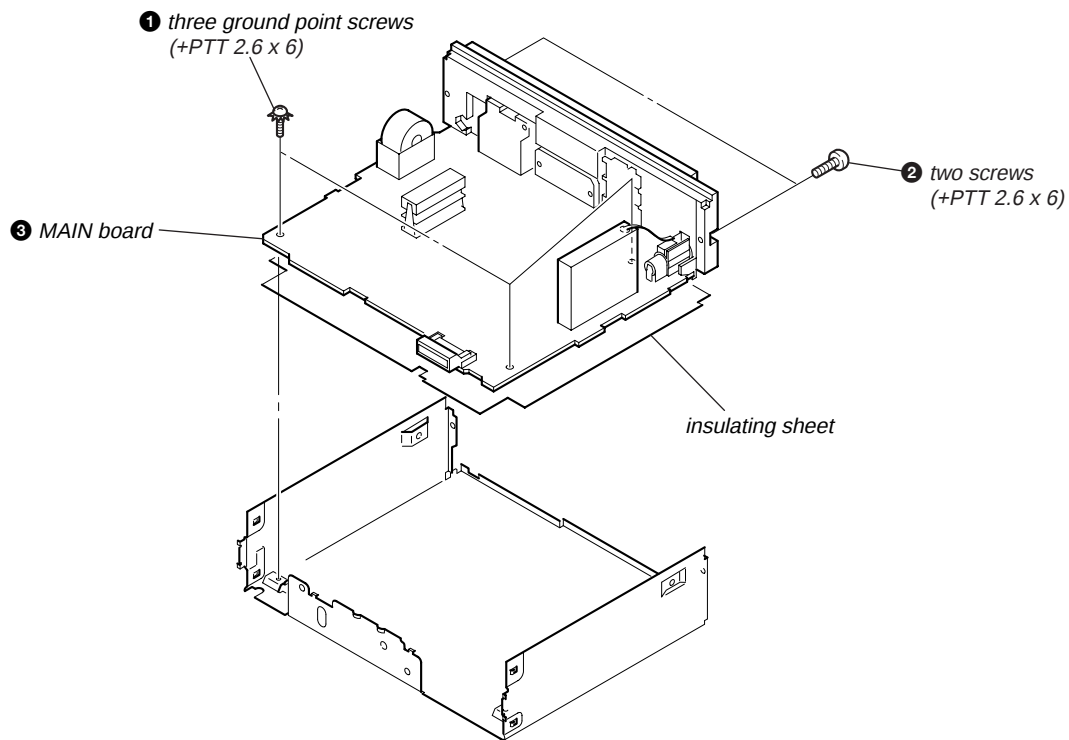


2-4. CHASSIS (T) SUB ASSY

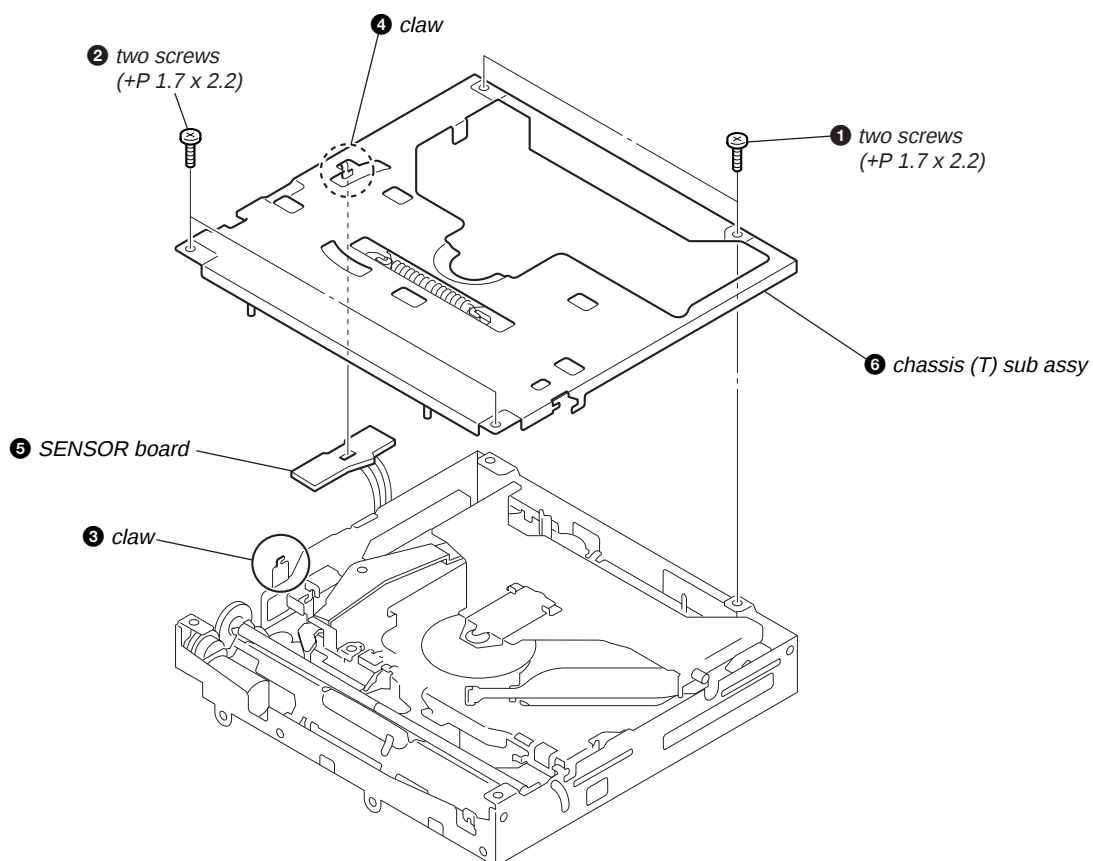


2-5. ROLLER ARM ASSY

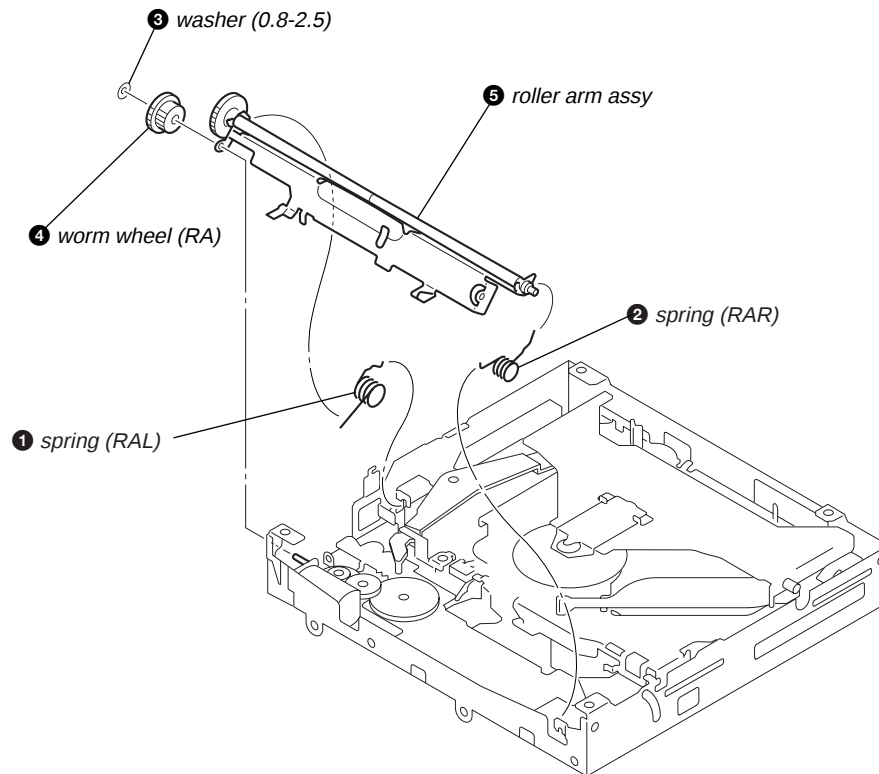


2-6. CHASSIS (OP) ASSY

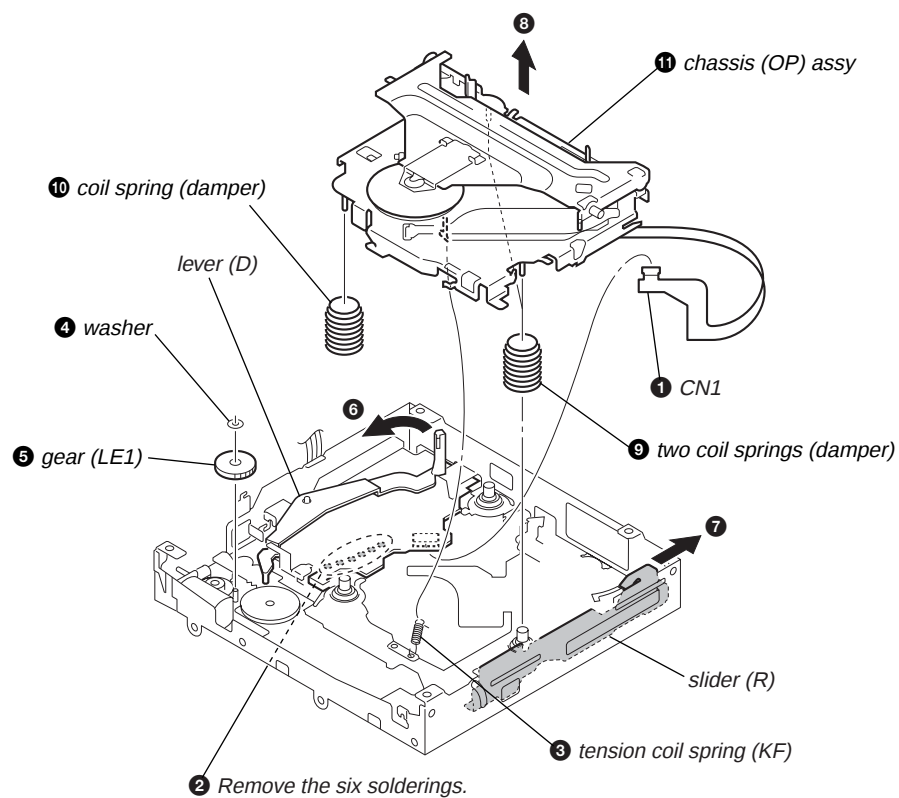


2-7. OPTICAL PICK-UP

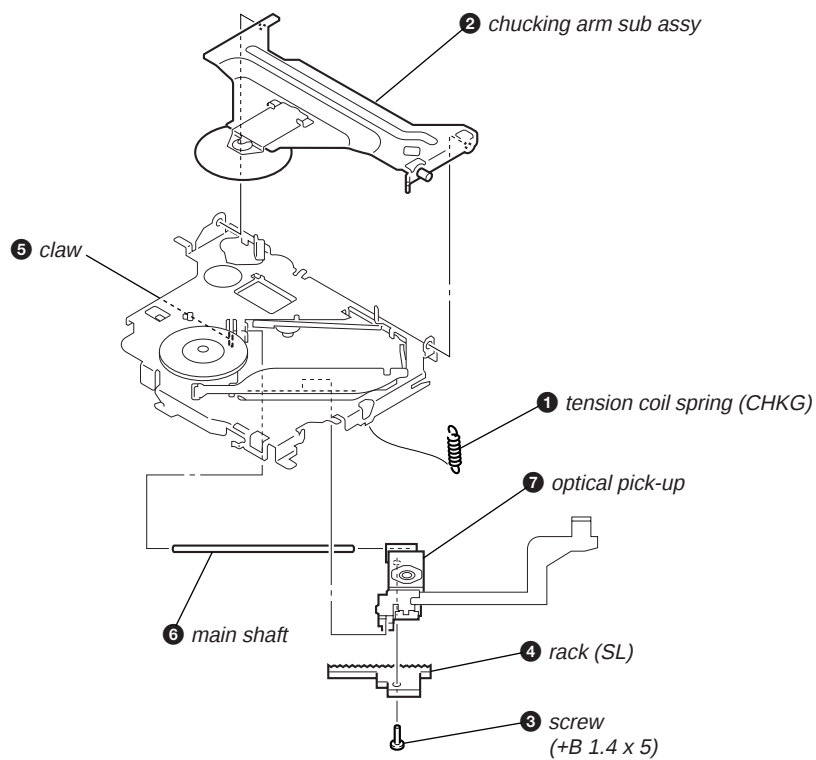


2-8. SL MOTOR ASSY (M902)

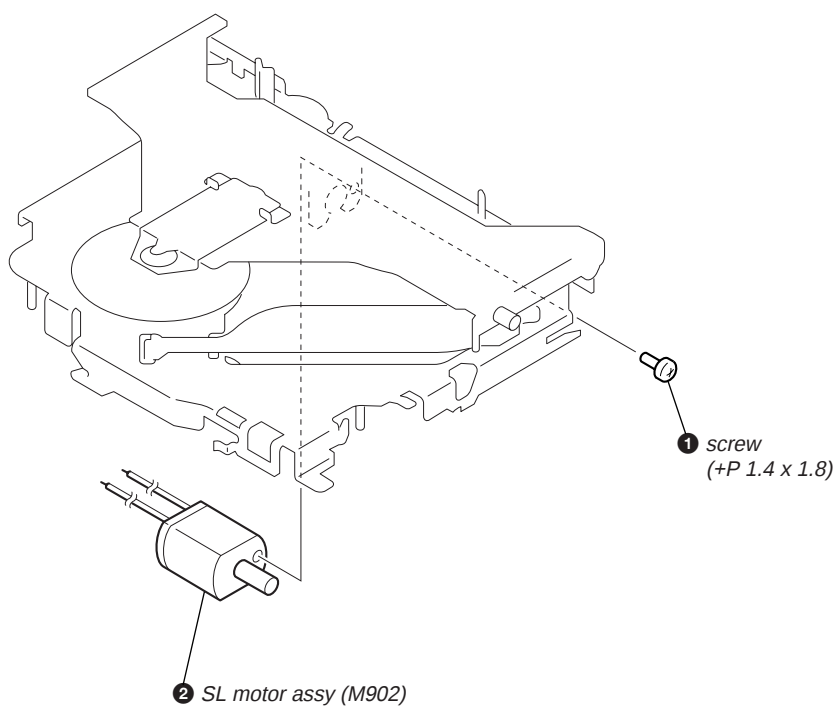

2-9. LE MOTOR ASSY (M903)

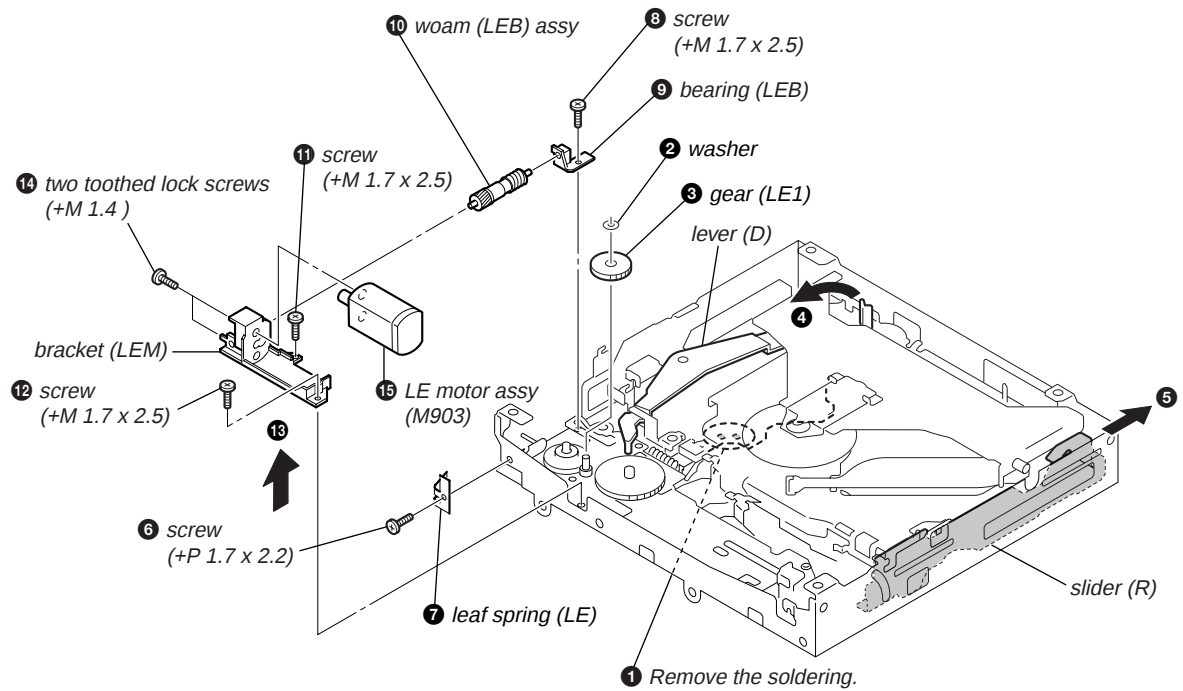

2-10. SERVO BOARD

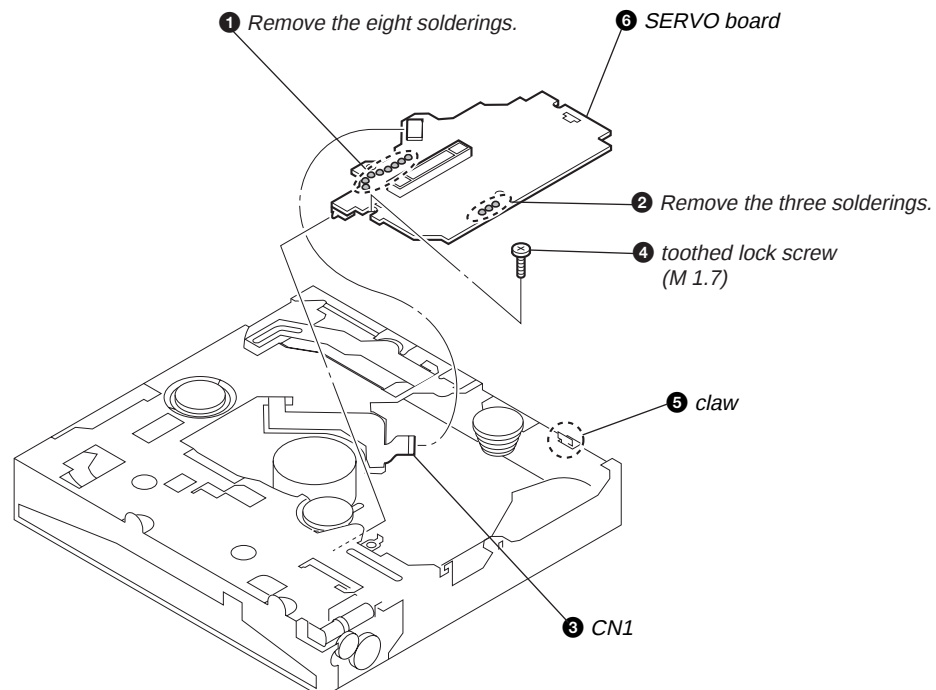

SECTION 3 DIAGRAMS

3-1. IC PIN DESCRIPTIONS

• IC3 CXD3059AR (DIGITAL SERVO/DIGITAL SIGNAL PROCESSOR) (SERVO BOARD (1/2))

Pin No.	Pin Name	I/O	Pin Description
1	MIRR	I/O	Mirror signal input/output
2	DFCT	I/O	Defect signal input/output
3	FOK	I/O	Focus OK signal input/output
4	VSS	—	Ground pin
5	LOCK	I/O	Not used in this set. (Open)
6	MDP	O	Spindle motor servo control signal output
7	SSTP	I	Disc most inner detection signal input
8	IOVSS1	—	Digital ground pin for I/O
9	SFDR	O	Sled drive signal output
10	SRDR	O	Sled drive signal output
11	TFDR	O	Tracking drive signal output
12	TRDR	O	Tracking drive signal output
13	FFDR	O	Focus drive signal output
14	FRDR	O	Focus drive signal output
15	IOVDD1	—	Digital power supply pin for I/O
16	AVDD0	—	Analog power supply pin for I/O
17	AVSS0	—	Analog ground pin
18	NC	—	Not used. (Open)
19	E	I	E signal input
20	F	I	F signal input
21	TEI	I	Tracking error signal input from the DSSP block
22	TEO	O	Tracking error signal output to the RF amp block
23	FEI	I	Focus error signal input from the DSSP block
24	FEO	O	Focus error signal output from the RF amp block
25	VC	I/O	VC voltage output to the RF amp block Center voltage input from the DSSP block by command select
26	A	I	A signal input
27	B	I	B signal input
28	C	I	C signal input
29	D	I	D signal input
30	NC	—	Not used. (Open)
31	AVDD4	—	Analog power supply pin
32	RFDCO	I/O	RFDC signal output RFDC signal input from the DSSP block by command select
33	PDSSENS	I	Reference voltage input for PD
34	AC SUM	O	RFAC summing amp signal output
35	EQ IN	I	Equalizer circuit signal input
36	LD	O	APC amp signal output
37	PD	I	APC amp signal input
38	NC	—	Not used. (Open)
39	RFC	I	EQ cut off frequency adjustment input
40	AVSS4	—	Analog ground pin
41	RFACO	O	RFAC signal output
42	RFACI	I	RFAC signal input or EFM signal input
43	AVDD3	—	Analog power supply pin
44	BIAS	I	Asymmetry circuit constant current input
45	ASYI	I	Asymmetry compare voltage input
46	ASYO	O	EFM full swing signal output
47	VPCO	O	Charge pump output for wideband EFM PLL
48	VCTL	I	VCO2 control voltage input for wideband EFM PLL
49	AVSS3	—	Analog ground pin

Pin No.	Pin Name	I/O	Pin Description
50	CLTV	I	VCO1 control voltage input
51	FILO	O	Filter signal output for master PLL
52	FILI	I	Filter signal input for master PLL
53	PCO	O	Charge pump output for master PLL
54	AVDD5	—	Analog power supply pin
55	DDVROUT	O	DC/DC converter output
56	DDVRSEN	I	DC/DC converter output voltage monitor signal input
57	AVSS5	—	Analog ground pin
58	DDCR	I	Reset signal input for DC/DC converter
59	NC	—	Not used. (Open)
60	BCKI	I	D/A interface bit clock signal input
61	PCMDI	I	D/A interface serial data signal input
62	LRCKI	I	D/A interface LR clock signal input
63	LRCK	O	D/A interface LR clock signal output
64	VSS	—	Digital ground pin for internal
65	PCMD	O	D/A interface serial data signal output
66	BCK	O	D/A interface bit clock signal output
67	VDD	—	Digital power supply pin for internal
68	EMPH	O	Not used in this set. (Open)
69	EMPHI	I	Not used in this set. (Fixed at “L”.)
70	IOVDD2	—	Digital power supply pin for I/O
71	DOUT	O	Digital out signal output
72, 73	TEST	I	Test pin Normally “L”.
74	IOVSS2	—	Digital ground pin for I/O
75	NC	—	Not used in this set. (Open)
76	XVSS	—	Ground pin for master clock
77	XTAO	O	Crystal oscillation circuit output (16.9344 MHz)
78	XTAI	I	Crystal oscillation circuit input (16.9344 MHz)
79	XVDD	—	Power supply pin for master clock
80	AVDD1	—	Analog power supply pin
81	AOUT1	O	L channel analog signal output
82	VREFL	O	L channel reference voltage output
83	AVSS1	—	Analog ground pin
84	AVSS2	—	Analog ground pin
85	VREFR	O	R channel reference voltage output
86	AOUT2	O	R channel analog signal output
87	AVDD2	—	Analog power supply pin
88	NC	—	Not used. (Open)
89	IOVDD0	—	Digital power supply pin for I/O
90	RMUT	O	R channel “O” detection flug output
91	LMUT	O	L channel “O” detection flug output
92	NC	—	Not used. (Open)
93	XTSL	I	X’tal select signal input 16.9344 MHz: “L”, 33.8688 MHz: “H”
94	IOVSS0	—	Digital ground pin for I/O
95	XTACN	I	Oscillation circuit control input “H”: Oscillation start, “L”: Oscillation stop
96	SQSO	O	Sub 80 bit and PCM peak, level data signal output CD text data signal output
97	SQCK	I	Clock signal input for SQSO read out
98	SBSO	O	Sub P-W serial data signal output Not used in this set. (Open)
99	EXCK	I	Clock signal input for SBSO read out Not used in this set. (Open)
100	XRST	I	System reset signal input “L”: reset
101	SYSM	I	Mute signal input “H”: mute Not used in this set. (Fixed at “L”.)
102	DATA	I	Serial data signal input
103	VSS	—	Digital ground pin for internal


Pin No.	Pin Name	I/O	Pin Description
104	XLAT	I	Latch signal input
105	CLOCK	I	Serial data transfer clock signal input
106	VDD	—	Digital power supply pin for internal
107	SENS	O	SENS signal output
108	SCLK	I	Clock signal input for SENS serial data read out
109	ATSK	I/O	Input/output for anti-shock
110	WFCK	O	WFCK signal output Not used in this set. (Open)
111	XUGF	O	XUGF signal output Not used in this set. (Open)
112	XPCK	O	XPCK signal output Not used in this set. (Open)
113	GFS	O	GFS signal output
114	C2PO	O	C2PO signal output
115	SCOR	O	Sub cord sync signal output
116	VDD	—	Digital power supply pin for internal
117	C4M	O	4.2336 MHz signal output Not used in this set. (Open)
118	WDCK	O	Word clock signal output Not used in this set. (Open)
119	COUT	I/O	Track count signal input/output Not used in this set. (Open)
120	NC	—	Not used. (Open)

• IC501 MN101E01KSH (SYSTEM CONTROL) (MAIN BOARD (1/2))


Pin No.	Pin Name	I/O	Pin Description
1	DAVDD	—	Power supply pin for D/A output converter (+3.3 V)
2	BBE-MP	O	Not used in this set. (Open)
3	DAVSS	—	Ground pin for D/A output converter
4 to 6	NCO	O	Not used in this set. (Open)
7	UNISO	O	SONY-BUS data signal output
8	UNISI	I	SONY-BUS data signal input
9	UNICKO	O	SONY-BUS clock signal output
10	VDD1	—	Power supply pin for internal core (+3.3 V)
11	MMOD	I	Flash microcomputer write detection signal input Not used in this set.
12	OSCOOUT	O	High speed operation clock signal output (27 MHz)
13	OSCIN	I	High speed operation clock signal input (27 MHz)
14	VSS1	—	Ground pin for internal core
15	XIN	I	Low speed operation clock signal input (32.768 kHz)
16	XOUT	O	Low speed operation clock signal output (32.768 kHz)
17	VDD2	—	Power supply pin for internal core (+3.3 V)
18	MOD1	—	Pull up: “H”
19	RESET	I	Reset signal input
20	NCO	O	Not used in this set. (Open)
21	ACC IN	I	Accessory power supply detection signal input
22	TEST IN	I	Test mode detection signal input
23	TEL ATT	I	Telephone attenuate detection signal input
24	ATT	O	Audio mute control signal output
25	XKEYON	O	Key power supply control signal output Not used in this set. (Open)
26	NCO	O	Not used in this set. (Open)
27	KEYACK	I	Key acknowledge detection signal input
28	TU ATTIN	I	Tuner mute ZERO cross detection signal input
29, 30	NCO	O	Not used in this set. (Open)
31	BUIN	I	Back up power supply detection signal input
32 to 35	NCO	O	Not used in this set. (Open)
36	BUSON	O	BUS on signal output
37	SYSRST	O	System reset signal output
38	EJECT OK	O	CD servo IC eject OK signal output
39 to 41	NCO	O	Not used in this set. (Open)
42	Z MUTE	I	Mechadeck mute zero cross detection signal input L/R
43 to 46	NCO	O	Not used in this set. (Open)
47	CD ON	I	CD mechanism power supply control signal input (“H”: Power on)
48	CDM ON	I	CD mechanism deck power supply control signal input (“H”: Power on)
49, 50	NCO	O	Not used in this set. (Open)
51	AREASEL1	I	Destination function setting input 1
52	AREASEL2	I	Destination function setting input 2
53	AREASEL3	I	Destination function setting input 3
54	LCD CTL	O	“H” output: LCD unit and key confusion, power off “L” output: LCD unit and key confusion, power on
55, 56	NCO	O	Not used in this set. (Open)
57	DSSA	O	DSSA on/off change signal output (Cut off rear)
58	PANEL SW	I	Front panel attachment detection signal input “L”: with panel, “H”: without panel
59	DIAG	I	Condition signal input from the power IC
60	VOLATT	O	Electronic volume attenuate control signal output
61, 62	NCO	O	Not used in this set. (Open)
63	VSS2	—	Ground pin for I/O port
64	TU ATT	O	Tuner mute control signal output
65	NCO	O	Not used in this set. (Open)

Pin No.	Pin Name	I/O	Pin Description
66	NS MASK	O	Noise mask signal output
67	EEP CKO	O	Serial clock signal output for EEPROM communication
68	EEP SIO	I/O	Serial data signal input/output for EEPROM communication
69	NCO	O	Not used in this set. (Open)
70	AMPSTB	O	Power regulator IC standby signal output
71 to 73	NCO	O	Not used in this set. (Open)
74	NCO	O	Not used in this set.
75	NCO	O	Not used in this set. (Open)
76	LCDSO	O	Serial data signal output to the LCD driver
77	LCDCE	O	Chip enable signal output to the LCD driver
78	LCDCKO	O	Serial clock signal output to the LCD driver
79	I2C SIO	I/O	I2C BUS serial data signal input/output
80	NCO	O	Not used in this set. (Open)
81	I2C CKO	O	I2C BUS serial clock signal output
82	DAVN	I	RDS data block synchronization detection signal input
83	SIRCS	I	Remote control signal input
84	NCO	O	Not used in this set. (Open)
85	BEEP	O	Beep signal output to the power amp
86 to 88	NCO	O	Not used in this set. (Open)
89	VDD3	—	Power supply pin for I/O port (+3.3 V)
90	NCO	O	Not used in this set. (Open)
91	VSS3	—	Ground pin for I/O port
92	QUALITY	I	Noise detection signal input
93	VSM	I	S meter voltage detection signal input
94	KEYIN1	I	Key signal input 1
95	KEYIN0	I	Key signal input 0
96	NCO	O	Not used in this set.
97	KEYIN2	I	Key signal input (EJECT, OFF, SOURCE switch)
98	RE	I	Rotary encoder signal input
99	L METER	I	Level meter voltage detection signal input
100	VREF+	—	Power supply pin for A/D input converter


3-2. BLOCK DIAGRAM — CD SECTION —

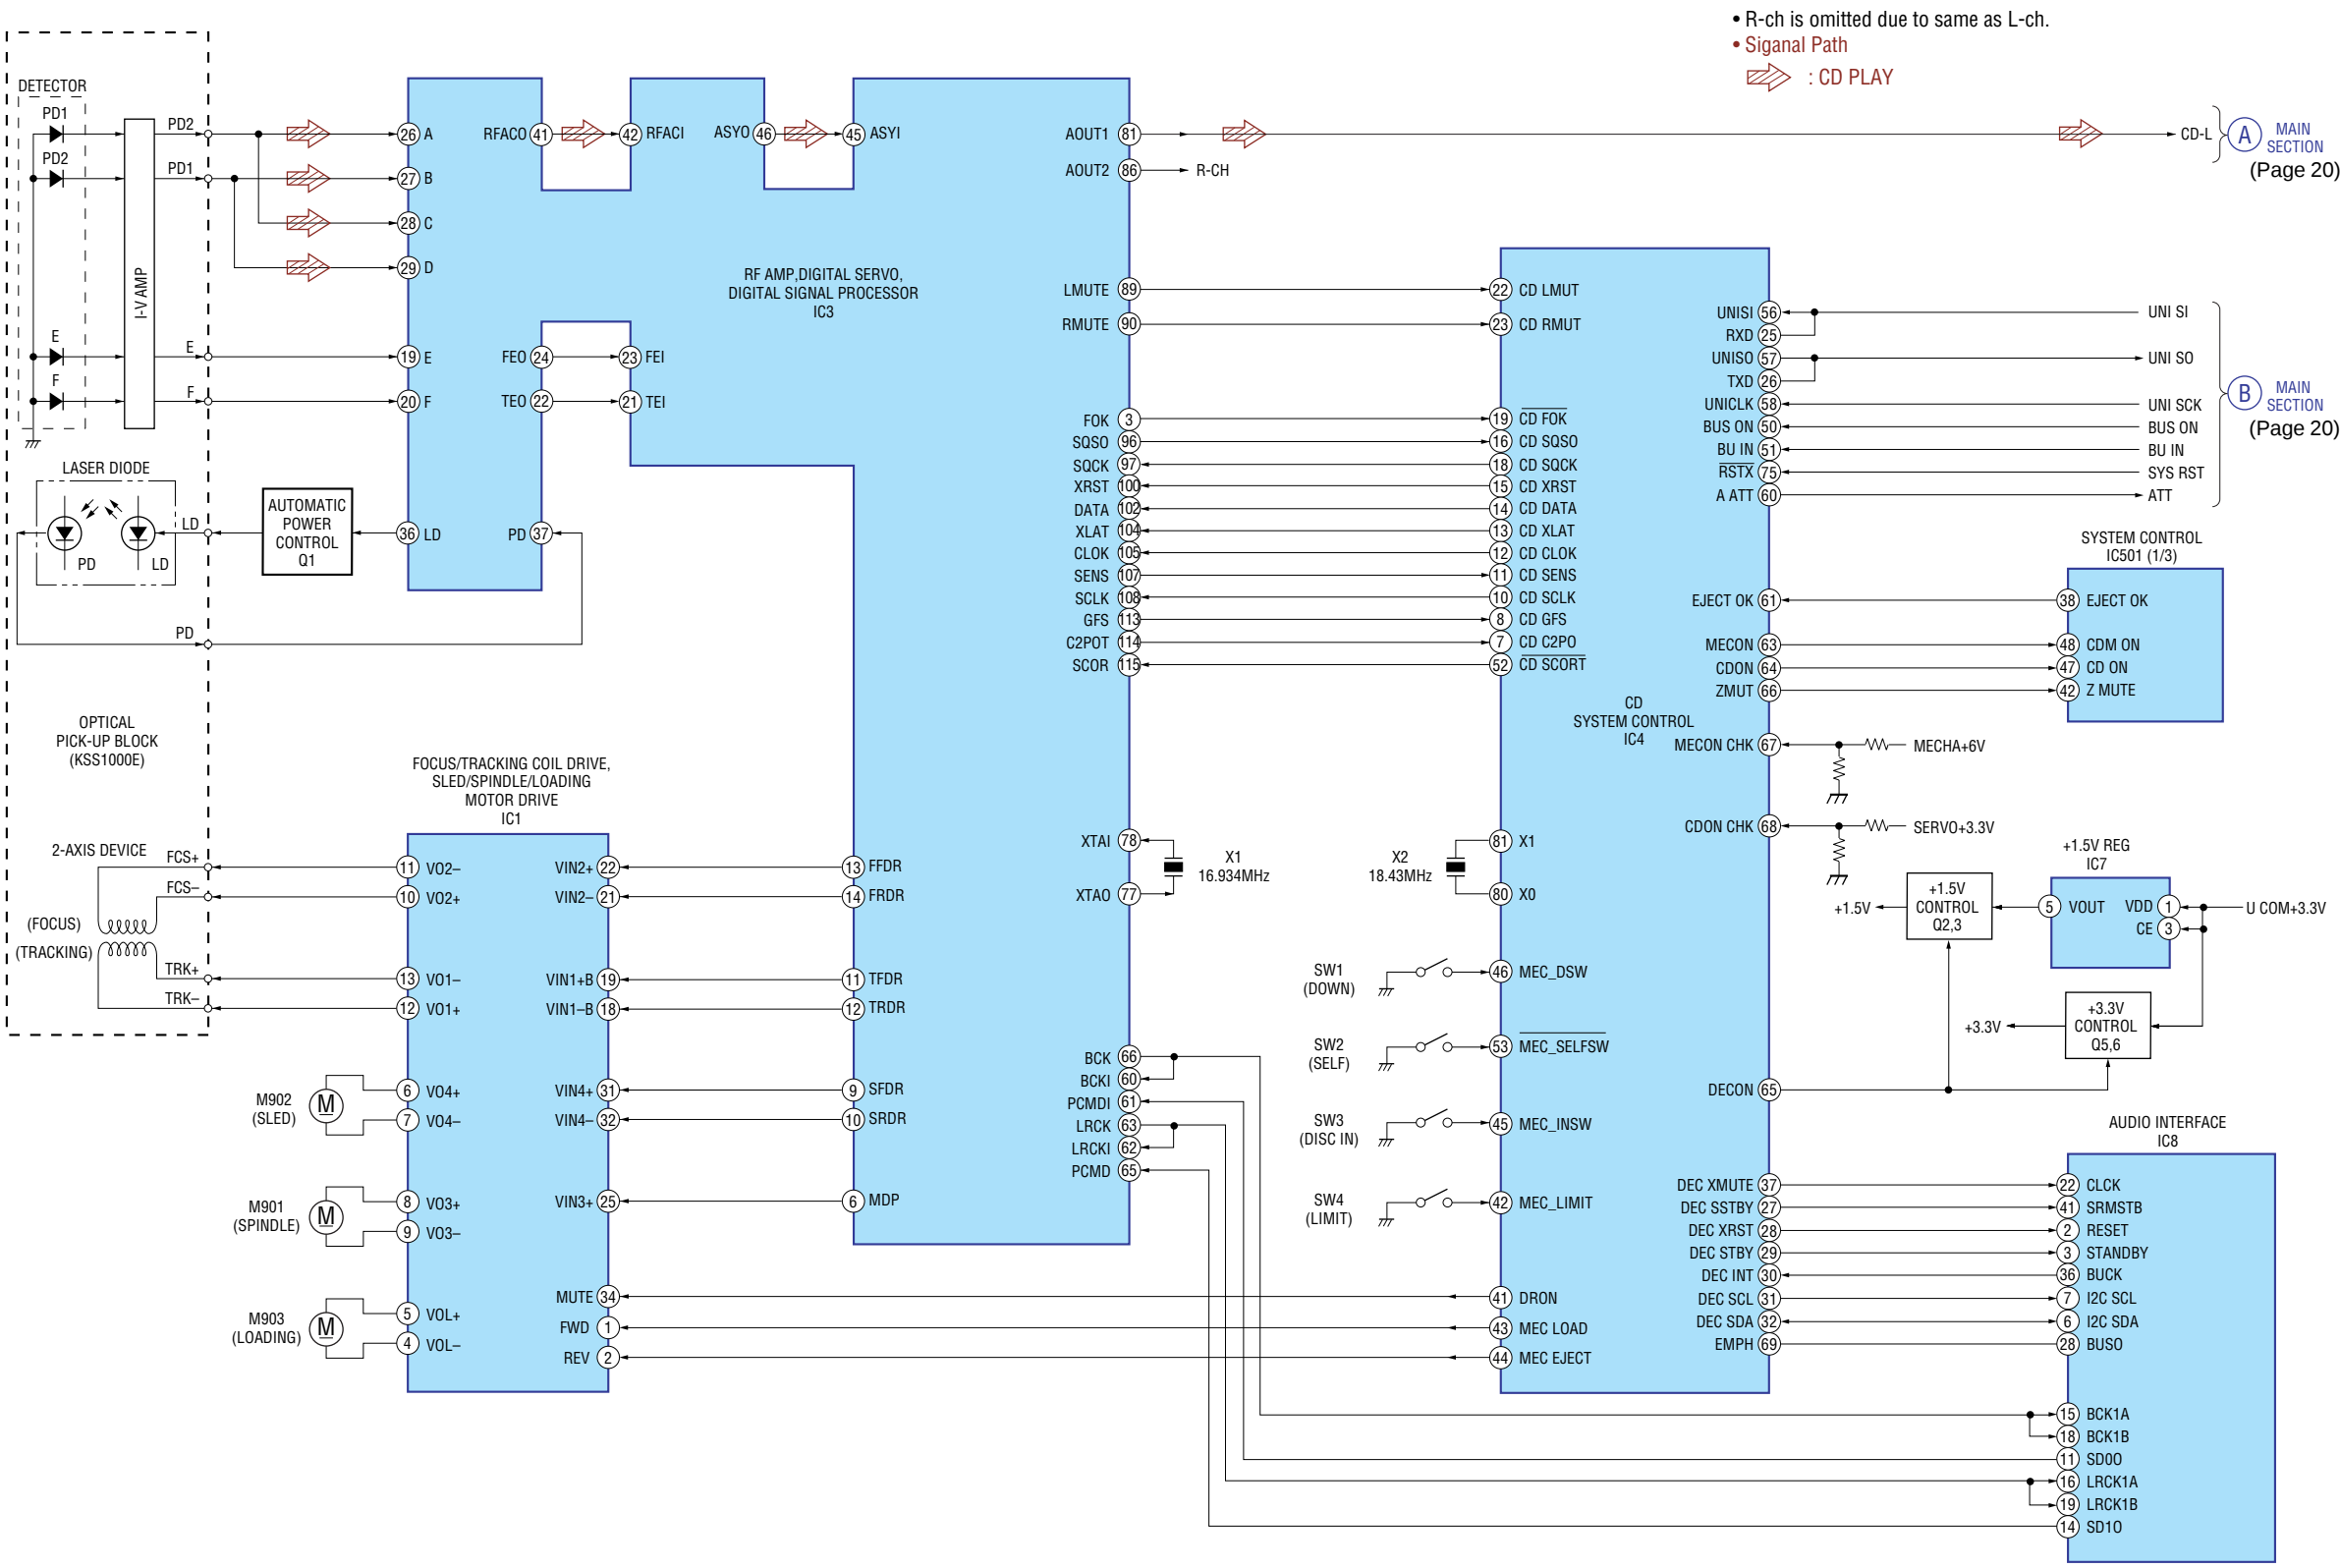


3-3. BLOCK DIAGRAM — MAIN SECTION —

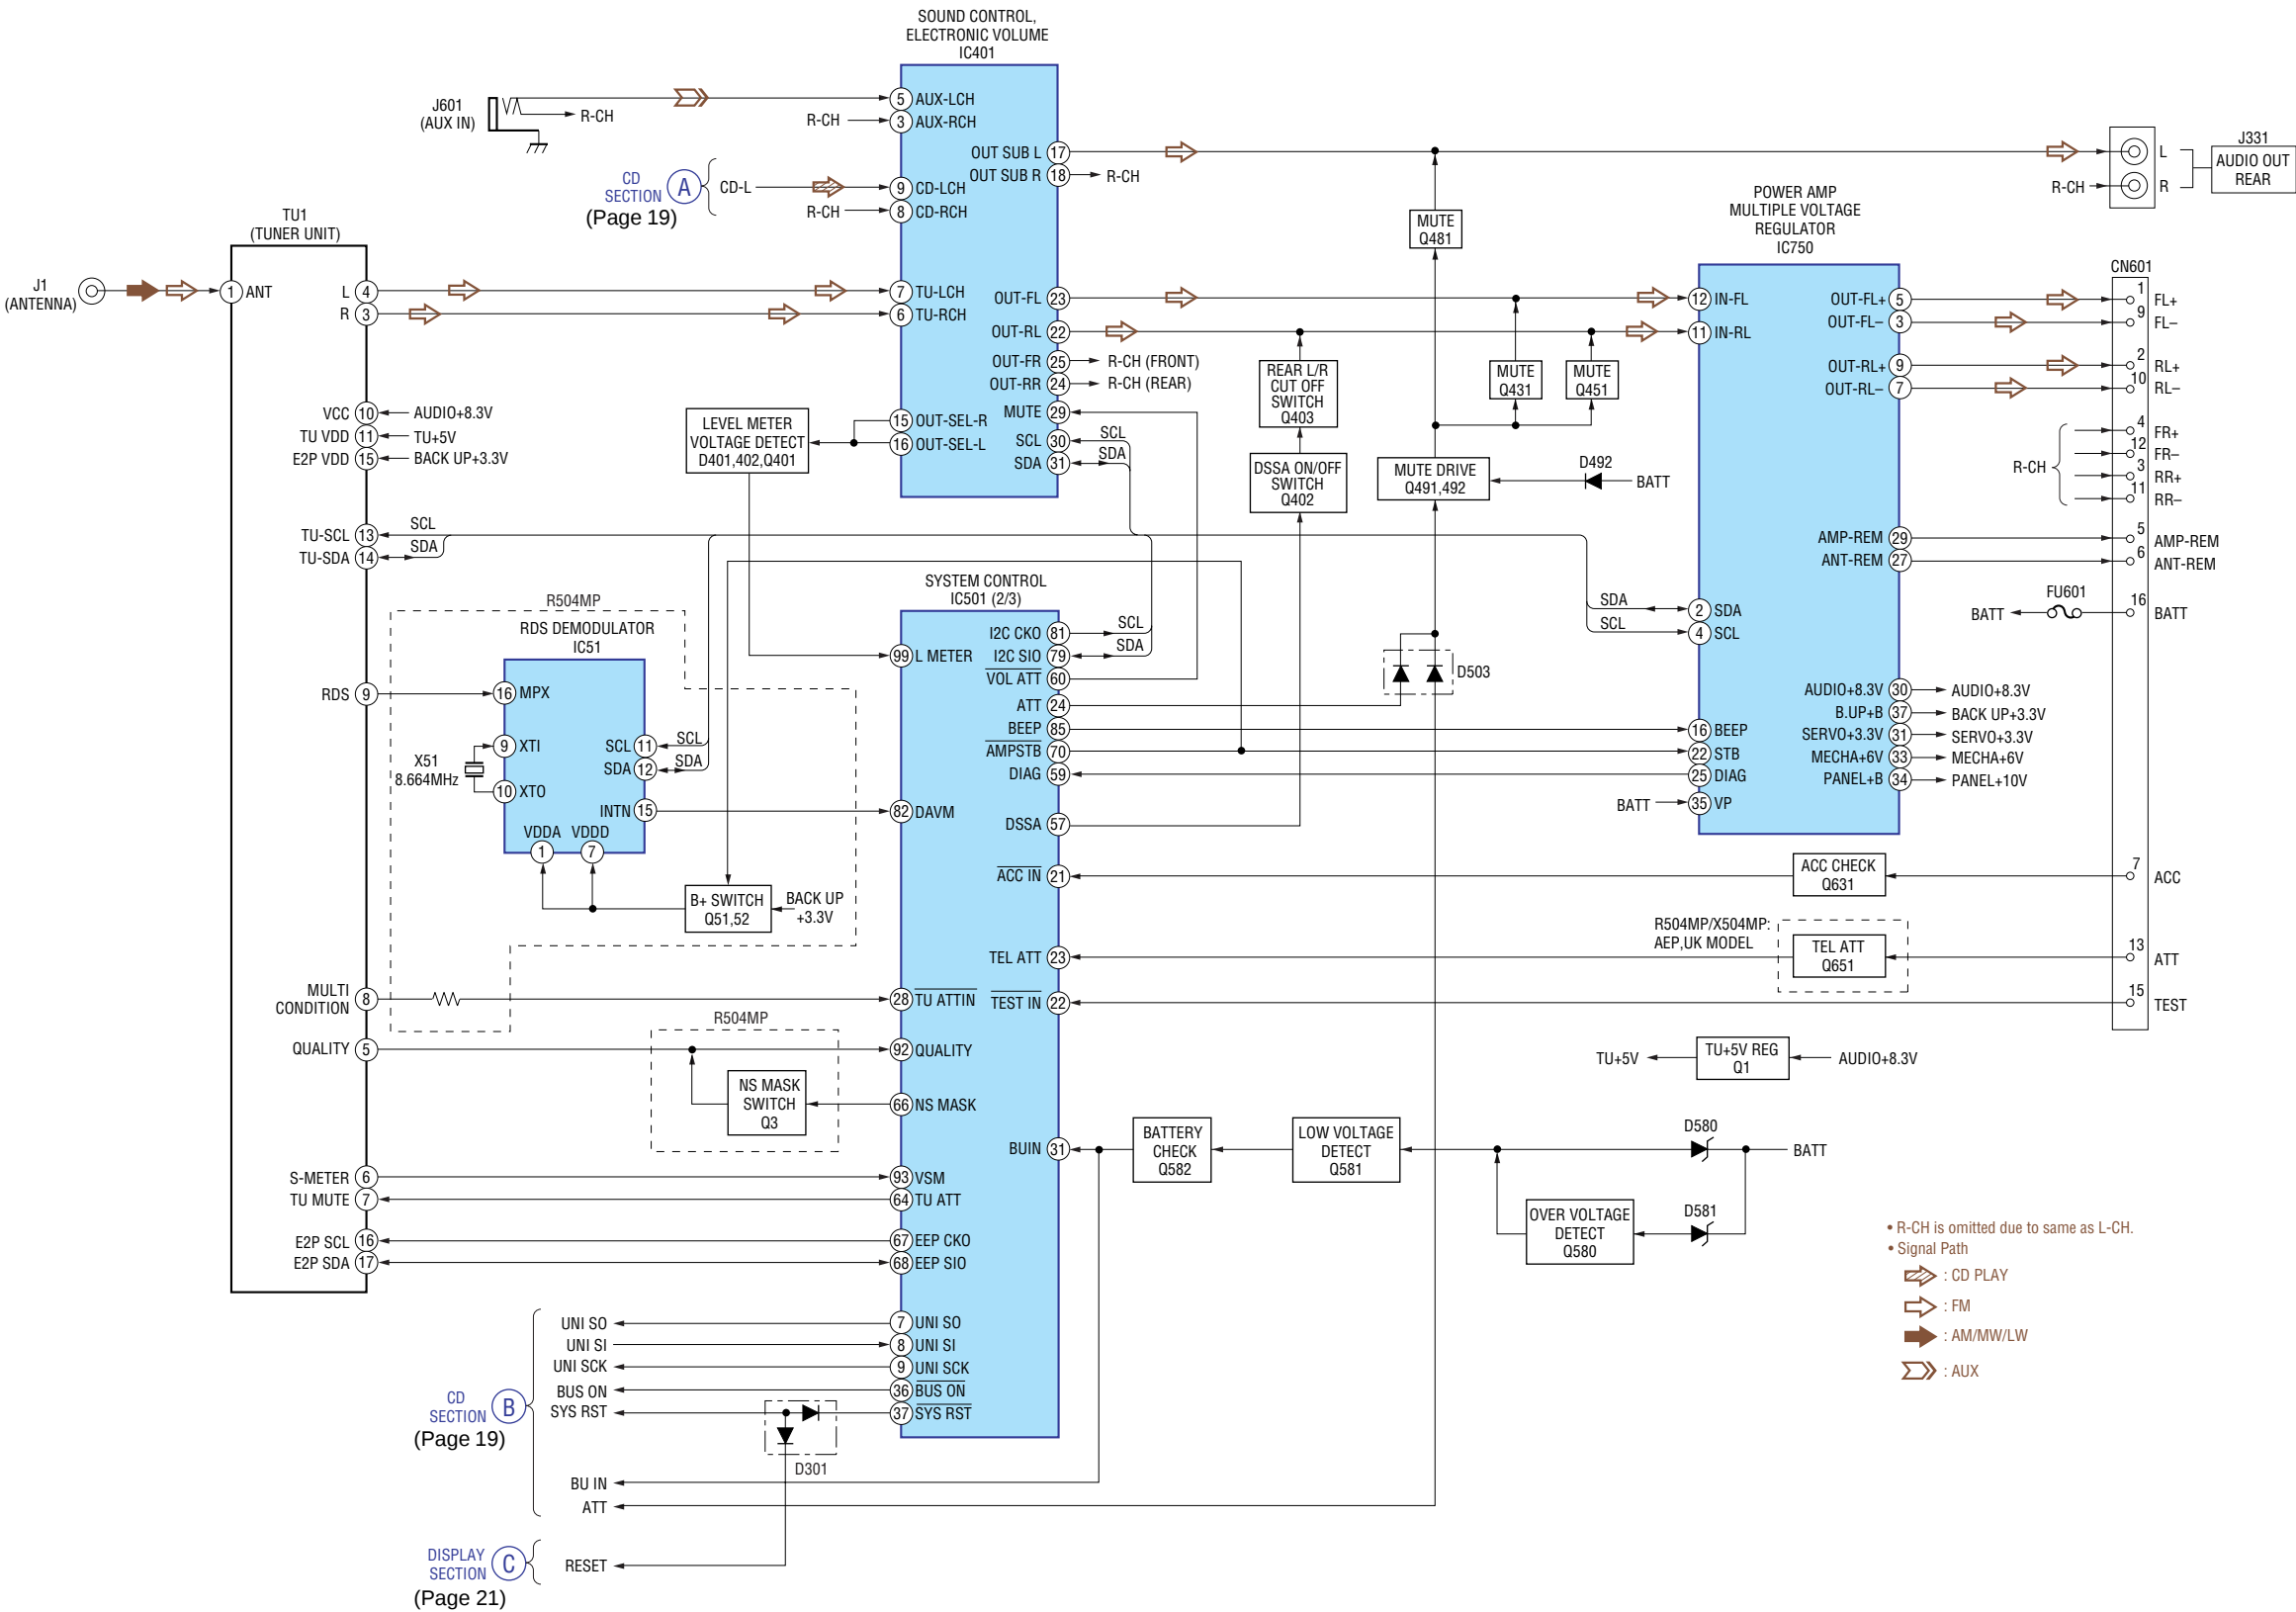

3-4. BLOCK DIAGRAM — DISPLAY SECTION —

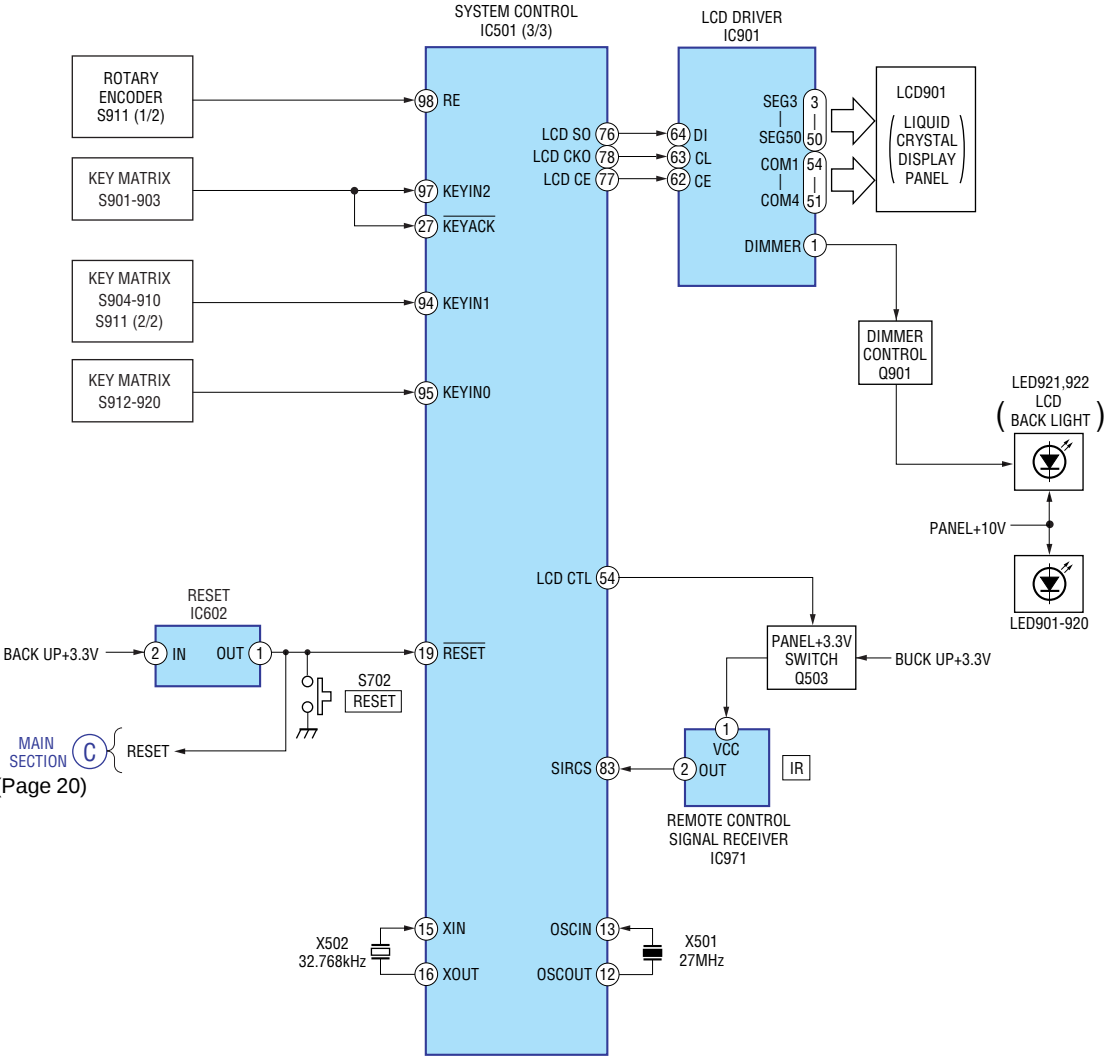

3-5. CIRCUIT BOARDS LOCATION

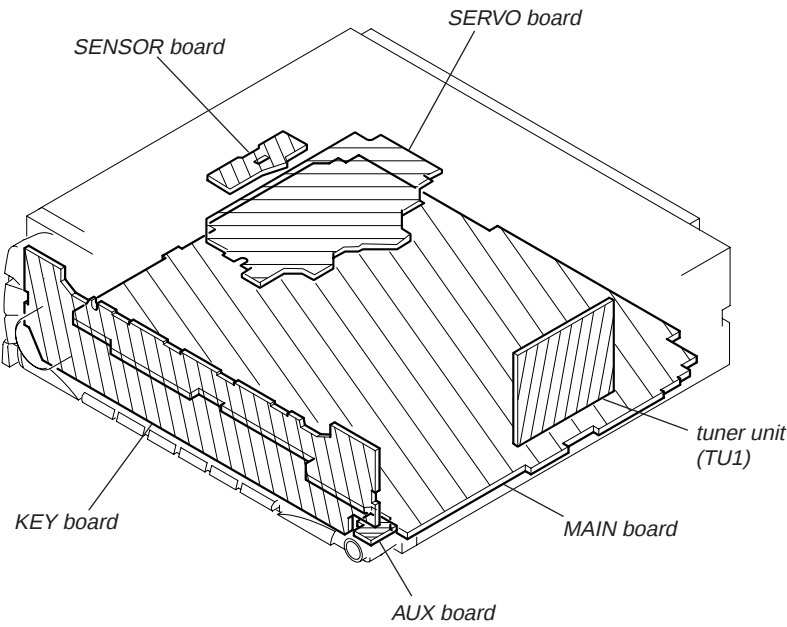

3-6. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For schematic diagrams.
Note:

- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}W$ or less unless otherwise specified.
- $\triangle$: internal component.
- : panel designation.

Note:
The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- — : B+ Line.
- --- : B- Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- CD mechanism section
no mark : CD PLAY
- Main (1/2), (2/2) and Display sections
no mark : FM
() : AM
< > : CD PLAY
* : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
⇒ : CD PLAY
⇨ : FM
⇨ : AM/MW/LW
⇨⇨ : AUX
- Abbreviation
CND : Canadian model.

For printed wiring boards.
Note:

- ○ : parts extracted from the component side.
- — : parts extracted from the conductor side.
- ○ : Through hole.
- : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

Caution:
Pattern face side: Parts on the pattern face side seen from the (Side B) pattern face are indicated.
Parts face side: Parts on the parts face side seen from the (Side A) parts face are indicated.

C

Q

B

E

These are omitted

○

B

E

C

These are omitted

○

E

C

B


These are omitted

- Abbreviation
CND : Canadian model.


3-7. WAVEFORMS

— Servo Board —


(MODE: CD PLAY)

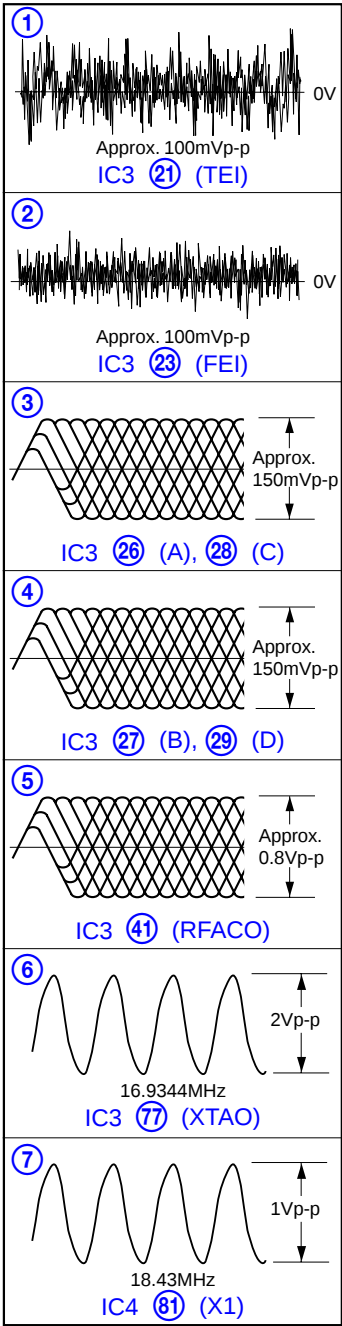

— Main Board —

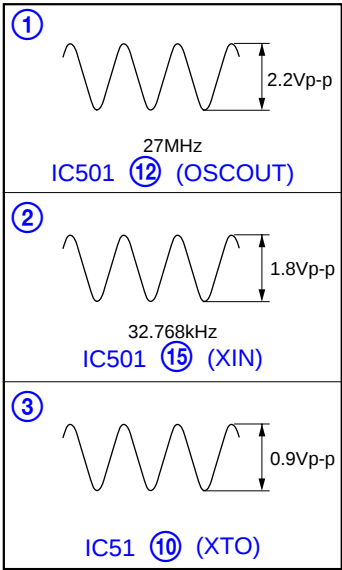


3-8. PRINTED WIRING BOARDS — CD MECHANISM SECTION — • Refer to page 21 for Circuit Boards Location. : Uses unleaded solder.

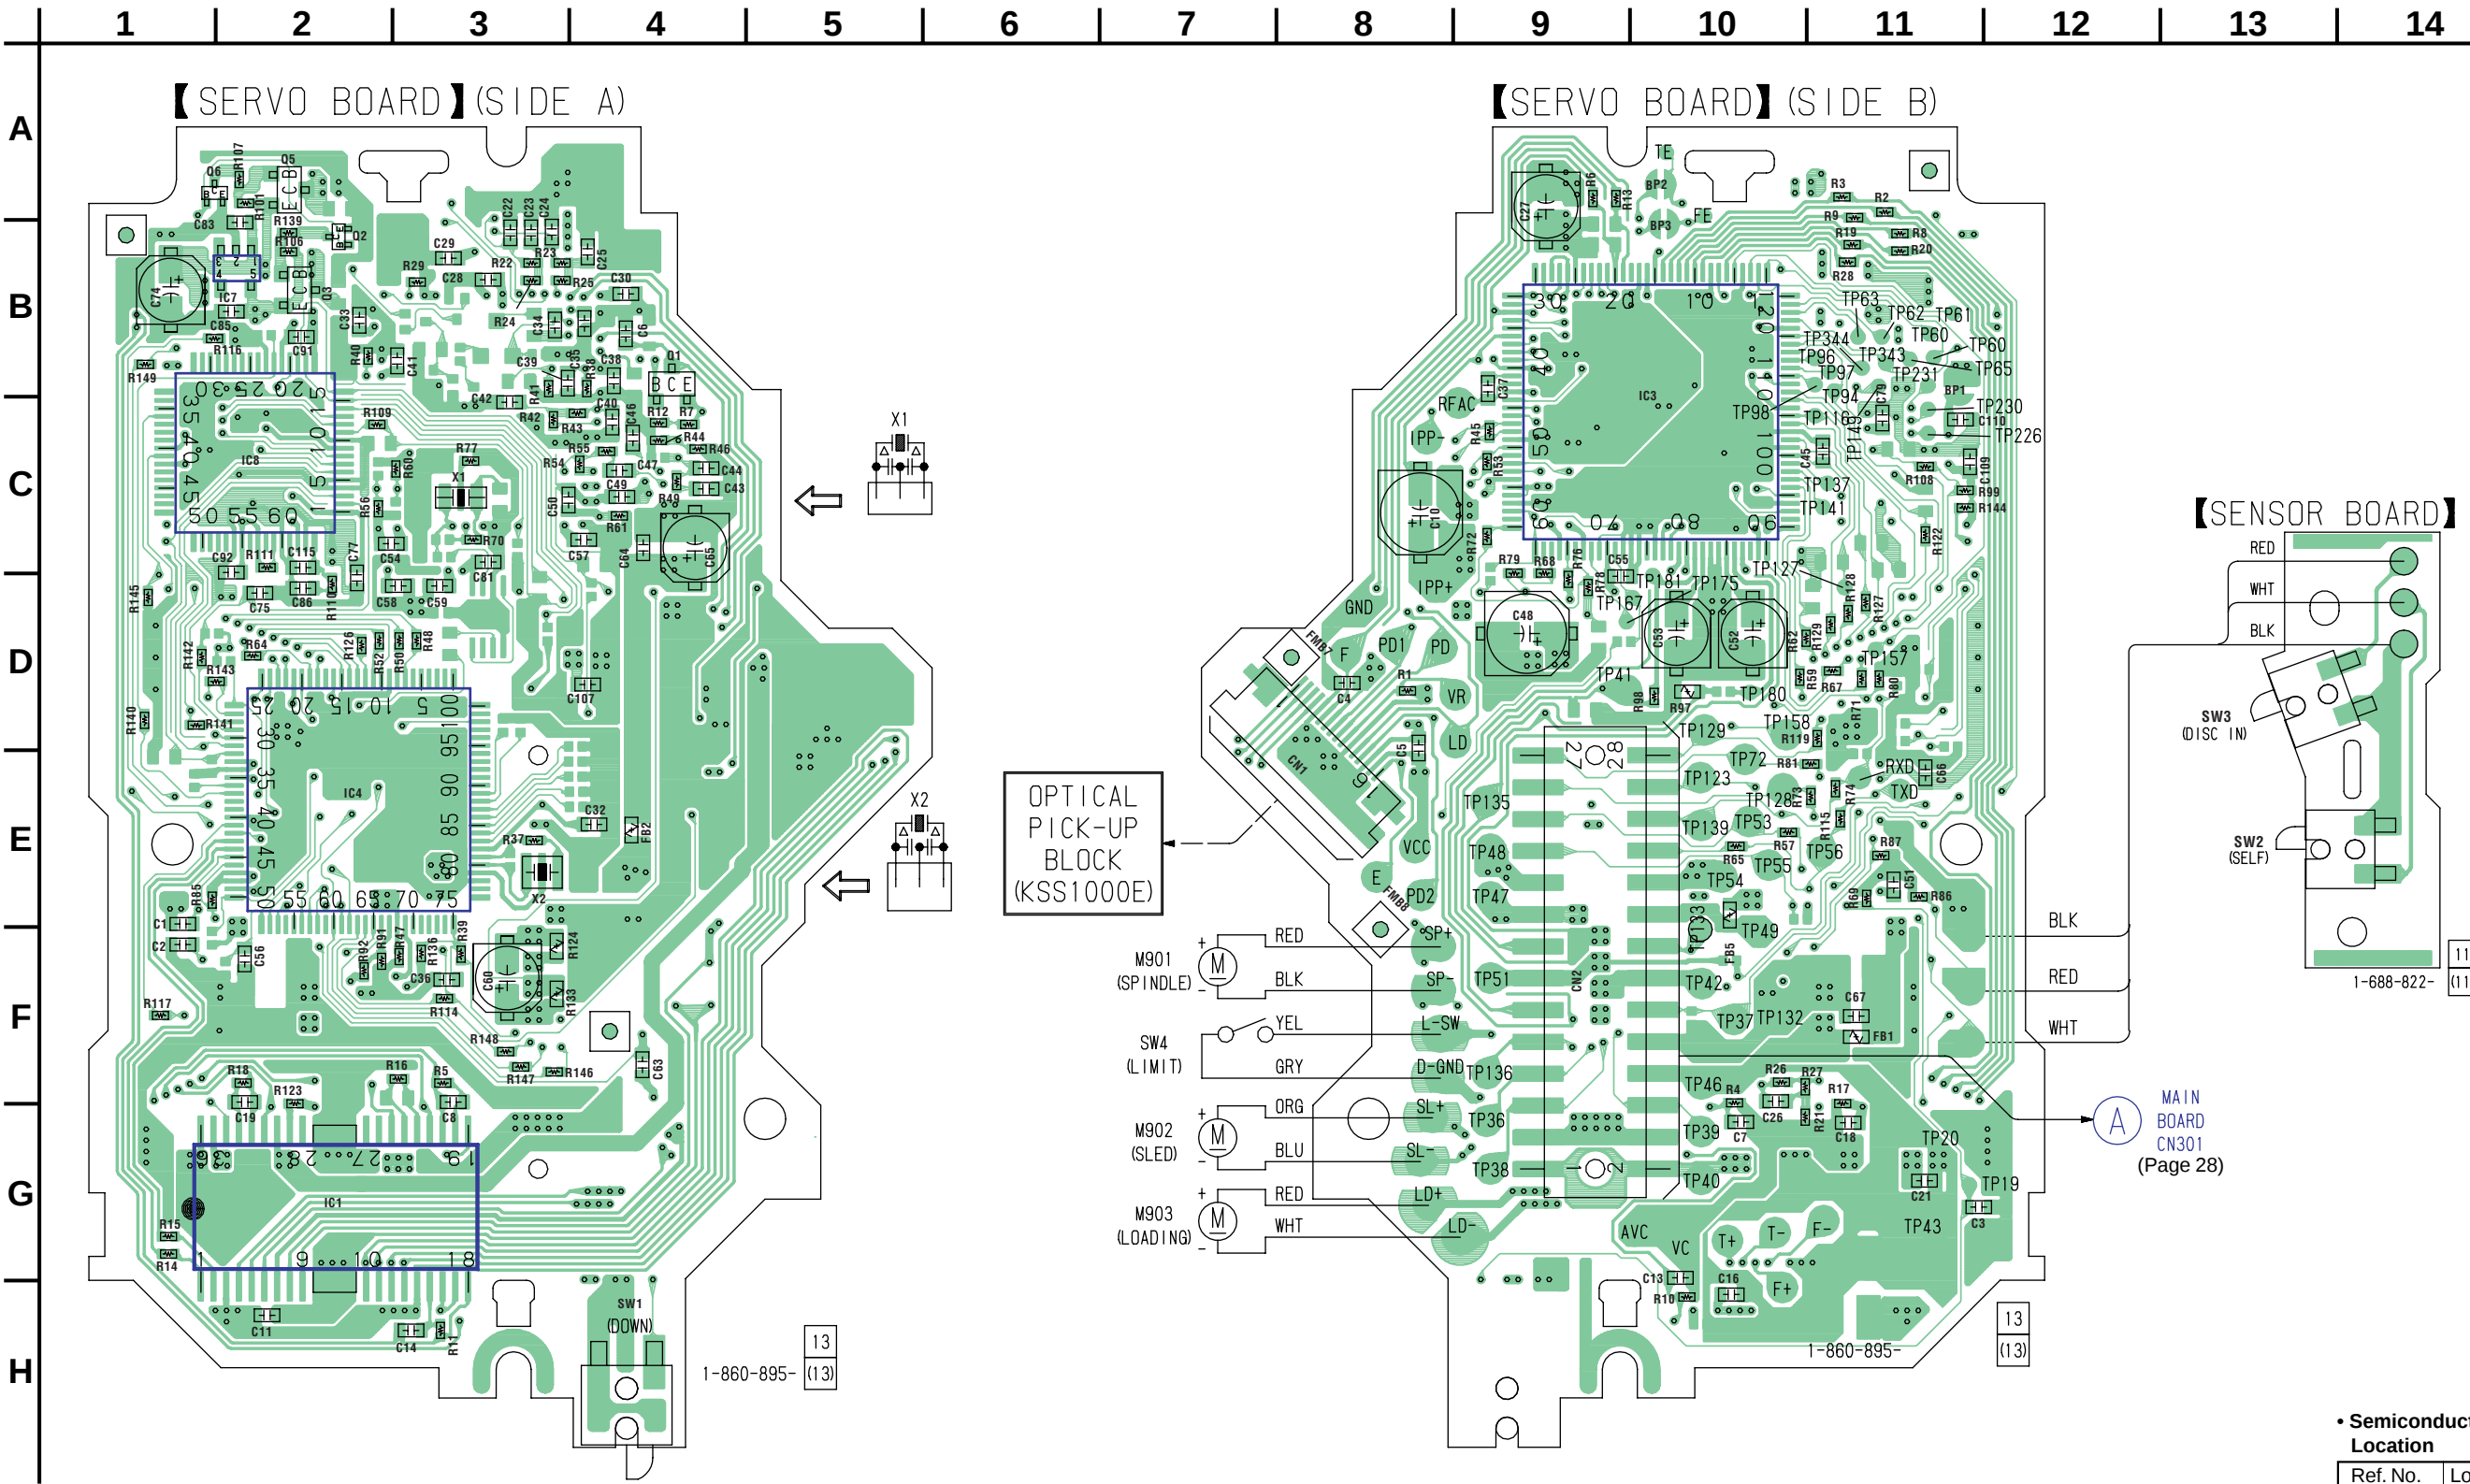

• Semiconductor Location

Ref. No.	Location
IC1	G-2
IC3	C-10
IC4	E-2
IC7	B-2
IC8	C-2
Q1	B-4
Q2	B-2
Q3	B-2
Q5	A-2
Q6	A-2

3-9. SCHEMATIC DIAGRAM — CD MECHANISM SECTION (1/2) — • Refer to page 22 for Waveforms.

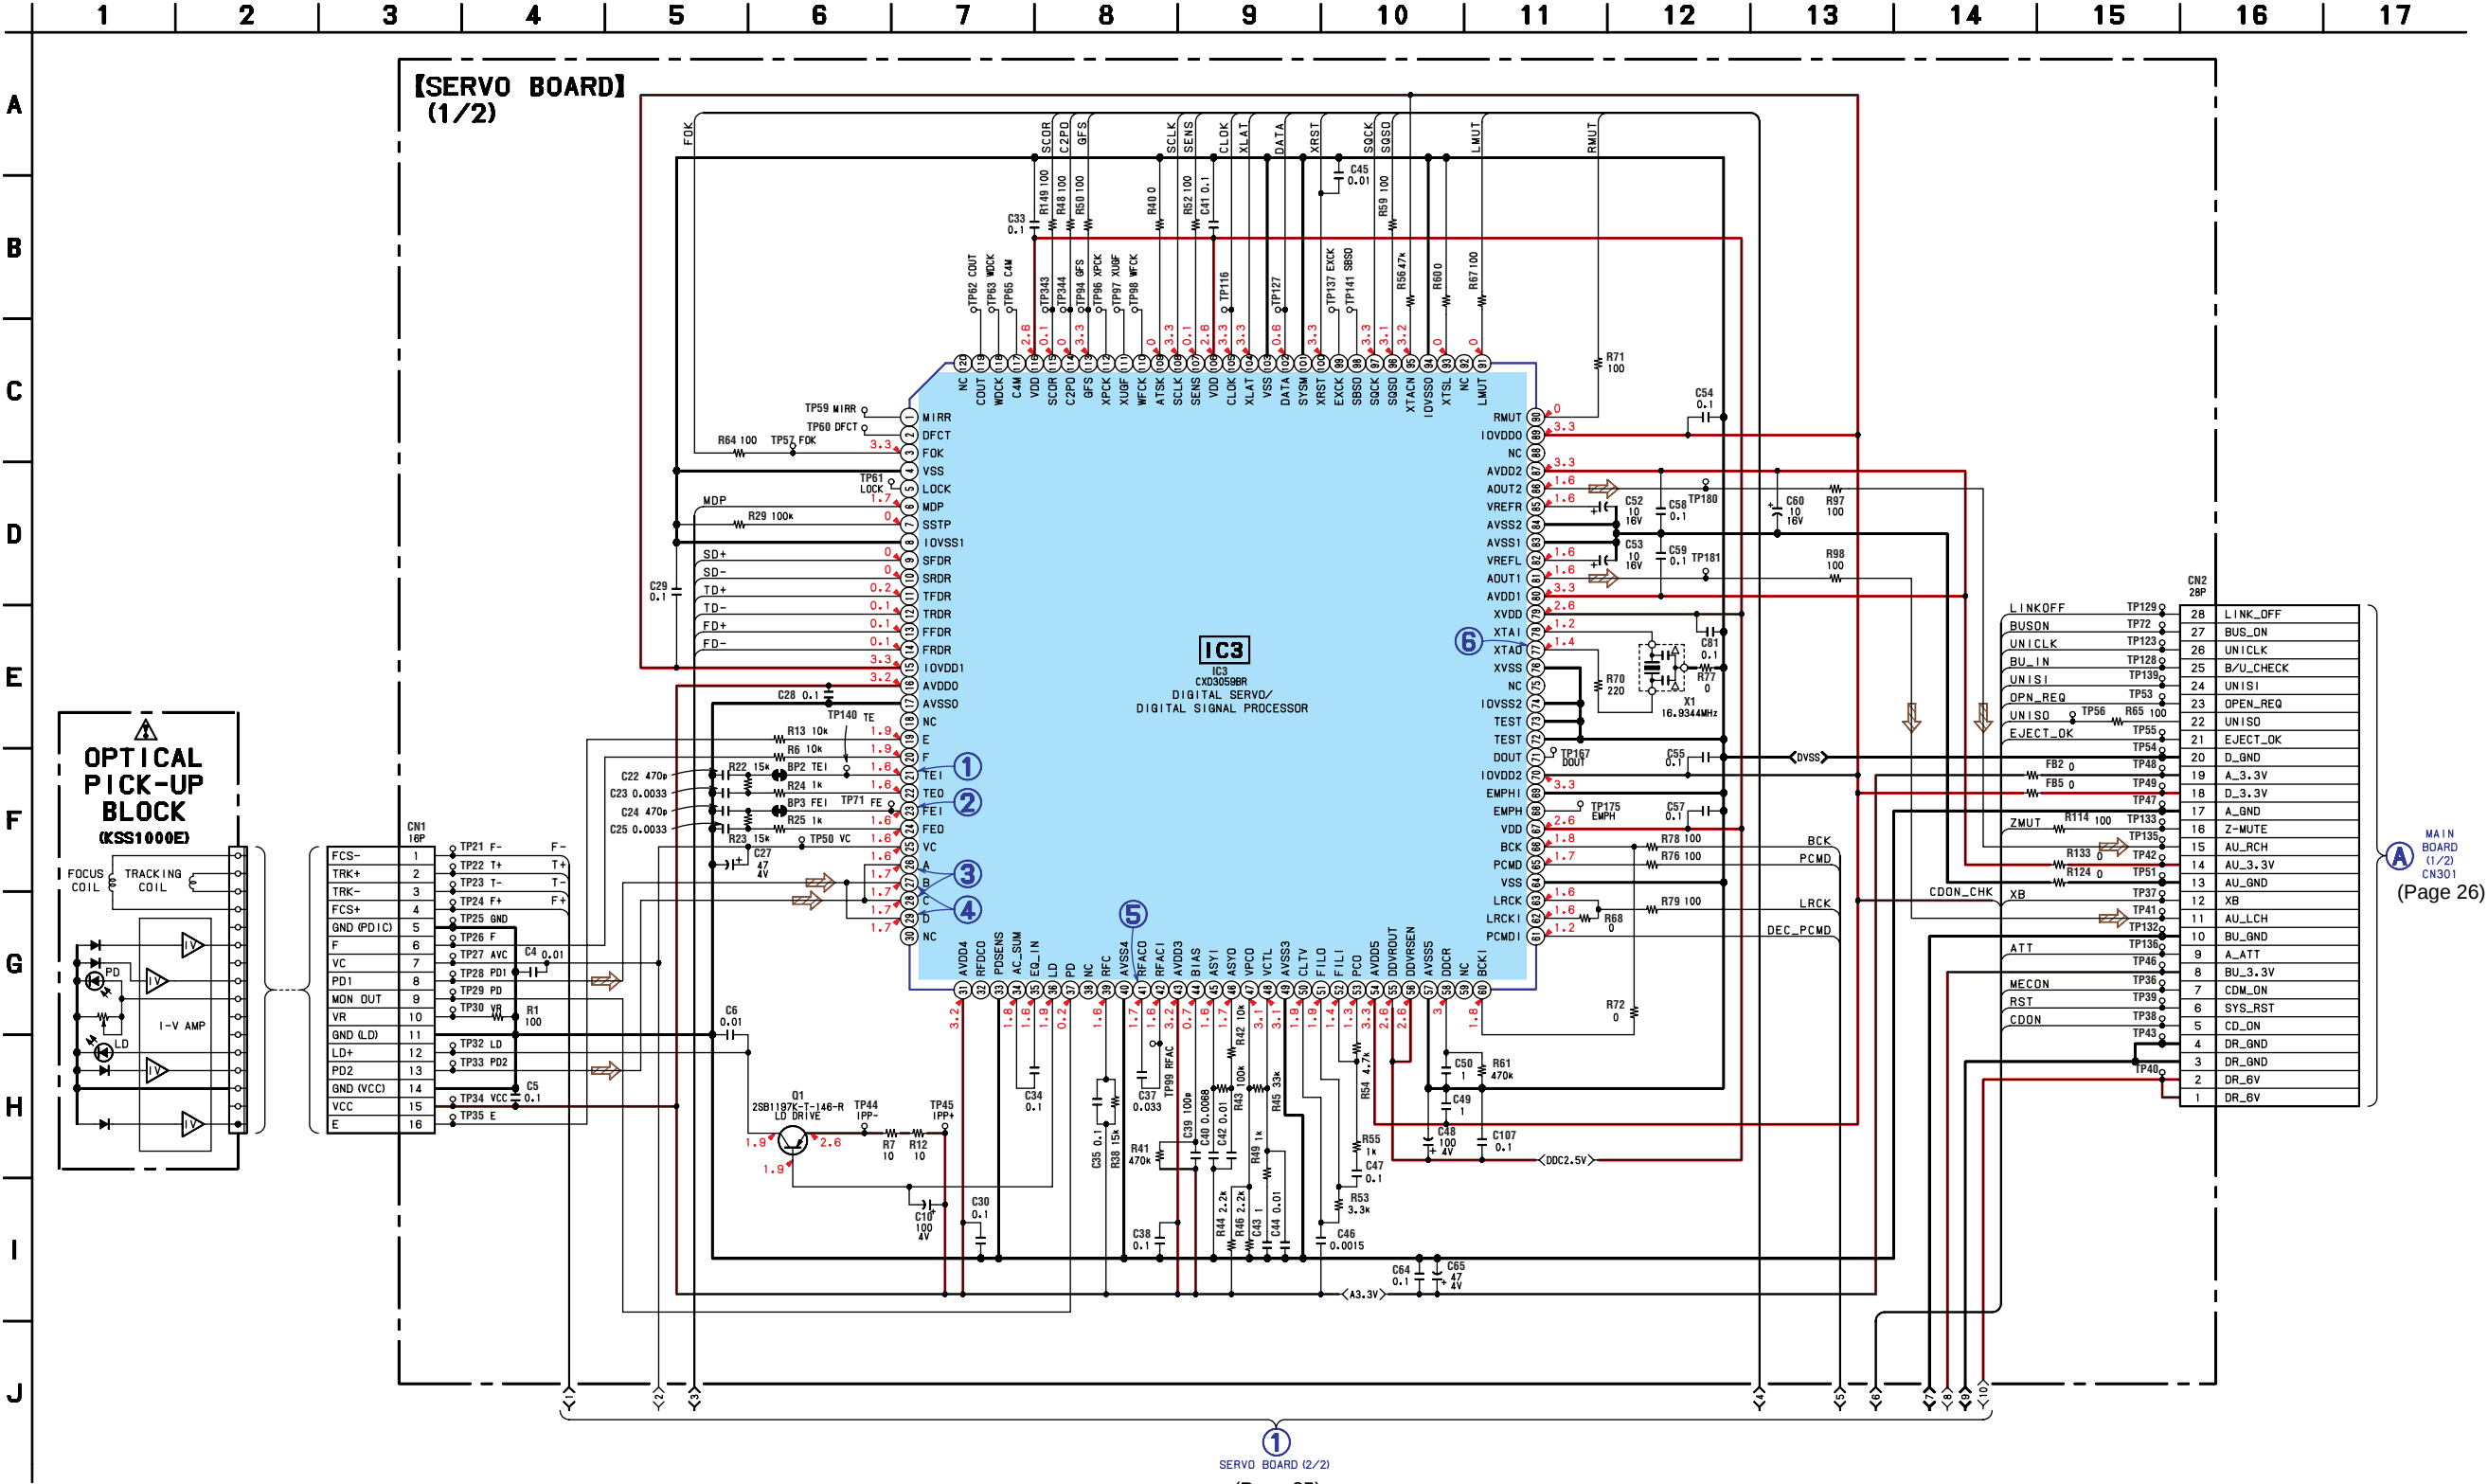


3-10. SCHEMATIC DIAGRAM — CD MECHANISM SECTION (2/2) — • Refer to page 31 for IC Block Diagrams.






3-13. PRINTED WIRING BOARD — MAIN SECTION — • Refer to page 21 for Circuit Boards Location.  : Uses unleaded solder.

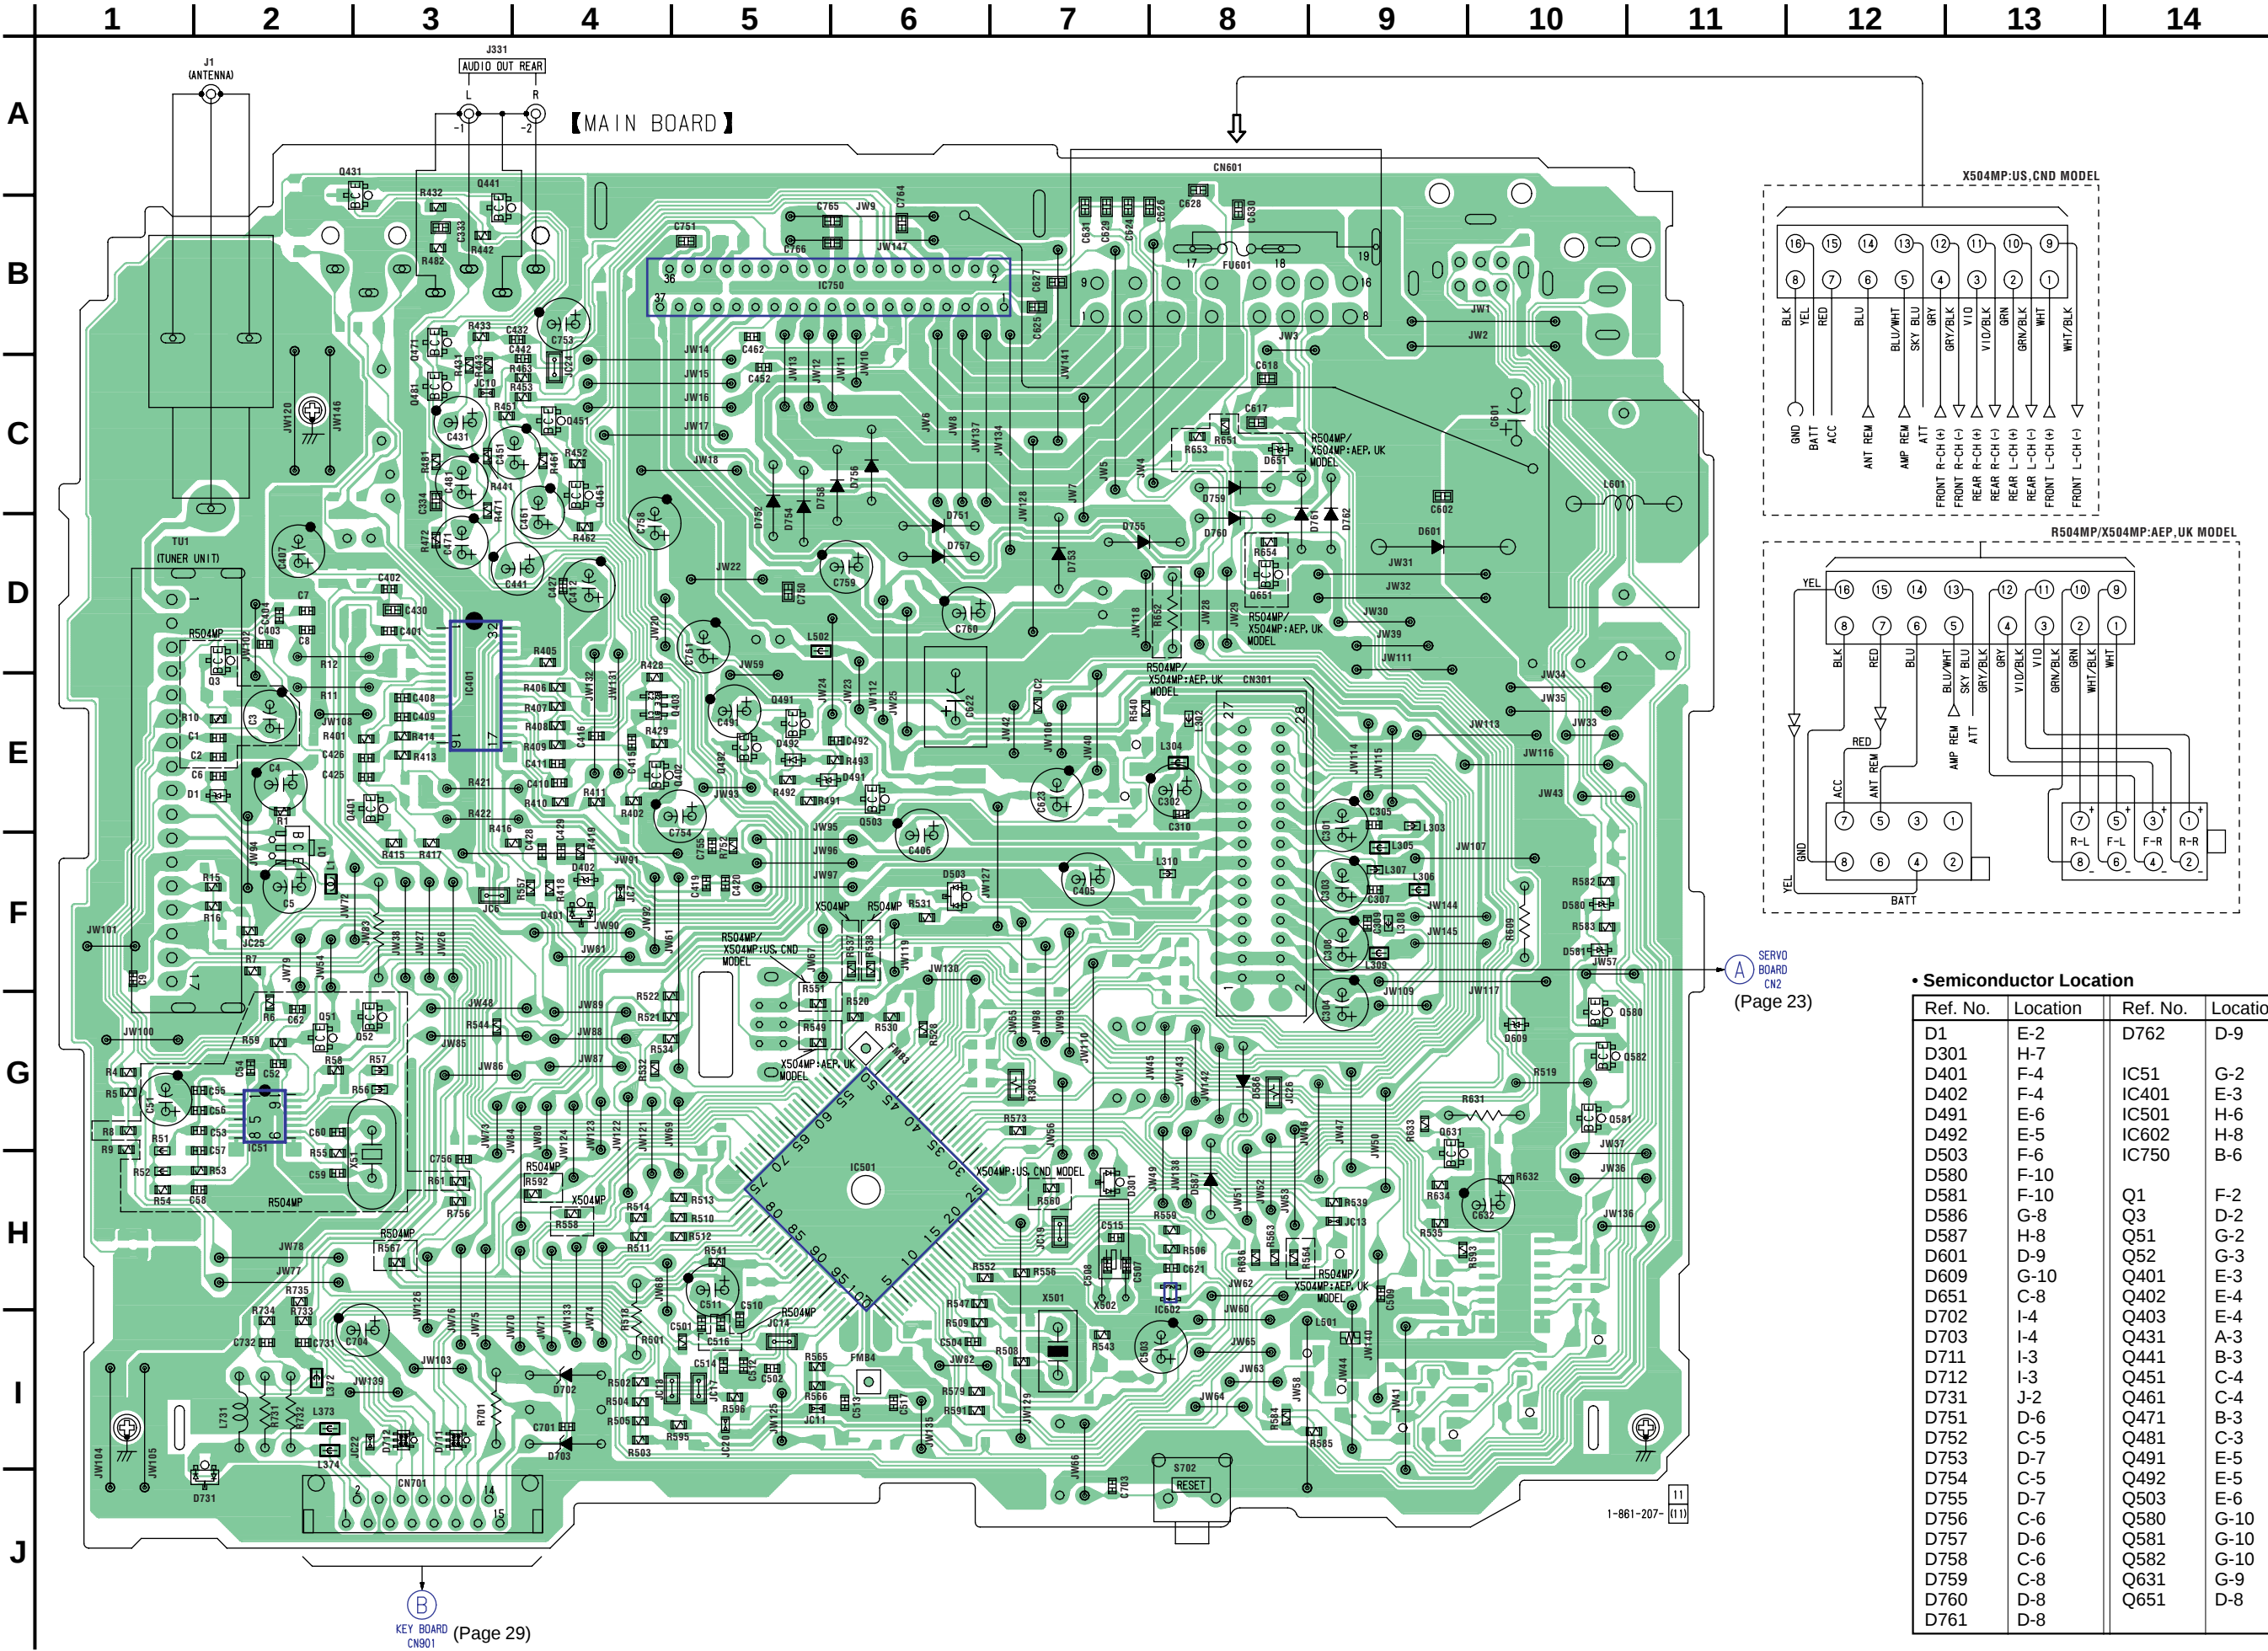

3-14. PRINTED WIRING BOARDS — DISPLAY SECTION — • Refer to page 21 for Circuit Boards Location. : Uses unleaded solder.

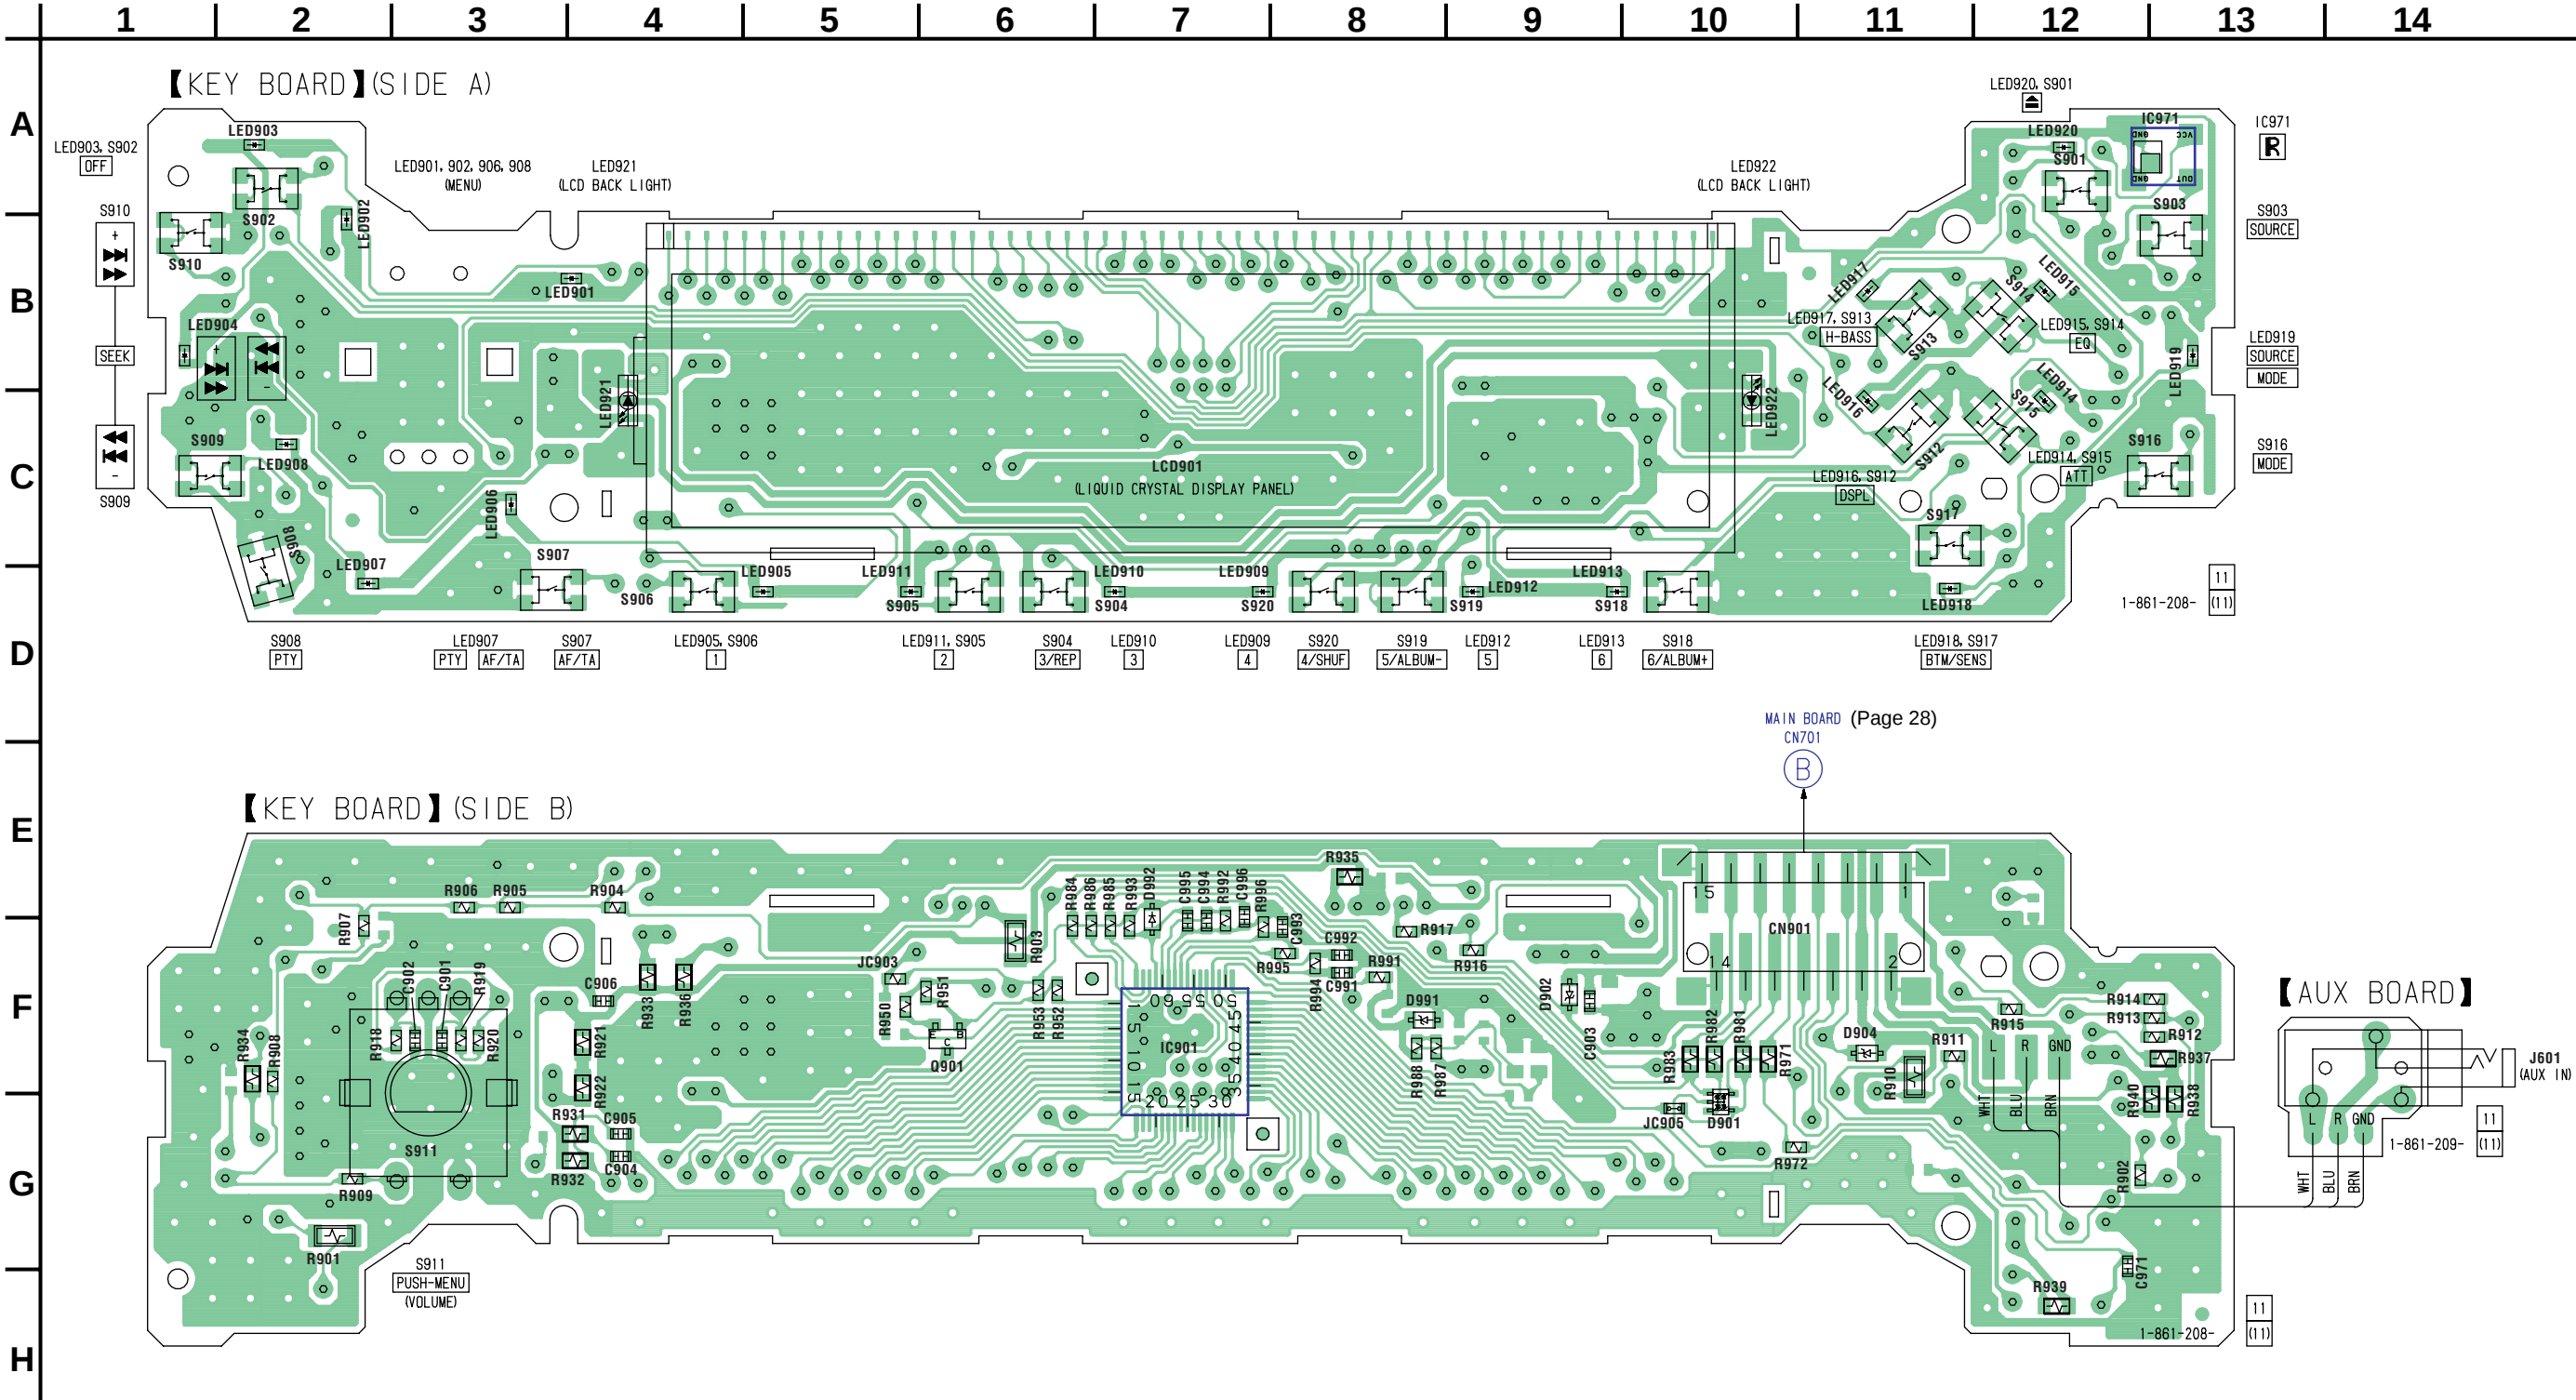


• Semiconductor Location					
Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D901	G-10	LED903	A-2	LED914	C-12
D902	F-9	LED904	B-1	LED915	B-12
D904	F-11	LED905	D-5	LED916	C-11
D991	F-8	LED906	C-3	LED917	B-11
D992	E-7	LED907	D-2	LED918	D-11
		LED908	C-2	LED919	B-13
IC901	F-7	LED909	D-7	LED920	A-12
IC971	A-13	LED910	D-7	LED921	C-4
		LED911	D-5	LED922	C-10
LED901	B-4	LED912	D-9		
LED902	B-2	LED913	D-9	Q901	F-6




3-16. IC BLOCK DIAGRAMS


IC1 LA6560-TE-L-E (SERVO Board)

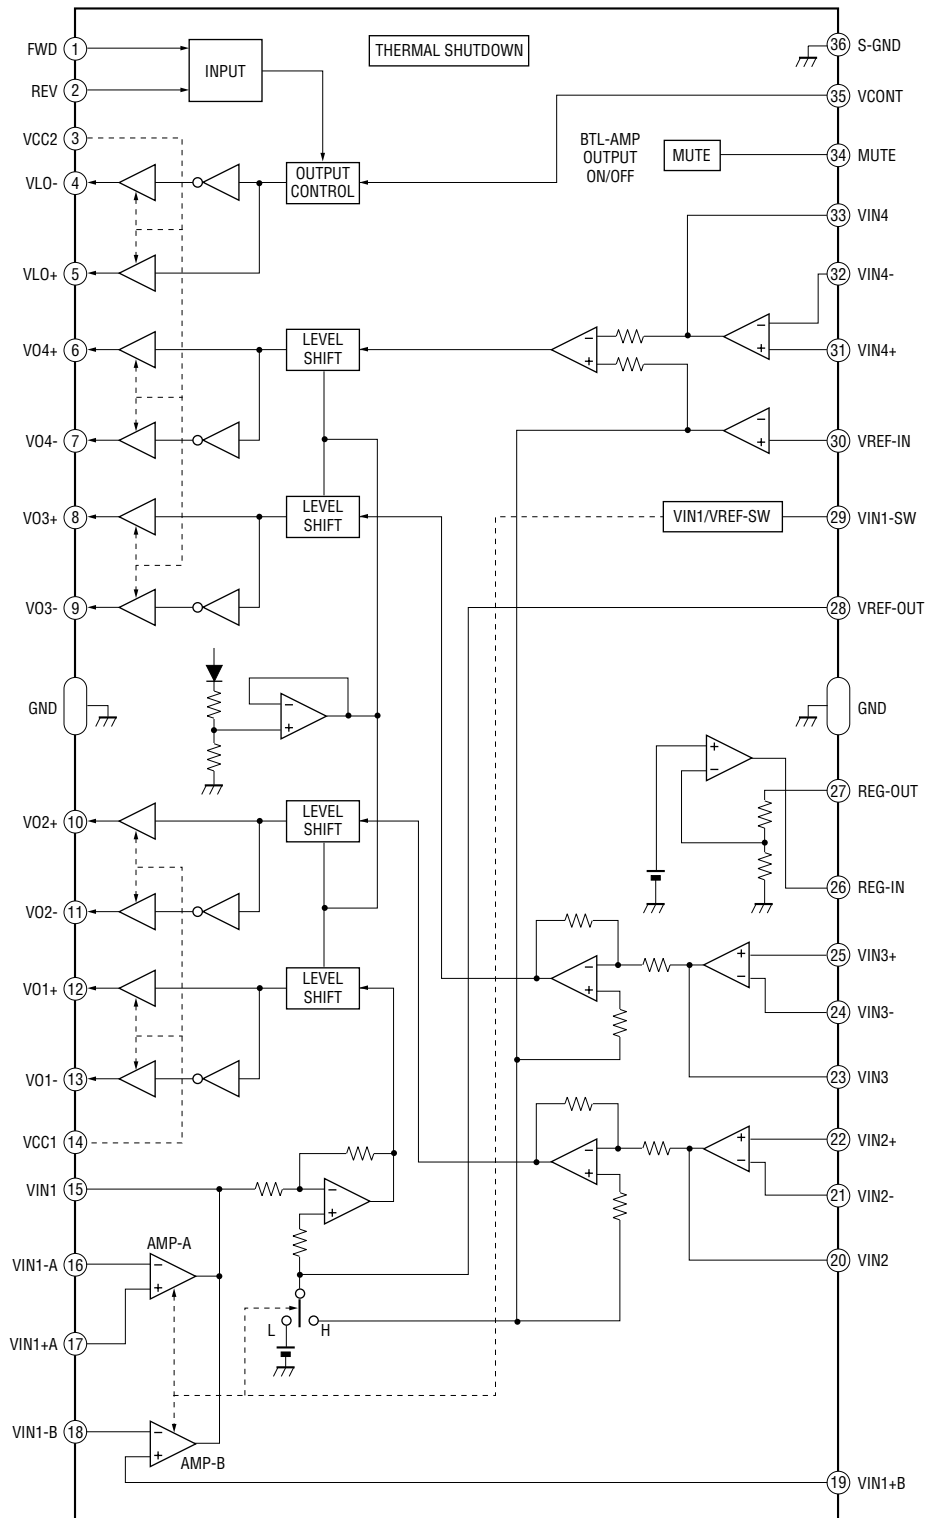


IC7 R1114N151D-TR-FA (SERVO Board)

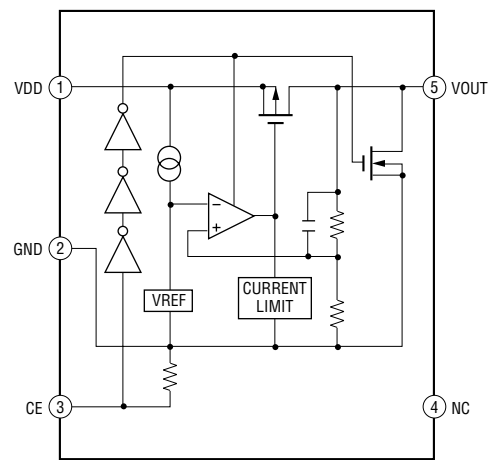


IC51 TDA7333-013TR (MAIN Board)

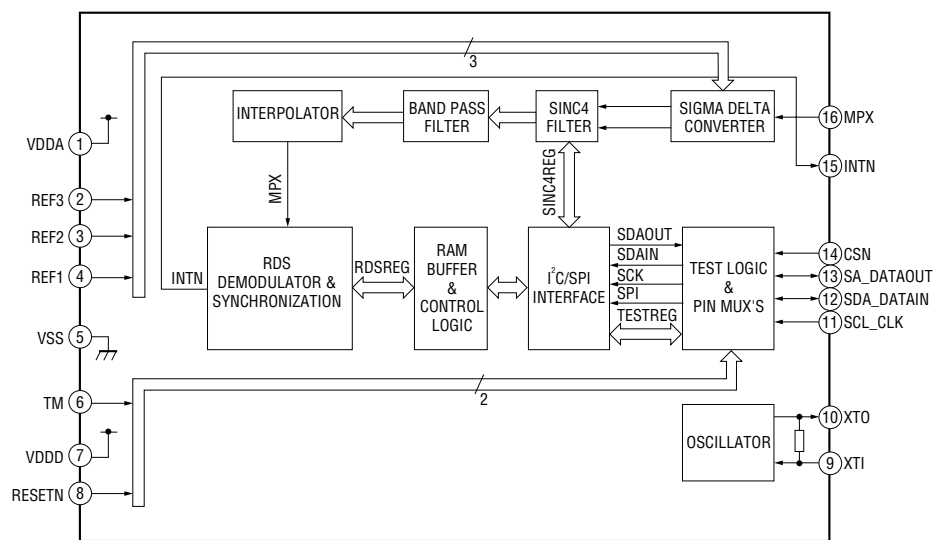


IC401 BD3809FS (MAIN Board)

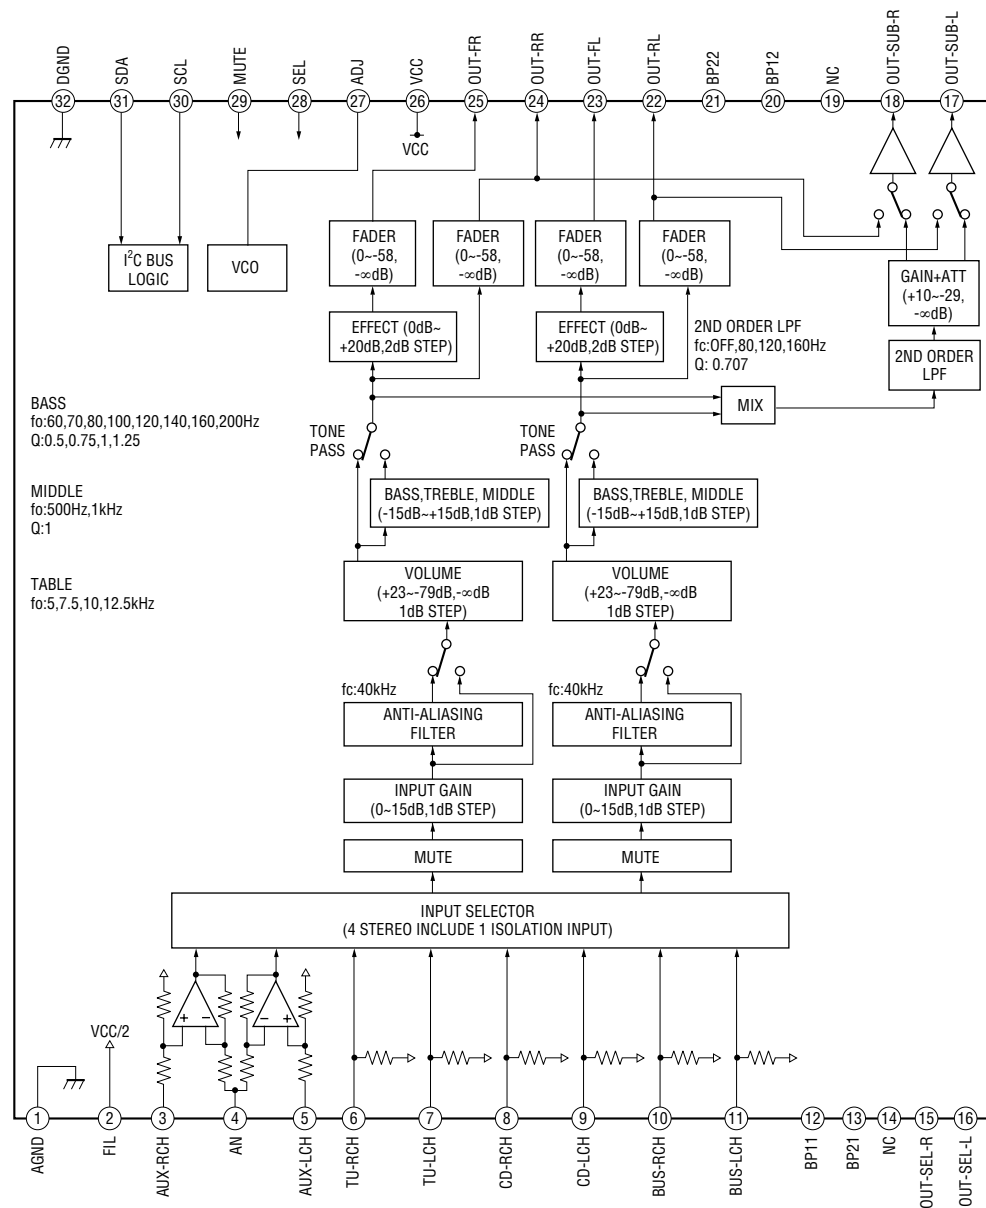

IC750 TDA8588BJ/N2 (MAIN Board)

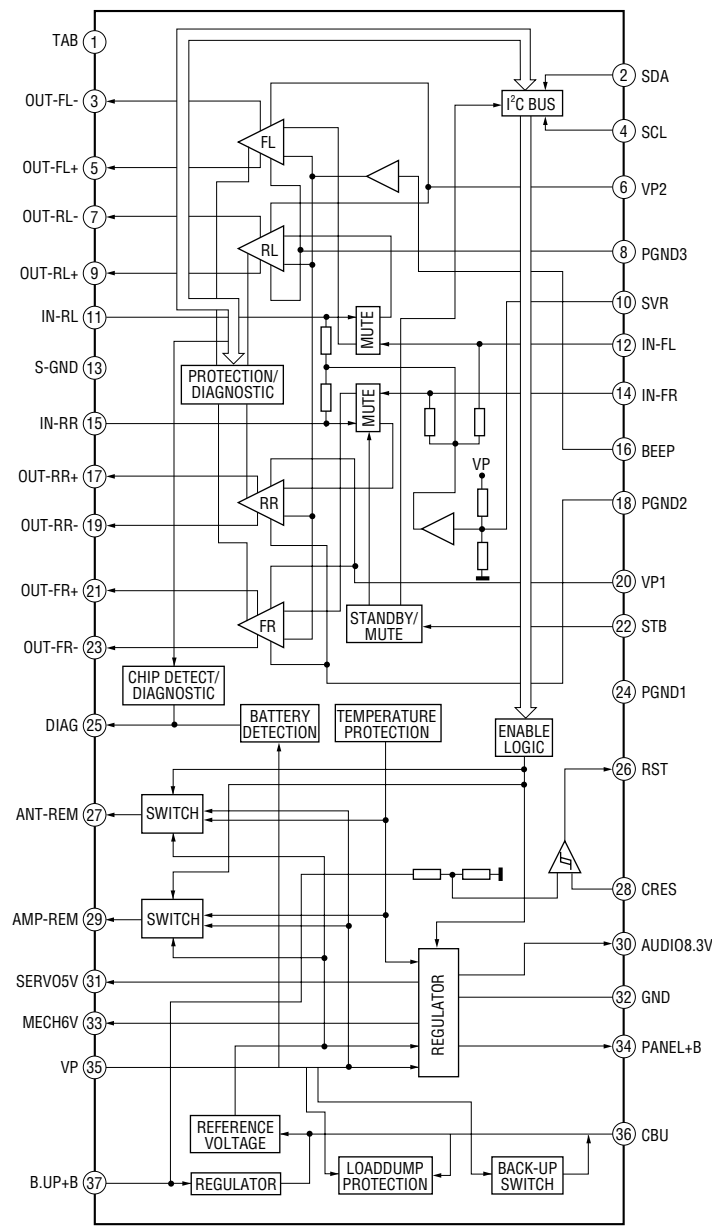


4-2. FRONT PANEL SECTION

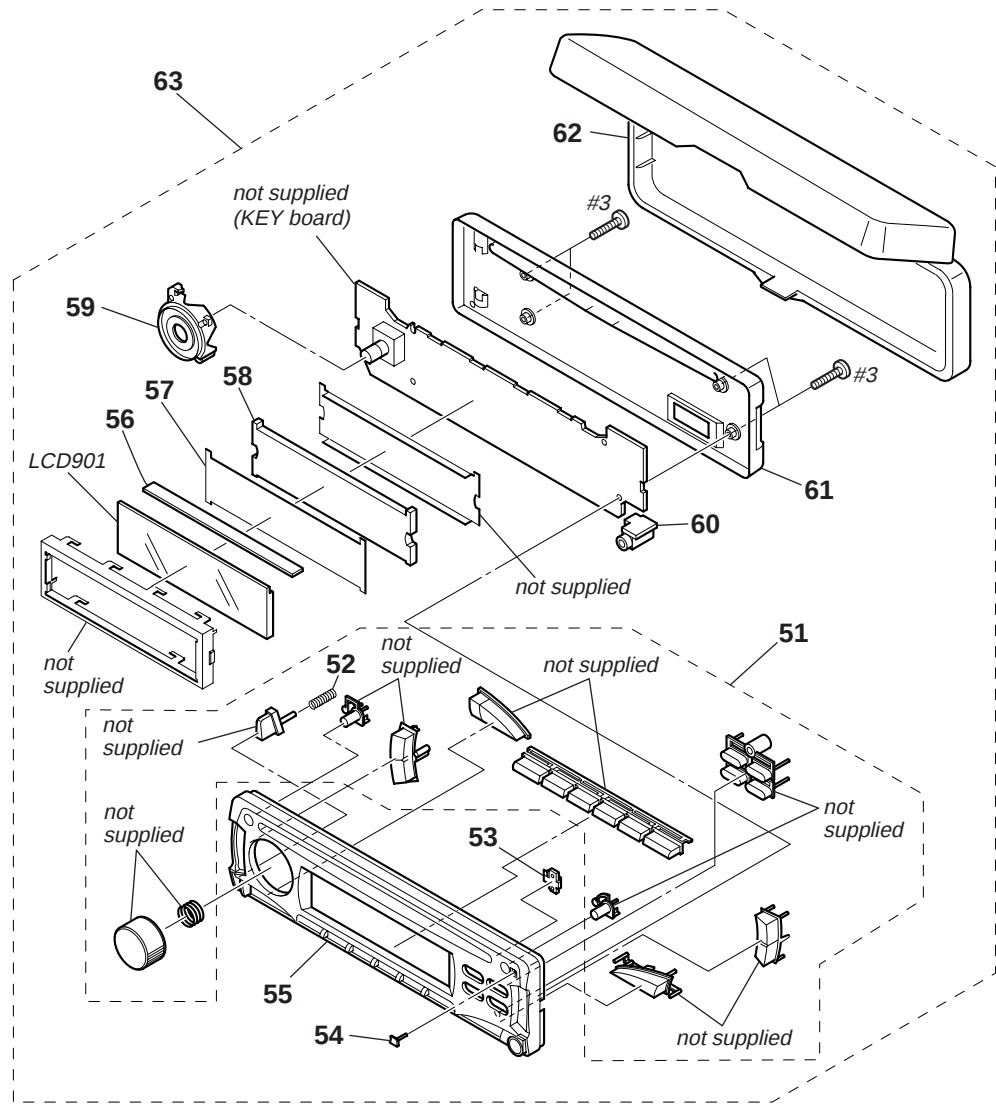


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	X-3384-691-1	BUTTON ASSY (S) (X504MP)		58	3-262-380-01	ILLUMINATOR (LCD)	
51	X-3384-708-1	BUTTON ASSY (S) (R504MP)		59	3-262-374-01	GUIDE (VOLUME), LIGHT	
52	3-246-479-01	SPRING (RELEASE)		60	1-861-209-11	AUX BOARD	
53	3-262-376-01	GUIDE (CD), LIGHT		61	3-262-355-01	PANEL, FRONT BACK	
54	3-262-377-01	FILTER (IR)		62	X-3384-688-1	CASE ASSY (for FRONT PANEL)	
55	3-262-353-21	PANEL, FRONT (X504MP)		63	A-3372-840-A	PANEL COMPLETE ASSY, FRONT (X504MP)	
55	3-262-353-71	PANEL, FRONT (R504MP)		63	A-3372-872-A	PANEL COMPLETE ASSY, FRONT (R504MP)	
56	1-780-113-11	CONDUCTIVE BOARD, CONNECTION		LCD901	1-805-519-11	DISPLAY PANEL, LIQUID CRYSTAL	
57	3-262-382-01	SHEET (LCD), REFLECTION		#3	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT	

4-3. CD MECHANISM SECTION (1)
(MG-611MA-186//Q)

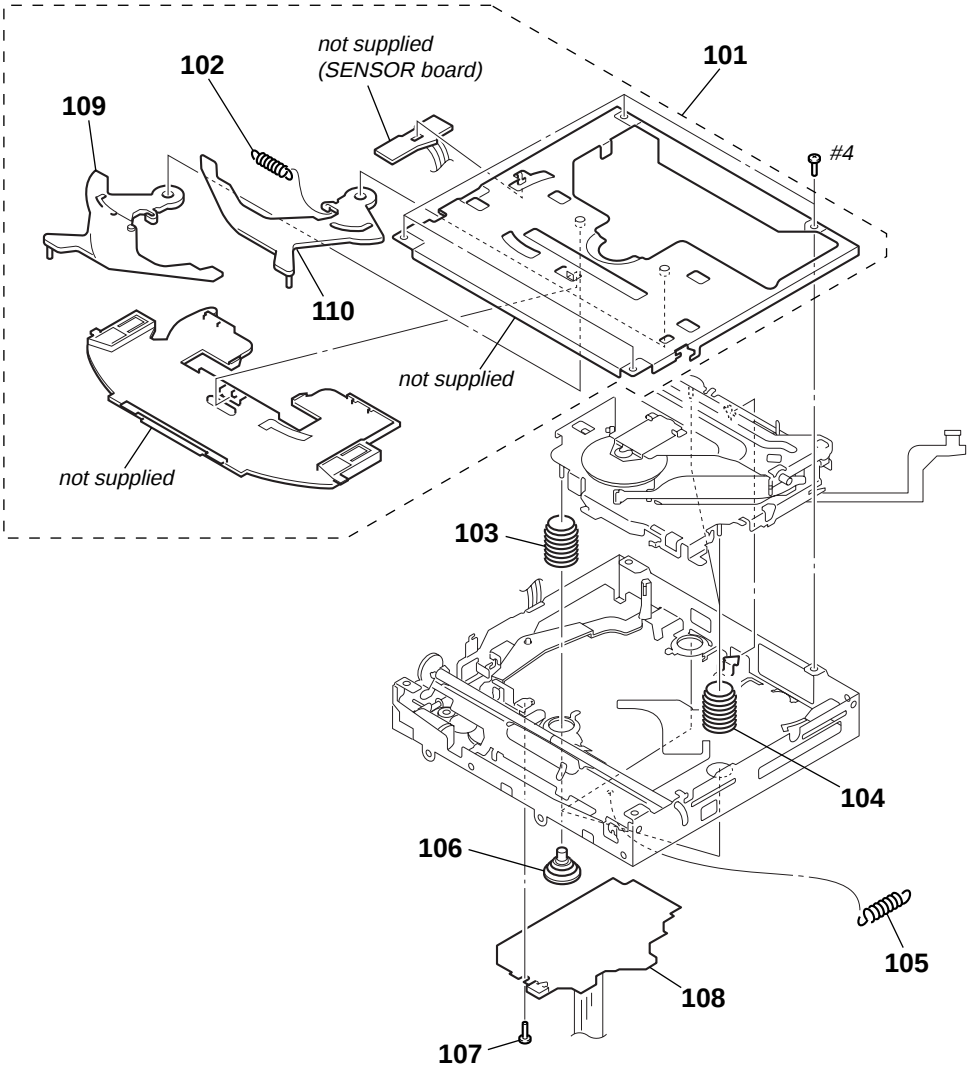

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	A-3372-444-A	CHASSIS (T) SUB ASSY		107	3-352-758-31	SCREW (M1.7), TOOTHED LOCK	
102	3-253-729-11	SPRING (LTR), TENSION COIL		108	A-3283-357-A	SERVO BOARD, COMPLETE	
103	3-257-892-11	SPRING (DAMPER), COIL		109	X-3384-088-1	LEVER (L) ASSY	
104	3-257-892-01	SPRING (DAMPER), COIL		110	X-3384-089-1	LEVER (R) ASSY	
105	3-253-695-11	SPRING (KF), TENSION COIL		#4	7-627-552-87	SCREW, PRECISION +P 1.7X2.2	
106	3-259-033-01	DAMPER (S)					


4-4. CD MECHANISM SECTION (2)
(MG-611MA-186//Q)

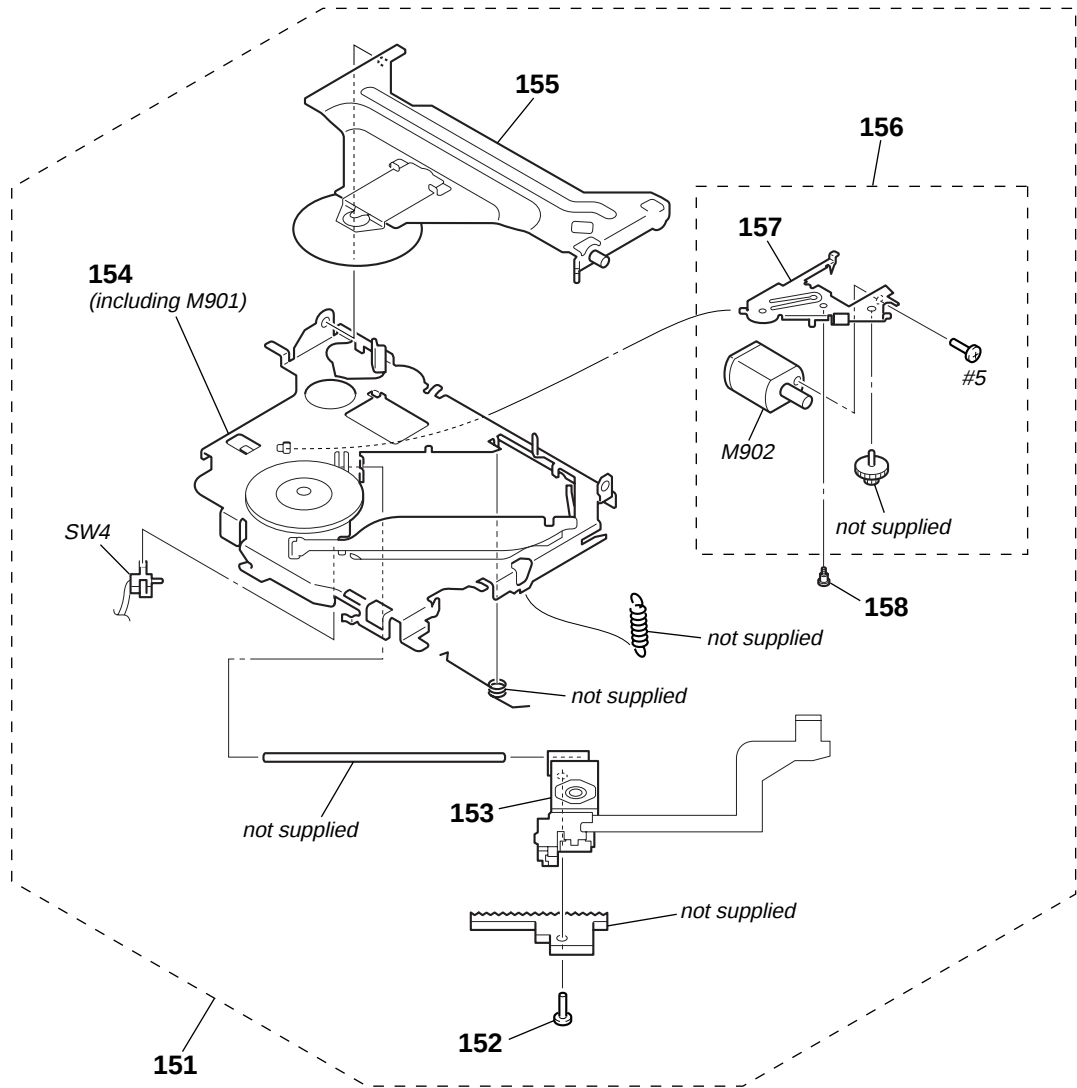

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	A-3372-445-A	CHASSIS (OP) COMPLETE ASSY		157	X-3384-090-2	LEVER (SL) ASSY	
152	3-316-938-91	SCREW (B1.4X5), TAPPING		158	3-264-165-12	SCREW	
 153	8-820-207-02	OPTICAL PICK-UP (KSS1000E/K1RP)		M902	A-3372-447-A	MOTOR ASSY, SL (SLED)	
154	A-3372-448-A	CHASSIS (OP) SUB ASSY (including M901)		SW4	1-571-099-11	SWITCH (1 KEY) (LIMIT)	
155	A-3372-449-A	ARM SUB ASSY, CHUCKING		#5	7-627-850-77	SCREW, PRECISION +P 1.4X1.8	
156	A-3372-446-A	LEVER (SL) SUB ASSY					

4-5. CD MECHANISM SECTION (3)
(MG-611MA-186//Q)

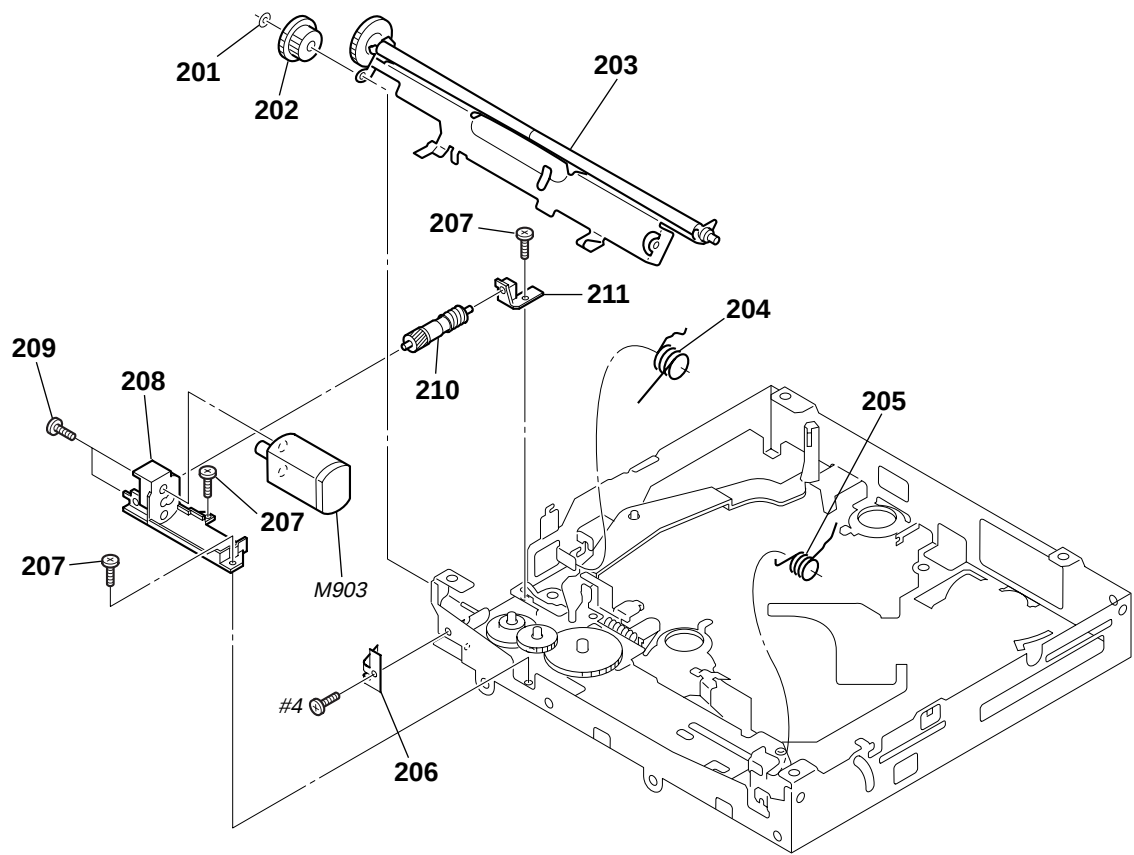

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-348-993-01	WASHER		208	3-259-467-11	BRACKET (LEM)	
202	3-259-024-01	WHEEL (RA), WORM		209	3-345-648-91	SCREW (M1.4), TOOTHED LOCK	
203	A-3372-441-A	ARM ASSY, ROLLER		210	A-3372-450-A	WORM (LEB) ASSY	
204	3-259-455-11	SPRING (RAL)		211	3-259-468-11	BEARING (LEB)	
205	3-253-713-11	SPRING (RAR)		M903	A-3372-443-A	MOTOR ASSY, LE (LOADING)	
206	3-259-469-11	SPRING (LE), LEAF		#4	7-627-552-87	SCREW, PRECISION +P 1.7X2.2	
207	2-134-636-21	SCREW (M1.7X2.5)					

4-6. CD MECHANISM SECTION (4)
(MG-611MA-186//Q)

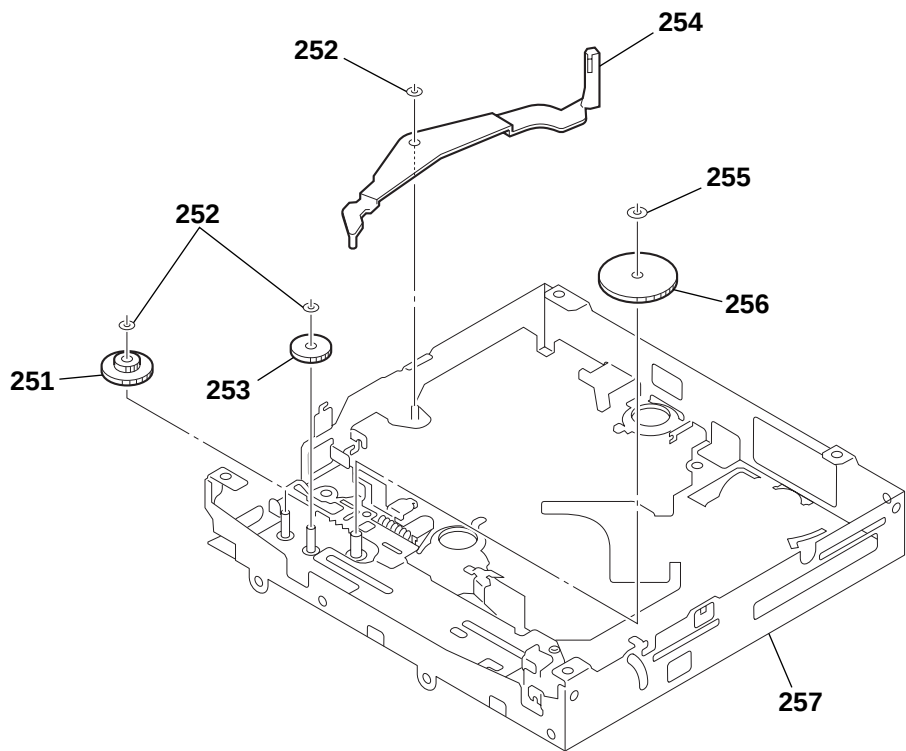

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	3-259-429-11	WHEEL (LE), WORM		255	3-899-829-01	WASHER (SLIT)	
252	3-344-223-01	WASHER		256	3-259-032-01	GEAR (LE2)	
253	3-259-470-11	GEAR (LE1)		257	A-3337-998-A	CHASSIS (M) BLOCK ASSY	
254	3-253-755-11	LEVER (D)					

SECTION 5 ELECTRICAL PARTS LIST

AUX

KEY

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

When indicating parts by reference number, please include the board.

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example:
uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..
- CAPACITORS
uF : μ F
- COILS
uH : μ H
- Abbreviation
CND : Canadian model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	1-861-209-11	AUX BOARD *****		JC905	1-216-864-11	METAL CHIP 0 5%	1/10W
		< JACK >				< LIQUID CRYSTAL DISPLAY >	
J601	1-817-308-11	JACK (AUX IN) *****		LCD901	1-805-519-11	DISPLAY PANEL, LIQUID CRYSTAL	
		KEY BOARD *****				< DIODE >	
	1-780-113-11	CONDUCTIVE BOARD, CONNECTION		LED901	6-500-476-01	LED SML310BA1TT86 (MENU)	
	3-262-380-01	ILLUMINATOR (LCD)		LED902	6-500-476-01	LED SML310BA1TT86 (MENU)	
	3-262-382-01	SHEET (LCD), REFLECTION		LED903	6-500-476-01	LED SML310BA1TT86 (OFF)	
		< CAPACITOR >		LED904	6-500-476-01	LED SML310BA1TT86	
C901	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V				(+ ►►► ►►, ◀◀◀ ◀◀◀ -)	
C902	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V		LED905	6-500-476-01	LED SML310BA1TT86 (1)	
C903	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED906	6-500-476-01	LED SML310BA1TT86 (MENU)	
C904	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED907	6-500-476-01	LED SML310BA1TT86 (PTY,AF/TA)	
C905	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED908	6-500-476-01	LED SML310BA1TT86 (MENU)	
C906	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED909	6-500-476-01	LED SML310BA1TT86 (4)	
C971	1-115-156-11	CERAMIC CHIP 1uF 10V		LED910	6-500-476-01	LED SML310BA1TT86 (3)	
C991	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED911	6-500-476-01	LED SML310BA1TT86 (2)	
C992	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED912	6-500-476-01	LED SML310BA1TT86 (5)	
C993	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		LED913	6-500-476-01	LED SML310BA1TT86 (6)	
C994	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		LED914	6-500-476-01	LED SML310BA1TT86 (ATT)	
C995	1-127-715-11	CERAMIC CHIP 0.22uF 10% 16V		LED915	6-500-476-01	LED SML310BA1TT86 (EQ)	
C996	1-115-156-11	CERAMIC CHIP 1uF 10V		LED916	6-500-476-01	LED SML310BA1TT86 (DSPL)	
		< CONNECTOR >		LED917	6-500-476-01	LED SML310BA1TT86 (H-BASS)	
CN901	1-817-332-11	PLUG, CONNECTOR 15P		LED918	6-500-476-01	LED SML310BA1TT86 (BTM/SENS)	
		< DIODE >		LED919	6-500-476-01	LED SML310BA1TT86 (SOURCE,MODE)	
D901	6-500-886-01	DIODE RSA6.1ENTR		LED920	6-500-476-01	LED SML310BA1TT86 (Δ)	
D902	8-719-978-33	DIODE DTZ-TT11-6.8B		LED921	6-500-855-01	LED CL-490S-WF-SD-TS (LCD BACK LIGHT)	
D904	8-719-978-33	DIODE DTZ-TT11-6.8B		LED922	6-500-855-01	LED CL-490S-WF-SD-TS (LCD BACK LIGHT)	
D991	8-719-069-54	DIODE UDZS-TE17-5.1B				< TRANSISTOR >	
D992	8-719-404-50	DIODE MA111-TX		Q901	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
		< IC >				< RESISTOR >	
IC901	6-705-180-01	IC LC75827W		R901	1-216-194-00	METAL CHIP 680 5% 1/8W	
IC971	6-600-163-01	IC RS-770 (IR)		R902	1-216-819-11	METAL CHIP 680 5% 1/10W	
		< JUMPER RESISTOR >		R903	1-216-194-00	METAL CHIP 680 5% 1/8W	
JC903	1-216-864-11	METAL CHIP 0 5%	1/10W	R904	1-216-819-11	METAL CHIP 680 5% 1/10W	
				R905	1-216-819-11	METAL CHIP 680 5% 1/10W	
				R906	1-216-821-11	METAL CHIP 1K 5% 1/10W	
				R907	1-216-823-11	METAL CHIP 1.5K 5% 1/10W	
				R908	1-216-823-11	METAL CHIP 1.5K 5% 1/10W	
				R909	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
				R910	1-216-194-00	METAL CHIP 680 5% 1/8W	

CDC-R504MP/X504MP

KEY

MAIN

Ref. No.	Part No.	Description	Remark		
R911	1-216-819-11	METAL CHIP	680	5%	1/10W
R912	1-216-819-11	METAL CHIP	680	5%	1/10W
R913	1-216-821-11	METAL CHIP	1K	5%	1/10W
R914	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R915	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R916	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R917	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R918	1-218-867-11	METAL CHIP	6.8K	5%	1/10W
R919	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R920	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R921	1-216-017-00	RES-CHIP	47	5%	1/10W
R922	1-216-295-11	SHORT CHIP	0		
R931	1-216-033-00	METAL CHIP	220	5%	1/10W
R932	1-216-033-00	METAL CHIP	220	5%	1/10W
R933	1-216-033-00	METAL CHIP	220	5%	1/10W
R934	1-216-033-00	METAL CHIP	220	5%	1/10W
R935	1-216-033-00	METAL CHIP	220	5%	1/10W
R936	1-216-033-00	METAL CHIP	220	5%	1/10W
R937	1-216-033-00	METAL CHIP	220	5%	1/10W
R938	1-216-033-00	METAL CHIP	220	5%	1/10W
R939	1-216-033-00	METAL CHIP	220	5%	1/10W
R940	1-216-033-00	METAL CHIP	220	5%	1/10W
R950	1-216-808-11	METAL CHIP	82	5%	1/10W
R951	1-216-821-11	METAL CHIP	1K	5%	1/10W
R952	1-216-824-11	METAL CHIP	1.8K	5%	1/10W
R953	1-216-824-11	METAL CHIP	1.8K	5%	1/10W
R971	1-216-049-11	RES-CHIP	1K	5%	1/10W
R972	1-216-821-11	METAL CHIP	1K	5%	1/10W
R981	1-216-295-11	SHORT CHIP	0		
R982	1-216-295-11	SHORT CHIP	0		
R983	1-216-295-11	SHORT CHIP	0		
R984	1-216-801-11	METAL CHIP	22	5%	1/10W
R985	1-216-801-11	METAL CHIP	22	5%	1/10W
R986	1-216-801-11	METAL CHIP	22	5%	1/10W
R987	1-216-811-11	METAL CHIP	150	5%	1/10W
R988	1-216-811-11	METAL CHIP	150	5%	1/10W
R991	1-216-864-11	METAL CHIP	0	5%	1/10W
R992	1-216-840-11	METAL CHIP	39K	5%	1/10W
R993	1-216-857-11	METAL CHIP	1M	5%	1/10W
R994	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R995	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R996	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
< SWITCH >					
S901	1-771-884-31	SWITCH, TACTILE (▲)			
S902	1-771-884-31	SWITCH, TACTILE (OFF)			
S903	1-771-884-31	SWITCH, TACTILE (SOURCE)			
S904	1-771-884-31	SWITCH, TACTILE (3/REP)			
S905	1-771-884-31	SWITCH, TACTILE (2)			
S906	1-771-884-31	SWITCH, TACTILE (1)			
S907	1-771-884-31	SWITCH, TACTILE (AF/TA)			
S908	1-771-884-31	SWITCH, TACTILE (PTY)			
S909	1-771-884-31	SWITCH, TACTILE (SEEK ◀◀ ◀◀◀ ◀◀◀)			
S910	1-771-884-31	SWITCH, TACTILE (SEEK + ▶▶▶ ▶▶▶)			
S911	1-478-474-11	ENCODER, ROTARY (VOLUME,PUSH-MENU)			
S912	1-771-884-31	SWITCH, TACTILE (DSPL)			
S913	1-771-884-31	SWITCH, TACTILE (H-BASS)			
S914	1-771-884-31	SWITCH, TACTILE (EQ)			

Ref. No.	Part No.	Description	Remark		
S915	1-771-884-31	SWITCH, TACTILE (ATT)			
S916	1-771-884-31	SWITCH, TACTILE (MODE)			
S917	1-771-884-31	SWITCH, TACTILE (BTM/SENS)			
S918	1-771-884-31	SWITCH, TACTILE (6/ALBUM +)			
S919	1-771-884-31	SWITCH, TACTILE (5/ALBUM -)			
S920	1-771-884-31	SWITCH, TACTILE (4/SHUF)			

	A-3283-529-A	MAIN BOARD, COMPLETE (X504MP:US,CND)			
	A-3283-537-A	MAIN BOARD, COMPLETE (X504MP:AEP,UK)			
	A-3283-538-A	MAIN BOARD, COMPLETE (R504MP)			

	7-685-134-19	SCREW +P 2.6X8 TYPE2 NON-SLIT			
	7-685-793-09	SCREW +PTT 2.6X8 (S)			
	7-685-795-09	SCREW +PTT 2.6X12 (S)			
< CAPACITOR >					
C1	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (R504MP)
C2	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (R504MP)
C3	1-126-963-11	ELECT	4.7uF	20%	50V (R504MP)
C4	1-126-947-11	ELECT	47uF	20%	16V
C5	1-126-947-11	ELECT	47uF	20%	16V
C6	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C7	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C8	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C9	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C51	1-126-947-11	ELECT	47uF	20%	16V (R504MP)
C52	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (R504MP)
C53	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (R504MP)
C54	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (R504MP)
C55	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (R504MP)
C56	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (R504MP)
C57	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (R504MP)
C58	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (R504MP)
C59	1-162-918-11	CERAMIC CHIP	18PF	5%	50V (R504MP)
C60	1-162-918-11	CERAMIC CHIP	18PF	5%	50V (R504MP)
C62	1-162-959-11	CERAMIC CHIP	330PF	5%	50V (R504MP)
C301	1-128-551-11	ELECT	22uF	20%	25V
C302	1-128-551-11	ELECT	22uF	20%	25V
C303	1-128-551-11	ELECT	22uF	20%	25V
C304	1-104-665-11	ELECT	100uF	20%	10V
C305	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C307	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C308	1-128-551-11	ELECT	22uF	20%	25V
C309	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C310	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C333	1-163-251-11	CERAMIC CHIP	100PF	5%	50V

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description			Remark
C334	1-163-251-11	CERAMIC CHIP	100PF	5%	50V		C624	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C401	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V		C625	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C402	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V		C626	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C403	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V		C627	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C404	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V		C628	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C405	1-126-960-11	ELECT	1uF	20%	50V		C629	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C406	1-126-960-11	ELECT	1uF	20%	50V		C630	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C407	1-126-964-11	ELECT	10uF	20%	50V		C631	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C408	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V		C632	1-126-961-11	ELECT	2.2uF	20%	50V
C409	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V		C701	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C410	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V		C703	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C411	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V		C704	1-126-934-11	ELECT	220uF	20%	10V
C412	1-126-947-11	ELECT	47uF	20%	16V		C731	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C415	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V		C732	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C416	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V		C750	1-115-340-11	CERAMIC CHIP	0.22uF	10%	25V
C419	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C751	1-115-340-11	CERAMIC CHIP	0.22uF	10%	25V
C420	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C753	1-128-551-11	ELECT	22uF	20%	25V
C425	1-164-156-11	CERAMIC CHIP	0.1uF		25V		C754	1-126-961-11	ELECT	2.2uF	20%	50V
C426	1-164-156-11	CERAMIC CHIP	0.1uF		25V		C755	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C427	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C756	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C428	1-164-156-11	CERAMIC CHIP	0.1uF		25V		C758	1-126-964-11	ELECT	10uF	20%	50V
C429	1-164-156-11	CERAMIC CHIP	0.1uF		25V		C759	1-126-964-11	ELECT	10uF	20%	50V
C430	1-125-889-11	CERAMIC CHIP	2.2uF	10%	10V		C760	1-104-665-11	ELECT	100uF	20%	10V
C431	1-126-964-11	ELECT	10uF	20%	50V		C761	1-126-964-11	ELECT	10uF	20%	50V
C432	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V		C764	1-165-822-11	CERAMIC CHIP	1uF		25V
C441	1-126-964-11	ELECT	10uF	20%	50V		C765	1-165-822-11	CERAMIC CHIP	1uF		25V
C442	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V		C766	1-165-822-11	CERAMIC CHIP	1uF		25V
C451	1-126-964-11	ELECT	10uF	20%	50V		< CONNECTOR >					
C452	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V		CN301	1-817-536-11	CONNECTOR, BOARD TO BOARD 28P			
C461	1-126-964-11	ELECT	10uF	20%	50V		CN601	1-774-701-21	PIN, CONNECTOR 16P			
C462	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V		CN701	1-817-333-11	SOCKET, CONNECTOR 15P			
C471	1-126-964-11	ELECT	10uF	20%	50V		< DIODE >					
C481	1-126-964-11	ELECT	10uF	20%	50V		D1	8-719-069-55	DIODE	UDZS-TE17-5.6B		
C491	1-126-947-11	ELECT	47uF	20%	16V		D301	8-719-041-79	DIODE	MA721WA-TX		
C492	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		D401	8-719-062-51	DIODE	1PS226-115		
C501	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		D402	6-500-697-01	DIODE	UDZS-TE17-3.3B		
C502	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		D491	8-719-069-55	DIODE	UDZS-TE17-5.6B		
C503	1-104-665-11	ELECT	100uF	20%	10V		D492	8-719-404-50	DIODE	MA111-TX		
C504	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		D503	8-719-040-04	DIODE	MA721WK-(TX)		
C507	1-162-917-11	CERAMIC CHIP	15PF	5%	50V		D580	8-719-056-84	DIODE	UDZ-TE-17-7.5B		
C508	1-162-917-11	CERAMIC CHIP	15PF	5%	50V		D581	8-719-083-66	DIODE	UDZS-TE17-18B		
C509	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		D586	8-719-050-84	DIODE	RB441Q-40T-77		
C510	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		D587	8-719-050-84	DIODE	RB441Q-40T-77		
C511	1-126-947-11	ELECT	47uF	20%	16V		D601	8-719-049-38	DIODE	1N5404TU		
C512	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		D609	8-719-978-33	DIODE	DTZ-TT11-6.8B		
C513	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		D651	8-719-083-66	DIODE	UDZS-TE17-18B (AEP,UK)		
C514	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		D702	8-719-109-97	DIODE	RD6.8ES-B2		
C515	1-164-315-11	CERAMIC CHIP	470PF	5%	50V		D703	8-719-109-97	DIODE	RD6.8ES-B2		
C516	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	(R504MP)	D711	6-500-886-01	DIODE	RSA6.1ENTR		
C517	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		D712	6-500-886-01	DIODE	RSA6.1ENTR		
C601	1-131-868-81	ELECT	3300uF	20%	16V		D731	8-719-062-51	DIODE	1PS226-115		
C602	1-165-319-11	CERAMIC CHIP	0.1uF		50V		D751	8-719-970-02	DIODE	1SR139-400		
C617	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V		D752	8-719-970-02	DIODE	1SR139-400		
C618	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V		D753	8-719-970-02	DIODE	1SR139-400		
C621	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		D754	8-719-970-02	DIODE	1SR139-400		
C622	1-125-710-11	DOUBLE LAYERS	0.1F		5.5V		D755	8-719-970-02	DIODE	1SR139-400		
C623	1-104-665-11	ELECT	100uF	20%	10V							

CDC-R504MP/X504MP

MAIN

Ref. No.	Part No.	Description	Remark
D756	8-719-970-02	DIODE 1SR139-400	
D757	8-719-970-02	DIODE 1SR139-400	
D758	8-719-970-02	DIODE 1SR139-400	
D759	8-719-970-02	DIODE 1SR139-400	
D760	8-719-970-02	DIODE 1SR139-400	
D761	8-719-970-02	DIODE 1SR139-400	
D762	8-719-970-02	DIODE 1SR139-400	
< IC >			
IC51	6-803-747-01	IC TDA7333-013TR (R504MP)	
IC401	6-705-518-01	IC BD3809FS-FE2	
IC501	6-804-065-01	IC MN101E01KSH	
IC602	8-759-659-13	IC PST3428UL	
IC750	6-705-360-01	IC TDA8588BJ/N2	
< JACK >			
J1	1-815-185-13	JACK (ANTENNA)	
J331	1-774-698-11	JACK, PIN 2P (AUDIO OUT REAR)	
< JUMPER RESISTOR >			
JC2	1-216-864-11	METAL CHIP 0 5% 1/10W	
JC6	1-216-296-11	SHORT CHIP 0	
JC7	1-216-864-11	METAL CHIP 0 5% 1/10W	
JC10	1-216-864-11	METAL CHIP 0 5% 1/10W	
JC11	1-216-864-11	METAL CHIP 0 5% 1/10W	
JC13	1-216-864-11	METAL CHIP 0 5% 1/10W	
JC14	1-216-296-11	SHORT CHIP 0	
JC17	1-216-296-11	SHORT CHIP 0	
JC18	1-216-296-11	SHORT CHIP 0	
JC19	1-216-296-11	SHORT CHIP 0	
JC20	1-216-864-11	METAL CHIP 0 5% 1/10W	
JC22	1-216-864-11	METAL CHIP 0 5% 1/10W	
JC24	1-216-296-11	SHORT CHIP 0	
JC25	1-216-864-11	METAL CHIP 0 5% 1/10W	
JC26	1-216-296-11	SHORT CHIP 0	
< COIL >			
L1	1-469-844-11	INDUCTOR 2.2uH	
L302	1-469-876-11	INDUCTOR, FERRITE BEAD	
L303	1-469-876-11	INDUCTOR, FERRITE BEAD	
L304	1-500-245-11	INDUCTOR, FERRITE BEAD	
L305	1-500-245-11	INDUCTOR, FERRITE BEAD	
L306	1-500-245-11	INDUCTOR, FERRITE BEAD	
L307	1-469-876-11	INDUCTOR, FERRITE BEAD	
L308	1-469-876-11	INDUCTOR, FERRITE BEAD	
L309	1-500-245-11	INDUCTOR, FERRITE BEAD	
L310	1-469-876-11	INDUCTOR, FERRITE BEAD	
L372	1-469-876-11	INDUCTOR, FERRITE BEAD	
L373	1-500-245-11	INDUCTOR, FERRITE BEAD	
L374	1-500-245-11	INDUCTOR, FERRITE BEAD	
L501	1-216-864-11	METAL CHIP 0 5% 1/10W	
L502	1-500-245-11	INDUCTOR, FERRITE BEAD	
L601	1-456-617-11	COIL, CHOKE 250uH	
L731	1-410-509-11	INDUCTOR 10uH	
< TRANSISTOR >			
Q1	8-729-106-68	TRANSISTOR 2SD1615A-GP	
Q3	8-729-027-43	TRANSISTOR DTC114EKA-T146 (R504MP)	

Ref. No.	Part No.	Description	Remark
Q51	8-729-027-23	TRANSISTOR DTA114EKA-T146 (R504MP)	
Q52	8-729-027-43	TRANSISTOR DTC114EKA-T146 (R504MP)	
Q401	8-729-422-33	TRANSISTOR 2SD601A-Q-TX	
Q402	8-729-027-23	TRANSISTOR DTA114EKA-T146	
Q403	8-729-035-74	TRANSISTOR FMG4AT148	
Q431	6-550-752-01	TRANSISTOR DTC614TKT146	
Q441	6-550-752-01	TRANSISTOR DTC614TKT146	
Q451	6-550-752-01	TRANSISTOR DTC614TKT146	
Q461	6-550-752-01	TRANSISTOR DTC614TKT146	
Q471	6-550-752-01	TRANSISTOR DTC614TKT146	
Q481	6-550-752-01	TRANSISTOR DTC614TKT146	
Q491	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q492	8-729-027-23	TRANSISTOR DTA114EKA-T146	
Q503	8-729-027-23	TRANSISTOR DTA114EKA-T146	
Q580	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q581	1-801-806-11	TRANSISTOR DTC144EKA	
Q582	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q631	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q651	8-729-120-28	TRANSISTOR 2SC1623-L5L6 (AEP,UK)	
< RESISTOR >			
R1	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R4	1-216-839-11	METAL CHIP 33K 5% 1/10W	
R5	1-216-843-11	METAL CHIP 68K 5% 1/10W	
R6	1-216-839-11	METAL CHIP 33K 5% 1/10W (R504MP)	
R7	1-216-843-11	METAL CHIP 68K 5% 1/10W (R504MP)	
R7	1-216-845-11	METAL CHIP 100K 5% 1/10W (X504MP)	
R8	1-216-839-11	METAL CHIP 33K 5% 1/10W (R504MP)	
R9	1-216-843-11	METAL CHIP 68K 5% 1/10W (R504MP)	
R9	1-216-845-11	METAL CHIP 100K 5% 1/10W (X504MP)	
R10	1-216-809-11	METAL CHIP 100 5% 1/10W (R504MP)	
R15	1-216-809-11	METAL CHIP 100 5% 1/10W	
R16	1-216-809-11	METAL CHIP 100 5% 1/10W	
R51	1-414-595-11	INDUCTOR, FERRITE BEAD (R504MP)	
R52	1-414-595-11	INDUCTOR, FERRITE BEAD (R504MP)	
R53	1-216-801-11	METAL CHIP 22 5% 1/10W (R504MP)	
R54	1-216-833-11	METAL CHIP 10K 5% 1/10W (R504MP)	
R55	1-216-864-11	METAL CHIP 0 5% 1/10W (R504MP)	
R56	1-414-595-11	INDUCTOR, FERRITE BEAD (R504MP)	
R57	1-414-595-11	INDUCTOR, FERRITE BEAD (R504MP)	
R58	1-216-864-11	METAL CHIP 0 5% 1/10W (R504MP)	
R59	1-216-797-11	METAL CHIP 10 5% 1/10W (R504MP)	
R61	1-216-864-11	METAL CHIP 0 5% 1/10W (R504MP)	
R303	1-216-296-11	SHORT CHIP 0	
R401	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R402	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R405	1-218-881-11	METAL CHIP 27K 0.5% 1/10W	

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R406	1-216-811-11	METAL CHIP	150	5%	1/10W	R537	1-216-845-11	METAL CHIP	100K	5%	1/10W
R407	1-216-811-11	METAL CHIP	150	5%	1/10W						(X504MP)
R408	1-216-811-11	METAL CHIP	150	5%	1/10W	R538	1-216-845-11	METAL CHIP	100K	5%	1/10W
R409	1-216-811-11	METAL CHIP	150	5%	1/10W						(R504MP)
R410	1-216-809-11	METAL CHIP	100	5%	1/10W	R539	1-216-864-11	METAL CHIP	0	5%	1/10W
						R540	1-216-864-11	METAL CHIP	0	5%	1/10W
R411	1-216-809-11	METAL CHIP	100	5%	1/10W	R541	1-216-845-11	METAL CHIP	100K	5%	1/10W
R413	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R414	1-216-845-11	METAL CHIP	100K	5%	1/10W	R543	1-216-845-11	METAL CHIP	100K	5%	1/10W
R415	1-216-857-11	METAL CHIP	1M	5%	1/10W	R544	1-216-821-11	METAL CHIP	1K	5%	1/10W
R416	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	R547	1-216-864-11	METAL CHIP	0	5%	1/10W
						R549	1-216-845-11	METAL CHIP	100K	5%	1/10W
R417	1-216-827-11	METAL CHIP	3.3K	5%	1/10W						(X504MP:AEP,UK)
R418	1-216-833-11	METAL CHIP	10K	5%	1/10W	R551	1-216-845-11	METAL CHIP	100K	5%	1/10W
R419	1-216-857-11	METAL CHIP	1M	5%	1/10W						(R504MP/X504MP:US,CND)
R428	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R429	1-216-845-11	METAL CHIP	100K	5%	1/10W	R552	1-216-864-11	METAL CHIP	0	5%	1/10W
						R556	1-216-864-11	METAL CHIP	0	5%	1/10W
R431	1-216-809-11	METAL CHIP	100	5%	1/10W	R557	1-216-809-11	METAL CHIP	100	5%	1/10W
R432	1-216-841-11	METAL CHIP	47K	5%	1/10W	R558	1-216-845-11	METAL CHIP	100K	5%	1/10W
R433	1-216-864-11	METAL CHIP	0	5%	1/10W						(X504MP)
R441	1-216-809-11	METAL CHIP	100	5%	1/10W	R559	1-216-845-11	METAL CHIP	100K	5%	1/10W
R442	1-216-841-11	METAL CHIP	47K	5%	1/10W						
						R560	1-216-845-11	METAL CHIP	100K	5%	1/10W
R443	1-216-864-11	METAL CHIP	0	5%	1/10W						(US,CND)
R451	1-216-809-11	METAL CHIP	100	5%	1/10W	R563	1-216-845-11	METAL CHIP	100K	5%	1/10W
R452	1-216-841-11	METAL CHIP	47K	5%	1/10W	R564	1-216-845-11	METAL CHIP	100K	5%	1/10W
R453	1-216-864-11	METAL CHIP	0	5%	1/10W						(AEP,UK)
R461	1-216-809-11	METAL CHIP	100	5%	1/10W	R565	1-216-809-11	METAL CHIP	100	5%	1/10W
						R566	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R462	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R463	1-216-864-11	METAL CHIP	0	5%	1/10W	R567	1-216-833-11	METAL CHIP	10K	5%	1/10W
R471	1-216-809-11	METAL CHIP	100	5%	1/10W						(R504MP)
R472	1-216-841-11	METAL CHIP	47K	5%	1/10W	R573	1-216-864-11	METAL CHIP	0	5%	1/10W
R481	1-216-809-11	METAL CHIP	100	5%	1/10W	R579	1-216-809-11	METAL CHIP	100	5%	1/10W
						R582	1-216-821-11	METAL CHIP	1K	5%	1/10W
R482	1-216-841-11	METAL CHIP	47K	5%	1/10W	R583	1-216-821-11	METAL CHIP	1K	5%	1/10W
R491	1-216-857-11	METAL CHIP	1M	5%	1/10W						
R492	1-216-864-11	METAL CHIP	0	5%	1/10W	R584	1-216-849-11	METAL CHIP	220K	5%	1/10W
R493	1-216-805-11	METAL CHIP	47	5%	1/10W	R585	1-216-849-11	METAL CHIP	220K	5%	1/10W
R501	1-216-864-11	METAL CHIP	0	5%	1/10W	R591	1-216-809-11	METAL CHIP	100	5%	1/10W
						R592	1-216-864-11	METAL CHIP	0	5%	1/10W
R502	1-216-809-11	METAL CHIP	100	5%	1/10W						(R504MP)
R503	1-216-809-11	METAL CHIP	100	5%	1/10W	R593	1-216-864-11	METAL CHIP	0	5%	1/10W
R504	1-218-871-11	METAL CHIP	10K	0.5%	1/10W						
R505	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R595	1-216-833-11	METAL CHIP	10K	5%	1/10W
R506	1-216-845-11	METAL CHIP	100K	5%	1/10W	R596	1-216-864-11	METAL CHIP	0	5%	1/10W
						R609	1-249-417-11	CARBON	1K	5%	1/4W
R508	1-216-813-11	METAL CHIP	220	5%	1/10W	R631	1-249-425-11	CARBON	4.7K	5%	1/4W
R509	1-216-864-11	METAL CHIP	0	5%	1/10W	R632	1-216-841-11	METAL CHIP	47K	5%	1/10W
R510	1-216-801-11	METAL CHIP	22	5%	1/10W						
R511	1-216-801-11	METAL CHIP	22	5%	1/10W	R633	1-216-841-11	METAL CHIP	47K	5%	1/10W
R512	1-216-801-11	METAL CHIP	22	5%	1/10W	R634	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R636	1-216-845-11	METAL CHIP	100K	5%	1/10W
R513	1-216-845-11	METAL CHIP	100K	5%	1/10W	R651	1-216-821-11	METAL CHIP	1K	5%	1/10W
R514	1-216-845-11	METAL CHIP	100K	5%	1/10W						(AEP,UK)
R518	1-249-417-11	CARBON	1K	5%	1/4W	R652	1-249-437-11	CARBON	47K	5%	1/4W
R520	1-216-845-11	METAL CHIP	100K	5%	1/10W						(AEP,UK)
R521	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
						R653	1-216-833-11	METAL CHIP	10K	5%	1/10W
R522	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						(AEP,UK)
R528	1-216-845-11	METAL CHIP	100K	5%	1/10W	R654	1-216-833-11	METAL CHIP	10K	5%	1/10W
R530	1-216-845-11	METAL CHIP	100K	5%	1/10W	R701	1-249-401-11	CARBON	47	5%	1/4W
R531	1-216-845-11	METAL CHIP	100K	5%	1/10W	R731	1-249-417-11	CARBON	1K	5%	1/4W
R532	1-216-845-11	METAL CHIP	100K	5%	1/10W	R732	1-249-417-11	CARBON	1K	5%	1/4W
R534	1-216-833-11	METAL CHIP	10K	5%	1/10W	R733	1-216-834-11	METAL CHIP	12K	5%	1/10W
R535	1-216-845-11	METAL CHIP	100K	5%	1/10W	R734	1-216-834-11	METAL CHIP	12K	5%	1/10W
						R735	1-216-820-11	METAL CHIP	820	5%	1/10W

CDC-R504MP/X504MP

MAIN	SENSOR	SERVO
------	--------	-------

Ref. No.	Part No.	Description	Remark		
R752	1-216-809-11	METAL CHIP	100	5%	1/10W
R756	1-216-841-11	METAL CHIP	47K	5%	1/10W
< SWITCH >					
S702	1-692-431-21	SWITCH, TACTILE (RESET)			
< TUNER >					
TU1	A-3220-959-A	TUNER UNIT (TUX-032//Q)			
< VIBRATOR >					
X51	1-813-173-11	VIBRATOR, CRYSTAL (8.664MHz) (R504MP)			
X501	1-813-160-11	VIBRATOR, CERAMIC (27MHz)			
X502	1-813-202-11	VIBRATOR, CRYSTAL (32.768kHz)			

SENSOR BOARD					

< SWITCH >					
SW2	1-529-566-61	SWITCH, PUSH (1 KEY) (SELF)			
SW3	1-529-566-61	SWITCH, PUSH (1 KEY) (DISC IN)			

A-3283-357-A SERVO BOARD, COMPLETE					

< CAPACITOR >					
C1	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C4	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C7	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C8	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C10	1-104-609-11	ELECT CHIP	100uF	20%	4V
C11	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C13	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C14	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C16	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C18	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C19	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C21	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C22	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C23	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C24	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C25	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C26	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C27	1-126-208-21	ELECT CHIP	47uF	20%	4V
C28	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C29	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C30	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C32	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C33	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C34	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C35	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C36	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C37	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V

Ref. No.	Part No.	Description	Remark		
C38	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C39	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C40	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C41	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C42	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C43	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C44	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C45	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C46	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C47	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C48	1-104-609-11	ELECT CHIP	100uF	20%	4V
C49	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C50	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C51	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C52	1-100-381-11	ELECT CHIP	10uF	20%	16V
C53	1-100-381-11	ELECT CHIP	10uF	20%	16V
C54	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C55	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C56	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C57	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C58	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C59	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C60	1-100-381-11	ELECT CHIP	10uF	20%	16V
C63	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C64	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C65	1-126-208-21	ELECT CHIP	47uF	20%	4V
C66	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C67	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C74	1-126-208-21	ELECT CHIP	47uF	20%	4V
C75	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C77	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C79	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C81	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C83	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C85	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C86	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C91	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C92	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C107	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C109	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C110	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C115	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
< CONNECTOR >					
CN1	1-794-153-21	CONNECTOR, FPC (ZIF) 16P			
CN2	1-817-275-21	CONNECTOR, BOARD TO BOARD 28P			
< JUMPER RESISTOR >					
FB1	1-216-864-11	METAL CHIP	0	5%	1/10W
FB2	1-216-864-11	METAL CHIP	0	5%	1/10W
FB5	1-216-864-11	METAL CHIP	0	5%	1/10W
< IC >					
IC1	6-705-366-01	IC LA6560-TE-L-E			
IC3	8-753-216-86	IC CXD3059BR			
IC4	6-804-028-01	IC MB90487PFV-G-105-BNDE1			
IC7	6-705-364-01	IC R1114N151D-TR-FA			
IC8	6-705-365-01	IC TC94A34FG-002			

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
< TRANSISTOR >							R60	1-218-990-11	SHORT CHIP	0			
Q1 Q2 Q3 Q5 Q6	8-729-904-87	TRANSISTOR	2SB1197K-R				R61	1-218-985-11	RES-CHIP	470K	5%	1/16W	
	8-729-928-90	TRANSISTOR	DTC114EE				R62	1-218-965-11	RES-CHIP	10K	5%	1/16W	
	8-729-904-87	TRANSISTOR	2SB1197K-R				R64	1-218-941-81	RES-CHIP	100	5%	1/16W	
	8-729-904-87	TRANSISTOR	2SB1197K-R				R65	1-218-941-81	RES-CHIP	100	5%	1/16W	
	8-729-928-90	TRANSISTOR	DTC114EE				R67	1-218-941-81	RES-CHIP	100	5%	1/16W	
< RESISTOR >							R68	1-218-990-11	SHORT CHIP	0			
R1 R2 R3 R4 R5	1-218-941-81	RES-CHIP	100	5%	1/16W		R69	1-218-973-11	RES-CHIP	47K	5%	1/16W	
	1-218-971-11	RES-CHIP	33K	5%	1/16W		R70	1-218-945-11	RES-CHIP	220	5%	1/16W	
	1-218-971-11	RES-CHIP	33K	5%	1/16W		R71	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-965-11	RES-CHIP	10K	5%	1/16W		R72	1-218-990-11	SHORT CHIP	0			
	1-218-965-11	RES-CHIP	10K	5%	1/16W		R73	1-218-941-81	RES-CHIP	100	5%	1/16W	
R6 R7 R8 R9 R10	1-218-965-11	RES-CHIP	10K	5%	1/16W		R74	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-208-635-11	RES-CHIP	10	5%	1/16W		R76	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-971-11	RES-CHIP	33K	5%	1/16W		R77	1-218-990-11	SHORT CHIP	0			
	1-218-971-11	RES-CHIP	33K	5%	1/16W		R78	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-965-11	RES-CHIP	10K	5%	1/16W		R79	1-218-941-81	RES-CHIP	100	5%	1/16W	
R11 R12 R13 R14 R15	1-218-965-11	RES-CHIP	10K	5%	1/16W		R80	1-218-977-11	RES-CHIP	100K	5%	1/16W	
	1-208-635-11	RES-CHIP	10	5%	1/16W		R81	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-965-11	RES-CHIP	10K	5%	1/16W		R85	1-218-973-11	RES-CHIP	47K	5%	1/16W	
	1-218-990-11	SHORT CHIP	0				R86	1-218-973-11	RES-CHIP	47K	5%	1/16W	
	1-218-990-11	SHORT CHIP	0				R87	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R16 R17 R18 R19 R20	1-218-990-11	SHORT CHIP	0				R91	1-220-200-81	RES-CHIP	30K	5%	1/16W	
	1-218-965-11	RES-CHIP	10K	5%	1/16W		R92	1-218-971-11	RES-CHIP	33K	5%	1/16W	
	1-218-965-11	RES-CHIP	10K	5%	1/16W		R97	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-965-11	RES-CHIP	10K	5%	1/16W		R98	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-969-11	RES-CHIP	22K	5%	1/16W		R99	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R21 R22 R23 R24 R25	1-218-969-11	RES-CHIP	22K	5%	1/16W		R101	1-218-969-11	RES-CHIP	22K	5%	1/16W	
	1-218-990-11	SHORT CHIP	0				R106	1-218-969-11	RES-CHIP	22K	5%	1/16W	
	1-218-967-11	RES-CHIP	15K	5%	1/16W		R107	1-218-965-11	RES-CHIP	10K	5%	1/16W	
	1-218-967-11	RES-CHIP	15K	5%	1/16W		R108	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-953-11	RES-CHIP	1K	5%	1/16W		R109	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R26 R27 R28 R29 R37	1-218-953-11	RES-CHIP	1K	5%	1/16W		R110	1-218-945-11	RES-CHIP	220	5%	1/16W	
	1-218-981-11	RES-CHIP	220K	5%	1/16W		R111	1-218-990-11	SHORT CHIP	0			
	1-218-965-11	RES-CHIP	10K	5%	1/16W		R114	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-990-11	SHORT CHIP	0				R115	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-977-11	RES-CHIP	100K	5%	1/16W		R116	1-218-941-81	RES-CHIP	100	5%	1/16W	
R38 R39 R40 R41 R42	1-218-947-11	RES-CHIP	330	5%	1/16W		R117	1-218-990-11	SHORT CHIP	0			
	1-218-967-11	RES-CHIP	15K	5%	1/16W		R119	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-941-81	RES-CHIP	100	5%	1/16W		R122	1-218-965-11	RES-CHIP	10K	5%	1/16W	
	1-218-990-11	SHORT CHIP	0				R123	1-218-990-11	SHORT CHIP	0			
	1-218-985-11	RES-CHIP	470K	5%	1/16W		R124	1-216-864-11	METAL CHIP	0	5%	1/10W	
R43 R44 R45 R46 R47	1-218-965-11	RES-CHIP	10K	5%	1/16W		R126	1-218-965-11	RES-CHIP	10K	5%	1/16W	
	1-218-977-11	RES-CHIP	100K	5%	1/16W		R127	1-218-965-11	RES-CHIP	10K	5%	1/16W	
	1-218-957-11	RES-CHIP	2.2K	5%	1/16W		R128	1-218-965-11	RES-CHIP	10K	5%	1/16W	
	1-218-971-11	RES-CHIP	33K	5%	1/16W		R129	1-218-965-11	RES-CHIP	10K	5%	1/16W	
	1-218-957-11	RES-CHIP	2.2K	5%	1/16W		R133	1-216-864-11	METAL CHIP	0	5%	1/10W	
R48 R49 R50 R52 R53	1-218-977-11	RES-CHIP	100K	5%	1/16W		R136	1-218-977-11	RES-CHIP	100K	5%	1/16W	
	1-218-941-81	RES-CHIP	100	5%	1/16W		R139	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
	1-218-953-11	RES-CHIP	1K	5%	1/16W		R140	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-941-81	RES-CHIP	100	5%	1/16W		R141	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-941-81	RES-CHIP	100	5%	1/16W		R142	1-218-941-81	RES-CHIP	100	5%	1/16W	
R54 R55 R56 R57 R59	1-218-959-11	RES-CHIP	3.3K	5%	1/16W		R143	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-961-11	RES-CHIP	4.7K	5%	1/16W		R144	1-218-965-11	RES-CHIP	10K	5%	1/16W	
	1-218-953-11	RES-CHIP	1K	5%	1/16W		R145	1-218-977-11	RES-CHIP	100K	5%	1/16W	
	1-218-973-11	RES-CHIP	47K	5%	1/16W		R146	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-941-81	RES-CHIP	100	5%	1/16W		R147	1-218-941-81	RES-CHIP	100	5%	1/16W	
	1-218-941-81	RES-CHIP	100	5%	1/16W		R148	1-218-941-81	RES-CHIP	100	5%	1/16W	

SERVO

Ref. No.	Part No.	Description	Remark
R149	1-218-941-81	RES-CHIP 100 5% 1/16W	
		< SWITCH >	
SW1	1-529-565-61	SWITCH, PUSH (1 KEY) (DOWN)	
		< VIBRATOR >	
X1	1-795-561-21	VIBRATOR, CERAMIC (16.9344MHz)	
X2	1-795-822-21	VIBRATOR, CERAMIC (18.43MHz)	

		MISCELLANEOUS	


7	1-776-206-21	CORD (WITH CONNECTOR) (POWER) (US,CND)	
7	1-776-527-61	CORD (WITH CONNECTOR) (ISO) (POWER)	(AEP,UK)
⚠ 153	8-820-207-02	OPTICAL PICK-UP (KSS1000E/K1RP)	
154	A-3372-448-A	CHASSIS (OP) SUB ASSY (including M901)	
FU601	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
M902	A-3372-447-A	MOTOR ASSY, SL (SLED)	
M903	A-3372-443-A	MOTOR ASSY, LE (LOADING)	
SW4	1-571-099-11	SWITCH (1 KEY) (LIMIT)	

		ACCESSORIES	

	1-476-526-51	REMOTE COMMANDER (RM-Z304)	
	3-230-047-01	LID, BATTERY CASE (for RM-Z304)	
	3-263-359-11	MANUAL, INSTRUCTION, FITTING (ENGLISH, FRENCH,SPANISH) (US,CND)	
	3-263-363-11	MANUAL, INSTRUCTION, FITTING (ENGLISH, GERMAN,FRENCH,ITALIAN,DUTCH) (AEP,UK)	
	3-263-363-21	MANUAL, INSTRUCTION, FITTING (SPANISH, POLISH,CZECH,HUNGARIAN,RUSSIAN) (AEP,UK)	
	3-263-367-11	MANUAL, INSTRUCTION (ENGLISH,FRENCH, SPANISH) (US,CND)	
	3-263-369-11	MANUAL, INSTRUCTION (ENGLISH,GERMAN, FRENCH,ITALIAN,DUTCH,SPANISH, POLISH,CZECH,HUNGARIAN,RUSSIAN) (X504MP:AEP,UK)	
	3-263-370-11	MANUAL, INSTRUCTION (ENGLISH,GERMAN, FRENCH,ITALIAN,DUTCH,SPANISH, POLISH,CZECH,HUNGARIAN,RUSSIAN) (R504MP)	
	X-3384-688-1	CASE ASSY (for FRONT PANEL)	

Ref. No.	Part No.	Description	Remark
PARTS FOR INSTALLATION AND CONNECTIONS			

301	X-3382-647-1	FRAME ASSY, FITTING	
302	X-3382-926-1	SCREW ASSY (BS), FITTING (AEP,UK)	
303	3-349-410-11	BUSHING (AEP,UK)	
304	3-934-325-01	SCREW, +K (5X8) TAPPING (US,CND)	
305	3-262-387-11	COLLAR	
306	1-465-459-31	ADAPTOR, ANTENNA (AEP,UK)	
307	3-246-471-01	KEY (FRAME)	
308	1-776-527-61	CORD (WITH CONNECTOR) (ISO) (POWER)	(AEP,UK)
309	1-776-206-21	CORD (WITH CONNECTOR) (POWER) (US,CND)	

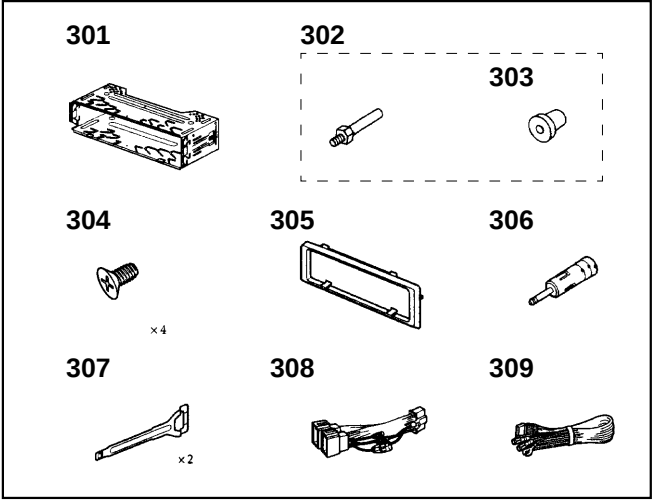

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MEMO

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper on the revised page allows you to jump to the next revised page.

[illegible]